
使用說明書

電焗爐 (25公升)

TL2-MC25CZE(GR)

在使用電焗爐之前 請仔細閱讀這些說明並小心保存 。

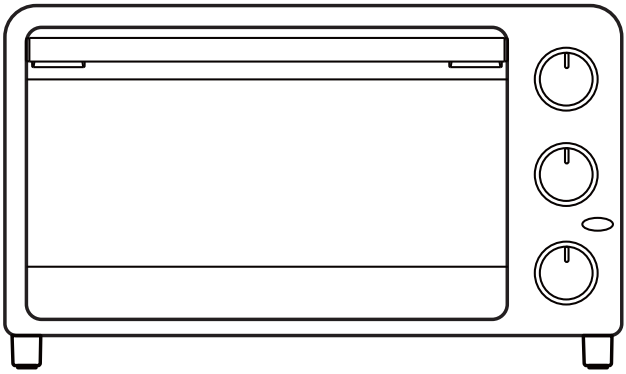

TOSHIBA

目錄

重要安全須知

基本安全預防措施 01
首次使用前 03

產品說明

零件和配件名稱 04

操作

烹飪指南 05
控制介面
功能說明 07
1. 下發熱線功能 07
2. 上發熱線功能 08
3. 上下發熱線功能 09
4. 熱風對流功能 10
5. 旋轉燒烤功能 11
6. 發酵功能 12
7. 使用旋轉烤叉的旋轉烤叉 13
清潔與保養 14
產品規格 15

重要安全須知

基本安全預防措施：在使用電焗爐時，應始終遵循基本的安全預防措施，包括以下內容：

除非在監護人的監督和指導下，否則本產品不適用於身體、感官或精神能力受限、或缺乏經驗和知識的人士（包括兒童）使用。

請看管兒童，確保他們不會隨意接觸產品。

如電源線損壞，必須由製造商、服務代理或合資格的人員進行更換，以避免受傷。

避免接觸非固定部件。

本產品不可用外部計時器或獨立的遙控系統操作。

烹調時表面高溫，請勿觸摸。

使用過程中，可接觸部分可能變熱。兒童應遠離電焗爐。

此產品為獨立使用。

當產品不使用、拆卸或安裝零件以及清潔之前，請拔掉插頭及冷卻電焗爐。

使用其他金屬或玻璃製容器時，應十分小心。

本產品適用於家用和下列類似用途：
1. 店鋪內的員工廚房區域、辦公室及其他工作環境；
2. 酒店、汽車旅館和其他居住場所中的客戶；
3. 農舍；
4. 民宿類型環境。

更換燈泡之前，請確保已切斷產品電源，以免觸電。

重要安全須知

請勿將以下物料放入電焗爐：紙張、紙板、塑料等。



不使用此焗爐時，請勿放置任何材料，製造商提供的配件除外。


烹調時焗爐平面可能會變熱。

請仔細閱讀並妥善保存，以備日後參考。


首次使用前

1. 移除焗爐內的所有配件和包裝材料。

2. 用少量洗潔精和溫水清洗焗爐配件。使用紙巾或乾布擦乾焗爐和焗爐配件後再使用。

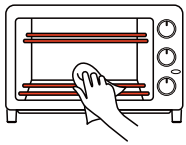

3. 將焗爐放在平坦的檯面或其他穩定的表面上。請勿與其他電器共用同一電路。

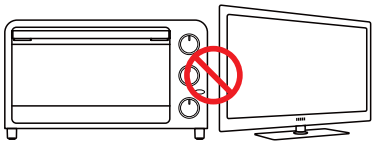

4. 使用前，將集屑盤放置在底部加熱管下方。

5. 使用焗爐前，確保集屑盤已正確安裝。

在使用焗爐烹調之前，先燒掉焗爐內殘留的油。具體操作如下，旋轉功能旋鈕選擇 ,將溫度旋鈕旋轉至 230 ° C。之後，將時間旋鈕旋轉至 15 分鐘。這將燒掉焗爐內的任何剩餘油漬。


注意


- 在這個過程中，焗爐內部可能會冒煙。對於新焗爐來說，這是正常的，並且不會持續超過 10–15 分鐘。

產品說明


部件和配件名稱

- 如果本手冊中的圖片與實際產品有差異，則以產品為準。
- 使用時，請將設備放置在絕緣表面上。
- 使用此焗爐的區域應保持乾燥。焗爐不應用於戶外。
- 保持焗爐與牆壁和櫥櫃之間的距離為 10–15cm。周圍的物體可能會因設備散發的熱量而著火或被煙灰覆蓋。
- 保持焗爐頂部與上方任何物體或牆壁之間有 30cm 的空隙。

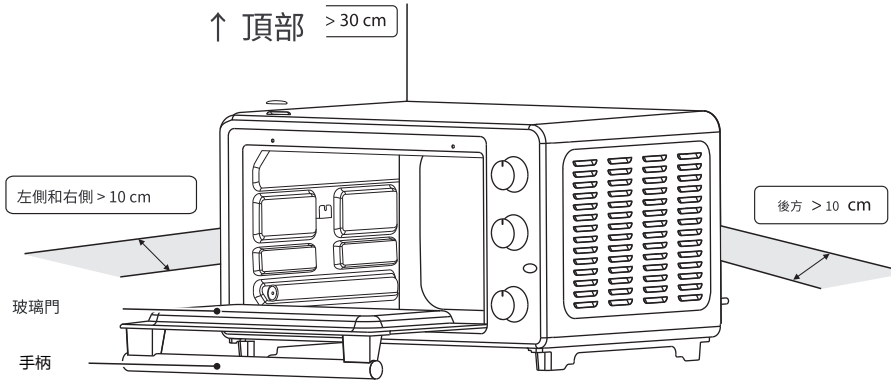



集屑盤　燒烤架　烤盤

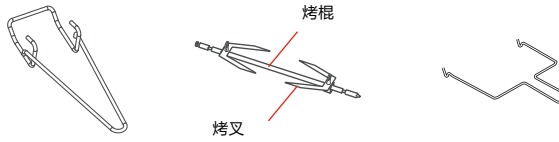


取物夾　旋轉烤叉　取物支架

烹飪指南


注意

• 焗爐表面在使用中和使用後會變熱。


說明

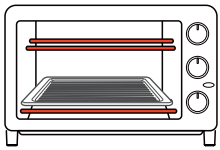

1. 將烤架和烤盤放置在可以容納要烹飪的食物高度的位置。

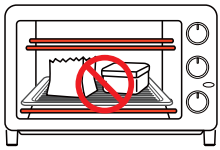

2. 食物應放在烤盤上，以避免食物殘渣積累在加熱管上引起火災。
   確保在焗爐內使用耐熱容器，不要在焗爐內使用塑料或紙板容器。



3. 定期清潔加熱管。
4. 不要使用玻璃或陶瓷鍋或蓋子。
5. 請勿讓食物的油或其他液體滴到焗爐底部。
6. 根據食譜建議或個人喜好設置溫度。
7. 關緊門並設置烹飪時間開始烹飪。

控制介面


溫度設定
將溫度調節旋鈕順時針轉動至所需的溫度。溫度可設置範圍為 70°C 至 230°C。

時間設定
時間可設置長達 60 分鐘。
當未設定時間時，焗爐不會啟動。當時間旋鈕處於OFF (關閉)位置時，焗爐將無法運作。

要設定時間，請順時針轉動時間調節旋鈕至所需時間。


調整時間
即使在烹飪期間，也可以調整時間。只需將時間旋鈕轉至新的所需時間，讓焗爐繼續烹飪即可。

注意：當烹飪時間設置為少於10分鐘時，請先將時間旋鈕轉至超過10分鐘，然後再轉至所需的時間位置。

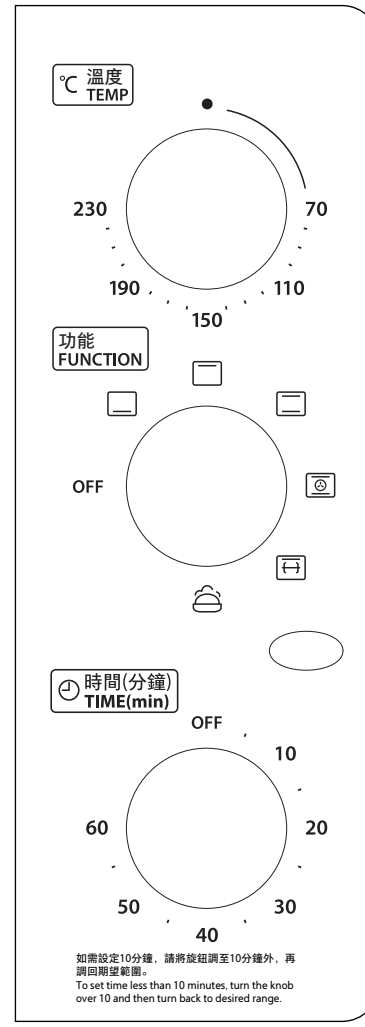


1. 下發熱線功能


1. 旋轉 功能 FUNCTION 旋鈕以選擇 " ▭ " 功能 。

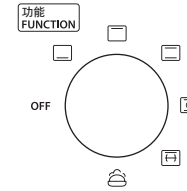

2. 旋轉 ℃ 溫度 TEMP 旋鈕以調整烹飪溫度。

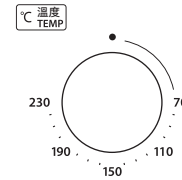


3. 旋轉 時間(分鐘) TIME(min) 旋鈕以調整烹飪時間。

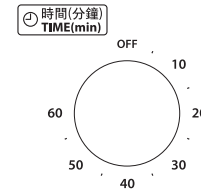


4. 焗爐開始烹飪。

2. 上發熱線功能


1. 旋轉 功能 FUNCTION 旋鈕以選擇 " ▭ " 功能 。

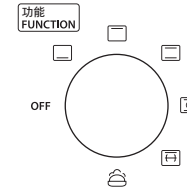

2. 旋轉 ℃ 溫度 TEMP 旋鈕以調整烹飪溫度。

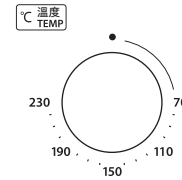


3. 旋轉 時間(分鐘) TIME(min) 旋鈕以調整烹飪時間。

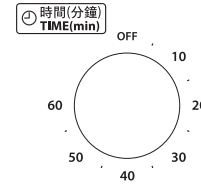


4. 焗爐開始烹飪。

3. 上下發熱線功能


1. 旋轉 功能 FUNCTION 旋鈕以選擇 " ▭ " 功能 。

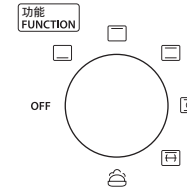

2. 旋轉 ℃ 溫度 TEMP 旋鈕以調整烹飪溫度。

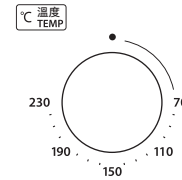


3. 旋轉 時間(分鐘) TIME(min) 旋鈕以調整烹飪時間。

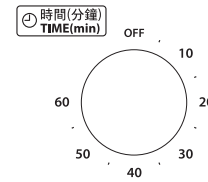


4. 焗爐開始烹飪。

4. 熱風對流功能


1 旋轉 功能 FUNCTION 旋鈕以選擇 " " 功能。

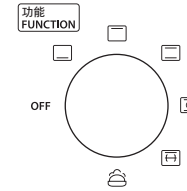

2 旋轉 溫度 TEMP 旋鈕以調整烹飪溫度。

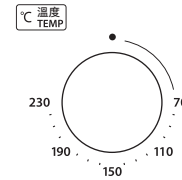


3 旋轉 時間(分鐘) TIME(min) 旋鈕以調整烹飪時間。

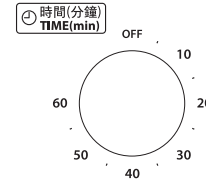


4 焗爐開始烹飪。

5. 旋轉燒烤功能


1. 旋轉 功能 FUNCTION 旋鈕以選擇 " ⊟ " 功能。

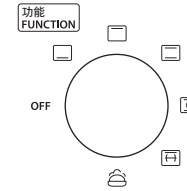

2. 旋轉 ℃ 溫度 TEMP 旋鈕以調整烹飪溫度。

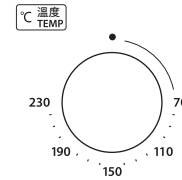


3. 旋轉 時間(分鐘) TIME(min) 旋鈕以調整烹飪時間。

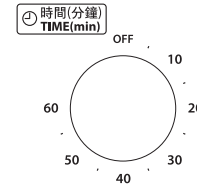


4. 焗爐開始烹飪。

6.發酵功能

1. 旋轉 功能 FUNCTION 旋鈕以選擇 " " 功能。

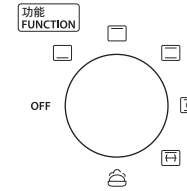

2. 旋轉 時間(分鐘) TIME(min) 旋鈕以調整烹飪時間。

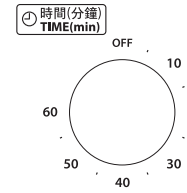


3. 焗爐開始烹飪。

7. 使用旋轉燒烤的功能

1. 將整隻雞（或其他食物）放在烤棍上。將旋轉烤叉放在軸的兩側，並將它們插入雞中以固定在軸上。擰緊叉子上的螺絲以固定在合適位置。


2. 使用旋轉烤肉手柄將雞放入焗爐內，將旋轉烤肉軸的兩端插入旋轉烤肉槽中。關閉焗爐門。

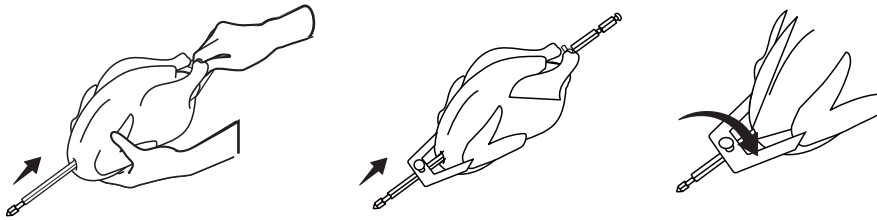


清潔與保養

1. 清潔前，拔掉焗爐插頭並讓其完全冷卻。用溫和的肥皂水洗滌所有配件，包括烤架 " 和烤盤。

2. 不要使用研磨性清潔劑、刷子和化學清潔劑，因為這些會損壞烤盤的不粘塗層。




3. 使用濕布擦拭焗爐內部。使用浸有洗滌劑或肥皂的濕布清潔爐門。

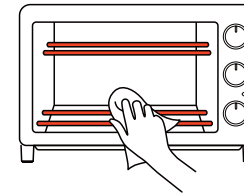

4. 切勿將焗爐浸入水中或其他液體中。請勿在洗碗機中清潔此設備。

5. 任何維修工作應由授權的服務代理進行。

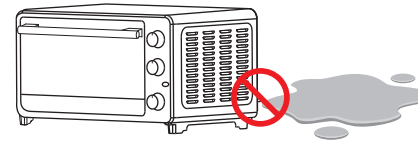

注意

- 注意表面高溫.

產品規格

規格	
型號	TL2−MC25CZE(GR)
電壓、交流頻率	220−230 V~ 50/60 Hz
功率	1400−1500 W
產品尺寸(闊 x 深 x 高)	462*380*272mm
爐腔尺寸(闊 x 深 x 高)	333*311*233mm


#DetailsMatter

INSTRUCTION MANUAL

TOASTER OVEN (25L)

TL2-MC25CZE(GR)

Please review this instruction manual before operating.

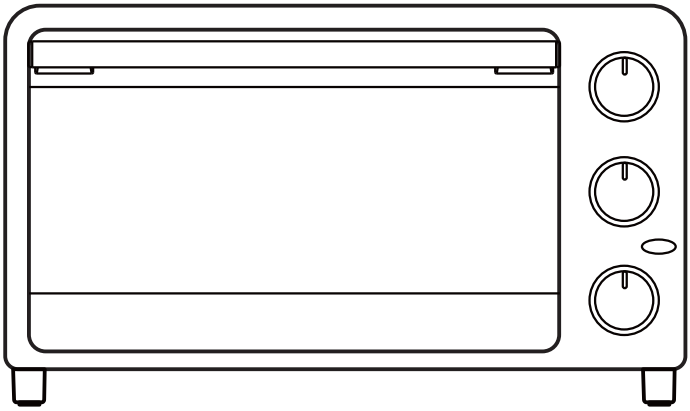

TOSHIBA

CONTENTS

IMPORTANT SAFEGUARDS

Basic safety precautions 01

Before using for the first time 03

PRODUCT INSTRUCTION

Names of parts and accessories 04

OPERATION

Cooking guidelines 05

Control panel

Function instruction 07

1. Lower heating pipes function 07
2. Upper heating pipes function 08
3. Upper and Lower heating pipes function 09
4. Convection function 10
5. Rotisserie function 11
6. Fermentation function 12
7. Rotisserie using rotisserie forks 13

Cleaning and care 14

Specifications 15

IMPORTANT SAFEGUARDS

BASIC SAFETY PRECAUTIONS

When using electrical appliance, basic safety precautions should always be followed, including the following:



This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge,unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.



Children should be supervised to ensure that they do not play with the appliance.



If the supply cord is damaged, it must be replaced by the manufacturer,its service agent or similarly qualified. persons in order to avoid a hazard.



Avoid contacting moving parts.



The appliances are not intended to be operated by means of an external timer or separate remote -control system.



The temperature of accessible surfaces may be high when the appliance is operating.



Accessible parts may become hot during use. Young children should be kept away.



The appliance is intended to be used freestanding.

Remove plug from outlet when the appliance is not in use,before on or taking off parts,and before cleaning.Allow to cool before handing.

Extreme caution should be exercised when using containers constructed of other metal or glass.

This appliance is intended to be used in household and similar applications such as:
-staff kitchen areas in shops,offces and other working environments;
-by clients in hotels, motels and other residential type environments;
-farm houses;
-bed and breakfast type environments.

WARING: Ensure that the appliance is switched off before replacing the lamp to avoid the possibility ofelectric shock.

Do not place any of the following materials in the oven:paper, carboard, plastic, and the like.



Do not store any materials, other than manufacturers recommended accessories in this oven when not in use.




The surfaces are liable to get hot during use.

READ CAREFULLY AND KEEP FOR FUTURE REFERENCE


BEFORE USING FOR THE FIRST TIME

1. Remove all accessories and shipping materials packed inside the Oven.

2. Wash the oven fittings with a dab of washing-up liquid and warm water. Wipe the unit and the oven fittings dry before using with paper towels or a dry cloth.

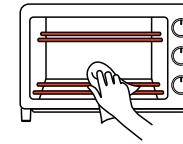

3. Place the oven on a flat counter or other stable surface. DO NOT OPERATE ON THE SAME CIRCUIT WITH ANOTHER APPLIANCE.

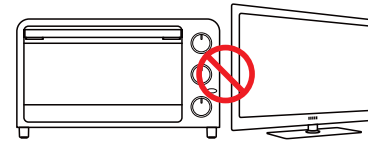

4. Before working, place the crumb tray under the bottom heating pipes.
5. Make sure the crumb tray is properly fitted before using the oven.


Burn off any oils remaining in the oven before using the oven for cooking. To do so, Rotate function knob to select , rotate temperature knob to 230°C. After that, rotate time knob to 15 minutes. This will burn off any oil still on the oven.


CAUTION	The oven may smoke inside during the process. This is normal for a new oven and will not last more than 10-15 minutes

PRODUCT INSTRUCTION


NAMES OF PARTS AND ACCESSORIES

- In case of any differences between the appliance and the pictures in this manual, the product shall prevail.
- Place the appliance on an insulated surface when used.
- The area where this oven is used should be dry. The oven should not be used outdoors.
- Keep the oven at 10-15cm distance from walls and cabinets. Surrounding objects may catch fire due to heat emitted from the appliance or get covered with soot.
- Maintain a 30 cm empty space between the top of the oven and any objects or walls above.

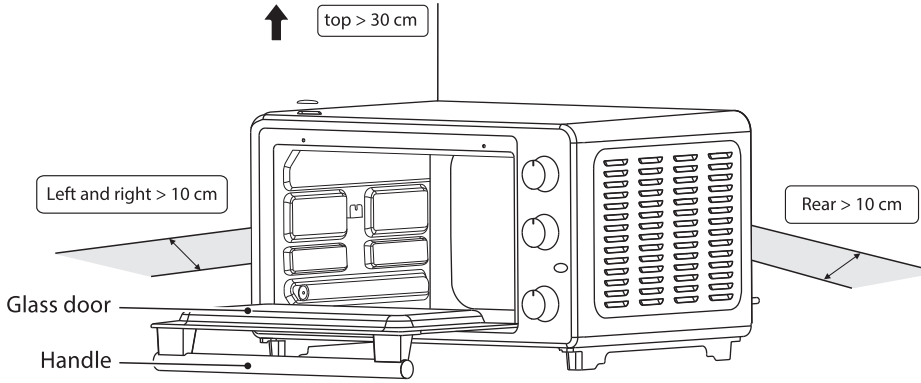



Crumb tray | Baking rack | Baking tray

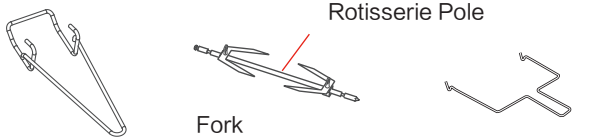


Remover Holder | Rotisserie Fork | Rotisserie Fork Holder

COOKING GUIDELINES


CAUTION	THE OVEN SURFACES ARE HOT DURING AND AFTER USE.

INSTRUCTIONS

1. Place the baking rack and baking tray in position that will accommodate the height of the food to be cooked.

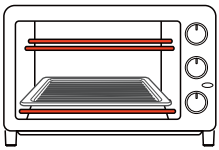

2. The food should be put onto a baking tray to avoid catching fire by an accumulation of food leftovers on the heating pipes. Make sure that you always use an ovenproof container in the oven, never use plastic or cardboard containers in the oven.

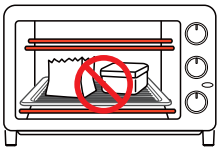

3. Clean the heating pipes periodically.

4. Never use glass or ceramic pans or lids.



5. NEVER let oil or other liquids from the food to drip down to the bottom of the oven.
6. Set the temperature as suggested by the recipe or as desired.
7. Securely shut the door and set the cooking time to begin cooking.

CONTROL PANEL

Temperature setting


Turn the temperature adjustment knob clockwise to the desired temperature. The temperature can be set from 70℃ to 230℃.

Time setting

The time can be set up to 60 minutes. The oven will not turn on without the time being set. When the time knob choose "OFF" position, the oven will not operate. To set the time, turn the time adjustment knob clockwise to the desired time.

Adjusting time


The time can be adjusted even during the cooking period. Just turn the time knob to the newly desired time and let the oven continue cooking.
Note: When the cooking time is set to less than 10 minutes, please turn the time knob to more than 10 minutes, and then turn it to the desired time position.

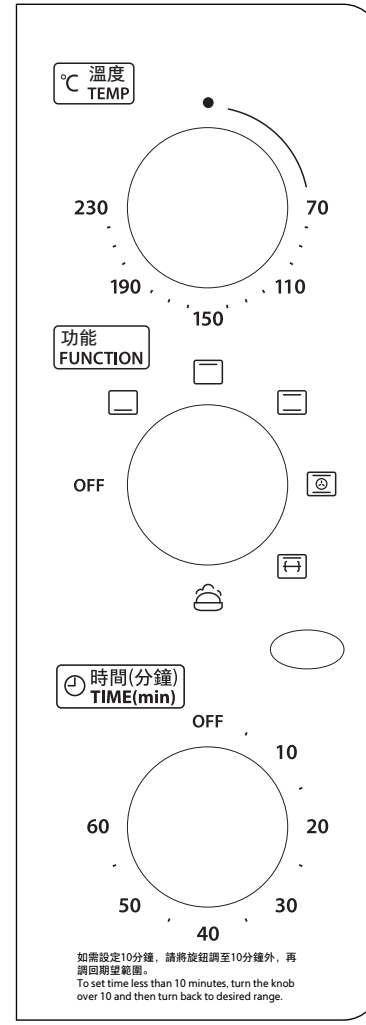


FUNCTION INSTRUCTION

1. LOWER HEATING PIPES FUNCTION


1. Rotate 功能 FUNCTION knob to select the " ⎽⎽ " function.

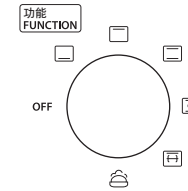

2. Rotate ℃ 溫度 TEMP knob to adjust cooking temperature.

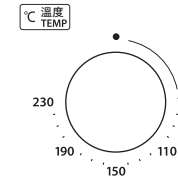


3. Rotate 時間(分鐘) TIME(min) knob to adjust cooking time.

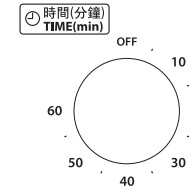


4. The oven starts cooking.

2. UPPER HEATING PIPES FUNCTION


1. Rotate 功能 FUNCTION knob to select the " " function.

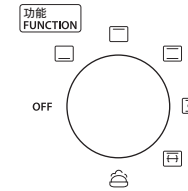

2. Rotate ℃ 溫度 TEMP knob to adjust cooking temperature.

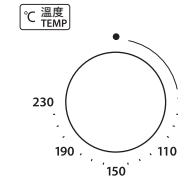


3. Rotate 時間(分鐘) TIME(min) knob to adjust cooking time.

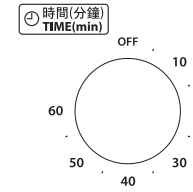


4. The oven starts cooking.

3. UPPER AND LOWER HEATING PIPES FUNCTION


1. Rotate 功能 FUNCTION knob to select the " ▭ " function.

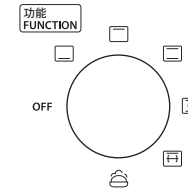

2. Rotate ℃ 溫度 TEMP knob to adjust cooking temperature.

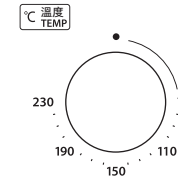


3. Rotate 時間(分鐘) TIME(min) knob to adjust cooking time.

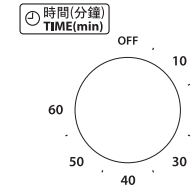


4. The oven starts cooking.

4. CONVECTION FUNCTION


1. Rotate 功能 FUNCTION knob to select the " " function.

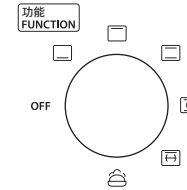

2. Rotate ℃ 溫度 TEMP knob to adjust cooking temperature.

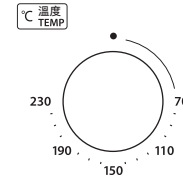


3. Rotate 時間(分鐘) TIME(min) knob to adjust cooking time.

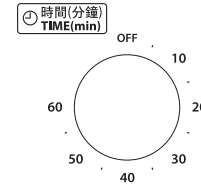


4. The oven starts cooking.

5. ROTISSERIE FUNCTION


1. Rotate 功能 FUNCTION knob to select the " " function.

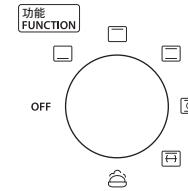

2. Rotate ℃ 溫度 TEMP knob to adjust cooking temperature.

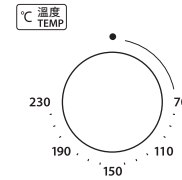


3. Rotate 時間(分鐘) TIME(min) knob to adjust cooking time.

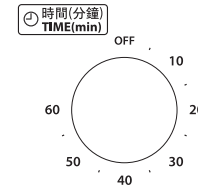


4. The oven starts cooking.

6. FERMENTATION FUNCTION

1. Rotate 功能 FUNCTION knob to select the " " function.

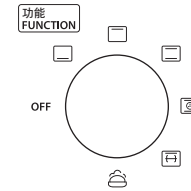

2. Rotate 時間(分鐘) TIME(min) knob to adjust cooking time.

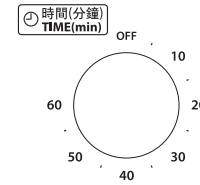


3. The oven starts cooking.

7. ROTISSERIE USING ROTISSERIE FORKS

1. Place the whole chicken (or other food item) on the rotisserie shaft. Place the rotisserie forks on either side of the shaft and insert them into the chicken to secure it on the shaft. Tighten the knobs on the forks to secure them.


2. Use the rotisserie handle to place the chicken inside the oven, securing both ends of the rotisserie shaft into the rotisserie slots. Close the oven door.

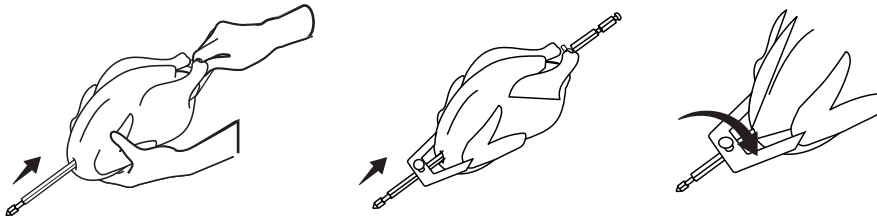


CLEANING AND CARE

With proper care and cleaning, your appliance will retain its appearance and remain fully functional for a long time. We will explain here how you should correctly care for and clean your appliance. Do not use glass cleaners or metal/glass scrapers for cleaning.


1. Before cleaning, unplug the oven and allow it to cool completely.
2. Wash all the accessories with mild, soaped water including the cooking baking rack and the baking tray.
   Do not use abrasive cleansers, scrubbing brushes and chemical cleaner as these will cause damage to the non-stick coating of baking tray.



3. Using a wet cloth to wipe the inner of the oven. To clean the door by using a wet cloth saturated with detergent or soap.

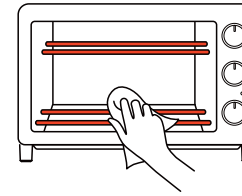

4. Never immerse the oven in water or other liquid. Do not clean the appliance in a dishwasher.
5. Any other servicing should be performed by an authorized service representative.

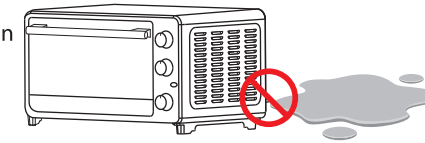

CAUTION

Warning: Hot Surface!

SPECIFICATIONS

SPECIFICATIONS	DATA
MODEL	TL2−MC25CZE(GR)
POWER SUPPLY	220−230 V~ 50/60 Hz
RATED POWER	1400−1500 W
PRODUCT SIZE(WxDxH)	462*380*272mm
CAVITY SIZE(WxDxH)	333*311*233mm

#DetailsMatter