

ROKU®


Select Series

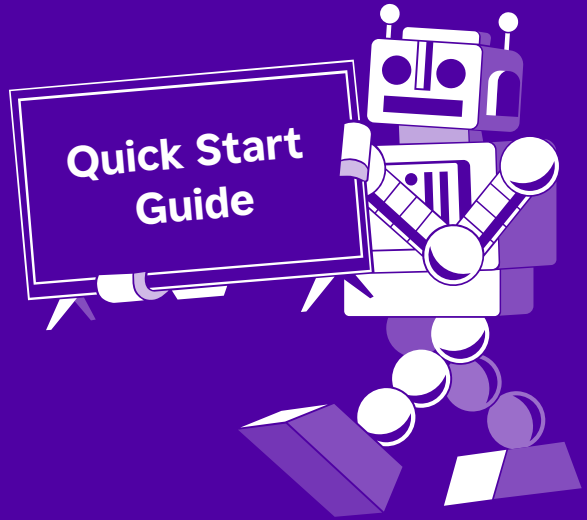


What's included

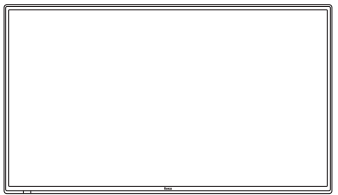

Roku Select Series TV



TV power cord included for 50"- 85" models only



x 4 screws

Stand screws



TV stands




Roku TV Remote

What you need



Phillips head screwdriver




Laptop or mobile phone for activation



Internet connection

STEP 1: Set up your TV

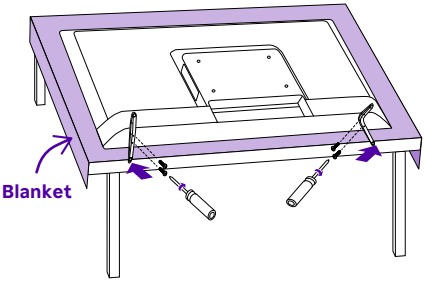

A **Prepare a surface**

Put a soft covering like a blanket down onto a clean, flat surface (make sure it's larger than the TV) and place the TV on it.

B **Attach the stands**


Use a screwdriver and included screws to attach the stands.

C **Set TV upright**


Place your TV on a stable, flat surface.

Mounting your TV?

For instructions, skip these steps and visit **go.roku.com/tvmount**

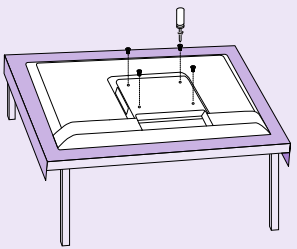

STEP 2: Plug TV in and power your remote

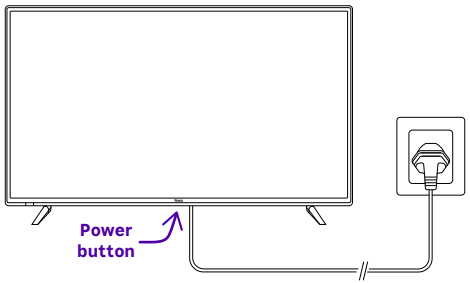

A Connect your TV


Plug your TV into a power outlet. It should turn on automatically. If it doesn't, press the power button.



B Power your remote

See the remote features card on how to use your Roku TV remote.

STEP 3: Activate your TV

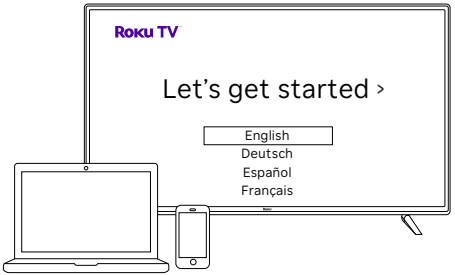

Connect your TV

Follow the instructions on your TV screen. Activate your TV by using your computer or smartphone to link a Roku account.

IMPORTANT
Roku never charges for activation support.

Frequently asked questions

Why do I need an internet connection?
You'll need an internet connection to set up your TV, stream your favorite channels and for automatic software updates.

Why should I enter a payment method?
Saving a payment method makes it easy to rent or buy movies, subscribe to popular channels, and start free trials in just a click. No charges will be made without your authorization.

Get to know your TV

HDMI - Game consoles, DVD players

Composite (available on some models) - Analog devices, older game consoles

Antenna/Cable - Digital antenna, cable connection

Audio connections

HDMI ARC or eARC (recommended) - AV receivers, soundbars

Optical (S/PDIF) - AV receivers, soundbars


Headphone Jack (available on some models) - Wired headphones

Other connections

USB - Flash drive for media playback

Ethernet (available on some models) - Wired internet connection

Roku Remote features

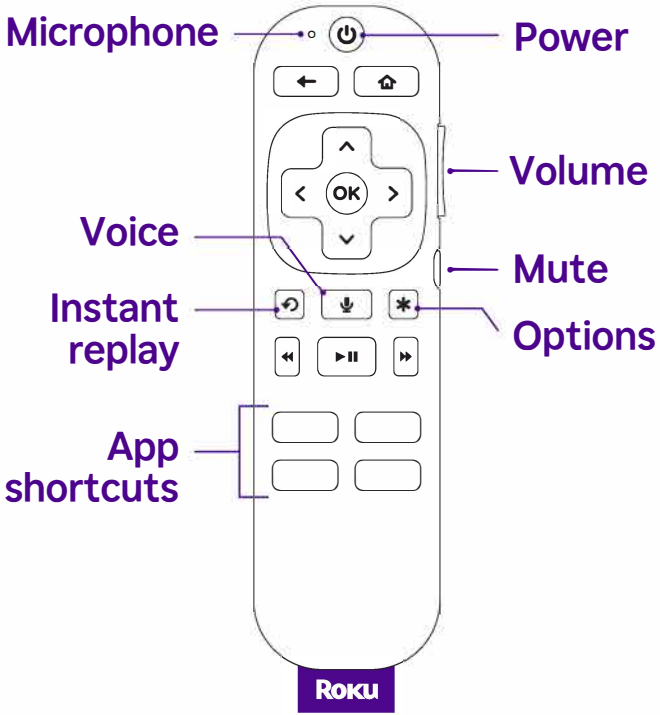

Power your remote

Includes pre-installed batteries. Pull out the tab on the back of your remote. It will pair to your TV automatically.

Voice search & control

Quickly search across thousands of apps, play entertainment, control your streaming, and more with your voice.

Pre-set app shortcuts

Launch popular streaming apps in just a press.

Options button

On the home screen:
Opens the app settings menu.

While streaming:
Opens sound and picture settings.


© 2026 Roku, Inc. All Rights Reserved. Roku, the Roku logo, and the purple d-pad and purple fabric tag designs are trademarks or registered trademarks of Roku, Inc.

Need help?

For setup help or support, visit or call

go.roku.com/TV

1-816-272-8106
4:00 am – 10:00 pm PT

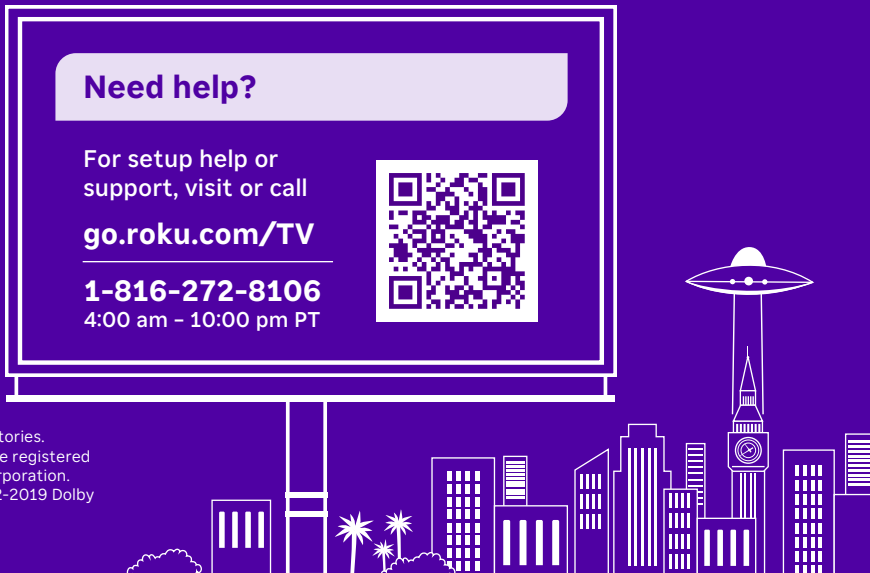

Roku

© 2026 Roku, Inc. All Rights Reserved. Roku, the Roku logo, and the purple d-pad and purple fabric tag designs are trademarks or registered trademarks of Roku, Inc.

Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are registered trademarks of Dolby Laboratories Licensing Corporation. Confidential unpublished works. Copyright 1992-2019 Dolby Laboratories. All rights reserved.