
尺寸：70x90mm
材质：100g书写纸
工艺：风琴折，正反面印刷，单黑印刷

True Wireless Earphones
Model: HE-102

FCC ID: 2A2BY-HE-102-A

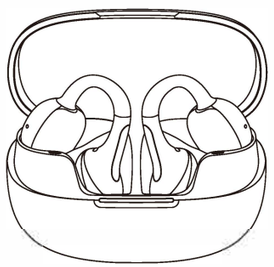

INSTRUCTION

Please read the instruction manual carefully before using the product and keep it with future care.

1. What's in the Box



Open Earbuds *2 | Open Earbuds Charging Case *1 | USB-C Charging Cable *1 | User Guide *1

Decorative Accessories *2 (Accessories are optional)


If any of the above-listed items are missing or the product is damaged, do not use it. Please contact our customer service team for assistance.

2. LED Indicator Guide (Charging Case)


Status	LED Behavior
Charging Earbuds	Solid White (Turns off when fully charged)
Low Battery (<20%)	Flashing White
Charging the Case	Flashing Orange
Case Fully Charged	Solid Orange

3. Product Overview

Earbud Diagram

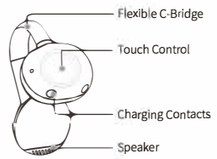


Charging Case

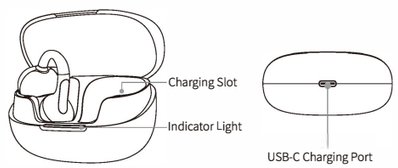

4. How to Use




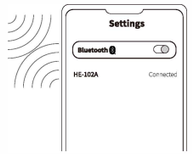

1). For first-time use, open the charging case lid. The earbuds will automatically power on.


2). Turn on your device's Bluetooth, find and select **"HE-102"** to connect.

Note: After the first successful pairing, the earbuds will automatically reconnect to your device the next time you open the case.

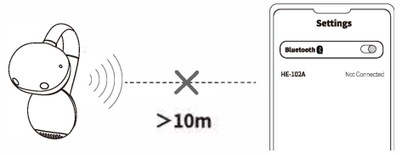


3). Out of Range Disconnection: The earbuds will disconnect if moved more than 10m (33ft) away from your device. They will automatically reconnect if you return within range within 3 minutes.

4.1).

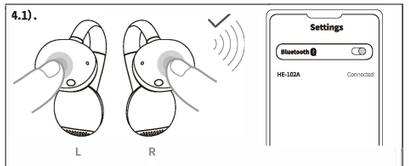

4.2).

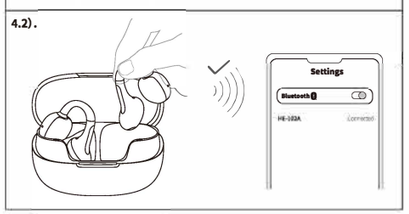

4). Auto Power-Off & Manual Reconnection:
If out of range for more than 3 minutes, the earbuds will automatically turn off to save power.

To Reconnect:


4.1). Press and hold the touch sensors on both earbuds for 5 seconds to power them on. They will then automatically reconnect toyour device.

4.2). Place the earbuds back into the charging case and close the lid. The earbuds will automatically power off and disconnect from your device.

5. Wearing Instructions

1). Pinch the Flexible C-Bridgewith your thumb and forefinger and raise it toward your ear.
2). Position the oval speaker inside your ear, and rest the square section behind your ear.
3). Adjust the earbuds for a secure and comfortable fit.

Note: Avoid over-bending the Flexible C-Bridge to prevent damage.

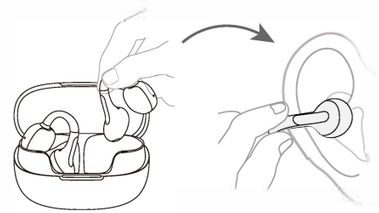




6. Touch Control Instructions

Audio Control		
Functions	**Earbud**	**Gesture**
Play/Pause	L/R	Tap 2 times
Previous Track	L	Tap 3 times
Next Track	R	Tap 3 times
Volume-	L	Tap 1 time and hold
Volume+	R	Tap 1 time and hold
Answer	L/R	Tap 1 time
Hang Up / Reject Call	L/R	Tap 2 times
Activate Assistant	L/R	Hold for 2s
Dismiss Assistant	L/R	Tap 1 time

7. Charging

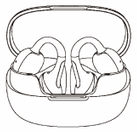




Solid white light

Charging the Earbuds

1). Place the earbuds into the charging case until they are magnetically secured in place. The charging case indicator light will turn on, and you can then close the case.
2). The Charging case LED stays solid white while charging the earbuds, and turns off when they are fully charged.

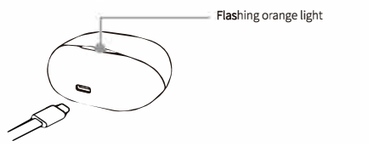

Charging the Charging Case

1). Insert the provided USB-C to USB-C charging cable into the charging case and connect it to a USB-C power source or certified wall charger.
2). The LED flashes orange while charging the case, and turns solid orange when fully charged.

8. Product Specifications

Model: HE-102
Bluetooth chip version: V6.0
Playtime: Up to 6 Hours (at 50% volume)
Input: 5V⎓1A
Battery Capacity (L/R): ***3.85V/60mAh***
Charging Time: 1.6H
Battery Capacity (Charging case): 3.7V/350mAh
Charging Time: 2H
Transmission Distance: ≈10m

9. Important Safety Instructions & Precautions

- Do not attempt to disassemble your earbuds for any reason. Doing so may damage the product or cause the battery to spontaneously combust or catch fire. If your earbuds malfunction, please contact our customer service team immediately.
- When using earbuds while driving, please adhere to the local laws and regulations in your country or region.
- Avoid exposing the earbuds to high-temperature environments (above 122°F / 50°C), such as leaving them in direct sunlight. This can degrade product performance and shorten battery life.
- Avoid exposing the earbuds to rain or immersing them in liquid.

- Please use the included charging cable to charge the device.
- For optimal charging speed, the charger's power output must be between 0.5W and 5.5W.

10. Troubleshooting Guide

Why do I hear static or interference during a call?
Devices such as cordless phones and wireless network equipment (like Wi-Fi routers) can cause interference, which often sounds like static noise. To reduce interference, do not place your earbuds nearother devices that use or emit radio waves.

Why do I hear an echo during a call?
Try adjusting the earbud volume or moving to a different area and try again.

How do I clean the earbuds?
Please wipe them with a dry, soft cloth.

Why won't my earbuds charge fully?
The charging contacts on the earbuds may not be properly connected to the charging pins in the case. Please take the earbuds out and place them back in the case, ensuring they are seated correctly.

If you experience any other issues with your earbuds, please contact our customer service team for assistance.

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.