

Alnanny A4 Kit Plus

Smart baby monitor

User manual

Arenti[®]



Email: support@arenti.com

Phone: 1-866-999-7868, Mon-Fri 9AM-5PM (PT)

Toll free for USA&Canada, subject to charges for other regions

Phone Service Language only available in English

Product description

Please read this manual carefully before using the product and keep it properly. Label information is located on the side of the camera.

Packing list



Camera



Monitor



Headgear



Bracket



Screw package



Reset pin



Power cable




Power adapter





Quick guide

Product name	Alnanny A4 Kit Plus	Alnanny A4-2Cam Kit Plus	Alnanny A4-4Cam Kit Plus
Packing list	Camera X1	Camera X2	Camera X4
	Monitor X1	Monitor X1	Monitor X1
	Headgear X1	Headgear X2	Headgear X4
	Bracket X1	Bracket X2	Bracket X4
	Screw package X1	Screw package X2	Screw package X4
	Reset pin X1	Reset pin X1	Reset pin X1
	Power cable X2	Power cable X3	Power cable X5
	Power adapter X2	Power adapter X3	Power adapter X5
	Quick guide X1	Quick guide X1	Quick guide X1

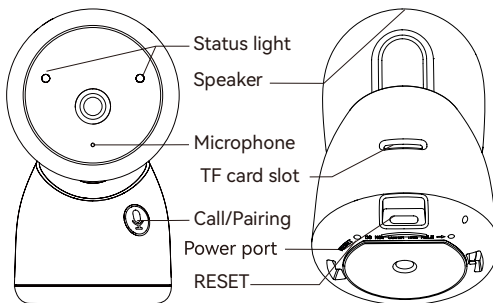

Status light	• Flashing red light (slow): wait for network configuration • Flashing red light(fast): connecting the network • Fixed blue light on: camera is working correctly • Fixed red light on: network is malfunctional
Call/Pairing	Press to make a call; long press to pair
RESET	Press and hold for 5s to reset the camera (if you have modified settings, they will return to factory defaults)

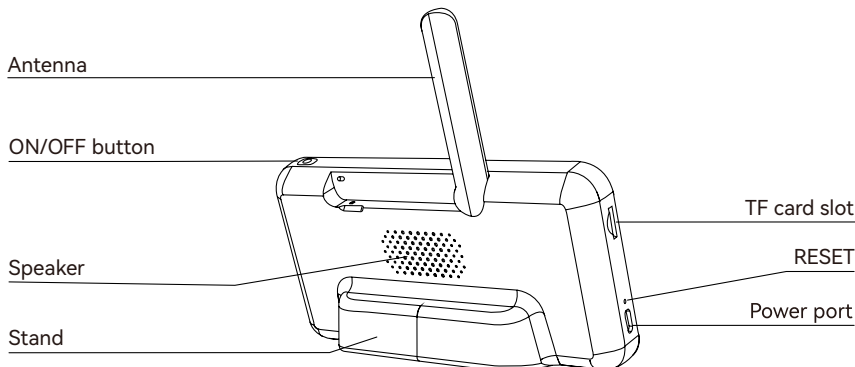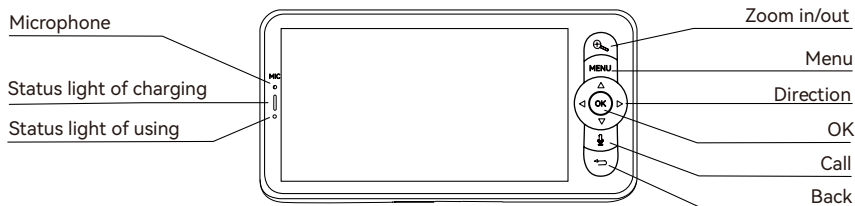


Status light of charging	• Orange light: charging • Green light: fully charged
Status light of using	• Yellow light: monitor on • No light: monitor off
Antenna	Adjust the angle to get better signals
ON/OFF button	Long press 5s to turn on/turn off the monitor
Zoom in/out	Zoom the image in 1X, 2X or 4X

Menu	On the homepage, press to enter the menu interface; On the homepage, long press to enter the setting interface
Direction	Control the rotation directions; select the menu items
OK	Confirm or awake the screen
Call	Make a call after pressing the button
Back	Press to back up; On the homepage, long press to stop playing music

Installation

Find a position where you can get the desired field of view. You can put the camera on a flat surface or mount it on the wall.

Mounting on the wall

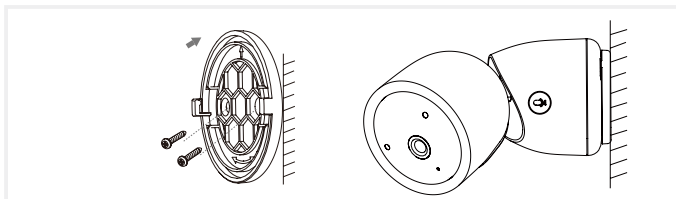

Tips:

- The installation wall needs to be able to bear at least 3 times the total weight of the camera.
- In case your camera is mounted upside down, its picture shall be flipped as well. Please set from Arenti App >> Device (tap device to live video page) >> Settings >> Basic Function >> Image Setting >> Screen Flip.
- Do not point the camera toward a glass window. Or it may result in poor image performance because of the window glare by infrared LEDs, ambient lights, or status light.

Camera using tips

- Work indicator:
The blue light indicator can be turned off manually when the camera is in working condition.
Set from: App>> Device (tap device to live video page) >> Settings >> Work Indicator.
- Live video viewing:
In the camera control interface of the App you can view the camera monitoring in real-time, adjust the resolution, capture images, record video, and make 2-way talking.
- Infrared night vision:

The camera can automatically switch to night vision mode (black&white view) at night according to the degree of change in surrounding light. With built-in invisible red Infrared LED lights, the night vision distance can reach 10 meters, and it can be viewed super clearly in the dark.

- Motion detection:

The camera can detect movement changes in the camera view and you will receive push alerts from App when movement is detected.

Set from: App >> Device (tap device to live video page) >> Settings >> Alert Settings >> Motion Detection.

Specifications

Model	Alnanny A4
Angle of view	100°
Working temp	0°Cto 40°C
Local storage	TF card(up to 256GB)
Resolution	2560x1440
Size	70x63x120 mm
Power input	DC 5V/1A
Consumption	Up to 4.5W
Supported phone OS	iOS 9 / Android 5.0 or later
2.4GHz Wi-Fi	2412-2462MHz (Max. power<30dBm)
5GHz Wi-Fi	5150-5850MHz (Max. power<23dBm)
Wi-Fi Halow	905-925MHz (Max. power<30dBm)
Bluetooth	2400-2483.5MHz (Max. power<20dBm)

Model	Alnanny-Screen2
Battery capacity	3350mAh
Working temp	0°Cto 40°C
Local storage	TF card(up to 128GB)
Resolution	720P (1280x720)
Size	157x81x40mm
Power input	DC 5V/1A
Wi-Fi Halow	905-925MHz (Max. power<30dBm)

Product configuration

Scan QR code to download and install the Arenti App. Or you can search "Arenti" on App Store (iOS) or Google Play (Android).



Registration

Open the App. If you are a new user, tap to create a new account and follow the prompts to complete account setup.

Note:

Before creating a new account, please read the Privacy Policy and Terms of Use carefully.

The image shows a mobile app registration screen. At the top, it says "Glad to meet you!". Below that, there's a section for "United States" with a flag icon and a dropdown arrow. Underneath, it says "Account:" followed by "abc@mail.com". Below that is a "Password:" field with a strength indicator. There are two links: "Remember password" (with a blue dot) and "Forgot password?". At the bottom is a large orange "Log in" button. At the very bottom, there's a link: "No account yet? Sign up now".

- Set up a router

Make sure the router is connected to the Wi-Fi network. Please set the parameters of the router before connecting to the Wi-Fi network, and record the SSID and password of your Wi-Fi.




Please keep the network available

- Power on the device

Power on the camera. Status light flashing red indicates that the camera is ready for pairing.

Pairing method 1: pairing via QR code on device


Open App home page, click "+" >> "Scan Code", then scan the QR code pasted on the device casing with the App of your phone. The device will then appear on the page, click the device.

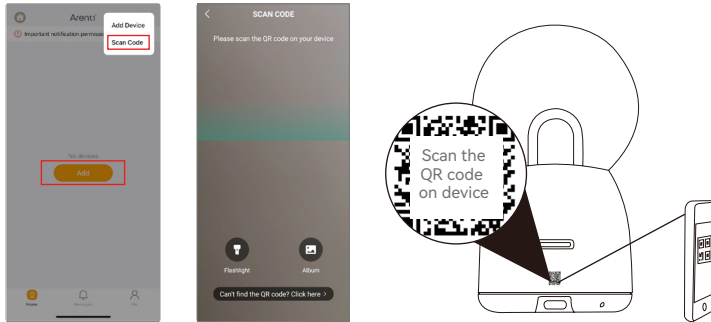

Select the Wi-Fi network and input the password, and press "Next". Make sure that your phone has connected to a fluent and steady Wi-Fi already.

Note:


The number of bits in the SSID and passwords of the router should not exceed 31 digits.

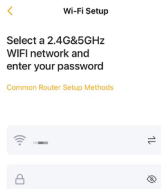

The device can be added to App after the network connection.

Note:


When pairing, please put the camera and mobile phone close to the router. If camera is not in the red slow blinking after 30s of powering on, press and hold the reset button for 5s to reset, and then restart to pair the camera with the App

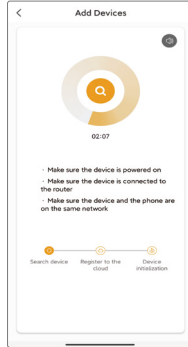

Pairing method 2: pairing via Bluetooth

Turn on your phone's Bluetooth.

Open App home page, click "+" >> "Add Device" or "Add", the device will be searched for by bluetooth and appears on the page. Confirm the serial number(SN) of the device, then click the device and follow the notes to pair the camera with App.

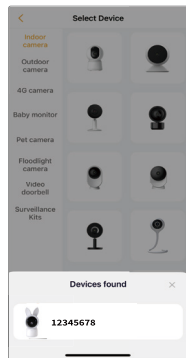

If no device is found and the pairing process is not successful, please check below instructions:

- Verify that the entered Wi-Fi password is correct and that the mobile device is connected to the same

Wi-Fi network.

- Make sure the camera is in pairing mode.
- Check for network activity on your Wi-Fi.

If none of the solutions works or you have any other problems, please call **1-866-999-7868** (Mon-Fri 9AM-5PM (PT), toll free for USA&Canada, subject to charges for other regions, Phone Service Language only available in English) or contact **support@arenti.com** to get help.

Note:

If you have multiple cameras, please follow steps again to add devices one by one. To change Wi-Fi network, please restore the camera to factory settings and follow steps to add the camera.

Monitor Using tips

- Pairing of camera and monitor:



Power on the camera and the monitor, and they will automatically connect. If the connection fails, please follow the steps below to pair. The pairing is distance limited, so please make sure that the distance between the camera and the monitor is no more than 200m.

- Bind the monitor and camera:

1. Press the Menu button on the monitor, and select  > Camera.
2. Select Camera 1 or Camera 2/3/4 which you need to pair.
3. Long press the camera pairing button until you hear the prompt tone.
4. Press the OK button on the monitor to start pairing.
5. If you need pair 2 or more than 2 cameras, please repeat step 2~ step 4.

- Unbind the monitor and camera:

1. Press the Menu button on the monitor, and select  > Camera.
2. Select Camera 1 or Camera 2/3/4 which you need to unbind.
3. Long press the OK button to release the binding.

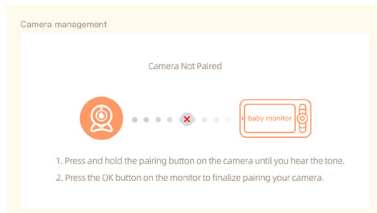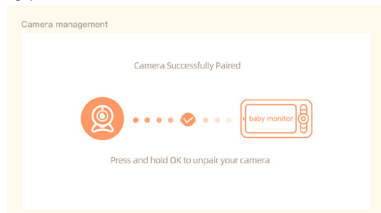

- Camera switching method:




For different products, you may add 1,2 or 4 cameras. If you have added multiple cameras, the monitor will display 2 live views at the same time. If you want to set parameters or enable functions of one of the cameras, you need to select and switch to the camera first.

- Camera switching method 1: manual switching

On the home page, press  button and use the Direction button to switch the camera between Cam1, 2, 3 or 4 if you have added multiple cameras. Select one camera you need and press the OK button on the monitor to enter full-screen viewing mode. And then you can press  button again to zoom in and zoom out. (Zooming function does not work when the screen is not in full screen.)

Note:

When you add 3(or 4) cameras, press  button to enter the selection mode. Camera 1, 2 are selected by default, press  button again to switch to camera 2, 3(or 3, 4).

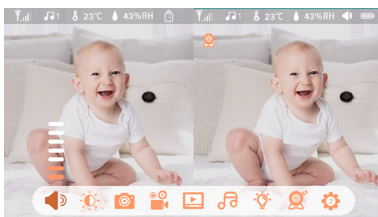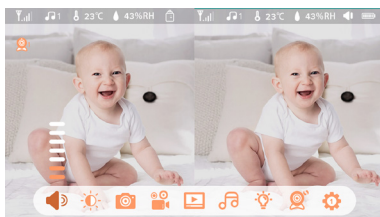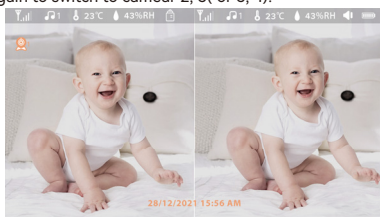

- Camera switching method 2: timed cycle switching

We also offer the option of switching each camera in a timed cycle, making it easy for you to set up monitoring rounds as needed.

1. Press Menu on the monitor and select  > .
2. Press UP direction button to the mode of timed cycle selection.
3. Press LEFT and RIGHT direction buttons to select option of different timed cycle.



- Rotate the camera

You can adjust the monitoring angle for better vision.

The direction buttons on the monitor are available when the camera is powered on. Press the direction buttons to rotate the camera horizontally and vertically for better vision.

- Photo & video

- Take a photo:

You can take a photo when you want to capture an interesting scene of the baby. Press Menu button on the monitor, select  and press OK to take a photo.

- Record a video:


You can record a video when you want to capture a meaningful time for the baby. Press Menu on the monitor, select  and press OK to record a video.

- View the taken photos and recorded videos:

1. Press the Menu button on the monitor, select  and press OK to enter the interface.
2. Select the camera and date, select the photo or video you want to view and press OK to enter preview mode.

* Press OK to play or pause the video in the preview mode.


* Press the Return button to the quit preview or return to the main menu.

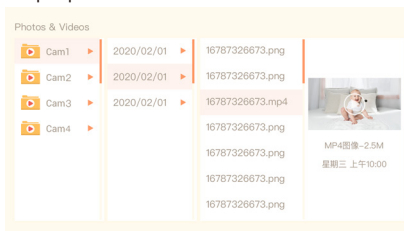

- Play music

You can play music when your baby needs to be soothed. There are various soft music to select.

Press the Menu button on the monitor screen, and select  and press OK to enter the music interface. You can select different music, change the music cycle mode, or adjust the music volume.

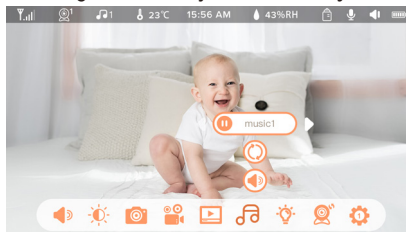

- Feeding reminder

Remind you to feed your baby when you are too busy, or when you want to give your baby a regular diet.

1. Press the Menu button on the monitor, and select  > Feeding Reminder.
2. Select on or off to open or close feeding reminders. You can set up to 10 feeding times one day. And when the set time is up, a feeding alarm will appear on the monitor screen.
3. Press UP and DOWN direction buttons to select between 10 time options, and press OK to start the time setting.




- Smart care

You can turn on functions of motion detection, noise detection, and cry detection, so that you can know the baby's status immediately, no matter what you are doing.

1. Press Menu on the monitor and select  > Smart Care.
2. Press UP and DOWN direction buttons to select options between motion detection, noise detection, and alarm volume, then press OK to save.
3. When set up one detection mode, please press LEFT and RIGHT direction buttons to change options,

and press UP and DOWN direction buttons to adjust the sensitivity.


* You can select different sensitivity according to your needs. Low refers to low sensitivity, and high refers to high sensitivity.

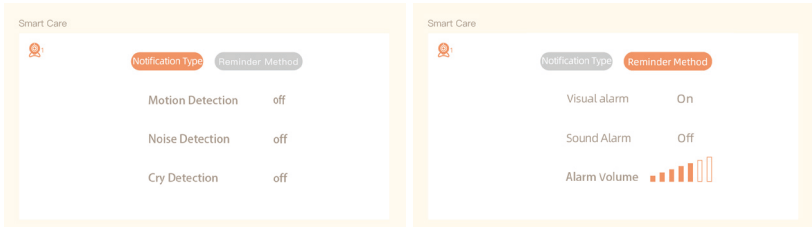

• Temperature and humidity detection

You can monitor the temperature and humidity of your baby's room in real-time. When the temperature and humidity are out of range, you will receive the alarms immediately, so that you can take measures.

1. Press the Menu button on the monitor, and select > Temperature and humidity.
2. Press UP and DOWN direction buttons to select options between temperature range, humidity range and out-of-range reminder, then press OK to set up.
3. Press LEFT and RIGHT buttons to change options, then press UP and DOWN buttons to change values and units.
4. In the Out of range reminder option, select to turn on or off the alarm when the temperature and humidity are out of range.

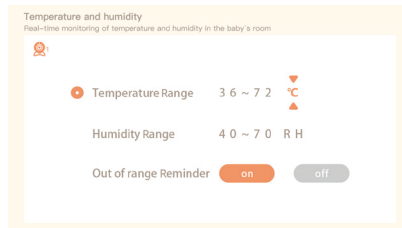


- Safety Protection
- Wi-Fi network channel

If you turn off the Wi-Fi network channel, the App will not be able to view the camera.

- Visited records


You can also view the visited records as all visits through the App will be recorded.

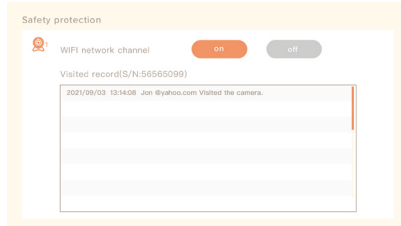

- Night light

You can turn on the night light if needed, and you can set lighting mode and light color.

Press Menu on the monitor and select > Open .Or press the Menu button, and select > Light > Night light.

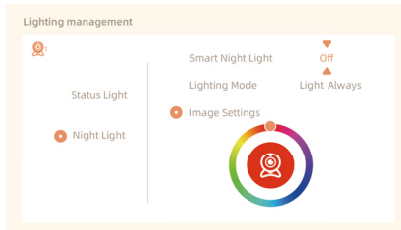

- General setting

- Set up brightness:

1. Press Menu on the monitor, select and press OK to enter.
2. Press UP and DOWN buttons to adjust brightness.

- Set up time:

1. Press Menu on the monitor and select > Time setting.
2. Press the direction buttons to change the date, time, and time displaying mode.

- Set up language:

1. Press Menu on the monitor and select > Language.

2. Select the language you need.

- Set up sleep mode:

You can set up sleep mode to increase standby time.

1. Press Menu on the monitor and select  > Sleep mode.

2. In default mode(Audio off), the audio from the camera can not be heard after the display is off, so the standby time is long. In Audio on mode, the audio from camera can still be heard even after the screen is turned off, and you can choose the time(1,5,10,30 or 60min), but the standby time is shorter. In Always on mode, the monitor remains on unless the power button is pressed, with short standby time.

- Turn on and off status indicator:

If you turn on the status indicator, you can get the working status of the camera. You can also turn off the status indicator if you think it will affect your baby's sleep.

Press Menu on the monitor and select  >  . (Or Press the Menu button, select  > Light > Status light.).

- SD card:

1. Press Menu on the monitor and select  > SD card management. Then you can view the total capacity and remaining capacity of your SD card.

2. (Optional) You can format the SD card as you needed, but make sure that the important data is backed up.

- Upgrade:

You can upgrade your camera when the upgrade alarm appears. Or press Menu on the monitor and select  > Device information to check whether there is an upgrade.

- Low battery alarm:

When the camera is low on battery, the low battery alarm will appear on the monitor screen. Please charge the monitor as soon as possible.

FAQ

Camera

Q: How to disable the LED indicator/blue light in my camera?

A: Arenti App >> Device (turn to live video page) >> Settings >> Basic Function >> Network Indicator: Disable it.

Q: How to turn off the camera real-time monitor, and stop recording?

A: Arenti App >> Device (turn to live video page) >> Settings >> Basic Function >> Privacy Protection >> Lens OFF.

Q: How to change the Wi-Fi or update the Wi-Fi password for the device?

A: Please delete the camera on App, click "Add" and follow the steps to use the new Wi-Fi network to add the camera again.

Q: How to share Arenti devices with friends and family?

A: Arenti App >> Device (turn to live video page) >> Settings >> Device Share >> Add, follow the tips to share your device.

Q: Failed to access the live video, prompts offline?

A:

- Please ensure the camera is in the power-on status: the camera network indicator should be on.
- Check the Wi-Fi network is in good condition or restart the router.
- Try to move the camera closer to the router.
- Delete the camera from Arenti App and add it again. Confirm the App and camera firmware are the latest versions.

Q: Cannot find the pairing button?

A: The pairing button is the call button of the camera. Long press the button for 3 seconds, and follow the step instructions of the monitor.

Monitor

Q: What should I do if the monitor is stuck?

A: Press the reset button located near the power port on the monitor, or long press the power button to turn on the monitor again.

Q: How can I change the wallpaper of monitor screen?

A: Press Menu on the monitor and select  > Wallpaper.

Q: How can I upgrade the version of the monitor?

A: Firstly, add the camera to the App. Then press Menu on the monitor and select  > Device Information, then check for available upgrades.

Q: The monitor cannot be previewed properly?

A: Check whether the monitor has connected to the camera. If not, pair the camera and the monitor firstly.

Q: Why the camera or the monitor cannot identify the TF card?

A: Confirm whether the TF card is normally available and the format is FAT32.

If none of the solutions works or you have any other problems, please call **1-866-999-7868** (Mon-Fri 9AM-5PM (PT), toll free for USA&Canada, subject to charges for other regions, Phone Service Language only available in English) or contact **support@arenti.com** to get help.

Precautions

- The applicable working temperature of this product is 0°C~40°C, please do not use it in an environment where the temperature is too high or too low.
- To use this product better, avoid the front and side of the lens close to the glass, white walls, light objects etc., so as not to cause the picture to be bright near, dark, or whitish in the distance.
- Please make sure that the camera is installed within the range covered by the Wi-Fi signal, and placed as far as possible on the location where the signal is better, and try to install it away from metal and microwave ovens that may affect the signal.

After-Sale Service and Technical Support

- Access Support Articles, Videos, and Documentation. www.arenti.com/support/
- Access Support from the Arenti App, log in to your Arenti App and tap to get support.
- You can send an email to support@arenti.com. Describe the camera issue, and inform us of the camera model and SN from the camera body. We will try to reply you in 24h.

Legal notice

Symbols:  Direct current (DC)



Don't throw batteries or out of order products with household waste (garbage). The dangerous substances that they are likely to include may harm health or the environment. Make your retailer take back these products or use the selective collection of garbage proposed by your city.



Hereby, Arenti, declares the radio equipment type 'Alnanny A4, Alnanny-Screen2' complies with the Directive 2014/53/EU

The full test of the EU declaration of conformity is available on the Internet address: www.arenti.com



Descripción del producto

Lea atentamente este manual antes de utilizar el producto y consérvelo adecuadamente. La información de la etiqueta se encuentra en el lateral de la cámara.

Lista de embalaje



Cámara



Monitor



Hoofddekse



Soporte



Paquete de tornillos



Pin de reinicio



Cable de alimentación




Adaptador de alimentación





Guía rápida

Nombre del producto	Alnanny A4 Kit Plus	Alnanny A4-2Cam Kit Plus	Alnanny A4-4Cam Kit Plus
Lista de embalaje	Cámara X1	Cámara X2	Cámara X4
	Monitor X1	Monitor X1	Monitor X1
	Hoofddekse X1	Hoofddekse X2	Hoofddekse X4
	Soporte X1	Soporte X2	Soporte X4
	Paquete de tornillos X1	Paquete de tornillos X2	Paquete de tornillos X4
	Pin de reinicio X1	Pin de reinicio X1	RPin de reinicio X1
	Cable de alimentación X2	Cable de alimentación X3	Cable de alimentación X5
	Adaptador de alimentación X2	Adaptador de alimentación X3	Adaptador de alimentación X5
	Guía rápida X1	Guía rápida X1	Guía rápida X1

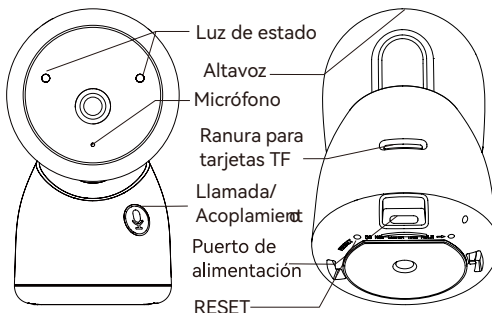

Luz de estado	• Luz roja intermitente (lenta): espere a la configuración de la red • Luz roja intermitente (rápida): conexión a la red • Luz azul fija encendida: la cámara funciona correctamente • Luz roja fija encendida: la red no funciona correctamente
Llamada/Acoplamiento	Pulse para realizar una llamada; pulse prolongadamente para emparejar
RESET	Mantenga pulsado durante 5s para reiniciar la cámara (si ha modificado los ajustes, volverán a los valores predeterminados de fábrica)

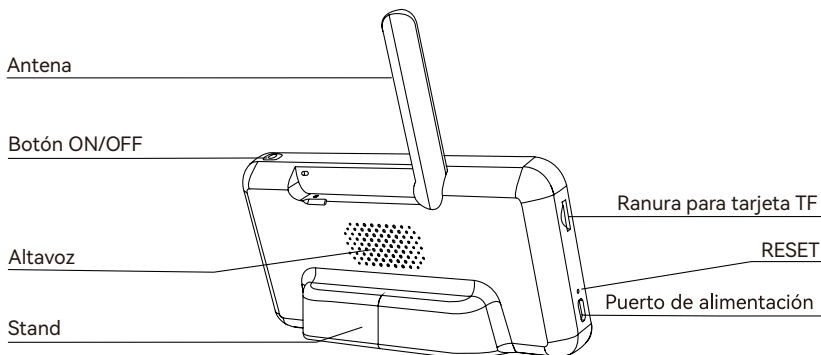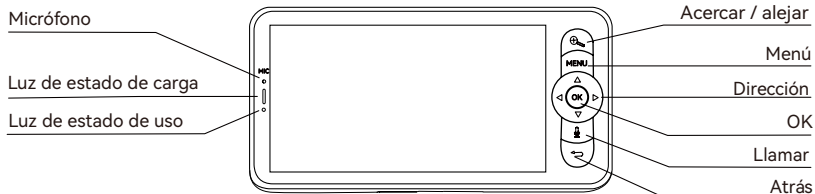


Luz de estado de carga	• Luz naranja: cargando • Luz verde: carga completa
Luz de estado de uso	• Luz amarilla: monitor encendido • Sin luz: monitor apagado
Antena	Ajusta el ángulo para obtener mejores señales
Botón ON/OFF	Pulsación larga 5s para encender/apagar el monitor
Ampliar/reducir	Ampliar la imagen en 1X, 2X o 4X

Menú	En la página de inicio, pulse para acceder a la interfaz de menú; En la página de inicio, pulse prolongadamente para acceder a la interfaz de configuración.
Dirección	Controla las direcciones de rotación; selecciona los elementos del menú
OK	Confirmar o despertar la pantalla
Llamar	Realizar una llamada tras pulsar el botón
Atrás	Pulsa para retroceder; En la página de inicio, pulsación larga para detener la reproducción de música.

Instalación

Encuentra una posición en la que puedas obtener el campo de visión deseado. Puedes colocar la cámara sobre una superficie plana o montarla en la pared.

Montaje en la pared

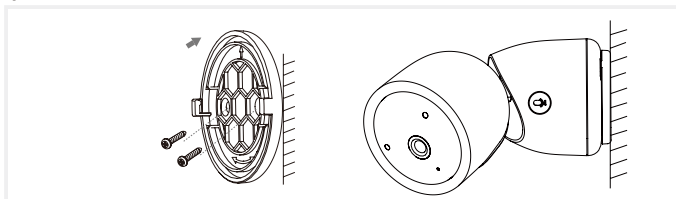

Consejos:

- La pared de instalación debe poder soportar al menos 3 veces el peso total de la cámara.
- En caso de que su cámara esté montada al revés, su imagen también se volteará. Por favor, configure desde Arenti App >> Dispositivo (toque dispositivo a la página de vídeo en directo) >> Configuración >> Función Básica >> Configuración de Imagen >> Screen Flip.
- No apunte la cámara hacia una ventana de cristal. O puede resultar en un rendimiento pobre de la imagen debido al resplandor de la ventana por LEDs infrarrojos, luces ambientales, o el estado.

Consejos para usar la cámara

- Indicador de trabajo:
El indicador de luz azul se puede apagar manualmente cuando la cámara está en condiciones de trabajo. Establecer desde: App>> Dispositivo (toque dispositivo a la página de vídeo en directo) >> Configuración >> Indicador de trabajo.
- Visualización de vídeo en directo:
En la interfaz de control de la cámara de la App puede ver la monitorización de la cámara en tiempo real, ajustar la resolución, capturar imágenes, grabar vídeo y realizar conversaciones bidireccionales.
- Visión nocturna por infrarrojos:

La cámara puede cambiar automáticamente al modo de visión nocturna (vista en blanco y negro) por la noche según el grado de cambio de la luz circundante. Con luces LED infrarrojas rojas invisibles incorporadas, la distancia de visión nocturna puede alcanzar los 10 metros, y se puede ver con gran claridad en la oscuridad.

- **Detección de movimiento:**

La cámara puede detectar cambios de movimiento en la vista de la cámara y usted recibirá alertas push desde la App cuando se detecte movimiento.

Configurar desde: App >> Dispositivo (toque dispositivo a la página de vídeo en directo) >> Configuración >> Configuración de Alertas >> Detección de Movimiento.

Especificaciones

Modelo	Alnanny A4
Lente&FOV(H/V/D)	100°
Temperatura de trabajo	0°C a 40°C
Almacenamiento local	Tarjeta TF (hasta 256 GB)
Resolución	2560x1440
Talla	70x63x120 mm
Entrada de alimentación	CC 5V/1A
Consumo	Hasta 4,5 W
Sistema operativo del teléfono compatible	iOS 9 / Android 5.0 o posterior
Wi-Fi de 2,4GHz	2412-2462MHz (Potencia máxima<30dBm)
Wi-Fi de 5GHz	5150-5850MHz (potencia máxima<23dBm)
Wi-Fi Halow	905-925MHz (Potencia máxima<30dBm)
Bluetooth	2400-2483.5MHz (Potencia máxima<20dBm)

Modelo	Alnanny-Screen2
Capacidad de la batería	3350mAh
Temperatura de trabajo	0°C a 40°C
Almacenamiento local	Tarjeta TF (hasta 128 GB)
Resolución	720P (1280x720)
Talla	157x81x40mm
Entrada de alimentación	CC 5V/1A
Wi-Fi Halow	905-925MHz (Potencia máxima<30dBm)

Configuración del producto

Escanee el código QR para descargar e instalar la aplicación Arenti. O puede buscar "Arenti" en App Store (iOS) o Google Play (Android).




Inscripción

Abra la aplicación. Si es un usuario nuevo, pulse para crear una cuenta nueva y siga las instrucciones para completar la configuración de la cuenta.

Nota:

Antes de crear una nueva cuenta, lea atentamente la Política de privacidad y las Condiciones de uso.

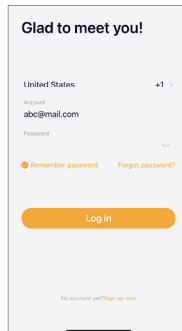

- Configurar un router

Asegúrate de que el router está conectado a la red Wi-Fi. Configure los parámetros del router antes de conectarse a la red Wi-Fi y registre el SSID y la contraseña de su Wi-Fi.




Por favor, mantenga la red disponible

- Encender el dispositivo

Encienda la cámara. La luz de estado parpadeando en rojo indica que la cámara está lista para el emparejamiento.

Método de emparejamiento 1: emparejamiento mediante código QR en el dispositivo

Abra la página de inicio de la aplicación, haga clic en "+" >> "Escanear código" y, a continuación, escanee el código QR pegado en la carcasa del dispositivo con la aplicación de su teléfono. El dispositivo aparecerá en la página, haga clic en el dispositivo.

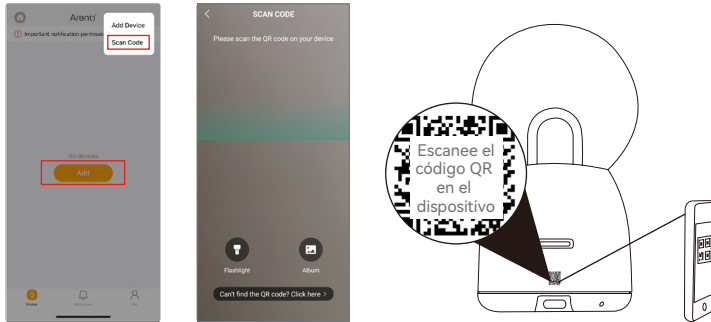

Seleccione la red Wi-Fi, introduzca la contraseña y pulse "Siguiente". Asegúrese de que su teléfono ya se ha conectado a una red Wi-Fi fluida y estable.


Nota:

El número de bits del SSID y de las contraseñas del router no debe superar los 31 dígitos

Wi-Fi Setup

Select a 2.4G&5GHz
WIFI network and
enter your password


Common Router Setup Methods



El dispositivo se puede añadir a la aplicación después de la conexión a la red.

Nota:


Durante el emparejamiento, coloque la cámara y el teléfono móvil cerca del router. Si la cámara no parpadea lentamente en rojo después de 30 segundos de encenderla, mantenga pulsado el botón de reinicio durante 5 segundos para reiniciarla y, a continuación, reiniciela para emparejarla con la aplicación.

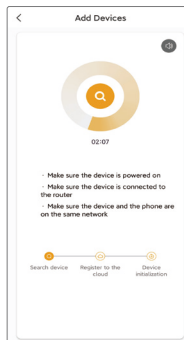

Método de emparejamiento 2: emparejamiento mediante Bluetooth

Enciende el Bluetooth de tu teléfono.

Abre la página de inicio de la App, pulsa «+» >>«Añadir Dispositivo» o «Añadir», el dispositivo será buscado por bluetooth y aparecerá en la página. Confirme el número de serie(SN) del dispositivo, a continuación, haga clic en el dispositivo y siga las notas para emparejar la cámara con App.

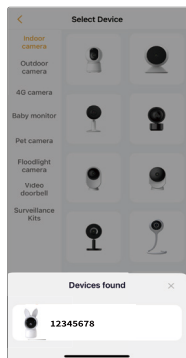

Si no se encuentra ningún dispositivo y el proceso de emparejamiento no se realiza correctamente, compruebe las siguientes instrucciones:

- Compruebe que la contraseña Wi-Fi introducida es correcta y que el dispositivo móvil está conectado a la misma red Wi-Fi.
- Asegúrate de que la cámara está en modo de emparejamiento.
- Compruebe si hay actividad en la red Wi-Fi.

Si ninguna de las soluciones funciona o tiene algún otro problema, llame al **1-866-999-7868** (de lunes a viernes, de 9 a 17 h (PT), gratuito para EE.UU. y Canadá, sujeto a cargos para otras regiones, el idioma del servicio telefónico sólo está disponible en inglés) o póngase en contacto con **support@arenti.com** para obtener ayuda.

Nota:

Si tiene varias cámaras, vuelva a seguir los pasos para añadir los dispositivos uno a uno. Para cambiar la red Wi-Fi, restaure la cámara a los ajustes de fábrica y siga los pasos para añadir la cámara.

Monitor consejos de uso

- Emparejamiento de cámara y monitor:



Encienda la cámara y el monitor y se conectarán automáticamente. Si la conexión falla, siga los pasos que se indican a continuación para realizar el emparejamiento. El emparejamiento está limitado por la distancia, así que asegúrese de que la distancia entre la cámara y el monitor no es superior a 200 m.

- Enlaza el monitor y la cámara:

1. Pulse el botón Menú del monitor y seleccione  > Cámara.
2. Seleccione la cámara 1 o la cámara 2/3/4 que desea emparejar.
3. Mantenga pulsado el botón de emparejamiento de la cámara hasta que oiga el tono de aviso.
4. Pulse el botón OK en el monitor para iniciar el emparejamiento.
5. Si necesitas emparejar 2 o más de 2 cámaras, repita los pasos 2~ 4.

- Desenganche el monitor y la cámara:

1. Pulse el botón Menú en la pantalla del monitor y seleccione  > Cámara.
2. Seleccione la cámara 1 o la cámara 2/3/4 que desea desvincular.
3. Mantenga pulsado el botón OK para liberar la vinculación.

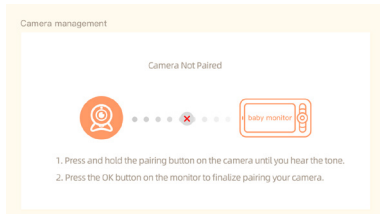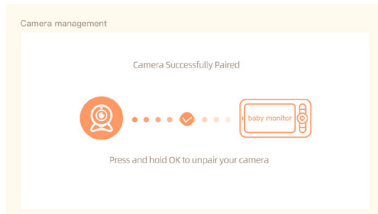

• Método de cambio de cámara:



Para diferentes productos, puede añadir 1, 2, 3 o 4 cámaras. Si ha añadido varias cámaras, el monitor mostrará 2 vistas en directo al mismo tiempo. Si desea configurar los parámetros o activar las funciones de una de las cámaras, primero debe seleccionarla y cambiar a ella.

• Método de cambio de cámara 1: cambio manual

En la página de inicio, pulsa el utiliza el botón de dirección para cambiar la cámara entre Cam1, 2, 3 o 4 si has añadido varias cámaras. Selecciona la cámara que necesites y pulsa el botón OK en el monitor para entrar en el modo de visualización a pantalla completa. A continuación, puede volver a pulsar el botón para acercar o alejar la imagen. (La función de zoom no funciona cuando la pantalla no está en pantalla completa).

Nota:


Cuando añada 3(o 4) cámaras, pulse el botón para entrar en el modo de selección. Las cámaras 1 y 2 están seleccionadas por defecto, pulse de nuevo el botón para cambiar a las cámaras 2 y 3 (o 3 y 4).

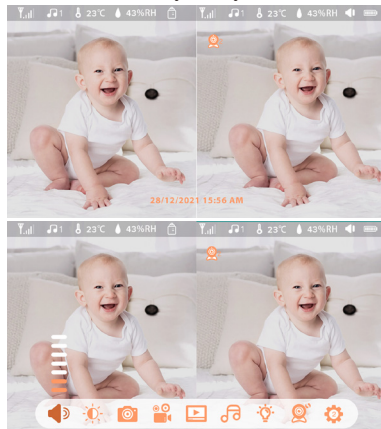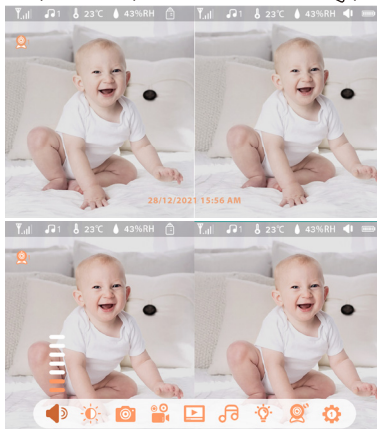

- Método de conmutación de cámaras 2: conmutación cíclica temporizada

También ofrecemos la opción de conmutar cada cámara en un ciclo temporizado, lo que facilita la configuración de rondas de vigilancia según sea necesario.

1. Pulse Menú en el monitor y seleccione  >  On .
2. Pulse el botón direccional ARRIBA para acceder al modo de selección de ciclo temporizado.
3. Pulse los botones de dirección IZQUIERDA y DERECHA para seleccionar la opción de ciclo temporizado.

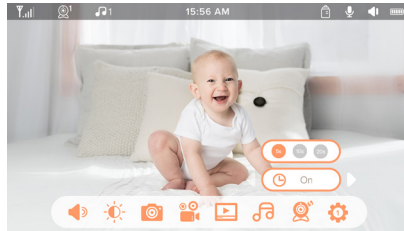

- Girar la cámara

Puede ajustar el ángulo de monitorización para una mejor visión.

Los botones de dirección de la pantalla del monitor están disponibles cuando la cámara está encendida. Pulse los botones de dirección para girar la cámara horizontal y verticalmente para una mejor visión.

- Foto y vídeo

- Haz una foto:

Puede hacer una foto cuando desee capturar una escena interesante del bebé. Pulse el botón Menú del monitor, seleccione  y pulse OK para hacer una foto.

- Graba un vídeo:

Puede grabar un vídeo cuando desee capturar un momento significativo para el bebé. Pulse Menú en el monitor, seleccione  y pulse OK para grabar un vídeo.


- Visualiza las fotos tomadas y los vídeos grabados:

1. Pulse el botón Menú en el monitor, seleccione y pulse OK para entrar en la interfaz.

2. Seleccione la cámara y la fecha, seleccione la foto o el vídeo que desea ver y pulse OK para entrar en el modo de vista previa.


* Pulse OK para reproducir o pausar el video en el modo de vista previa.

* Pulse el botón Retorno para salir de la vista previa o volver al menú principal.

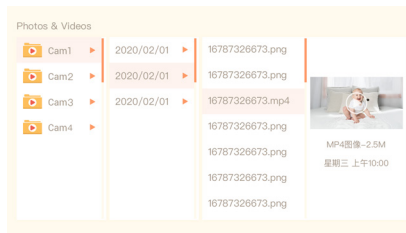

• Reproducir música


Puedes poner música cuando tu bebé necesite tranquilizarse. Hay varias músicas suaves para seleccionar. Pulse el botón Menú en la pantalla del monitor y seleccione  y pulse OK para acceder a la interfaz de la música. Puede seleccionar música diferente, cambiar el modo de ciclo de la música o ajustar el volumen de la música.

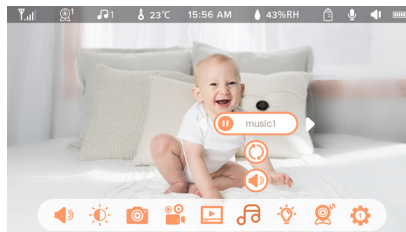

• Recordatorio de alimentación

Recordarte que debes alimentar a tu bebé cuando estés demasiado ocupada o cuando quieras darle una dieta regular.



1. Pulse el botón Menú del monitor y seleccione  > Recordatorio de alimentación.
2. Seleccione activar o desactivar para abrir o cerrar los recordatorios de alimentación. Puede establecer hasta 10 horas de alimentación al día. Cuando finalice el tiempo establecido, aparecerá una alarma de alimentación en la pantalla del monitor.
3. Pulse los botones direccionales ARRIBA y ABAJO para seleccionar entre 10 opciones de hora y pulse OK para iniciar la configuración de la hora.

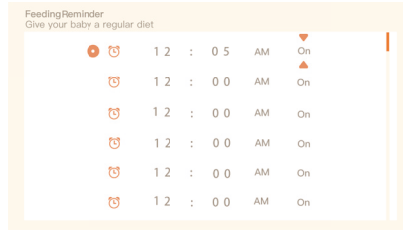

• Atención inteligente

Puede activar las funciones de detección de movimiento, detección de ruido y detección de llanto, para conocer de inmediato el estado del bebé, independientemente de lo que esté haciendo.

1. Pulse Menú en el monitor y seleccione > Cuidado inteligente.
 2. Pulse los botones direccionales ARRIBA y ABAJO para seleccionar las opciones de detección de movimiento, detección de ruido y volumen de la alarma.
 3. Cuando configure un modo de detección, pulse los botones de dirección IZQUIERDA y DERECHA para cambiar las opciones y pulse los botones de dirección ARRIBA y ABAJO para ajustar la sensibilidad.
- * Puede seleccionar diferentes sensibilidades según sus necesidades. Baja se refiere a baja sensibilidad, y alta se refiere a alta sensibilidad.

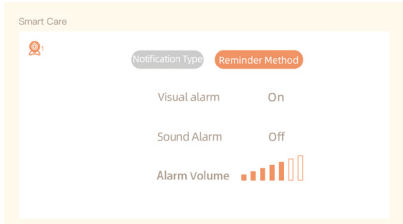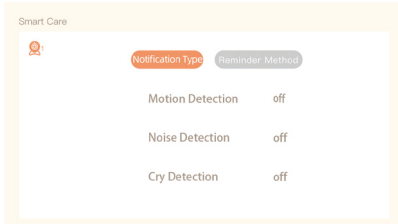


• Detección de temperatura y humedad

Puedes controlar la temperatura y la humedad de la habitación de tu bebé en tiempo real. Cuando la temperatura y la humedad estén fuera de rango, recibirás las alarmas inmediatamente, para que puedas tomar medidas.

1. Pulse el botón Menú del monitor y seleccione > Temperatura y humedad.
2. Pulse los botones direccionales ARRIBA y ABAJO para seleccionar las opciones entre rango de temperatura, rango de humedad y recordatorio de fuera de rango, después pulse OK para configurar.
3. Pulse los botones IZQUIERDA y DERECHA para cambiar las opciones y, a continuación, pulse los botones ARRIBA y ABAJO para cambiar los valores y las unidades.

4. En la opción Recordatorio de fuera de rango, seleccione para activar o desactivar la alarma cuando la temperatura y la humedad estén fuera de rango.

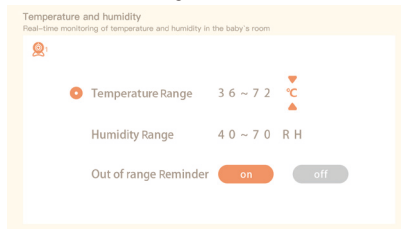

- Protección de la seguridad

- Canal de red Wi-Fi

Si desactiva el canal de red Wi-Fi, la App no podrá ver la cámara.

- Registros visitados


También puede ver los registros visitados, ya que todas las visitas a través de la App quedarán registradas.



- Luz nocturna

Puede encender la luz nocturna si es necesario, y puede configurar el modo de iluminación y el color de la luz.

Pulse Menú en el monitor y seleccione > Open .O pulse el botón Menú y seleccione > Luz > Luz nocturna.

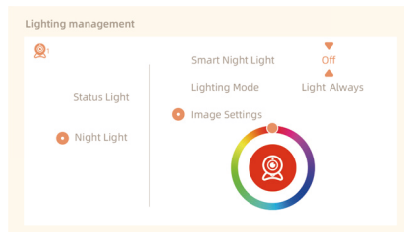

- Configuración general

- Configura el brillo:

1. Pulse Menú en el monitor, seleccione y pulse OK para entrar.

2. Pulse los botones ARRIBA y ABAJO para ajustar el brillo.

- Tiempo de preparación:

1. Pulse Menú en el monitor y seleccione > Ajuste de hora.

2. Pulse los botones direccionales para cambiar la fecha, la hora y el modo de visualización de la hora.

- Configura el idioma:

1. Pulse Menú en el monitor y seleccione > Idioma.

2. Selecciona el idioma que necesites.

- Configura el modo de reposo:

Puedes configurar el modo de reposo para aumentar el tiempo en espera.

1. Pulse Menú en el monitor y seleccione > Modo reposo.

2. En el modo predeterminado (Audio desactivado), el audio de la cámara no se puede escuchar después de apagar la pantalla, por lo que el tiempo de espera es largo. En el modo Audio activado, el audio de la cámara se puede seguir escuchando incluso después de apagar la pantalla, y puede elegir el tiempo (1,5,10,30 o 60min), pero el tiempo de espera es más corto. En el modo Siempre encendido, la pantalla permanece encendida a menos que se pulse el botón de encendido, con un tiempo de espera corto.

- Enciende y apaga el indicador de estado:

Si enciendes el indicador de estado, podrás conocer el estado de funcionamiento de la cámara. También puedes apagar el indicador de estado si crees que puede afectar al sueño de tu bebé.

Pulse Menú en el monitor y seleccione > Open (O pulse el botón Menúseleccione > Luz > Luz de estado).

- Tarjeta Micro SD:

1. Pulse Menú en el monitor y seleccione > Gestión de la tarjeta Micro SD. A continuación, puede ver la

capacidad total y la capacidad restante de su tarjeta Micro SD.

2. (Opcional) Puede formatear la tarjeta Micro SD según sus necesidades, pero asegúrese de que los datos importantes están respaldados.

• **Mejora:**

Puede actualizar la cámara cuando aparezca la alarma de actualización. O pulse Menú en el monitor y seleccione  > Información del dispositivo para comprobar si hay una actualización.

• **Alarma de batería baja:**

Cuando la batería de la cámara esté baja, aparecerá la alarma de batería baja en la pantalla del monitor. Por favor, cargue el monitor lo antes posible.

FAQ

Cámara

P: ¿Cómo desactivar el indicador LED/luz azul de mi cámara?

R: Arenti App >> Dispositivo (a su vez a la página de vídeo en directo) >> Configuración >> Función básica >> Indicador de red: Desactivarlo.

P: ¿Cómo apagar la cámara de monitor en tiempo real, y detener la grabación?

R: Arenti App >> Dispositivo (a su vez a la página de vídeo en directo) >> Configuración >> Función básica >> Protección de la privacidad >> Lente OFF.

P: ¿Cómo cambiar el Wi-Fi o actualizar la contraseña Wi-Fi del dispositivo?

R: Por favor, elimine la cámara en la aplicación, haga clic en "Añadir" y siga los pasos para utilizar la nueva red Wi-Fi para agregar la cámara de nuevo.

P: ¿Cómo compartir dispositivos Arenti con amigos y familiares?

R: Arenti App >> Dispositivo (a su vez a la página de vídeo en directo) >> Configuración >> Compartir dispositivo >> Añadir, siga los consejos para compartir su dispositivo.

P: ¿No se puede acceder al vídeo en directo?

R:

- Asegúrese de que la cámara está encendida: el indicador de red de la cámara debe estar encendido.
- Compruebe que la red Wi-Fi está en buenas condiciones o reinicie el router.
- Intente acercar la cámara al router.
- Elimine la cámara de la App Arenti y vuelva a añadirla. 5. Confirme que la App y el firmware de la cámara son las últimas versiones.

P: ¿No encuentro el botón de emparejamiento?

R: El botón de emparejamiento es el botón de llamada de la cámara. Mantenga pulsado el botón durante 3 segundos y siga las instrucciones del monitor.

Monitor

P: ¿Qué debo hacer si el monitor se atasca?

R: Pulsa el botón de reinicio situado cerca del puerto de alimentación del monitor o mantén pulsado el botón de encendido para volver a encender el monitor.

P: ¿Cómo puedo cambiar el fondo de pantalla del monitor?

R: Pulse Menú en el monitor y seleccione  > Fondo de pantalla.

P: ¿Cómo puedo actualizar la versión del monitor?

R: En primer lugar, añada la cámara a la App. A continuación, pulse Menú en el monitor y seleccione  > Información del dispositivo, a continuación, compruebe si hay actualizaciones disponibles.

P: ¿No se puede previsualizar correctamente el monitor?

R: Compruebe si el monitor está conectado a la cámara. Si no es así, empareje primero la cámara y el monitor.

P: ¿Por qué la cámara o el monitor no pueden identificar la tarjeta TF?

R: Confirme si la tarjeta TF está normalmente disponible y el formato es FAT32.

Si ninguna de las soluciones funciona o tienes algún otro problema, llama al **1-866-999-7868** (de lunes a viernes, de 9 a 17 h (PT), gratuito para EE.UU. y Canadá, sujeto a cargos para otras regiones, el idioma del servicio telefónico sólo está disponible en inglés) o ponte en contacto con **support@arenti.com** para obtener ayuda.

Precauciones

- La temperatura de trabajo aplicable de este producto es 0°C~40°C, por favor no lo utilice en un ambiente donde la temperatura es demasiado alta o demasiado baja.
- Para utilizar mejor este producto, evite acercar la parte frontal y lateral del objetivo al cristal, paredes blancas, objetos luminosos, etc., para que la imagen no salga brillante de cerca, oscura o blanquecina de lejos.

- Por favor, asegúrese de que la cámara está instalada dentro del rango cubierto por la señal Wi-Fi, y colóquela lo más lejos posible en el lugar donde la señal es mejor, e intente instalarla lejos de metal y hornos microondas que puedan afectar a la señal.

Servicio posventa y asistencia técnica

- Acceda a artículos, videos y documentación de apoyo. www.arenti.com/support/
- Acceda a Asistencia desde la App Arenti, inicie sesión en su App Arenti y pulse para obtener asistencia.
- Puede enviar un correo electrónico a support@arenti.com. Describa el problema de la cámara, e infórmenos del modelo de cámara y SN del cuerpo de la cámara. Intentaremos responderle en 24 horas.

Menciones legales

Símbolos:  Corriente continua (CC)



No tire pilas ni productos fuera de uso con los residuos domésticos (basura). Las sustancias peligrosas que pueden contener pueden dañar la salud o el medio ambiente. Haz que tu comercio retire estos productos o recurre a la recogida selectiva de basuras que propone tu ciudad.



Por la presente, Arenti, declara que el equipo de radio tipo 'Alnanny A4, Alnanny-Screen2' cumple con la Directiva 2014/53/UE.

La prueba completa de la declaración de conformidad de la UE está disponible en la dirección de Internet: www.arenti.com



FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

This device complies with FCC radiation exposure limits set forth for an uncontrolled environment and it also complies with Part 15 of the FCC RF Rules. This equipment must be installed and operated in accordance with provided instructions and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter. End-users and installers must be provide with antenna installation instructions and consider removing the no-collocation statement.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution!

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Safety Information

- Power Adapter Safety

- 1.The power plug is intended to serve as a disconnect device.Do not drop or cause an impact to the power adapter.
- 2.If the power cable is damaged (for example, the cord is exposed or broken), or the plug loosens, stop using it at once. Continued use may lead to electric shocks, short circuits, or fire.

3. Do not touch the device or the power adapter with wet hands. Doing so may lead to short circuits, malfunctions, or electric shocks.

- Child's Safety

1. Comply with all precautions with regard to child's safety. Letting children play with the device or its accessories may be dangerous.
2. The device and its accessories are not intended for use by children. Children should only use the device with adult supervision.

- Operation Safety

1. Use the device under allowed humidity and temperature conditions.
2. Do not aim the device at strong light sources (such as lamplight, and sunlight) when focusing it, to avoid reducing the lifespan of the CMOS sensor, and causing overbrightness and flickering.
3. Observe local laws and regulations, and respect the privacy and legal rights of others.

Industry Canada (ISED) Compliance Statement

This device complies with Industry Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference; and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) l'appareil ne doit pas produire de brouillage;
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

The device meets the exemption from the routine evaluation limits in section 2.5 of RSS 102 and compliance with RSS-102 RF exposure, users can obtain Canadian information on RF exposure and compliance.

Le dispositif rencontre l'exemption des limites courantes d'évaluation dans la section 2.5 de RSS 102 et la conformité à l'exposition de RSS-102 rf, utilisateurs peut obtenir l'information canadienne sur l'exposition et la conformité de rf.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. This equipment should be installed and operated with a minimum distance of 20 centimeters between the

radiator and your body.

Cet émetteur ne doit pas être Co-placé ou ne fonctionnant en même temps qu'aucune autre antenne ou émetteur. Cet équipement devrait être installé et actionné avec une distance minimum de 20 centimètres entre le radiateur et votre corps.

Battery Safety

- 1.Your device contains a rechargeable lithium-ion battery and should be replaced only by a qualified service provider. Do not disassemble, open, crush, bend, deform, puncture, shred or attempt to access the battery in your device
- 2.Do not modify or remanufacture the battery, attempt to insert foreign objects into the battery, or immerse or expose it to water or other liquids, expose to fire, explosion or other hazard.
- 3.Do not use a battery if its case appears damaged, swollen, or compromised. Examples include, but are not limited to, leaking, odors, dents, corrosion, rust, cracks, swelling, melting, and scratches.
- 4.Do not put the battery in trash that is disposed of in landfills. When disposing of the battery, comply with local ordinances or regulations.

© 2024. All rights reserved. All trade names are registered trademarks of respective companies Apple, the Apple logo, iPhone are trademarks of Apple Inc. registered in the U.S. and other countries. Google, the Google logo, Android are trademarks of Google Inc. App Store is a service mark of Apple Inc. Google Play is a service mark of Google Inc.

V1.0 202407

