
Panel Convector Heater

Instruction Manual

AM-QNQ85WD-B25WT
AM-QNQ85WD-B25GY

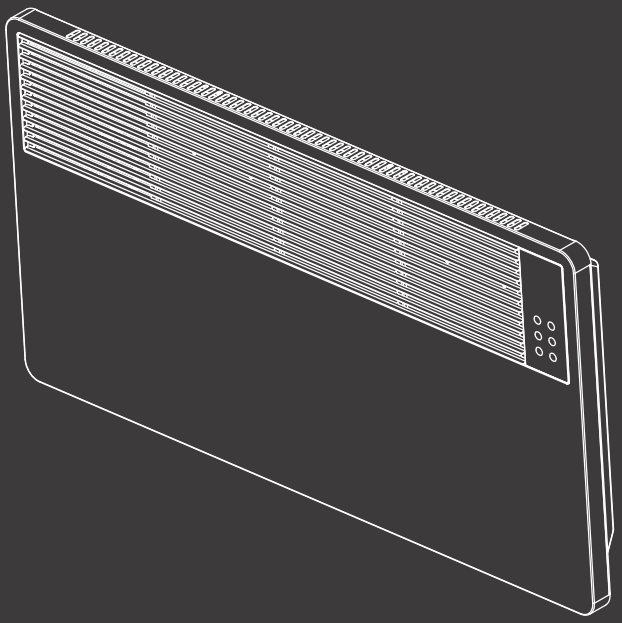

EST 9:00AM--17:00PM
HJ-Customer-Service@outlook.com
6269443420 | 6267435564

CONTENTS

Specifications 1

Safety Information 1

Product Overview 2

Operation 4

Care and Maintenance 6

Warranty Information 6

Read this instruction manual carefully before use and keep it for future reference.

Specifications

Model	HT9604W
Rated Voltage	120 V
Frequency	60 Hz
Rated Power	1500 W (750 W + 750 W)

Safety Information


1. Read this instruction manual carefully before using the heater. Follow all instructions provided in this manual.
2. To prevent overheating, do not cover the heater.
3. Do not place the heater close to or directly below an electrical outlet.
4. Do not use the heater in damp or wet locations, such as bathrooms or areas where it may come into contact with water. Prevent water from dripping or splashing into the control panel. Do not use the heater in areas where flammable or explosive gases are present.
5. If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified personnel with an identical replacement cord to avoid a hazard.
6. Place the heater on a stable, level surface. Do not use the heater if it is tilted or upside down.
7. Do not place clothing, towels, or other items directly on the heater to dry.
8. Turn off the heater and unplug it when it is not in use or left unattended. Do not turn the heater on or off by plugging in or unplugging the power cord.
9. Turn off the heater, unplug it, and allow the unit to cool completely before cleaning.
10. Do not allow the power cord to come into contact with the heater while it is operating.
11. If the heater malfunctions or fails to operate properly, turn it off immediately. Have it inspected and repaired by qualified service personnel. Do not disassemble the heater or replace any parts yourself.
12. Do not plug the heater and other high-power appliances into the same outlet, as this may overload the circuit and create a fire hazard.
13. Do not use an extension cord with the heater.
14. Do not use the heater with a programmer, timer, or any other device that switches the heater on automatically.
15. Do not insert fingers, sticks, or any other objects into the openings of the heater.
16. To avoid burns, do not allow bare skin to come into direct contact with the surface of the heater while it is operating.


17. Keep towels, clothing, bedding, curtains, and other flammable materials at least 3 ft (0.9 m) away from the heater. Keep the heater away from furniture and other items that may warp or discolor when exposed to heat.
18. Do not place or hang any objects within 3 ft (0.9 m) above the heater.
19. Always supervise children when the heater is in use. Do not allow them to touch the heater.
20. Avoid frequently opening doors or windows while the heater is operating, as this may reduce heating performance.
21. Do not use the heater outdoors.
22. Keep this instruction manual for future reference.

⚠ **Warning:**


- This heater may be used by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, provided they have been given supervision or instruction concerning safe use of the heater and understand the hazards involved.
- Children may use this heater only under close adult supervision. They must not operate the heater without adult supervision.
- Cleaning and user maintenance must not be performed by children.
- To reduce the risk of electric shock, always unplug the heater from the electrical outlet when it is not in use and before cleaning.
- Do not use this heater in the immediate surroundings of a bathtub, a shower, or a swimming pool.
- Do not use the heater if it is damaged or shows visible signs of damage.
- Use the heater only on a stable, level surface.
- Do not use this heater in small rooms occupied by persons who are unable to leave the room on their own, unless constant supervision is provided.
- To reduce the risk of fire, keep textiles, curtains, and other flammable materials at least 3 ft (0.9 m) away from the air outlet.

Product Overview

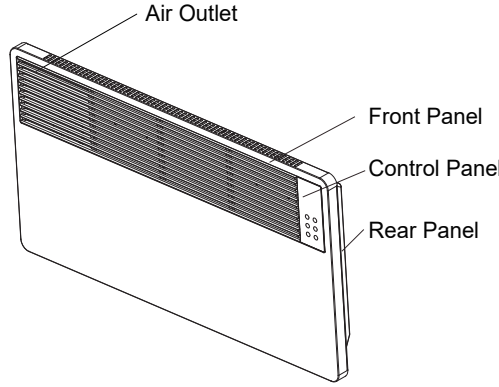

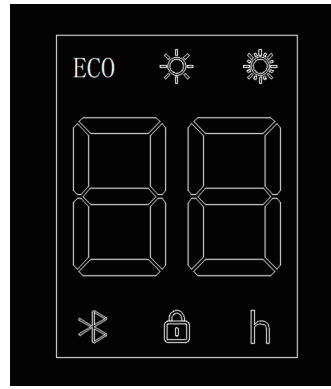

Display: The heater features a digital display. All indicators and settings are displayed in white.

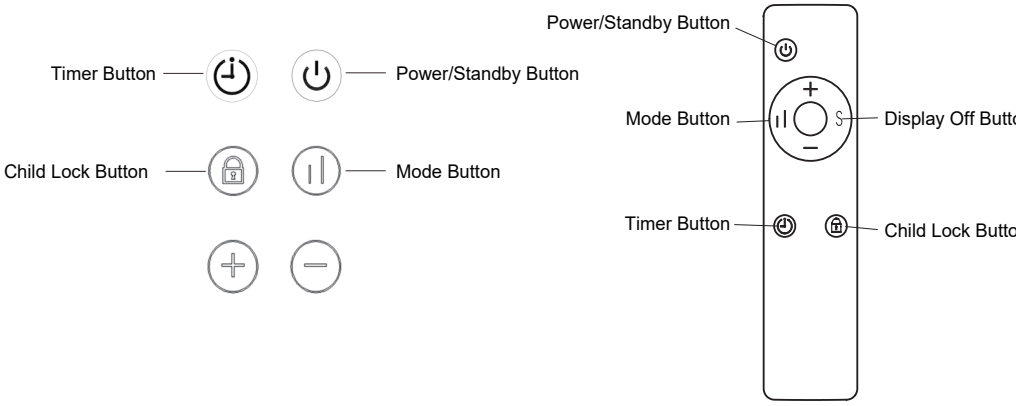

Control Panel **Remote Control**

The buttons on the control panel function the same as the corresponding buttons on the remote control.

	Power/Standby Button	Press to turn the heater on or place it in Standby mode.
	Mode Button	Press to switch between Low Heat, High Heat, and ECO Mode.
	"+" / "-" Buttons	Press to adjust the set temperature or timer setting.
	Timer Button	Press to enable or disable the timer function.
	Child Lock Button	Press to enable or disable the child lock function.
(Remote Control)	**Display Off Button**	While the heater is operating, press and hold the **Display Off Button** for 3 seconds to turn off the display and enter Display Off mode. While in Display Off mode, press any button to light up the display and exit Display Off mode.

Operation

Pre-Use Check

Before using the heater, check the following:

- Make sure the power cord is not damaged or worn.
- Verify that the power supply matches the voltage specified on the heater's rating label. Ensure the electrical outlet is properly grounded and rated for the heater's electrical requirements before use. If it is not, have the outlet replaced by a qualified electrician.

1. Plugging In the Heater

When the heater is plugged into a power outlet, it enters Standby mode. The buzzer beeps once, and all display icons illuminate briefly. After 1 second, only "--" remains displayed. If no buttons are pressed for 1 minute, the display brightness automatically dims to 30% of its normal brightness. If no buttons are pressed for 3 minutes, the display turns off automatically.

2. Turning the Heater On/Off

Press the Power/Standby Button once. The heater beeps once and starts operating in High Heat mode. The display shows 77°F. While the heater is operating, press the Power/Standby Button again to place the heater in Standby mode.

Note:

① When the heater is turned on for the first time or after power has been disconnected, it starts in High Heat mode by default.

② If power has not been disconnected, the heater resumes the previously selected heating mode. The timer setting is not retained

3. Enabling or Disabling the Child Lock

- While the heater is operating, press and hold the Child Lock Button for 3 seconds to enable the Child Lock function. The Child Lock Indicator lights up to indicate that the function is enabled. (While the Child Lock function is enabled, all buttons are disabled.)
- To disable the Child Lock function, press and hold the Child Lock Button again for 3 seconds. The Child Lock Indicator turns off.

4. Selecting the Heating Mode and Setting the Temperature

Press the Mode Button to select the desired heating mode. The modes cycle in the following order:

Low Heat → High Heat → ECO

- In Low Heat or High Heat mode, press the "+" or "-" button to adjust the set temperature. The temperature is displayed in °F. Each press changes the setting by 1°F, and the temperature setting cycles between 41°F and 95°F.
- Press and hold the "+" or "-" button to adjust the temperature continuously at a rate of 3 °F per second. The selected temperature is automatically saved after 5 seconds of no button operation.

Temperature adjustment range:

Press "+": 41°F → 95°F (cycles)

Press "-": 95°F → 41°F (cycles)

- The heater starts heating when the set temperature is more than 3°F above the ambient temperature.
- The heater stops heating when the set temperature is equal to or lower than the ambient temperature.

5. Setting the Auto Shut-Off Timer

While the heater is operating, press the Timer Button. The "h" icon lights up and flashes. Press the "+" or "-" button to set the timer. The timer setting can be adjusted from 0 to 24 hours. If no buttons are pressed for 5 seconds, the selected time is saved, the "h" icon remains lit, and the timer is enabled.

Timer adjustment:

Press "+": 0 → 1 → 2 → ... → 24 → 0

Press "-": 24 → 23 → 22 → ... → 0 → 24

While the timer is active, press the Timer Button once to view the remaining time.

To cancel the timer, set the timer to 0.

6. Bluetooth Connection

Bluetooth is enabled by default when the heater is turned on. Download the “Landbook” app and follow the in-app instructions to search for and connect to the heater. Once the Bluetooth connection is established, the Bluetooth Indicator lights up.

7. Other Functions

Display Off Mode

If no buttons are pressed for 3 minutes, the display turns off automatically.

Temperature Sensor Protection
If the temperature sensor is short-circuited or open-circuited in any operating mode, the display shows E1 or E0, and the error code flashes.

Audible Feedback
When the heater is in Standby or operating mode, a valid button operation (using either the control panel or the remote control) is confirmed with one beep. If the operation cannot be performed, two beeps sound to indicate an invalid operation. Operations that fail due to the remote control being out of range are not included.


Heating Mode Display
When switching heating modes, only the corresponding mode indicator changes. The display does not show "01" or "02".

Care and Maintenance

Avoid bumping or scratching the heater, as damage to the surface coating may cause rust. If the heater will not be used for an extended period, unplug it, wipe it clean with a soft, dry cloth, and store it in its original packaging in a cool, dry place. Never clean the heater with water.

Warranty Information

1. This product is covered by a **one (1)-year** limited warranty against defects in materials and workmanship, valid only for the original purchaser. The warranty period begins on the date of retail purchase and is non-transferable.
2. This warranty does not cover normal wear and tear, or any damage resulting from misuse, negligent use, use with improper voltage or current, failure to follow the operating instructions, or any disassembly, repair, or modification not authorized by our after-sales service.
3. Additionally, this warranty does not cover damages caused by Acts of God (such as fire, flood, hurricanes, or tornadoes) or force majeure events (such as arson, power outages, riots, or vandalism).
4. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state (or province to province). Some states (or provinces) do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

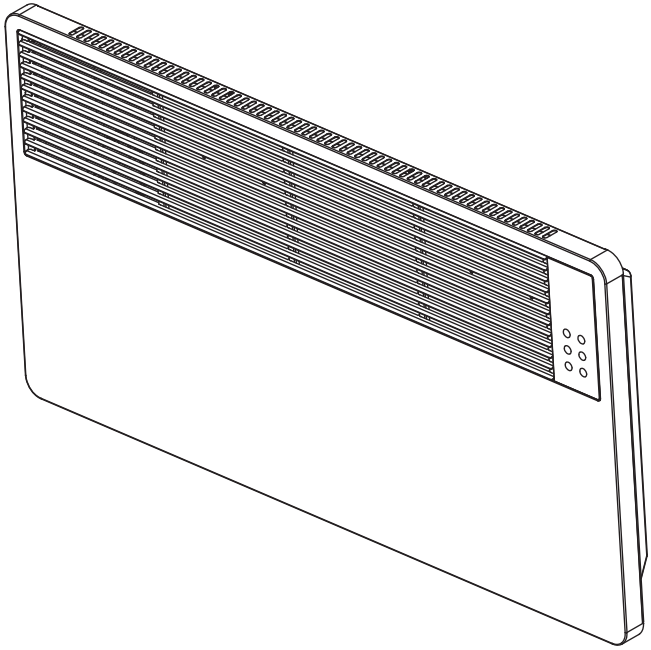

Technical Support

6269443420 | 6267435564

Other Info

HJ-Customer-Service@outlook.com

Thank you for choosing this product. We strive to provide you with the best quality products and service in the industry. Should you have any issues, please don't hesitate to contact us.