ITM. / ART. 2733527

DASH®



DSSP50005

smartstore® STIRRING POPCORN MAKER, 5QT

Instruction Manual | Recipe Guide







WELCOME TO THE FOODIE FAMILY

We hope you *love* our products as much as our team does.











smartstore® STIRRING POPCORN MAKER, 5QT

Important Safeguards 4-6

Parts & Features 7

Using the Popcorn Maker 8-13

Cleaning & Maintenance 14

Storing the Popcorn Maker 15

Recipes 16-21

Customer Support 22

Warranty 24

IMPORTANT SAFEGUARDS: PLEASE READ AND SAVE THIS IN-STRUCTION AND CARE MANUAL.

When using electrical appliances, basic safety precautions should always be followed, including:

- Read all instructions before use.
- Remove all bags and packaging from appliance before use.
- Never leave appliance unattended when in use.
- Make sure the appliance is cleaned thoroughly before using.
- Do not use appliance for other than intended use. For household use only. Do not use outdoors.
- Only use the appliance on a stable, dry surface.
- ATTENTION: This appliance cannot be used with an external timer or a separate remote control.
- Do not place appliance on or near a hot gas burner, hot electric burner, or in a heated oven.
- Do not put the product in high temperature environments, close to strong magnets, flammable materials including gas, etc. in order to avoid fire accidents.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- This appliance can be used by persons with reduced physical, sensory, or mental capabilities or lack of experience of knowledge, if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- This appliance is not a toy. Do not let children use this appliance.

Close supervision is necessary when any kitchen appliance is used by or near children.

- The Popcorn Maker will not shut off automatically. To avoid overheating, please add popcorn kernels before operating. Do not operate the appliance without popcorn kernels.
- Do not touch hot surfaces. Use oven gloves when handling hot surfaces.
- Do not flip the popcorn maker without oven gloves.
- DO NOT use the Popcorn Maker near water or other liquids, with wet hands, or while standing on a wet surface.
- To prevent the risk of fire, electric shock, or personal injury, do not put cord, plug, or appliance in or near water or other liquids.
- The Popcorn Maker is NOT dishwasher safe.
- Do not let the cord touch hot surfaces or hang over the edge of tables or counters.
- Do not pull, bend, or compress the power cord with heavy objects to avoid accidents such as electric shock or fire.
- Refrain from using attachments that are not recommended by the appliance manufacturer, as this may result in fire, electric shock, or personal injury.
- After turning the power on, do not attempt to disassemble the Popcorn Maker. Do not put spoons or other utensils into the popcorn maker.
- Allow the appliance to rest for at least 10 minutes between popping cycles.
- Do not exceed a 5-minute maximum continuous usage time.
- Unplug the appliance and allow to cool prior to assembly/ disassembly, moving, cleaning, storage, and when not in use. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.
- Do not submerge the base or any electric parts in liquid.
- Do not operate this appliance with a damaged cord, damaged plug,


after the appliance malfunctions, is dropped, or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.

- For maintenance other than cleaning, please contact StoreBound directly at 1-800-898-6970 Monday – Friday 9am-5pm (EST) for service in English and French or by email at support@bydash.com.
- StoreBound shall not accept liability for damages caused by improper use of the appliance.
- Improper use of the appliance can result in property damage or even in personal injury.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not completely fit in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
- A short power supply cord is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord. An extension cord may be used if care is exercised in its use. If an extension cord is used, the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance. If the appliance is of the grounded type, the extension cord should be a grounding 3-wire cord. The extension cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

IMPORTANT SAFEGUARDS: PLEASE READ AND SAVE THIS INSTRUCTION AND CARE MANUAL.

PARTS & FEATURES

All replacement inquiries are to be submitted to **support@bydash.com** or contact Customer Support at **1-800-898-6970** 9am-5pm (EST) Monday-Friday, service in English and French.

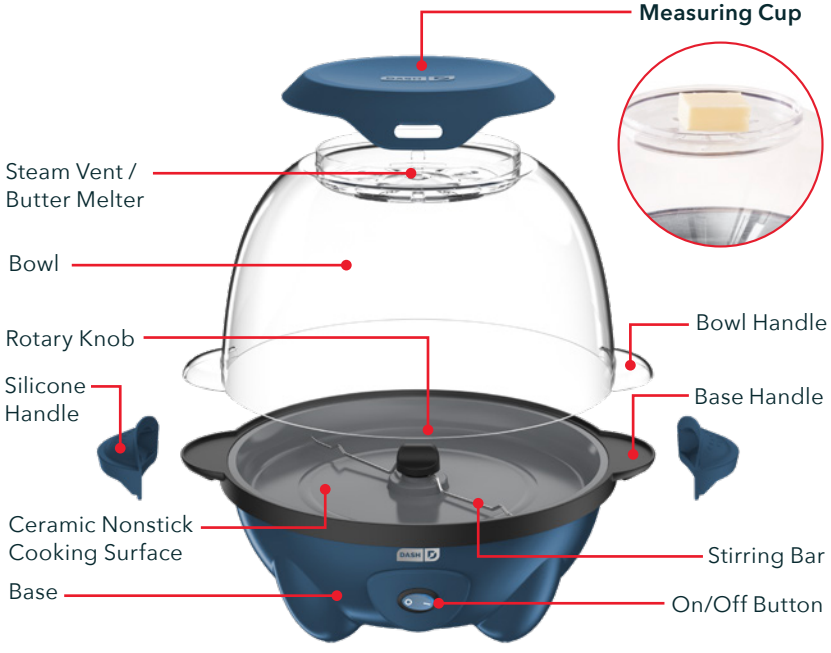

USING THE POPCORN MAKER

BEFORE FIRST USE

Clean the Lid and Measuring Cup with a non-abrasive sponge, towel or cloth before using. Turn the Rotary Knob counterclockwise to remove the Stirring Arm from the Rotary Knob.

Wipe Stirring Bar and Cooking Surface with a non-abrasive sponge, towel or cloth. To install the Stirring Bar, make sure the Stirring Bar aligns with the Rotary Knob then tighten the Rotary Knob clockwise to secure.


QUARTS OF POPPED CORN	AMOUNT OF POPCORN KERNELS	AMOUNT OF OIL	AMOUNT OF BUTTER
1	1 section measuring cup	½ tablespoon	½ tablespoon
3	2 sections measuring cup	1½ tablespoons	1½ tablespoon
5	Full measuring cup	3 tablespoons	2 tablespoons

USING THE POPCORN MAKER

WARNING: DO NOT directly grab the clear Bowl or the Cooking Surface, as both will be hot after cooking. Use oven mitts if desired for additional safety!

NOTE: If using an extension cord, the marked rating of the cord should be at least as great as the electrical rating of the Popcorn Maker. Use a grounded 3-wire cord for grounded appliances.




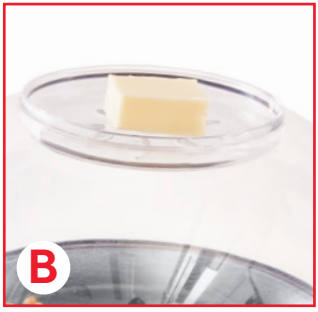

1. Place the Popcorn Maker on a level surface and plug it in.
2. Place a small amount of cooking oil on the Cooking Surface according to chart on page 8 **(photo A)**. Measure corn kernels in the included Measuring Cup **(photo B)**.

USING THE POPCORN MAKER



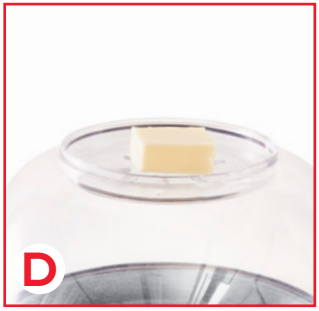

3 Add kernels to the Cooking Surface **(photo C)**. Attach the clear Bowl to the Base of the Popcorn Maker.
NOTE: DO NOT attach the Measuring Cup to the top of the Popcorn Maker, as the Steam Vents must remain open during cooking.

4 For additional buttery flavor, add pat of butter to the top of the Bowl (where the Steam Vents are located) to melt while cooking **(photo D)**. It is recommended to use ½ tablespoon of butter per ⅓ measuring cup kernels.





5 Press the Power Switch to begin cooking **(photo E)**. Depending on the amount of popcorn and size of kernels, it may take 3-4 minutes for the popcorn to begin popping.

6 Once popping has slowed to one kernel every three seconds or longer, press the Power Switch to turn off the Popcorn Maker **(photo F)** then unplug it.

USING THE POPCORN MAKER





7 To serve, carefully attach the Measuring Cup to the top of the Bowl **(photo G)**. It should fit securely into place.

8 Slide the removable Silicone Handles to fit over the Handles of the Base and the Bowl, securing the two Handles together. With the Handles securely bundled, flip the Popcorn Maker upside down. Alternatively, you can hold it by the Measuring Cup and the Base of the Popcorn Maker **(photo H)**.



9 Once flipped, remove the Silicone Handles then remove Base from the Serving Bowl **(photo I)**. When opening the Popcorn Maker, be sure to open it carefully so that steam escapes away from you as it will be hot. Use oven mitts when removing the Serving Bowl for added heat protection.
Note: Wait approximately 10-12 minutes before using the Popcorn Maker again to prevent overheating.

CHEF TIP!

If kernels are not popping as much as desired, try soaking them in water for 10 minutes to add moisture. Old and completely dry kernels won't pop properly, resulting in popcorn that isn't as fluffy. Soaking can help achieve a fluffier result.

CLEANING & MAINTENANCE

- Allow the Popcorn Maker to cool before cleaning. To remove the Stirring Bar from the Base, unscrew the Rotary Knob **(photo A)**. Clean both the Base and the Stirring Bar with a damp, non-abrasive sponge or cloth before reattaching the Stirring Bar **(photo B)**.
- Wash the Bowl and Measuring Cup in warm soapy water with a non-abrasive sponge. The Bowl and Measuring Cup are top-rack dishwasher safe.
- Rinse thoroughly and dry with a soft towel.
- DO NOT submerge the Base into water or other solutions.





STORING THE POPCORN MAKER



1. Ensure that the Popcorn Maker is clean and dry before storing
2. To store the Popcorn Maker, attach the Measuring Cup to the clear Bowl and nest the Base inside the Bowl **(photo A)**.
3. Store in a dry place.

RECIPE GUIDE

Scan here for more recipes!

bydash.com/recipes





MOVIE THEATER POPCORN

Prep Time: *3-5 minutes* • ***Cook Time:*** *5-10 minutes* • ***Serves:*** *16 cups*

Ingredients:

½ cup unpopped kernels
4 tablespoons butter
Dash of salt

Directions:

1. Pop kernels in the Popcorn Maker as per instructions. While corn is popping, add 4 tablespoons of butter for melting to the Measuring Cup and place it back on the top of the Top Cover.
2. Once popping is complete, place popped corn in a large mixing bowl. Remove the Measuring Cup of butter from the Top Cover and pour it over the popcorn. Sprinkle with salt and use tongs to mix until popcorn is coated evenly.
3. Serve hot, start snacking, and hit play on movie night!



MOVIE MUNCHIES POPCORN

Prep Time: *5 minutes* • ***Cook Time:*** *5 minutes* • ***Serves:*** *4-6*

Ingredients:

¼ cup unpopped kernels
2 tablespoons butter
1½ cups mini marshmallows
1¼ cups pretzel sticks in 1" pieces
1 cup M&Ms candy
¾ cup raisins
½ cup chocolate chips

Directions:

1. Pop kernels in the Popcorn Maker as per instructions. While corn is popping, add 2 tablespoons of butter for melting to the Measuring Cup and place it back on the top of the Top Cover.
2. Once popping is complete, place popped corn in a large mixing bowl. Remove the Measuring Cup of butter from the Top Cover and pour it over the popcorn and use tongs to mix until popcorn is coated evenly.
3. Then add all ingredients and mix again until mixture is even.
4. Serve fresh and hit play—it's showtime!



WHITE CHEDDAR POPCORN

Prep Time: *3-5 minutes* • ***Cook Time:*** *5 minutes* • ***Serves:*** *8 cups*

Ingredients:

¼ cup popcorn kernels
2 tablespoons butter
½ cup white cheddar cheese powder
Pinch of red chili powder
Salt to taste
¼ cup snipped chives, optional

Directions:

1. Pop kernels in the Popcorn Maker as per instructions. While corn is popping, add 2 tablespoons of butter for melting to the Measuring Cup and place it back on the top of the Top Cover.
2. Once popping is complete, place popped corn in a large mixing bowl. Remove the Measuring Cup of butter from the Top Cover and pour it over the popcorn. Sprinkle with white cheddar cheese powder and chili powder and use tongs to mix until popcorn is coated evenly.
3. Garnish with chives for extra flavor, serve, say cheeeessse, and start snacking!



S'MORES POPCORN

Prep Time: *3-5 minutes* • ***Cook Time:*** *5-10 minutes* • ***Serves:*** *6-8*

Ingredients:

½ cup unpopped kernels
2 cups Golden Grahams™ Cereal
½ cup mini marshmallows
½ cup chocolate chips

Directions:

1. Pop kernels in the Popcorn Maker as per instructions.
2. Place popped corn in a large mixing bowl and add all ingredients. Add marshmallows and Golden Grahams to the popcorn bowl and mix with tongs. Spread mixture onto a baking sheet.
3. Melt the chocolate in the microwave, 15 seconds at a time, stirring in between cycles to prevent burning.
4. Drizzle chocolate over the popcorn mixture and allow to harden, about 10 minutes.
5. Pass this sweet favorite around the campfire and enjoy!



KETTLE CORN

Prep Time: *5 minutes* • ***Cook Time:*** *5 minutes* • ***Serves:*** *16 cups*

Ingredients:

½ cup unpopped kernels
2 tablespoons canola oil
1½ tablespoons granulated white sugar
Fine sea salt

Chef Tip!
To ensure popcorn does not burn, use the precise amount of sugar in the recipe. To make more servings, repeat the recipe.

Directions:

1. Prior to popping corn, place kernels in a mixing bowl and drizzle them with oil. Then sprinkle with sugar.
2. Pop kernels in the Popcorn Maker as per instructions.
3. Season the popcorn to taste with salt.
4. Serve fresh and be sure to enjoy this sweet & savory treat!

CUSTOMER SUPPORT

FEEL GOOD
DOUBLE YOUR WARRANTY
REWARDS

We want you to Feel Good about your Dash products! Sign up for our Feel Good Rewards program at **bydash.com/feelgood** to **DOUBLE** your warranty, part of our commitment to quality and customer satisfaction.

We're here to help! Our customer support teams in the US and Canada are at your service Monday - Friday 9am-5pm (EST) with service in English and French. Contact us at **1 (800) 898-6970** or **support@bydash.com**.



STOREBOUND, LLC – 1 YEAR LIMITED WARRANTY

Your StoreBound product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of the original purchase when utilized for normal and intended household use. Should any defect covered by the terms of the limited warranty be discovered within one (1) year, StoreBound, LLC will repair or replace the defective part. To process a warranty claim, contact Customer Support at support@bydash.com for further assistance and instruction. A Customer Support agent will assist you by troubleshooting minor problems. If troubleshooting fails to fix the problem, a return authorization will be issued. Proof of purchase indicating the date and place of purchase is required and should accompany the return. You must also include your full name, shipping address, and telephone number. StoreBound will not ship to a PO Box. StoreBound will not be responsible for delays or unprocessed claims resulting from a purchaser's failure to provide any or all of the necessary information. Freight costs must be prepaid by the purchaser.

All replacement inquiries are to be submitted to support@bydash.com or contact Customer Support at 1-800-898-6970. There are no express warranties except as listed above.

Warranty is voided if used outside of the 50 states of the United States, the District of Columbia or the 10 provinces of Canada. Warranty is voided if used with an electric adapter/converter or used with any voltage plug other than 120V.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER. STOREBOUND SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES OR FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT EXCEPT TO THE EXTENT REQUIRED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts. Therefore, the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

Refurbished items or items not purchased through an authorized retailer are not eligible for warranty claims.

REPAIRS

DANGER! Risk of electric shock! The Dash SmartStore™ Stirring Popcorn Maker is an electrical appliance.
Do not attempt to repair the appliance yourself under any circumstances.
Contact Customer Support regarding repairs to the appliance.

TECHNICAL SPECIFICATIONS

Voltage 120V ~ 60Hz
Power Rating 700W
Stock#: DSSP50005_20260206_v3

FOOD SAFE

This product has passed food safety testing in accordance with FDA guidelines.



Distributed by:
Costco Wholesale Corporation
P.O. Box 34535
Seattle, WA 98124-1535
USA
1-800-774-2678
www.costco.com

1-800-898-6970 | bydash.com