MARTIN®
FURNITURE

SET-UP INSTRUCTIONS FOR ITEM

IMHF370FP HARTFORD FIREPLACE


info@martinfurniture.com

N0:	Parts List		Q'TY
A		Hartford Fireplace	1 PC
B		Foot	4 PCS
C		Center Foot	1 PC

N0:	Hardware List		Q'TY
1		Bolt (1/4" * 50mm)	8 PCS
2		Spring washer	8 PCS
3		Flat washer	8 PCS
4		Allen wrench	1 PC
5		Furniture Tipping Restraint	1 PC

Tool Required: Philip Screw Driver (not provided)

Caution: Please read all instructions before assembly and check the carton for any parts that may have come loose during shipment. It is recommended to ***use two or more people during the assembly process.***

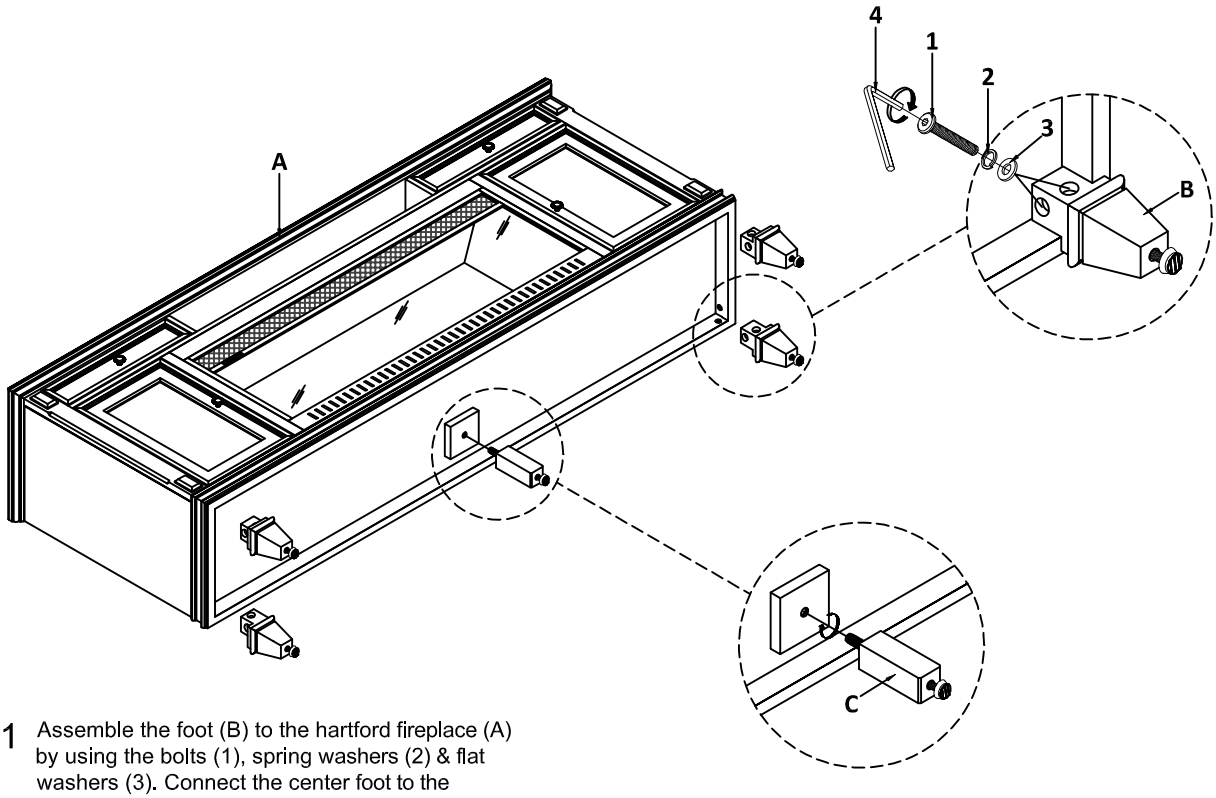



1 Assemble the foot (B) to the hartford fireplace (A) by using the bolts (1), spring washers (2) & flat washers (3). Connect the center foot to the hartford fireplace as shown.

WARRANTY PROTECTION:
Please register your product at MartinFurniture.com. You'll find the warranty link on the bottom of the Home Page

CARING FOR YOUR FURNITURE

- Use a soft, clean cloth that will not scratch the surface when dusting.
- Use of furniture polishes are not necessary. Should you choose to use polishes, test in an inconspicuous area first.
- Using solvents of any kind on your furniture may damage your furniture finish.
- Never use water to clean your furniture as it may cause damage to the finish.
- Always use coasters under beverage glasses and flowerpots.
- Liquid spills should be removed immediately. Use a soft, clean cloth, blot the spill gently. Avoid rubbing.
- Direct sunlight may damage wood finishes.
- Extreme temperature and humidity changes can cause warping, shrinking and splitting of wood furniture. It is best to keep furniture in a climate controlled environment.
- Always use protective pads under hot dishes and plates. Heat can cause chemical changes that may create spotting within the furniture finish.
- In the event that your furniture is stained or otherwise damaged during use, we recommend that you call a professional to repair your furniture.

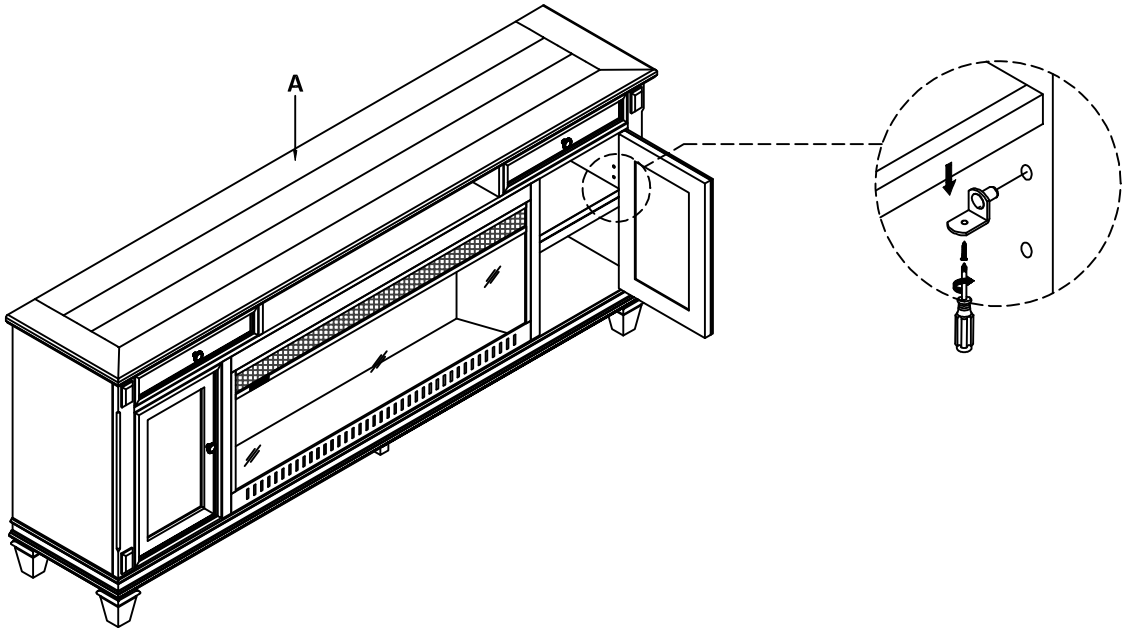

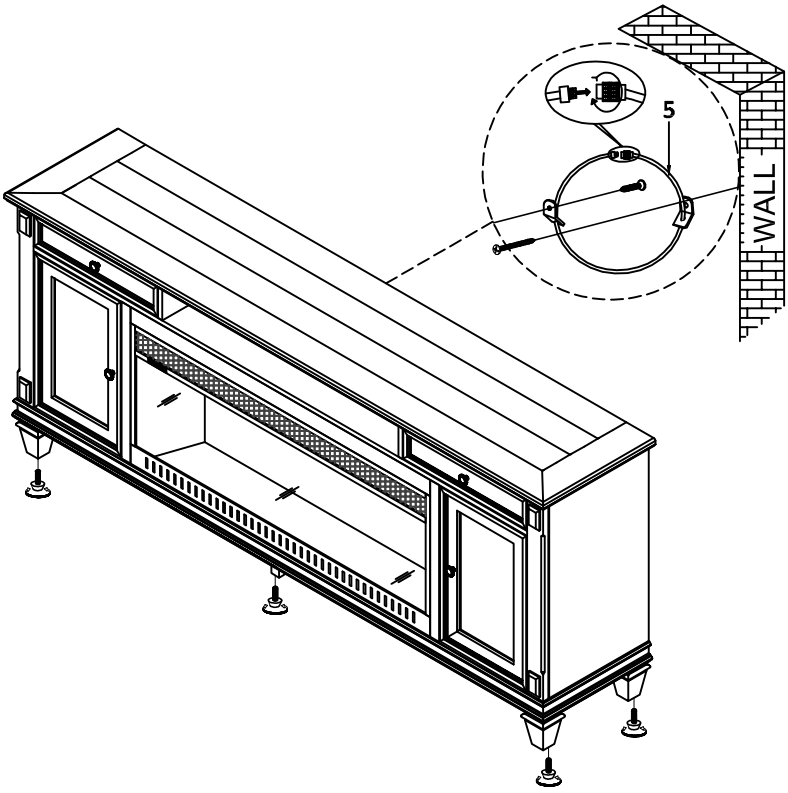

2 Shelves are secured in place with screws through a metal shelf pin for packing and shipping. In order to adjust the shelf remove the screw with Philips head screwdriver (not included) and reposition to desired height.

3 Anti-tip hardware kit must always be used to prevent the case from tipping.
Attach anti-tip restraint at top of the case inline to meet attachment on wall. Screw anti-tip into wall stud or use appropriate anchor for the type of wall if not drywall.

4 Adjust leveler on the leg if neesed.

WARRANTY PROTECTION:
Please register your product at MartinFurniture.com. You'll find the warranty link on the bottom of the Home Page

CARING FOR YOUR FURNITURE

- Use a soft, clean cloth that will not scratch the surface when dusting.
- Use of furniture polishes are not necessary. Should you choose to use polishes, test in an inconspicuous area first.
- Using solvents of any kind on your furniture may damage your furniture finish.
- Never use water to clean your furniture as it may cause damage to the finish.
- Always use coasters under beverage glasses and flowerpots.
- Liquid spills should be removed immediately. Use a soft, clean cloth, blot the spill gently. Avoid rubbing.
- Direct sunlight may damage wood finishes.
- Extreme temperature and humidity changes can cause warping, shrinking and splitting of wood furniture. It is best to keep furniture in a climate controlled environment.
- Always use protective pads under hot dishes and plates. Heat can cause chemical changes that may create spotting within the furniture finish.
- In the event that your furniture is stained or otherwise damaged during use, we recommend that you call a professional to repair your furniture.