
i09 True Wireless Stereo Earphones

User manual

Imported Wireless 5.3 chips

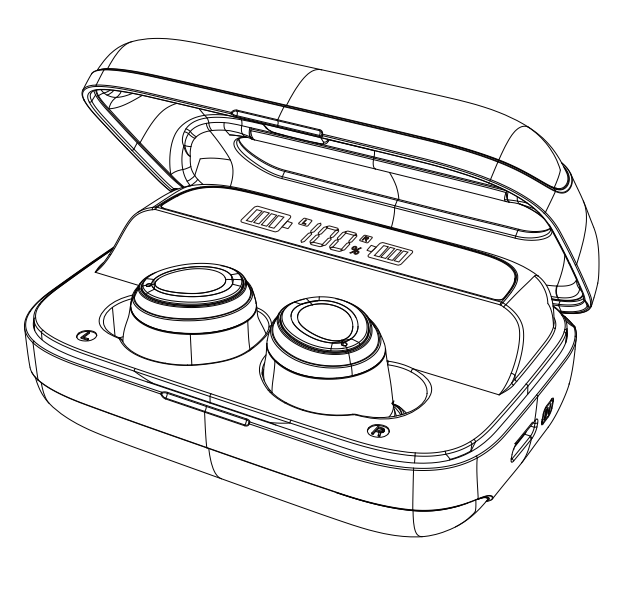

Compatibility:

This product is compatible with all Bluetooth-enabled mobile phones (iOS/Android/Windows Phone), tablet PCs, smart watches, notebooks and desktop computers.

EN

Activation & Warranty
Permanent replacement of damaged, defective item or missing components. Please activate via email below within 15 days.
earbudsvip26@gmail.com

FR

Activation & Garantie
Remplacement permanent de l'article endommagé ou défectueux ou des composants manquants. Veuillez l'activer dans les 15 jours via l'e-mail suivant :
earbudsvip26@gmail.com

DE

Aktivierung und Garantie
Dauerhafter Ersatz beschädigter, defekter Artikel oder fehlende Komponenten. Bitte aktivieren Sie Ihre Ohrstöpsel innerhalb von 15 Tagen über die folgende E-Mail-Adresse.
earbudsvip26@gmail.com

IT

Attiva la garanzia
Sostituzione permanente dell'articolo danneggiato e difettoso o componenti mancanti. Si prega di attivare la garanzia tramite e-mail di seguito entro 15 giorni.
earbudsvip26@gmail.com

ES

Activar la garantía
Reemplazo permanente de artículos dañados, defectuosos o componentes faltantes. Active en 15 días a través del siguiente correo electrónico.
earbudsvip26@gmail.com

English------------------------ 04


Français----------------------- 11

Deutsch----------------------- 18


Italiano------------------------ 25

Español----------------------- 32

1. Package Accessories




2 x Wireless Earbuds



1 x Charging Case

1 x USB Cable

1 x User Manual



3 x Pairs of Ear Tips(L/M/S)

EN

2 * Bluetooth Earbuds
1 * Charging Case
1 * USB Cable
1 * User Manual
3 * Pairs of Ear Tips

FR

2 * Écouteurs Bluetooth
1 * Boîtier de charge
1 * Câble USB
1 * Mode d' emploi
3 paires de bouchons d'oreilles

DE

2* Bluetooth-Kopfhörer
1* Ladebox
1* Datenkabel
1* Handbuch
3 Paar* Ohrstöpsel


IT

2 * Auricolare Bluetooth
1 * Custodia di Ricarica
1 * Cavo USB
1 * Manuale di Istruzioni
3 * Coppie di gommini

ES

2 * Auriculares Bluetooth
1 * Caja de carga
1 * Cable USB
1 * Manual de instrucciones
3 * Pares de auriculares

Noted:

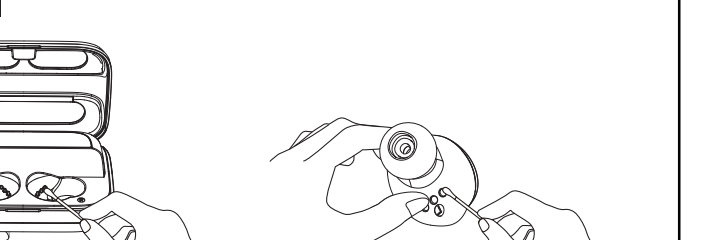

EN Regular cleaning with a cotton swab is recommended, as shown in the image above. When the earbuds are not charging, you can use a cotton swab dipped in alcohol to gently wipe the bullet needle and copper column

FR Un nettoyage régulier avec un coton-tige est recommandé, comme le montre l'image ci-dessus. Lorsque les écouteurs ne se chargent pas, vous pouvez utiliser un coton-tige imbibé d'alcool pour essuyer délicatement l'aiguille à balles et la colonne de cuivre


DE Eine regelmäßige Reinigung mit einem Wattestäbchen wird empfohlen, wie im Bild oben gezeigt. Wenn die Ohrhörer nicht aufgeladen werden, können Sie die Kugelnadel und die Kupfersäule mit einem in Alkohol getauchten Wattestäbchen vorsichtig abwischen

IT Si consiglia una pulizia regolare con un batuffolo di cotone, come mostrato nell'immagine sopra. Quando gli auricolari non si stanno caricando, puoi utilizzare un batuffolo di cotone imbevuto di alcol per pulire delicatamente l'ago del proiettile e la colonna di rame

ES Se recomienda una limpieza regular con un hisopo de algodón, como se muestra en la imagen de arriba. Cuando los auriculares no se están cargando, puede usar un bastoncillo de algodón humedecido en alcohol para limpiar suavemente la aguja de la bala y la columna de cobre.

Product details:

EN

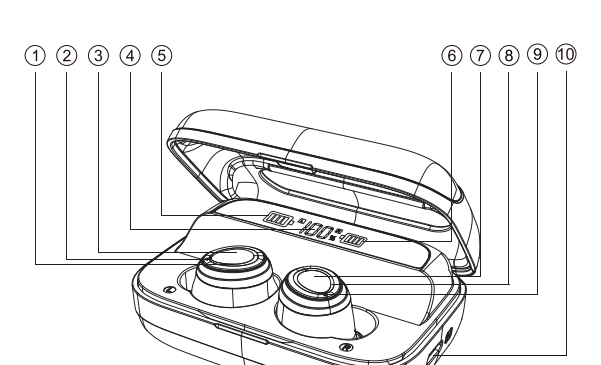

① ⑧ Earphone LED Indicator
② ⑨ Microphone
③ ⑦ Touch Button
④ Charging bin digital display
⑤ ⑥ Headphone digital display
⑩ Type-C charging port


Usage:

For the Best Audio experience,it is recommended your right size silicone earcaps and,please put your cellphones in the same side of left earphone during outdoor.




Powering ON:

Method 1: Take out the earphones from the charger case, and they will "power on"



Method 2: When the earphones are OFF,touch and hold both earphones for 3-5 seconds.The Led light flashes once and with a sound prompt:"power on"

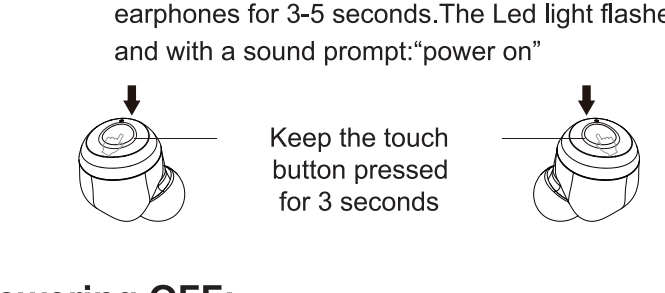

Powering OFF:


Method 1: The earphones will switch off when put into the charger case.

Method 2: Keep the earphones touch button pressed for 3-5 seconds, until the Blue LED flashes with a sound prompt: "power off".


Note: If the earphones were disconnect with the device, the earphones will be power off automatically after 5mins.

Stereo Mode:

1. Taking the earbuds out of the charging box, they will auto power on. After a few seconds, the left and right earbuds will auto connect each other.When the TWS earbuds are connected to each other, the LED light will flash quickly. If they connect successfully, the earbuds LED light will flash slowly.



2. Open the bluetooth devices page inside settings.Search for "i09" andselect it to pair,the Earphone lights be off after the earphones connected with device.

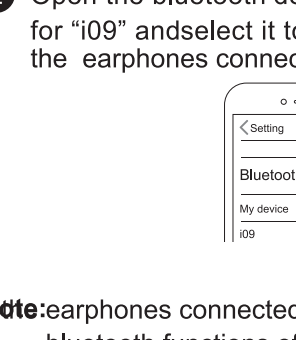

Note: earphones connected the device once, and the bluetooth functions of device was open ,the earphones will be reconnected with last device automatically.

Reset Mode:

In the power-on state, after 5 quick clicks L/R, the earphones is turned off (the blue light is off), and the pairing information between the earphones and the mobile phone is cleared after restarting.

Play Music:

1. Touch the button once to Pause/Play.
2. Keep press the touch button for 1 seconds and release it ("L"for previous song, "R"For next song)
3. Touch the button twice to adjust the volume("L"for decreasing ,"R" for increasing)

Voice Assistant:

Touch the button three times to activate the Siri voice assistant

Calling:

1. When a call comes in, short press one of the touch buttons in order to answer the call or long press it to reject it.
2. During a phone call, short press the earphone button to end the call and the earphone will resume its previous working state.
3. During a call, the volume can be controlled via the mobile phone.
4. Stereo mode:both ears have voice.

Specifications:

- Model : i09
- Bluetooth version: V5.3
- Voltage rating and energy capacity: 3.7V/2600mAh
- Battery capacity: 2*3.7V/60mAh
- Charge time: Around 1.5 hour
- Music playing time:About 6-7h*23Times
- Bluetooth profiles supported: HFP/A2DP/AVRCP
- Operating frequency: 2.40 GHZ-2.48 GHZ
- RF Sensitivity: -92dBm
- Working temperature range: -10+50°C
- Maximum transmission range: ≤15M

Packing list:

Earphones *2

USB cable *1

Charging case *1

Earcaps *4(L\ S)

User manual *1

Important:

1. Host device is a connection between second device and your mobile phone, it is normal status under high power condumption.
2. When not connected to any device, the earphones will power off automatically after 5 minutes.
3. On iPhones the battery level of the earphones will be displayed in real time.
4. When the earphones and the charger case are not used for long periods of time, it is recommended to keep them in a dry place and to recharge them at least every 2 months.

Fault:

Fault	Cause	Solutions
Can't power on	Earbuds are low battery/ Crash	Charge the Earbuds/Keep the earphones touch button pressed for 8 seconds
No charging indication	The Earbuds are not well put into	Adjust Earbuds position
Automatically shut down	Earbuds are low battery	charge the Earbuds
The Earbuds have an echo	The volume is too high or the environment is too noisy	Adjust the volume or change position
The Earbuds are noisy	Outside environment interference or too far away from mobile phone	Change position,or move closer to the mobile phone
Small sound	wearing Earbuds incorrectly or the volume is too low	Adjust the Earbuds position or the mobile phone volume
Signal intermittent	Outside environment interference or too far away from mobile phone	Change to better environment or move closer to the mobile phone
Earbuds have no sound	Pairing unsuccessful between L and R Earbuds	Put the earphones into the charger case

Warranty card

Warranty period:
12 months from the date of purchase
Free of charge service:
During the warranty period, if there is any breakdown caused by the products's build quality please contact the seller and provide this warranty card together with the sales invoice.The product will be repaired or replaced by a new one.
The warranty does not apply under the following circustances:
1,The product label is broken.
2,Damage caused due to the product being disassembled by a non-authorized repair agent.
3,Damage caused by external force or when there is visible deformation of any of the external parts.
4,The product has been improperly used or stored.
5,Damage or breakdown caused by force majeure.
6, Other situations similar to the above.
Customer service information:

Customer Name	
Customer Phone	
Customer Address	
Model Number	
Purchase Date	
Dealer	
Invoice number	