User Manual of Product 1:

Dualit Architect 4 Slice Toaster | Stainless Steel with Grey Trim|Extra-Wide Slots–Peek and Pop Function–Patented Perfect Toast Technology–Matching Kettle and Sandwich Cage Available | 46526

User Manual of Product 2:


Dualit Architect Kettle | 1.5 L 2.3 KW Stainless Steel | Rapid Boil and Patented Pure Pour Non-Drip Spout | Measuring Window with Cup Level Indicators | 72905, Black Trim Brushed Body

Architect Toaster

Instruction Manual & Guarantee


Dualit®

Since 1945

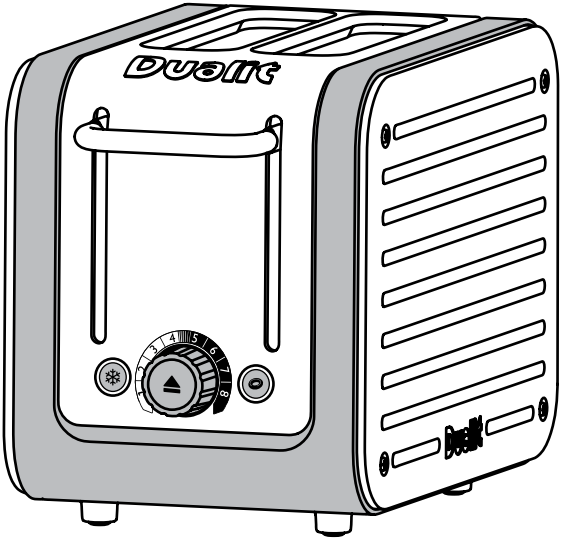

CAT2

CAT4

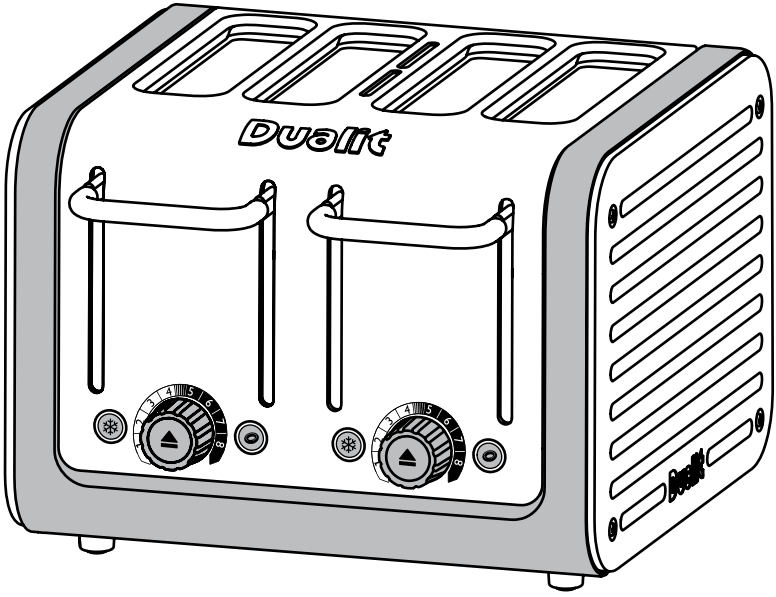

YOUR ARCHITECT TOASTER

The perfect slice of toast is an essential part of breakfast and the Architect toaster is designed to deliver every time. With extra wide slots for the chunkiest of bread, defrost option and patented Peek and Pop® function, you will be serving superior toast, bagels and buns to change the way you breakfast.

Each Architect toaster features interchangeable panels with a wide variety of colours available, allowing you to update the colour of your toaster if you move house, update your kitchen, or simply to suit your mood.

DON'T FORGET TO
REGISTER YOUR TOASTER

WWW.DUALIT.COM/REGISTER

OR BY POST



Register my appliance

CONTENTS

Safety precautions ____ 04
Know your Toaster ____ 06
Setting up ____ 08
Toasting tips ____ 09
Toasting bread ____ 10
Bagel & bun toasting ____ 11
Toasting frozen bread ____ 12
4 slot toasting ____ 13
Stop toasting ____ 14
Sandwich cage ____ 14
Cleaning & care ____ 15
Troubleshooting ____ 16
Guarantee ____ 17

Unpack the box with care, keeping all the packaging materials until you are satisfied everything is present and in working order. Once satisfied remove any tags from the toaster body and recycle the packaging appropriately. Do not remove tags from the cord where appropriate. You may wish to keep the box to store your toaster.

All illustrations are for representation only; your model may vary from illustrations shown.

Patent application: GB1315591.6, P11363GB, GB1315591.6 Patent No. GB2453812, AU2008202836, US2009223382, GB2516476, AU2014101058 Reg No. 2600265 Trade Mark; WE00001115203

IMPORTANT SAFETY PRECAUTIONS

READ ALL INSTRUCTIONS

BEFORE USING THE TOASTER KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE

IMPORTANT SAFEGUARDS

- **THIS IS AN ATTENDED APPLIANCE. Do not leave unattended during use, unplug after each use (risk of fire if an unattended appliance is left operating).**
- This appliance must not be used by children younger than 8 years old and persons with very extensive and complex disabilities. Children aged 8-14 years and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge shall not use this appliance, unless they are supervised and have been given instruction concerning the use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children less than 8 years old.
- This appliance is intended for indoor household use only. If the appliance is used improperly or for professional or semi-professional purposes or if it is not used according to these instructions the Guarantee becomes invalid and Dualit refuses any liability for damage caused.

Electrical safety

- Before plugging in, check that the voltage on the rating label is the same as the mains supply.
- We recommend that the toaster is plugged into a socket that has no other appliance connected to it. Failure to do this may cause an overload, trip a circuit breaker or blow a fuse. Preferably the socket outlet should be protected by a Residual Current device (RCD).
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- **Should any of the lights remain illuminated after using the appliance, unplug the toaster immediately and call service centre.**
- The toaster is not intended to be operated by means of an external timer or separate remote-control system.
- To protect against electric shock, do not immerse any part of this product in water or other liquid.
- NOTE: Any plug cut from power supply cord should be disposed of immediately. Inserting any cut off plug into a 13A socket-outlet is hazardous.
- Do not operate any appliance with a damaged lead or plug, or after the appliance malfunctions or has been damaged, cracked or dropped in any manner.
- If the power cord is damaged it must, for safety reasons, be replaced by Dualit or an authorised Dualit repairer.
- Never use the plug without the fuse cover fitted. Ensure replacement fuse is the same current value as original.
- Replacement fuses should be ASTA approved to BS 1362.
- WARNING: This appliance must be earthed.

General safety

- Bread may burn. Therefore toasters must not be used near or below curtains and other combustible materials.
- When in use a fire may occur if the toaster is covered or touching flammable material.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not attempt to dislodge bread when the toaster is plugged in.
- Crumb tray must be in place during toasting.
- Crumb tray should be regularly cleaned. A build up of crumbs can burn or cause a fire.
- Do not allow cable to touch hot surfaces, or to hang over edge of a table or counter top.
- Keep the appliance and its cord out of reach of children.
- Do not use appliance for any purpose other than the intended use.
- Do not store or use toaster in an appliance garage or under cupboards.
- Do not put a pan ontop of the toaster or warming rack.
- Do not use if dropped, cracked or damaged.
- Accessible surfaces of the toaster may get hot during use. Therefore use handles or knobs.
- Do not use scouring pad or abrasive cleaner on the toaster body.
- The use of accessory attachments not recommended by Dualit may result in fire, electric shock or injury to persons.
- Never use the toaster without the interchangeable panels correctly assembled. Architect toasters only.

SAVE THESE INSTRUCTIONS

In the interest of improving products, Dualit Ltd. reserves the right to change the product specification without prior notice.

All illustrations are for representation only, your model may vary from illustrations shown.

INSTRUCTIONS ON ENVIRONMENT PROTECTION




Do not dispose this product in the usual household garbage at the end of its life cycle. Please hand it over to a collection point for the recycling of electrical and electronic appliances. The symbol on the product, the instruction of use or the packaging will inform you about the methods of disposal. The materials are recyclable as mentioned on its marking. By recycling, material recycling or other forms of re-utilization of old appliances you are making an important contribution to protect our environment. Please enquire at the community administration for the authorised disposal location.

IMPORTANT: BEFORE FIRST USE

- Read this instruction manual before you start using the toaster. It gives you important safety information and will ensure you get the most out of your Dualit toaster.
- Keep this manual and your proof of purchase in a safe place.
- Before you use your toaster for the first time, wash all parts according to the cleaning instructions.
- Position the toaster according to the safety precautions.
- Make sure the toasting lever is in the raised position when you put the plug into the wall socket.
- The toasting lever will only engage when the toaster is plugged in with the power on.
- The cancel button will illuminate to show that the toaster is heating.
- When you turn the toaster on for the first time, a "new" smell/or smoke may be given off, this will dissipate after a few uses. Clean all parts in contact with food before using for the first time.


KNOW YOUR TOASTER

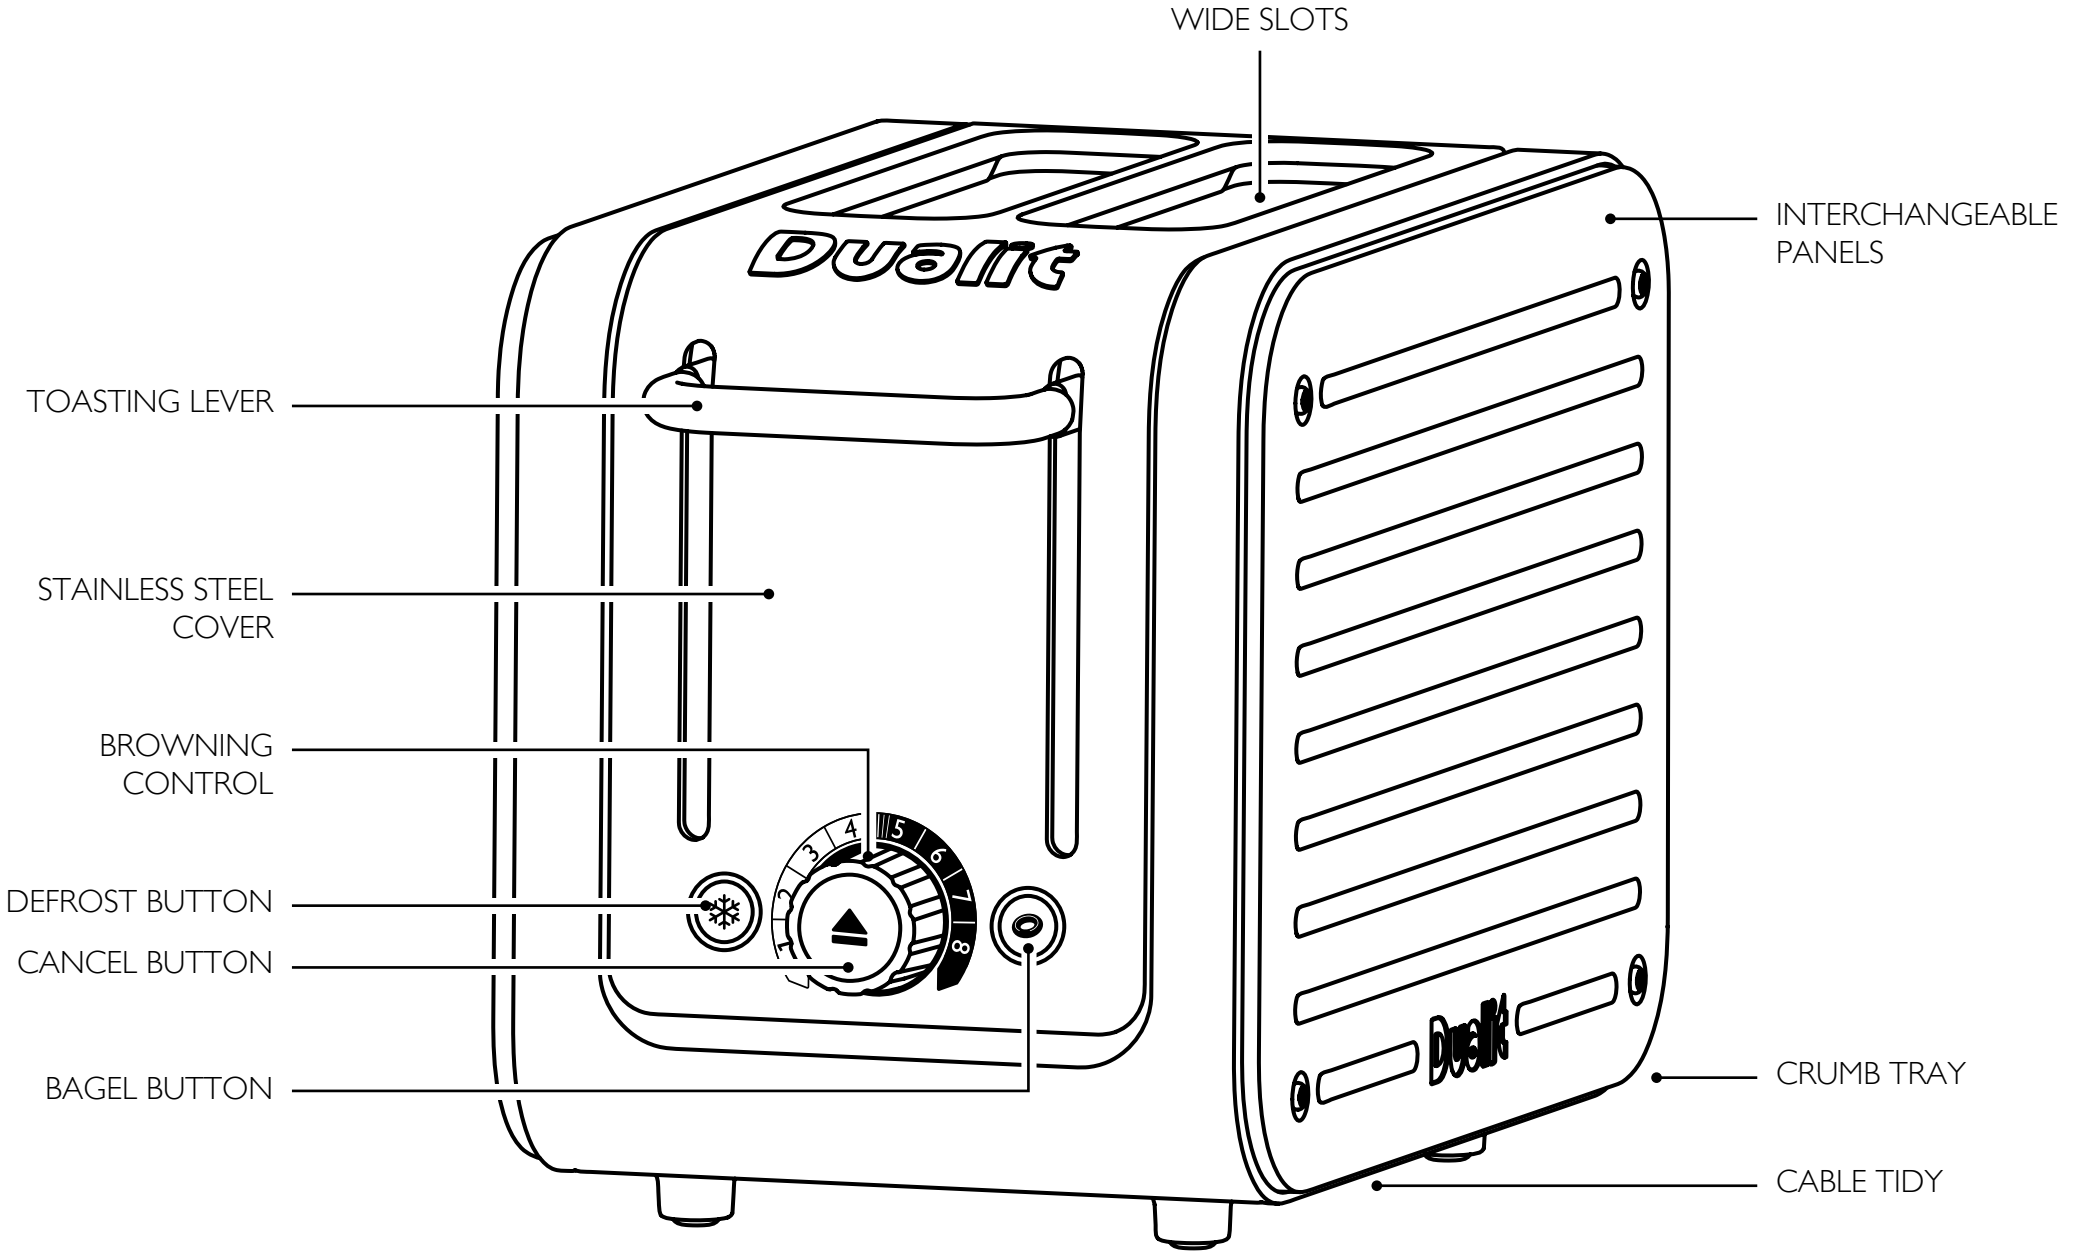


SETTING UP

Read and follow these instructions before using your toaster.




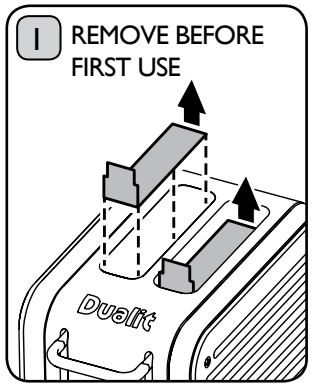


Ensure your toaster is unplugged and cool. **REMOVE CARDBOARD INSERTS FROM THE SLOTS BEFORE FIRST USE.** A fire may occur if incorrectly positioned.

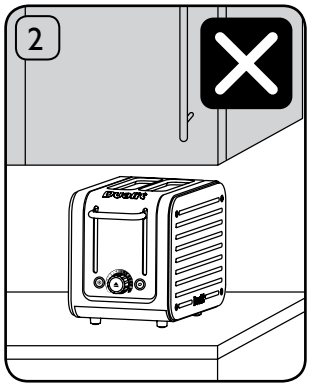


DO NOT STORE OR USE YOUR TOASTER IN AN APPLIANCE GARAGE OR UNDER CUPBOARDS. A fire may occur if incorrectly positioned.

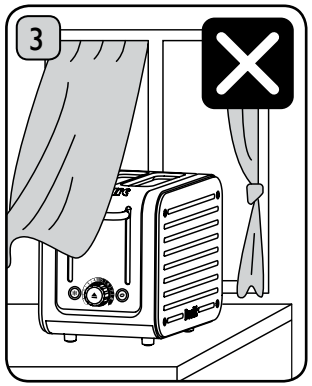


DO NOT STORE OR USE YOUR TOASTER CLOSE TO CURTAINS OR FLAMMABLE MATERIAL. A fire may occur if incorrectly positioned.

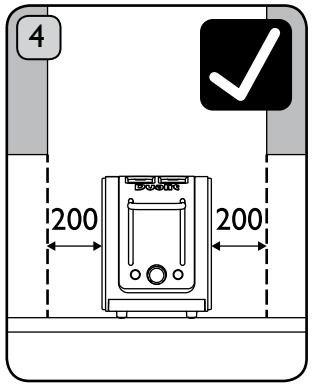


Place the toaster on an open level surface. Ensure the toaster is positioned at least **200mm CLEAR FROM ANY OVERHANGING CUPBOARDS OR WALLS.**

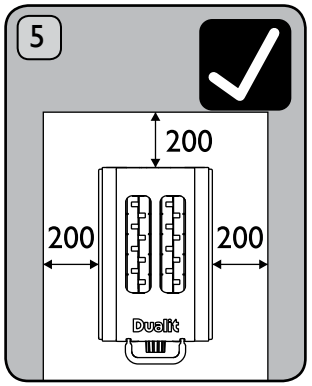

Ensure the toaster is positioned at least **200mm CLEAR FROM ANY OVERHANGING CUPBOARDS OR WALLS.**

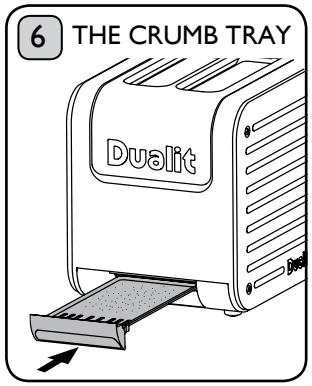

CRUMB TRAY MUST BE IN PLACE DURING TOASTING.

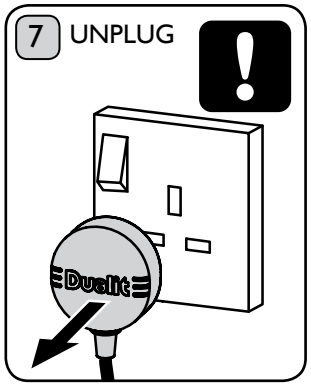

UNPLUG WHEN NOT IN USE.



DON'T FORGET TO REGISTER YOUR TOASTER AT WWW.DUALIT.COM/REGISTER OR BY POST

TOASTING TIPS

Here are a few tips to help get the best out of your toaster.


- Different breads will toast at different rates, wholemeal bread takes longer than white bread, fresh bread will take longer than day old bread. Remember to adjust your browning control to allow for your particular type of bread.
- After the first round of toast, the elements and toaster body will be heated up, subsequent rounds will take less time to toast.
- At any time during the toasting cycle you can lift the toasting lever and check the progress of the toasting.
- Use the bagel setting to toast burger buns, bagels, muffins or tea cakes, this setting toasts one side whilst gently warming the other.
- The thickest slice of bread that will fit in your toaster is 36mm thick. Forcing bread which is too thick or too long into the slots will be difficult to eject once toasted.
- You may find it easier to use a 'sandwich cage' to toast smaller items. Inserting and removing items will be easier (sold separately).
- When hand cutting a fresh loaf, cut the slices as evenly as possible. Uneven slices will toast unevenly.
- Keep elements free from breadcrumbs and broken pieces of bread. If left these may burn out the elements. With the toaster unplugged use a soft brush to clean inside your toaster, do not use a knife!
- To reheat recently made toast set the browning control to 1.
- Cancel toasting manually at any time by pressing the cancel button on the browning control knob.

TOASTING BREAD




THIS IS AN ATTENDED APPLIANCE. **Do not leave unattended during use, unplug after each use (risk of fire if an unattended appliance is left operating).**

1 PLUG IN

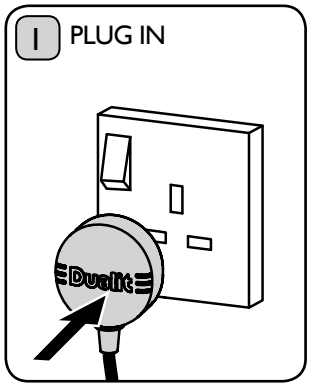


The toaster will only engage when the power is switched on. Plug the toaster into the wall power socket and turn power on at socket.

2 SET

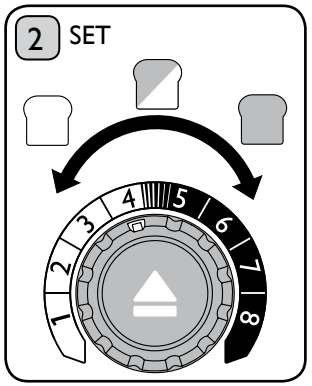


To toast, set the desired browning level by means of the browning control (1 is the lightest and 8 is the darkest setting).

3 INSERT

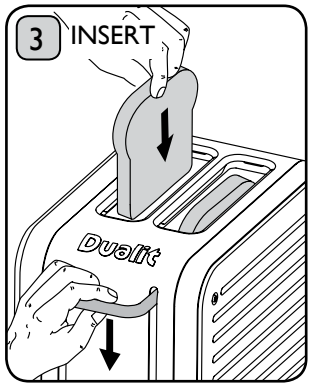


Place the bread into the slots and press the toasting lever down until it engages. The browning control will be illuminated blue for the duration of the toasting.

4 PEEK & POP

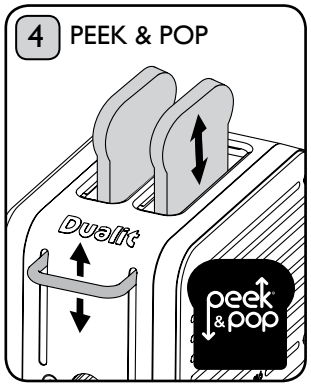


At any time during the toasting cycle you can lift the toasting lever and check the progress of the bread. **If you remove the toast before the cycle is complete, press the cancel button and unplug.**

5 HIGH LIFT

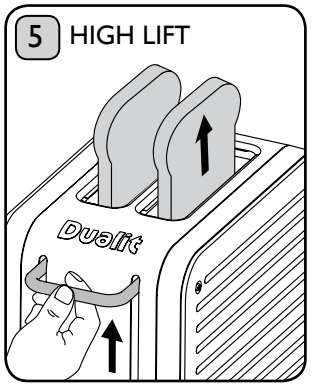

When toasted the toast will pop up automatically. If the slices are difficult to remove safely, lift the toasting lever up manually for extra high lift.

6 STOP TOASTING

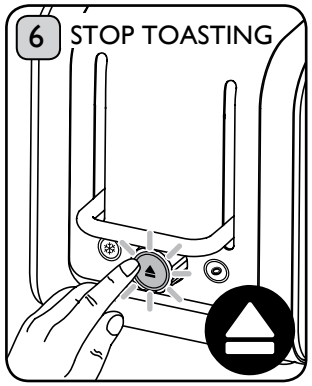


To immediately stop toasting, press the cancel button. **After cancelling if neon light remains illuminated after use immediately unplug the toaster & call service centre.**

BAGEL & BUN TOASTING




Perfectly toast bagels or other bread products such as buns, English muffins or teacakes. This feature gently warms the outside of the item and toasts the inside to perfection. **To cancel toasting see page 13.**

1 SET

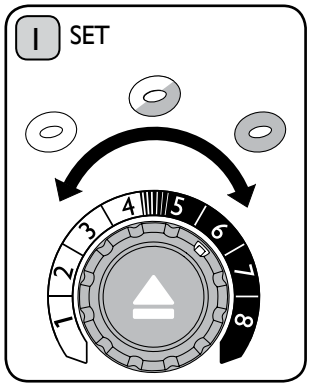


Select the desired browning level. (1 is the lightest and 8 is the darkest setting).

2 INSERT

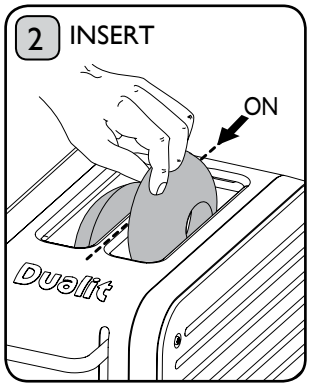


Slice bagel into two equal halves before toasting. Insert bagel so both 'cut' sides are facing inwards to the centre element.

3 ENGAGE

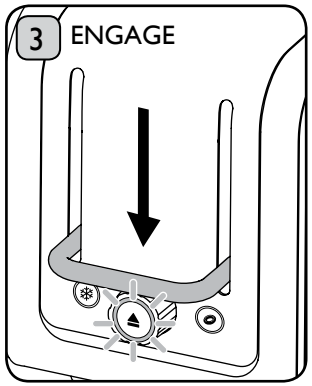

Press the toasting lever down until it engages. The browning control will be illuminated blue.

4 BAGEL BUTTON

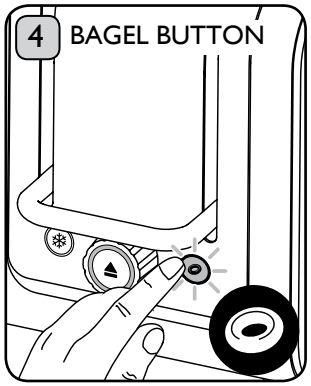


As soon as the bagel is lowered, immediately press the bagel button. The button will be illuminated blue and only the centre element will heat up.

TOASTING FROZEN BREAD




When 'defrost' is activated, the toaster automatically adjusts the settings to defrost and then toast frozen bread.


To cancel toasting see page 13.

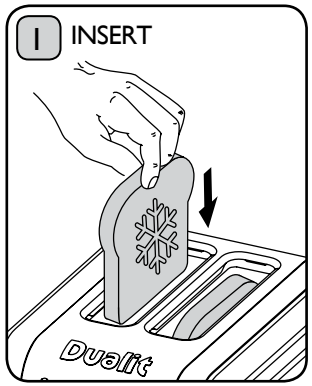

To toast frozen bread, place the bread into the slots.

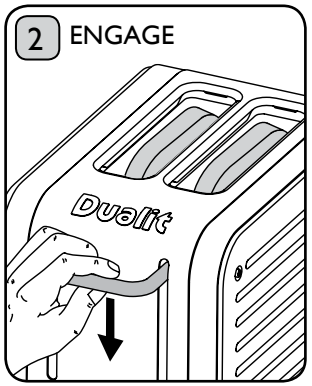

Press the toasting lever down until it engages.

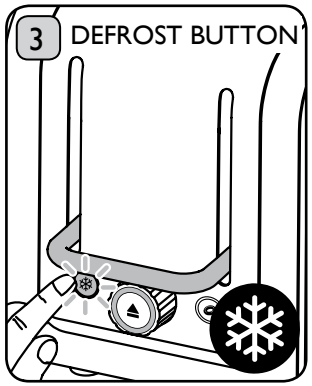


Immediately press the defrost button. The button will be illuminated blue. To toast frozen bagels or buns, engage the toasting lever then press both defrost and bagel buttons.


4 SLOT TOASTING



To cancel toasting see page 13.

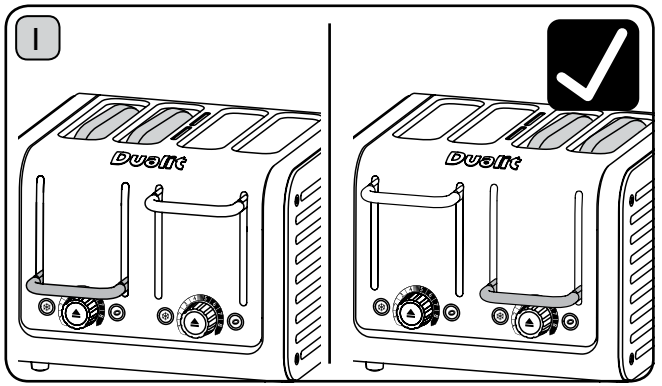

If you want to toast 2 pieces of bread only **LOAD AND ENGAGE** one side of the toaster.

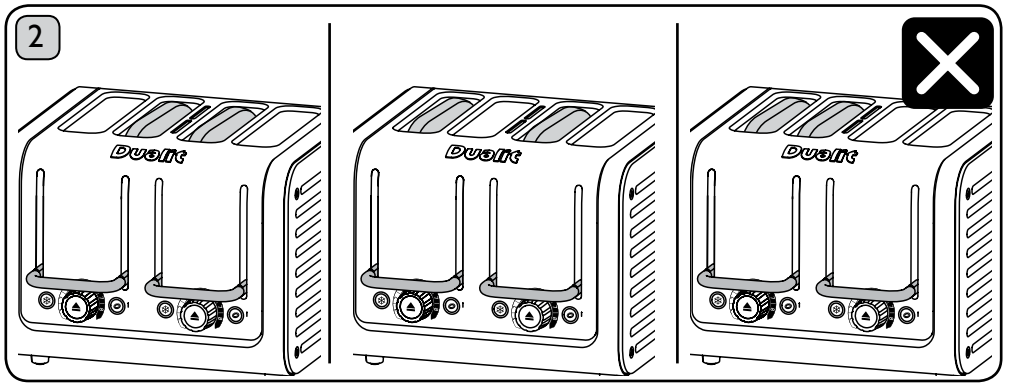


DO NOT LOAD AND ENGAGE BOTH SIDES OF THE TOASTER TO TOAST 2 PIECES OF BREAD.


STOP TOASTING

The toasting cycle will automatically stop and the toast will pop up, but if required you can cancel at any time.




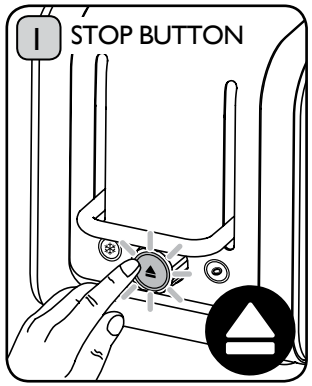

Press the cancel button located on the end of the browning control.

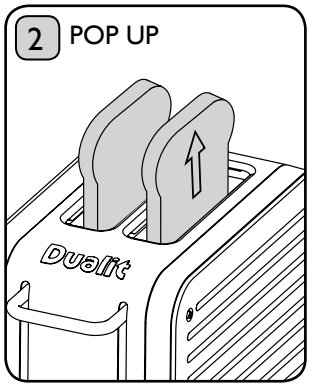


The toaster will immediately stop and the items being toasted will pop up.
The neon will go out. After cancelling if neon light remains illuminated after use immediately unplug the toaster & call service centre.

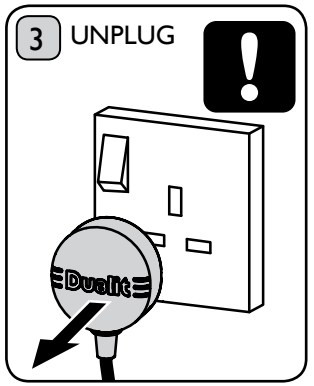

THIS IS AN ATTENDED APPLIANCE. Do not leave unattended during use, unplug after each use (risk of fire if an unattended appliance is left operating).

SANDWICH CAGE OPTIONAL EXTRA

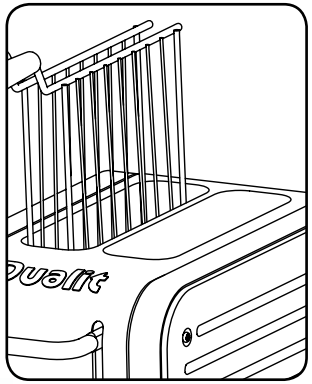


The sandwich cage provides you with the option of making toasted sandwiches in your Architect toaster. It is also useful for toasting smaller items like buns, bagels and teacakes. Each pack includes a free cookbook with a range of ideas for deep filled toasted sandwiches that make good use of the extra-wide slots of your Architect toaster.


AVAILABLE AT: WWW.DUALIT.COM/ARCHITECT

CLEANING & CARE



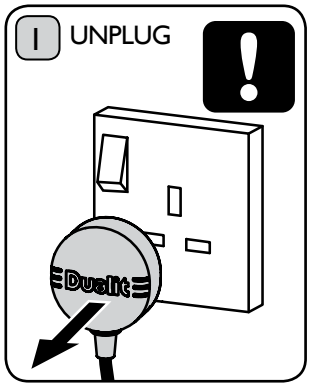


Switch toaster off, remove the plug from the wall socket and let the toaster cool down before you start cleaning it.

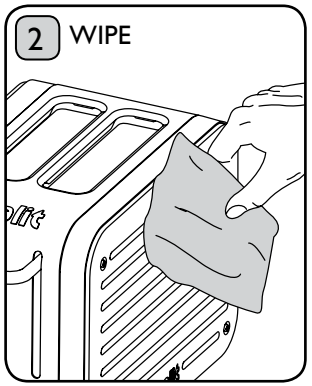


Wipe the outside of the toaster with a moist cloth and dry it with another cloth. Do not use a scouring pad or abrasive cleaner.




Use a soft brush to clean inside your toaster.
Do not insert any metallic or sharp utensils in to the toaster.

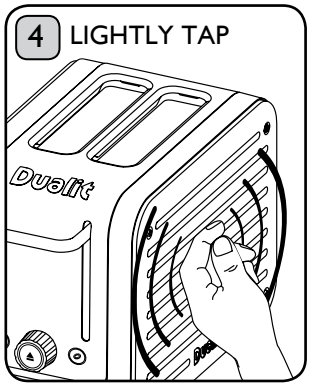

When the toaster has cooled completely, tap the sides of the toaster lightly to dislodge any crumbs caught in the toasting chamber.

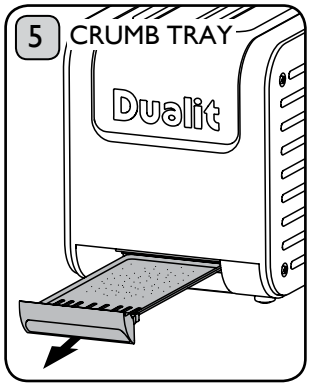


Crumbs will accumulate in the crumb tray and could catch fire if the tray is not emptied frequently. Pull out the crumb tray and wipe clean using a damp cloth.

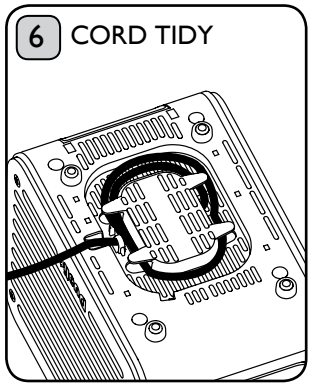

Store the cleaned toaster unplugged with the cord wrapped round the cord tidy on the base of the toaster.

TROUBLESHOOTING



TO REPLACE FUSE, REMOVE SILVER LABEL TO ACCESS SCREW.

POSSIBLE CAUSE(S)	SOLUTION(S)
MY TOASTER IS NOT WORKING:	
1. The toaster may not be properly connected to the power supply.	1. Check the plug is in the socket and the switch in turned on.
2. If your lever is not staying down.	2. Check if the 'neon' is glowing blue. If yes, unplug the toaster and call service centre If no, your plug fuse may have blown.
I GET UNEVEN TOASTING:	
1. Different bread types and sizes have been used at the same time.	1. Ensure size and type of bread being toasted is the same.
2. End elements take a little longer to warm up than centre elements.	2. Once toaster is at optimum operating temperature this will no longer occur.
MY TOAST DOESN'T POP UP WHEN THE TOASTER HAS FINISHED:	
1. There may be a fault with the toaster.	1. If the power neon remains illuminated, immediately unplug the toaster and call service centre.
2. Your bread may be too thick	2.1 Slices thicker than 36mm will get stuck.
	2.2 Hand cut slice must be cut evenly.
	2.3 Using a 'sandwich cage' can make toasting thicker items easier.
ONE SIDE OF MY BREAD IS NOT TOASTING	
1. If set to Bagel setting only one side will toast.	1. Press the bagel button to cancel the setting. Remember to insert bread from the very left hand slot.
SMOKE COMING OUT OF THE SLOTS	
1. If this is the first time using your toaster, this is normal, your elements are being conditioned.	1. This will dissipate after a few uses.
2. The crumb tray might be full. A build up of crumbs can burn or cause a fire.	2. Empty the crumb tray.
3. Some crumbs or pieces of bread may be stuck in the toaster.	3. Unplug, remove the crumb tray then turn the toaster upside down over a sink or bin and gently shake the crumbs out.

GUARANTEE

This appliance is of excellent quality and construction. However, if any defects in materials or workmanship do appear during the relevant guarantee period, we will, at our discretion, either repair or replace the defective parts, free of charge, subject to the terms and conditions of our Guarantee shown below.

This Guarantee covers both parts and labour. Carriage is not included.

Your Guarantee period is as follows:

- 1 year

This Guarantee provides benefits which are additional to, and do not affect, your statutory rights. This Guarantee does not cover the cost of returning the product to the dealer from whom it was purchased or to ourselves. This Guarantee applies only to products sold and located in mainland Great Britain. It does not cover liability in respect of or replacement of plugs, cables or fuses and also does not cover defects due to:

- Failure to use or maintain product in accordance with Dualit's instructions.
- The product being connected to an unsuitable electricity supply.
- Accidental damage to or abuse or misuse of the product.
- product modification, except by Dualit or approved agent.
- Dismantling of or interference with the product.
- Theft or attempted theft of the product.

Before returning any product under this Guarantee, please check that:

- You have followed the product instructions correctly.
- Your mains electricity supply is functional.
- The defect is not due to a blown fuse.

If you wish to claim under this guarantee you should:

- Send the product, postage or carriage paid, to the dealer from whom it was purchased or to Dualit direct.
- Ensure that the product is clean and packed carefully (preferably in its original carton).
- Enclose details of your name, address and telephone number and when and where the product was purchased, together with proof of purchase (e.g. a till receipt).
- Give exact details of the nature of the defect.

This Guarantee does not cover any other claims whatsoever, including, without limitation, any liability for incidental, indirect or consequential damage, nor does it cover any claims for conversion or modification or for the costs of repair carried out by any third party without the prior consent of Dualit. If replacement parts are fitted to the product this will not extend the period of the Guarantee.

For further advice contact the Dualit customer helpline on +44 (0)1293 652 500 (09:00 to 17:00 Monday to Friday).

Alternatively, email Dualit at info@dualit.com or visit www.dualit.com

Do not throw away the appliance with the normal household waste at the end of its life, but hand it in to an official collection point for recycling. By doing this you help preserve the environment.

INTERCHANGEABLE PANELS


Change your panels at:
WWW.DUALIT.COM/ARCHITECT




Add a splash of colour with our range of innovative, interchangeable panels for your toaster. Select and swap shades according to your mood or for house moves, renovations, or even just your latest colour craving. Each pack includes two toaster panels. Panels are also available for the Architect Kettle.





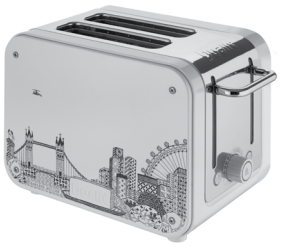

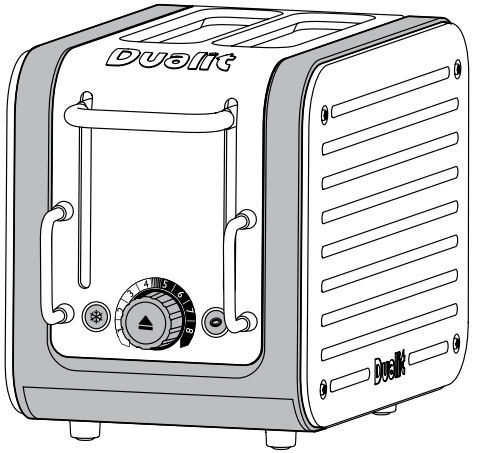

REGISTER YOUR PRODUCT

1. **Fast and efficient customer service** and access to manuals and product information should you require assistance with your purchase.

2. Access to a library of mouth-watering recipes and regular articles on Dualit products, events, competitions and much more.

3. **Be the first to receive the latest news** about exciting new Dualit products.

DON'T FORGET TO **REGISTER YOUR PRODUCT**	**WWW.DUALIT.COM/REGISTER**	Register my appliance
	OR BY POST	

DON'T FORGET TO
REGISTER YOUR TOASTER


WWW.DUALIT.COM/REGISTER

OR BY POST



Register my appliance

Dualit®

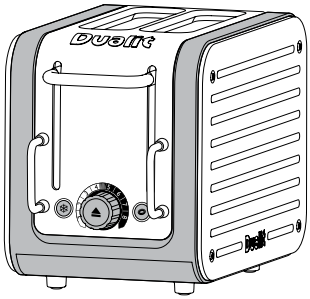

Architect toasters comply with Australian Deviation AS/NZS 60335.2.9 2009 (A1) requirement.

Dualit Limited County Oak Way Crawley West Sussex RH11 7ST
t: +44(0)1293 652 500 f: +44(0)1293 652 555 e: info@dualit.com www.dualit.com

GB/AU-J

Architect Kettle
Instruction manual

Dualit®
Since 1945





You may also like the matching
Architect toaster

Change your panels at:
WWW.DUALIT.COM/ARCHITECT

Dualit Limited County Oak Way Crawley West Sussex RH11 7ST
Telephone: +44(0)1293 652 500 Facsimile: +44(0)1293 652 555
Email: info@dualit.com Web: www.dualit.com

Follow us on:

TROUBLESHOOTING GUIDE

If none of the below points apply call customer services on 01293 652500.

TO REPLACE FUSE, REMOVE SILVER LABEL TO ACCESS SCREW.

POSSIBLE CAUSE(S)	SOLUTION(S)
THE KETTLE DOES NOT TURN ON	
1. The kettle may not be properly connected to the power supply or the fuse may have failed.	1. Check the plug is in the socket and the switch is turned on. Replace the fuse if necessary. Note: in order to open the plug, remove the label to reveal the screw.
2. Boil dry feature may have been activated. If the kettle is accidently switched on without water, the boil-dry device will switch off the heating element to prevent damage to the kettle.	2. Wait approximately 10 minutes for the kettle to cool down, lift and refill as normal. The kettle is now ready to use again. NOTE: if discolouration of the heating plates has occurred, this can be easily removed by descaling your kettle.
3. The element may have broken if the power neon illuminates but the kettle does not boil.	3. The element cannot be replaced. For further assistance call customer services on 01293 652500.
4. The kettle does boil but the power neon does not illuminate.	4. The power neon may have blown, and cannot be replaced. For further assistance call customer services on 01293 652500.
THE KETTLE IS SPUTTERING OUT OF THE SPOUT	
1. You may have over filled the kettle.	1.1 Only fill to the max mark (1.5L).
	1.2 Wait 10 seconds to allow the boiling water to settle before pouring.
2. The kettle may have descaling solutions remaining inside the body.	2. Follow the instructions from the cleaning & care section and rinse throughly.
3. The filter may not be in position.	3. Ensure the filter is in position. For spare filters call Dualit on 01293 652500.
MY KETTLE IS NOT SWITCHING OFF	
1. Limescale may have built up inside the kettle.	1. Descale your kettle regularly (see cleaning & care).
2. The Lid may not be fully closed or limescale may have built up on the lid lip.	2. Check the lid is firmly closed during use. If necessary descale lid lip.
3. Water may have gone down the steam tube whilst filling. You may have overfilled, tilted the kettle when filling or filled through the spout.	3. Leave the kettle for 24 hours to fully dry.
MARKS HAVE APPEARED IN THE KETTLE	
1. Small brown spots can build up inside the kettle. This is not rust, small deposits of scale which contain iron can build up inside the kettle.	1. Descale regularly (see cleaning & care).
WATER DROPLETS COLLECTS ON TOP THE POWER BASE	
1. This is condensation and perfectly normal.	1. Dry with non abrasive cloth.

CE

GB-E

IMPORTANT SAFETY PRECAUTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS

BEFORE USING THE KETTLE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE

- **THIS IS AN ATTENDED APPLIANCE**
  Do not leave appliance unattended during use, unplug after each use (risk of fire if an unattended appliance is left operating or plugged in).
- This appliance must not be used by children younger than 8 years old and persons with very extensive and complex disabilities. Children aged 8-14 years and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge shall not use this appliance, unless they are supervised and have been given instruction concerning the use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children less than 8 years old.
- This appliance is intended for indoor household use only. If the appliance is used improperly or for professional or semi-professional purposes or if it is not used according to these instructions the Guarantee becomes invalid and Dualit refuses any liability for damage caused.

Electrical safety

- Before plugging in, check that the voltage on the rating label is the same as the mains supply.
- A short power-supply cord is to be provided to reduce risks resulting from becoming entangled in or tripping over a longer cord.
- Do not operate any appliance with a damaged lead or plug, or after the appliance malfunctions or has been damaged, cracked or dropped in any manner.
- In order to avoid a hazard, if the power cord is damaged it must, for safety reasons, be replaced by Dualit or an authorised Dualit repairer. Call Dualit's Customer Helpline on +44 (0)1293 652 500
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- To disconnect, turn any control to off, then remove plug from wall outlet.
- Unplug the power base from the wall socket when not in use, or before moving and cleaning.
- Ensure that the kettle is correctly positioned on the power base before switching on.
- To be protected against electrical hazards, fire and injury to persons, do not immerse the mains lead, plug, power base or kettle in water or any other liquid.
- Use the kettle only with the power base supplied and vice versa.
- Do not move the kettle while it is switched on.
- Extension cords are available and may be used if care is exercised in their use. If extension cord is used:
  1. The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance; and
  2. The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.
- Avoid spillage on the connector.

General safety

- NOTE: when you lift the kettle from the base, you will see drops of moisture on the surface of the power base. This is the steam used to switch the kettle off automatically, which then condenses and escapes through vents in the underside of the kettle. This is perfectly normal, and should not be cause for alarm or returning the kettle.
- Do not operate the kettle unless the water filter is correctly in position.
- This appliance should only be operated in a dry well ventilated area.
- Do not operate without closing the lid.
- Do not fill via the spout.
- When filling hold kettle upright (maximum 15° incline)
- Do not operate the kettle unless it contains at least 250ml of water and the floor of the kettle is covered.
- Do not place the kettle, power base or mains lead on or near any hot surface, hot hob, gas burner or in a heated oven.
- Do not use the kettle for any purpose other than heating water. Otherwise, this may result in an injury caused by misuse.
- Do not fill above the bottom of the 'max' mark on the water level indicator.
- Do not operate the kettle on an inclined plane.
- Remove the kettle from its power base before filling or pouring.
- Do not remove or open the lid while the water is boiling.
- Use handles or knobs – do not touch hot surfaces.
- If the kettle is overfilled, boiling water may be ejected.
- **When boiling, hot steam will be emitted from the kettle. Scalding may occur if you are within 400mm of the spout.**
- Ensure that the kettle spout is pointing away from any electrical plug or socket.
- Take care when pouring – pour slowly and do not over-tilt the kettle.
- Water will remain hot for a considerable time after boiling and can present a scald hazard. Keep the kettle, power base and the mains lead away from the edge of worktops and out of the reach of children.
- Allow the kettle to cool down completely before cleaning and storing.
- Do not store or use in an appliance garage or under cupboards.
- Do not use in bathroom or outdoors.
- Ensure that the lid is fully closed before switching the kettle on, otherwise it may not properly switch off.
- Do not use if dropped, cracked or damaged.
- The use of accessory attachments not recommended by Dualit may result in fire, electric shock or injury to persons.
- Do not use scouring pad or abrasive cleaner on the kettle body.
- CAUTION: to prevent damage to the appliance, do not use alkaline cleaning agents. When cleaning, use a soft cloth and a mild detergent.
- Scalding may occur if the lid is opened during the boiling cycle and the body of the kettle will get hot.
- Avoid the steam venting from the spout during and after operation. Risk of scalding.
- **Do not boil the kettle if filled with descaling solution.**
- Never use the kettle without the panels correctly assembled.

SAVE THESE INSTRUCTIONS

In the interest of improving products, Dualit Ltd. reserves the right to change the product specification without prior notice.

IMPORTANT: BEFORE FIRST USE

- Read this instruction manual before you start using the kettle. It gives you important safety information and will ensure you get the most out of your Dualit kettle.
- Keep this manual and your proof of purchase in a safe place.
- Unpack the box with care, keeping all the packaging materials until you are satisfied everything is present and in working order. Once satisfied, remove any tags from the appliance body and recycle the packaging appropriately. Do not remove tags from the cord. You may wish to keep the box to store your appliance.
- Before using the kettle for the first time, or if it has been out of use for a long time, fill to the 'max' mark and boil, then discard the boiled water and rinse the kettle out with fresh cold water.

DON'T FORGET TO **REGISTER YOUR KETTLE**


Register my appliance

WWW.DUALIT.COM/REGISTER

OR BY POST

KNOW YOUR KETTLE

A. LID
B. TOUCH PAD
C. LID PANEL
D. SPOUT
E. WATER FILTER
F. STEAM TUBE
G. STAINLESS STEEL BODY
H. LID RELEASE
I. VIEWING WINDOW
J. BODY PANEL
K. ON/OFF SWITCH
L. POWERBASE

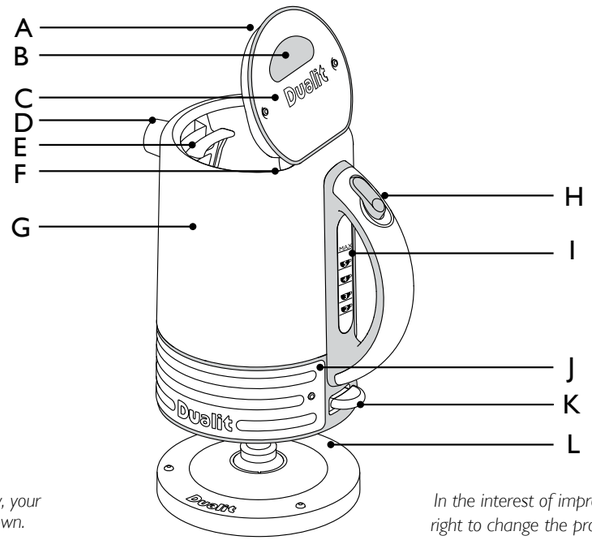

All illustrations are for representation only, your model may vary from the illustrations shown.

In the interest of improving products, Dualit Ltd. reserves the right to change the product specification without prior notice.


INSTRUCTIONS ON ENVIRONMENT PROTECTION

Do not dispose this product in the usual household garbage at the end of its life cycle. Please hand it over to a collection point for the recycling of electrical and electronic appliances. The symbol on the product, the instruction of use or the packaging will inform you about the methods of disposal. The materials are recyclable as mentioned on its marking. By recycling, material recycling or other forms of re-utilization of old appliances you are making an important contribution to protect our environment. Please enquire at the community administration for the authorised disposal location.

SETTING UP


WARNING: IF THE KETTLE HAS JUST BOILED, IT WILL BE FULL OF STEAM, WHICH WILL ESCAPE AS SOON AS THE LID IS OPENED.

1 POSITION

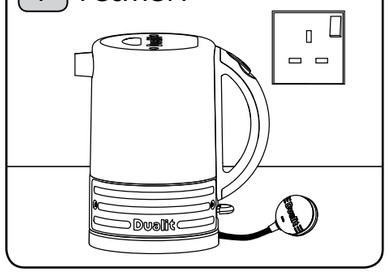


Place the kettle as close to the wall socket as possible. When in use ensure the kettle is not placed under kitchen cabinets. **DO NOT STORE OR USE YOUR KETTLE IN AN APPLIANCE GARAGE OR UNDER CUPBOARDS.**

2 CORD TIDY

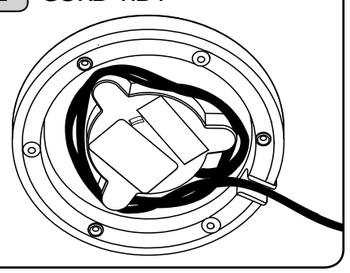


Use the shortest cord possible. Wrap excess cord round the cord tidy on the base of the kettle.

3 INCLINED PLANE

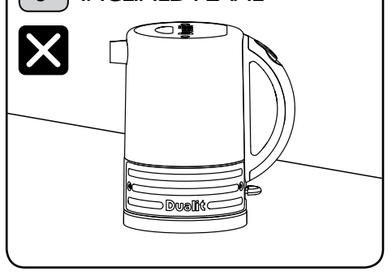


Do not operate on an inclined plane.

4 NOT IN A TRAY

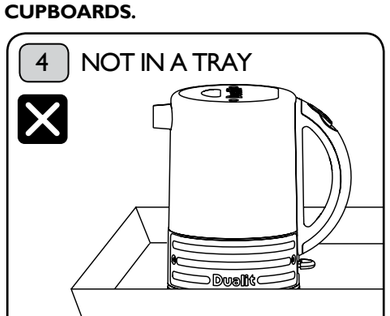

Do not operate in a tray.

5 WATER FILTER

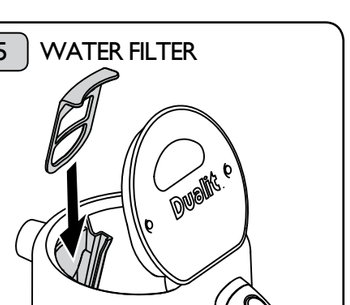

Ensure water filter is in place. **DO NOT OPERATE KETTLE UNLESS THE WATER FILTER IS CORRECTLY IN POSITION.**

DON'T FORGET TO
REGISTER YOUR KETTLE

WWW.DUALIT.COM/REGISTER


OR BY POST

Register my appliance

FILLING YOUR KETTLE


WARNING: IF THE KETTLE HAS JUST BOILED, IT WILL BE FULL OF STEAM, WHICH WILL ESCAPE AS SOON AS THE LID IS OPENED.

1 OPEN LID

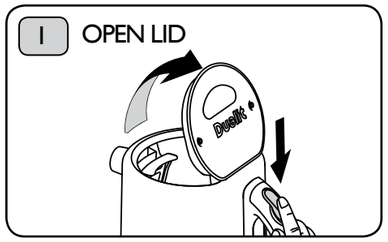


Ensure the kettle is unplugged. Remove the kettle from the power base. Pull the knob up and towards the handle to open the lid. The lid is hinged for easy opening and closing.
WARNING: IF THE KETTLE HAS JUST BOILED, THE LID WILL BE HOT. USE THE KNOB TO CLOSE THE LID.

2 FILLING

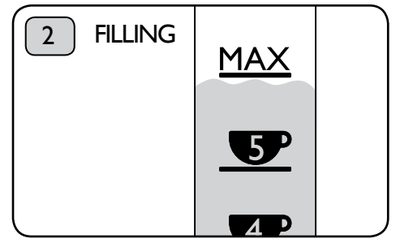


Fill the kettle through the lid opening. Use at least one cup of water (250ml). The water level must stay below the 'max' mark. Save energy, only boil what you require. Keep kettle upright and level at all times when filling (maximum 15° incline). Do not tilt kettle backwards. **DO NOT OVERFILL OR FILL THROUGH THE SPOUT.**

3 STEAM TUBE

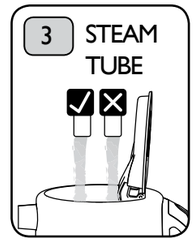

CAUTION when filling to ensure water does not go down steam tube, preventing the kettle from correct operation.

3 CLOSE LID

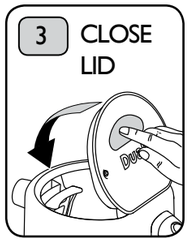


Push the lid down using the knob to close. Check that it is fully in place, otherwise the kettle may not switch off when boiling.

BOILING WATER


WARNING: IF THE KETTLE HAS JUST BOILED, IT WILL BE FULL OF STEAM, WHICH WILL ESCAPE AS SOON AS THE LID IS OPENED.

1 TURN ON

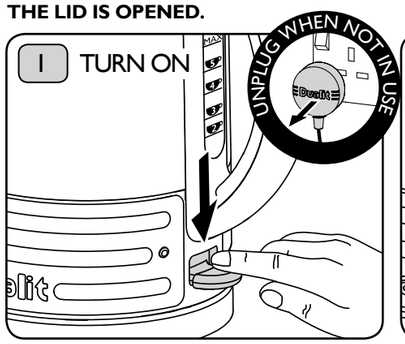


Plug the kettle into the power socket. Press the 'On/Off' switch down. The power neon will illuminate and the kettle will start to heat up.
If the kettle is accidentally switched on with no water inside, the boil-dry device will switch off the heating element to prevent damage to the kettle.

2 TURN OFF

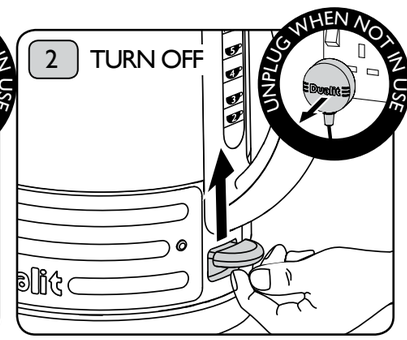

The kettle will automatically turn off after the water has boiled and the neon light will go out. To turn off before the water has boiled lift the 'On/Off' switch up.
Always unplug the kettle after each use.

3 POURING

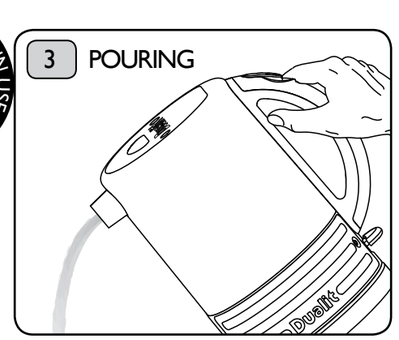


Remove kettle from the power base. When filling or carrying the kettle, do not tilt it backwards, as this may allow water to pass through the steam tube onto the control area. Should this happen, the kettle must be allowed to dry before re-using. To avoid the risk of splashing, once the kettle has boiled wait 10 seconds then pour slowly. Do not over-tilt the kettle.

CLEANING & CARE


Any other servicing should be performed by authorized service representative.

1 THE BODY

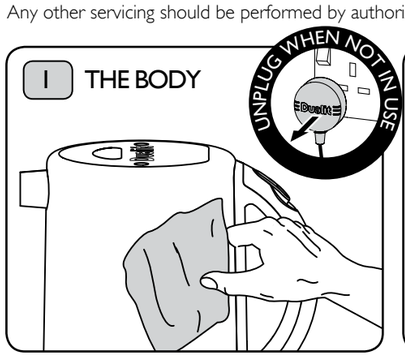

Unplug and let the kettle cool down completely before cleaning. Remove the kettle from the power base.
Wipe the outside and inside surfaces of the kettle with a damp cloth. Ensure that all connectors and sockets are kept dry. Do not immerse the kettle or power base in water or any other liquid. Do not use harsh or abrasive cleaners or solvents.

2 WATER FILTER

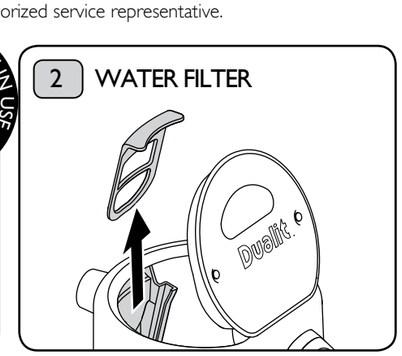

Unplug and let the kettle cool. Open the lid. Hold the top of the filter, pull up and out of the kettle. Rinse under a tap while carefully brushing it with a soft brush. Rinse the kettle out with fresh water. To replace, align the filter with the grooves in the filter holder, insert and push back into place. **DO NOT OPERATE KETTLE UNLESS THE WATER FILTER IS CORRECTLY IN POSITION.**

3 DESCALE REGULARLY

Use descaling products suitable for kitchen appliances, these are readily available online or from most supermarkets or department stores. Use as per instructions on the packet.

Follow these few simple steps to minimise scale build up in your kettle: Empty the kettle after each use; do not allow water to stand in the kettle overnight. Use filtered water instead of tap water. Descale the kettle regularly, at least once a month. If you live in a hard water area you may need to descale more often. When descaling has finished, empty the kettle and rinse it out a minimum of 3 times with fresh water, then refill with fresh water, boil, then discard boiled water. **⚠FAILURE TO DO SO CAN CAUSE INJURY. ⚠DO NOT BOIL KETTLE WITH DESCALING SOLUTION IN IT.**