
DREO | Convection Heater
711

USER MANUAL

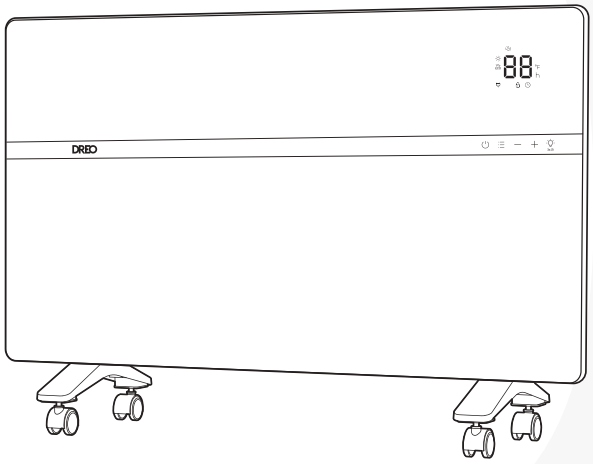

”

Thanks for Choosing DREO!

Your support means the world to us.
We hope you enjoy our product as much as we did creating it.

CONTENTS

01

ASSEMBLING YOUR APPLIANCE

1

02

KNOWING YOUR APPLIANCE

2

03

USING YOUR APPLIANCE

3-6

04

CLEANING AND MAINTENANCE

7-8

05

TROUBLESHOOTING

9-10


ASSEMBLING YOUR APPLIANCE

01

Assembly Instructions


Only use the screws provided with the product for installation.
When using the appliance for the first time, remove the wraps and attach the parts by following the steps below.

❶

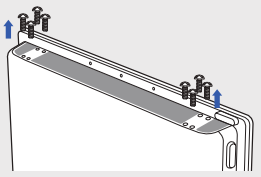


Place the heater upside down and remove the eight pre-installed screws from the bottom.

❷

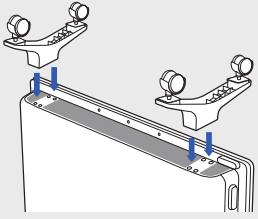


Align the caster wheels with the holes on the base.

❸

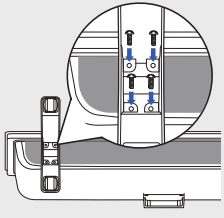

Screw through the holes in the caster wheels.

❹

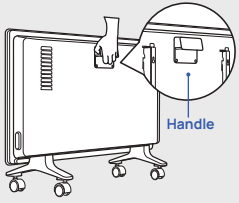

Set the heater upright. Use the handle to move to the desired location.

WARNING

Tip-over hazard
Do not operate without the caster wheels properly installed.


Fire hazard
Operate the heater in the upright position only. Any other position can cause damage to this heater and even a fire hazard.

Burn hazard
Unplug and allow the heater to cool before using the handle to move the heater.

KNOWING YOUR APPLIANCE

02

Package Contents

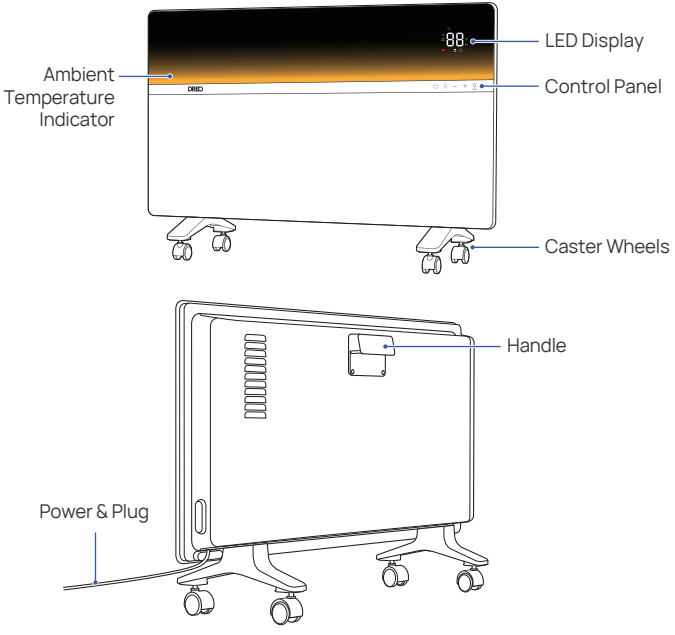

User Guide

Remote Control

2 x AAA Batteries

8 x Screws (Pre-installed)

2 x Caster Wheels

USING YOUR APPLIANCE 03

Control Panel



Power On/Off
- Touch to turn the heater on or off.

Note:
When the heater is plugged into the electric outlet, will light in red.

Mode
Touch to switch between and .

Three heating levels: H1 (900W), H2 (1100W), H3 (1500W).
The display will show H1, H2 or H3 accordingly:
H1 - Low heat mode
H2 - Medium heat mode
H3 - High heat mode

ECO

The heater will automatically select its optimal heating power, depending on the difference between the set temperature (41-95°F) and ambient temperature.

Note:
- When the ambient temperature drops below the set temperature, the heater will adjust the power depending on the difference between the two temperatures.
- When the ambient temperature reaches the set temperature, the heater will turn off automatically.
- If your heater turns off frequently, please raise the set temperature or switch to Power Heat mode.





Ambient Temperature Indicator
- Touch to turn the ambient temperature indicator on/off.
- When the heater is on, long press for 3 seconds to set the timer (0-24h). After the timer ends, the heater will turn off automatically.
- When the heater is off, long press for 3 seconds to set the timer (0-24h). After the timer ends, the heater will turn on automatically.


Settings Adjustment
- In Power Heat Mode, touch + or — to adjust the heating level.
- In ECO mode, touch + or — to adjust the set temperature.
- When setting a timer, touch + or — to adjust the duration of timer.
- Long press + and — for 3 seconds to restore factory settings.

Child Lock
- Long press ☰ and — for 3 seconds to activate / deactivate the Child Lock function. When activated, the display will show LC, and all the buttons on the heater will be locked.

Note:
Child Lock is not available on the remote control.

Mute/Unmute
- Long press — and 3s for 3 seconds to turn the beep on/off.

LED Display

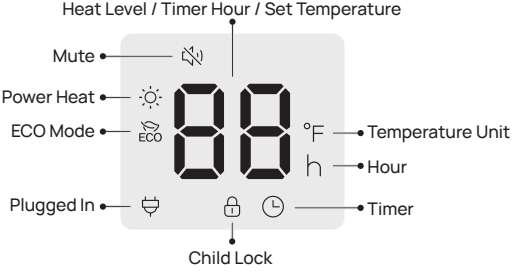


More Features

Ambient Temperature Indicator

Besides the LED display, your new heater comes with an additional LED light that lets you see the ambient temperature condition even from far away.



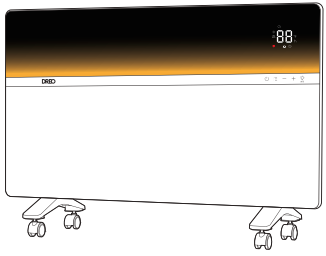

Memory

If the heater is turned OFF or disconnected from power, it will operate under the previous settings (except the Timer setting) when it is turned ON again.

Tip-over Protection

When the heater is tipped over, it will shut off automatically. To restore it, place it back up and wait for the indicator to light on to turn the heater on.

Overheat Protection


When the heater overheats, it will shut off automatically with the error code "**F2**" on the display.

24-Hour Auto Off

This feature is not ON by default.
When this feature is ON, the heater will shut off automatically after continuously running for 24 hours.
Long press and for 3 seconds to turn this feature ON/OFF when this heater is on standby. The display will show "ON" and "OF" respectively.


Remote Control

When using the remote control, ensure it is pointed toward the LED display.

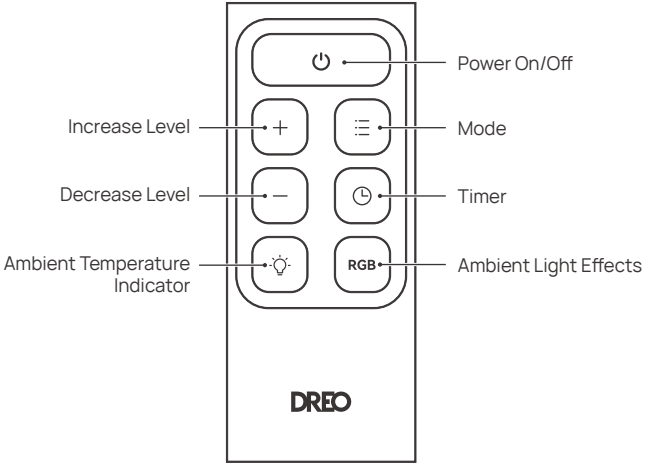


CLEANING AND MAINTENANCE


04

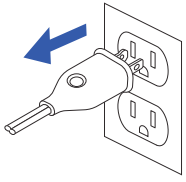

Always turn off and unplug before cleaning.

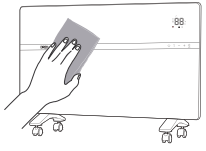

Outer Surface
Gently wipe off the dust with a soft, dry cloth.

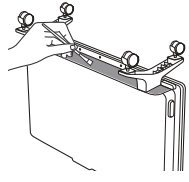

Air Inlet
Use a soft, dry cloth or a cotton-tipped swab to remove any dust from the air inlet.

ATTENTION



DO NOT unscrew the unit.



DO NOT use cleaning agents.



DO NOT use abrasive scrubbers.



Fire or electrical shock hazard.
DO NOT immerse the main unit in water.
NEVER allow water to get inside the heater.



Except for cleaning, any servicing should be performed by an authorized service representative.



Store in a cool, dry area and keep the cable out of high-traffic areas to avoid tripping hazards.

TROUBLESHOOTING 05

Problem	Possible Causes	Solution
Malfunction codes on LED display	E2 - Temperature sensor short circuit	Unplug it from the power source and contact Customer Support.
	E1 - Temperature sensor open circuit	Unplug it from the power source and contact Customer Support.
	F2 - Overheat protection	Unplug and wait for it to cool down before plugging in again.
	P4 - Tip-over protection	Place the heater back on a flat, level and stable surface.
Heater does not start	Power cord is not properly plugged in.	Connect the plug to a powered electrical outlet.
	Overheat protection has been activated.	Unplug and wait for it to cool down before plugging in again.
		Remove any objects on or near the heater.
	No power is passing through the unit.	Ensure that your circuit breaker or fuse is working properly.
		Ensure that your heater is placed on a flat and even surface.
	The set temperature is lower than the ambient temperature.	Ensure that the temperature is set to be higher than the ambient temperature.
The heater suddenly stops during heating	The temperature exceeds the threshold of the thermal cutoff.	Turn off and unplug the unit. Allow it to cool and plug into the electrical outlet again.
	The heater is tipped over.	Place it on a flat, level and stable surface.
	In ECO mode, the heater will turn off automatically when the set temperature has been reached.	This is normal. If your heater turns off frequently, please raise the set temperature, or switch to Power Heat mode.

If your problem is not listed or still persists, please contact our Customer Support (see page 10)

Model No.: DR-HSH041
Rev_EN_1.0

Reach out to us, it's easy!

(888)290-1688 (Mon-Fri, 9:00 am-5:00 pm PST/PDT)

support@dreo.com

www.dreo.com

www.dreo.com

Reach out to us, it's easy!

Contact us to get expert support.

support@dreo.com (888) 290-1688 www.dreo.com

Mon - Fri, 9:00 am-5:00 pm PST/PDT