

FIGURE C



FIGURE B



FIGURE A

Thank you for your purchase!

**Instructions
made easy**



Read instructions or watch an
easy-to-follow video.

**Scan code or visit
byjasco.com/82503i.**

**Register your
product**



Receive exclusive deals and
register your product.

**Scan code or visit
byjasco.com/deals.**



Discover innovative
lighting solutions at
www.byjasco.com/lighting



Like our product?

Leave a review
on your favorite
retailer website or
amazon.com.



Having problems?

Let us know how
we can help.

Call **1-800-654-8483**,
M-F, 7AM-8PM
Central Time.

**COLOR-CHANGING
JACK SKELLINGTON
SQUISHY LIGHT**

Disney
TIM BURTON'S
THE
NIGHTMARE
BEFORE
CHRISTMAS



MODES
Lightly tap the squishy light to cycle through the following modes:

1. High white
2. Medium white
3. Low white
4. Automatic color fade
5. Red
6. Green
7. Blue
8. Orange
9. Yellow
10. Light green
11. Teal
12. Dark blue
13. Purple
14. Light purple
15. Dark pink
16. Pink

NOTE: When turned off and turned back on, the light will return to the last mode used. When the USB-C cable is disconnected, the light will reset to high-white mode.

1. Press the power button to turn the light on.
2. Press and hold the power button to turn the light off.

POWER BUTTON - FIGURE C

OPERATION

NOTE: While on USB-C power, the batteries will not be used. The USB-C cable does not charge the batteries. If the power goes out, the light will switch to battery power.

1. Plug the USB-C end of the included power cable into the port on the back of the light.
2. Plug the USB-A end of the power cable into a 5V, 1A USB-A port or adapter (not included).

USB-C POWER - FIGURE B

NOTE: Battery replacement must be done by an adult. Dispose of used batteries safely — never in a fire as they may leak and explode. Do not mix old and new batteries.

1. Remove the screw and open the battery cover.
2. Insert 3 AAA batteries (not included), noting polarity.
3. Close battery cover and re-insert screw.

BATTERY INSTALLATION - FIGURE A

NOTE: The light will automatically shut off after 60 minutes of continuous operation.

**See reverse for easy-to-follow
instructions and exclusive deals.**

FCC STATEMENT:

Suppliers Declaration of Conformity | Model #: 82503 | Jasco Products Co., 10 E. Memorial Rd., Oklahoma City, OK 73114, www.byjasco.com

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
 - Consult the dealer or an experienced radio/TV technician for help.
- 5VDC, 0.5A



byjasco.com/recycle
paper made from 25% post consumer waste

©Disney | www.disney.com

MADE IN CHINA

Distributed by Jasco Products Company LLC,
10 E. Memorial Rd., Oklahoma City, OK 73114.

This Jasco product has a 90-day limited warranty.
Visit www.byjasco.com for warranty details.

Questions? Contact our U.S.-based Consumer Care at
1-800-654-8483, M-F, 7AM-8PM Central Time.

For product patent information, visit
www.byjasco.com/patents.

⚠ CAUTION

- HAVE AN ADULT REMOVE AND DISPOSE OF ALL PACKAGING, TIES, AND FASTENERS BEFORE USE
- NOT INTENDED FOR USE BY CHILDREN UNDER THE AGE OF 2 YEARS

⚠ WARNING

- DO NOT USE WITH EXTENSION CORDS
- USE INDOORS ONLY
- DO NOT USE IN WET LOCATIONS
- PLUG ONLY INTO USB SAFETY CERTIFIED TYPE A PORT
- REMOVE BATTERIES WHEN NOT IN USE OR DISCHARGED
- DO NOT MIX OLD AND NEW BATTERIES
- DO NOT USE RECHARGEABLE BATTERIES
- DO NOT MIX ALKALINE, STANDARD (CARBON-ZINC), OR RECHARGEABLE (NICKEL-CADMIUM) BATTERIES

DECLARACIÓN DE LA COMISIÓN FEDERAL DE COMUNICACIONES (FCC):

Declaración de conformidad del proveedor | Modelo #: 82503 | Jasco Products Co., 10 E. Memorial Rd., Oklahoma City, OK 73114, www.byjasco.com

Este dispositivo cumple con las Especificaciones del apartado 15 de las normas de la FCC. El funcionamiento está sujeto a las siguientes dos condiciones: (1) este dispositivo no debe provocar interferencia perjudicial, y (2) este dispositivo debe aceptar toda interferencia que reciba, incluso la que pudiera causar un funcionamiento no deseado.

NOTA DE LA FCC: El fabricante no se hace responsable de ninguna interferencia de radio o TV ocasionada por modificaciones no autorizadas efectuadas a este equipo. Dichas modificaciones podrían anular la autoridad del usuario para utilizar el equipo.

NOTA: Este equipo ha sido probado y cumple con los límites para aparatos digitales de Clase B, de conformidad con el apartado 15 de las normas de la FCC. Estos límites están diseñados para proveer protección razonable contra interferencias perjudiciales en una instalación residencial. Este equipo genera, usa y puede irradiar energía de radiofrecuencias y, si no se instala y usa según las instrucciones, puede provocar interferencia perjudicial a las radiocomunicaciones. No obstante, no hay garantías de que no ocurrirá interferencia en una instalación en particular. Si este equipo provoca interferencia perjudicial a la recepción de radio o televisión, lo que puede determinarse encendiendo y apagando el equipo, se recomienda que el usuario intente corregir la interferencia por medio de la implementación de una o más de las siguientes medidas:

- Reorientar o reubicar la antena receptora.
- Incrementar la separación entre el equipo y el receptor.
- Conectar el equipo a un tomacorriente de un circuito diferente del circuito al que está conectado el receptor.
- Consultar al distribuidor o a un técnico con experiencia en radio/televisión para solicitar asistencia.

⚠ PRECAUCIÓN

- ANTES DE USAR, UN ADULTO DEBE QUITAR Y ELIMINAR LOS COMPONENTES DE EMPAQUETADO, COMO LOS DIFERENTES TIPOS DE AMARRAS
- NO APTO PARA EL USO DE NIÑOS MENORES DE 2 AÑOS

⚠ ADVERTENCIA

- NO USE CON CORDONES DE EXTENSIÓN
- SOLO PARA USO EN INTERIORES
- NO LO USE EN LUGARES HÚMEDOS
- SOLO ENCHUFE EN UN PUERTO USB CON CERTIFICACIÓN DE SEGURIDAD TIPO A USB TIPO CERTIFICADO UN PUERTO
- quite las pilas cuando no estén en uso o se hayan descargado
- NO COLOQUE PILAS NUEVAS CON PILAS VIEJAS
- NO UTILICE PILAS RECARGABLES
- NO COLOQUE UNA COMBINACIÓN DE PILAS ALCALINAS, ESTÁNDAR (CARBONO-ZINC) Y RECARGABLES (NÍQUEL-CADMIO)

HECHO EN CHINA

Distribuido por Jasco Products Company LLC,
10 E. Memorial Rd., Oklahoma City, Oklahoma 73114.

Este producto de Jasco tiene una garantía limitada de 90 días. Visite www.byjasco.com para conocer los detalles de la garantía.

¿Tiene preguntas? Comuníquese con nuestro servicio de atención al consumidor de EE. UU. al 1-800-654-8483, de lunes a viernes, de 7AM a 8PM (hora central).

Visite www.byjasco.com/patents para información sobre la patente del producto.

COLOCACIÓN DE LAS PILAS - FIGURA A

NOTA: La luz se apagará automáticamente luego de 60 minutos de funcionamiento ininterrumpido.

- Desatornille y retire la tapa del compartimiento para pilas.
- Coloque 3 pilas AAA (no incluidas). Verifique los polos.
- Vuelva a colocar la tapa y el tornillo en sus posiciones originales.

NOTA: Las pilas deben ser reemplazadas por un adulto. Las pilas deben desecharse de forma segura. Nunca las incinere, ya que podrían producirse pérdidas o explosiones. No coloque pilas nuevas con pilas viejas.

ALIMENTACIÓN DE USB-C - FIGURA B

- Enchufe la parte USB-C del cable de alimentación incluido en el puerto en la parte posterior de la luz.
- Enchufe la parte USB-A del cable de alimentación en un adaptador o receptáculo de corriente USB-A estándar de 5V, 1A (no incluido).

NOTA: Cuando esté en la alimentación USB-C, las baterías no se utilizarán. El cable micro USB no carga las pilas. Si se corta el suministro eléctrico, se activará la lámpara usando la energía de las 3 pilas AAA.

FUNCIONAMIENTO

BOTÓN DE ENCENDIDO - FIGURA C

- Presione el botón de encendido para encender la luz.
- Mantenga presionado el botón para apagar la luz.

NOTE: Cuando se apaga y se vuelve a encender, la luz volverá a la último modo utilizado. Cuando se desconecta el cable USB-C, la luz se restablecerá al modo blanco alto.

MODES

Toque suave en la base para cambiar de modo:

- | | |
|--|-------------------|
| 1. Blanco alto | 9. Amarillo |
| 2. Blanco medio | 10. Verde claro |
| 3. Blanco bajo | 11. Verde azulado |
| 4. Desvanecimiento de color automático | 12. Azul oscuro |
| 5. Rojo | 13. Violeta |
| 6. Verde | 14. Morado claro |
| 7. Azul | 15. Rosa oscuro |
| 8. Naranja | 16. Rosado |



FIGURA A



FIGURA B

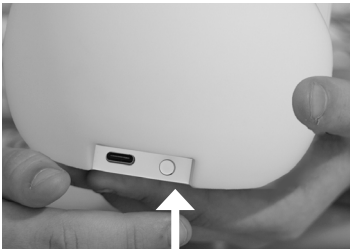


FIGURA C

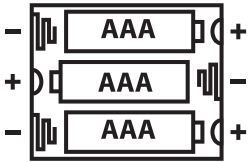


DIAGRAMA DE LAS PILAS



USB-A

USB-C