

Wireless Speaker System

Operating Instructions
Mode d'emploi



SRS-BTM8

English Wireless Speaker System

Before operating the system, please read this guide thoroughly and retain it for future reference.

WARNING

To reduce the risk of fire or electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.

To reduce the risk of fire, do not cover the ventilation opening of the apparatus with newspapers, tablecloths, curtains, etc. Do not place the naked flame sources such as lighted candles on the apparatus.

To reduce the risk of fire or electric shock, do not expose this apparatus to dripping or splashing, and do not place objects filled with liquids, such as vases, on the apparatus.

Do not install the appliance in a confined space, such as a bookcase or built-in cabinet.

As the main plug of the AC adaptor is used to disconnect the AC adaptor from the mains, connect the system to an easily accessible AC outlet. Should you notice an abnormality in the system, disconnect the main plug from AC outlet immediately.

The system is not disconnected from the mains as long as it is connected to the AC outlet, even if the system itself has been turned off.

On Copyrights and Licenses
The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Sony Corporation is under license.
The N-Mark is a trademark or registered trademark of NFC Forum, Inc. in the United States and in other countries.
Android is a trademark of Google Inc.
Other trademarks and trade names are those of their respective owners.

CAUTION
You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

Precautions

Notes when using with a mobile phone
• For details on operation of your mobile phone when receiving a telephone call while transmitting the sound using the Bluetooth connection, refer to the operating instructions supplied with the mobile phone.

On safety
The nameplate indicating Sony trademark, model number and electrical rating is located on the bottom exterior of this system and on the surface of the AC adaptor.

Notes on the AC adaptor
• When connecting or disconnecting the AC adaptor, turn off the system beforehand. Otherwise, it may cause malfunction.
• Use only the supplied AC adaptor. To avoid damaging the system, do not use any other AC adaptor.

On placement
• Do not set the speaker in an inclined position.
• Do not leave the system in a location near heat sources, or in a place subject to direct sunlight, excessive dust, moisture, rain or mechanical shock.
• Do not expose the battery to excessive heat such as direct sunlight, fire or the like.

On operation
• Do not insert any small objects, etc., into the jacks. The system may short out or malfunction.

On cleaning
• Do not use alcohol, benzine, or thinner to clean the cabinet.

Others
• If you have any questions or problems concerning this system that are not covered in this manual, please consult your nearest Sony dealer.

Plug the AC adaptor into a nearby wall outlet (mains). In the case of a problem, unplug it from the wall outlet (mains) immediately.
• Do not install the AC adaptor in a confined space, such as a bookcase or built-in cabinet.
• To reduce the risk of fire or electric shock, do not expose the AC adaptor to dripping or splashing, and do not place objects filled with liquids, such as vases, on the AC adaptor.

On placement
• Do not set the speaker in an inclined position.
• Do not leave the system in a location near heat sources, or in a place subject to direct sunlight, excessive dust, moisture, rain or mechanical shock.
• Do not expose the battery to excessive heat such as direct sunlight, fire or the like.

On operation
• Do not insert any small objects, etc., into the jacks. The system may short out or malfunction.

On cleaning
• Do not use alcohol, benzine, or thinner to clean the cabinet.

Others
• If you have any questions or problems concerning this system that are not covered in this manual, please consult your nearest Sony dealer.

On placement
• Do not set the speaker in an inclined position.
• Do not leave the system in a location near heat sources, or in a place subject to direct sunlight, excessive dust, moisture, rain or mechanical shock.
• Do not expose the battery to excessive heat such as direct sunlight, fire or the like.

On operation
• Do not insert any small objects, etc., into the jacks. The system may short out or malfunction.

On cleaning
• Do not use alcohol, benzine, or thinner to clean the cabinet.

Others
• If you have any questions or problems concerning this system that are not covered in this manual, please consult your nearest Sony dealer.

On placement
• Do not set the speaker in an inclined position.
• Do not leave the system in a location near heat sources, or in a place subject to direct sunlight, excessive dust, moisture, rain or mechanical shock.
• Do not expose the battery to excessive heat such as direct sunlight, fire or the like.

On operation
• Do not insert any small objects, etc., into the jacks. The system may short out or malfunction.

On cleaning
• Do not use alcohol, benzine, or thinner to clean the cabinet.

Others
• If you have any questions or problems concerning this system that are not covered in this manual, please consult your nearest Sony dealer.

On placement
• Do not set the speaker in an inclined position.
• Do not leave the system in a location near heat sources, or in a place subject to direct sunlight, excessive dust, moisture, rain or mechanical shock.
• Do not expose the battery to excessive heat such as direct sunlight, fire or the like.

On operation
• Do not insert any small objects, etc., into the jacks. The system may short out or malfunction.

On cleaning
• Do not use alcohol, benzine, or thinner to clean the cabinet.

Others
• If you have any questions or problems concerning this system that are not covered in this manual, please consult your nearest Sony dealer.

On placement
• Do not set the speaker in an inclined position.
• Do not leave the system in a location near heat sources, or in a place subject to direct sunlight, excessive dust, moisture, rain or mechanical shock.
• Do not expose the battery to excessive heat such as direct sunlight, fire or the like.

On operation
• Do not insert any small objects, etc., into the jacks. The system may short out or malfunction.

On cleaning
• Do not use alcohol, benzine, or thinner to clean the cabinet.

Others
• If you have any questions or problems concerning this system that are not covered in this manual, please consult your nearest Sony dealer.

On placement
• Do not set the speaker in an inclined position.
• Do not leave the system in a location near heat sources, or in a place subject to direct sunlight, excessive dust, moisture, rain or mechanical shock.
• Do not expose the battery to excessive heat such as direct sunlight, fire or the like.

On operation
• Do not insert any small objects, etc., into the jacks. The system may short out or malfunction.

On cleaning
• Do not use alcohol, benzine, or thinner to clean the cabinet.

Others
• If you have any questions or problems concerning this system that are not covered in this manual, please consult your nearest Sony dealer.

On placement
• Do not set the speaker in an inclined position.
• Do not leave the system in a location near heat sources, or in a place subject to direct sunlight, excessive dust, moisture, rain or mechanical shock.
• Do not expose the battery to excessive heat such as direct sunlight, fire or the like.

On operation
• Do not insert any small objects, etc., into the jacks. The system may short out or malfunction.

On cleaning
• Do not use alcohol, benzine, or thinner to clean the cabinet.

Others
• If you have any questions or problems concerning this system that are not covered in this manual, please consult your nearest Sony dealer.

On placement
• Do not set the speaker in an inclined position.
• Do not leave the system in a location near heat sources, or in a place subject to direct sunlight, excessive dust, moisture, rain or mechanical shock.
• Do not expose the battery to excessive heat such as direct sunlight, fire or the like.

On operation
• Do not insert any small objects, etc., into the jacks. The system may short out or malfunction.

On cleaning
• Do not use alcohol, benzine, or thinner to clean the cabinet.

Others
• If you have any questions or problems concerning this system that are not covered in this manual, please consult your nearest Sony dealer.

On placement
• Do not set the speaker in an inclined position.
• Do not leave the system in a location near heat sources, or in a place subject to direct sunlight, excessive dust, moisture, rain or mechanical shock.
• Do not expose the battery to excessive heat such as direct sunlight, fire or the like.

On operation
• Do not insert any small objects, etc., into the jacks. The system may short out or malfunction.

On cleaning
• Do not use alcohol, benzine, or thinner to clean the cabinet.

Others
• If you have any questions or problems concerning this system that are not covered in this manual, please consult your nearest Sony dealer.

On placement
• Do not set the speaker in an inclined position.
• Do not leave the system in a location near heat sources, or in a place subject to direct sunlight, excessive dust, moisture, rain or mechanical shock.
• Do not expose the battery to excessive heat such as direct sunlight, fire or the like.

On operation
• Do not insert any small objects, etc., into the jacks. The system may short out or malfunction.

On cleaning
• Do not use alcohol, benzine, or thinner to clean the cabinet.

Others
• If you have any questions or problems concerning this system that are not covered in this manual, please consult your nearest Sony dealer.

On placement
• Do not set the speaker in an inclined position.
• Do not leave the system in a location near heat sources, or in a place subject to direct sunlight, excessive dust, moisture, rain or mechanical shock.
• Do not expose the battery to excessive heat such as direct sunlight, fire or the like.

On operation
• Do not insert any small objects, etc., into the jacks. The system may short out or malfunction.

On cleaning
• Do not use alcohol, benzine, or thinner to clean the cabinet.

Others
• If you have any questions or problems concerning this system that are not covered in this manual, please consult your nearest Sony dealer.

On placement
• Do not set the speaker in an inclined position.
• Do not leave the system in a location near heat sources, or in a place subject to direct sunlight, excessive dust, moisture, rain or mechanical shock.
• Do not expose the battery to excessive heat such as direct sunlight, fire or the like.

On operation
• Do not insert any small objects, etc., into the jacks. The system may short out or malfunction.

On cleaning
• Do not use alcohol, benzine, or thinner to clean the cabinet.

Others
• If you have any questions or problems concerning this system that are not covered in this manual, please consult your nearest Sony dealer.

On placement
• Do not set the speaker in an inclined position.
• Do not leave the system in a location near heat sources, or in a place subject to direct sunlight, excessive dust, moisture, rain or mechanical shock.
• Do not expose the battery to excessive heat such as direct sunlight, fire or the like.

On operation
• Do not insert any small objects, etc., into the jacks. The system may short out or malfunction.

On cleaning
• Do not use alcohol, benzine, or thinner to clean the cabinet.


Others
• If you have any questions or problems concerning this system that are not covered in this manual, please consult your nearest Sony dealer.

On placement
• Do not set the speaker in an inclined position.
• Do not leave the system in a location near heat sources, or in a place subject to direct sunlight, excessive dust, moisture, rain or mechanical shock.
• Do not expose the battery to excessive heat such as direct sunlight, fire or the like.

On operation
• Do not insert any small objects, etc., into the jacks. The system may short out or malfunction.

On cleaning
• Do not use alcohol, benzine, or thinner to clean the cabinet.

Others
• If you have any questions or problems concerning this system that are not covered in this manual, please consult your nearest Sony dealer.

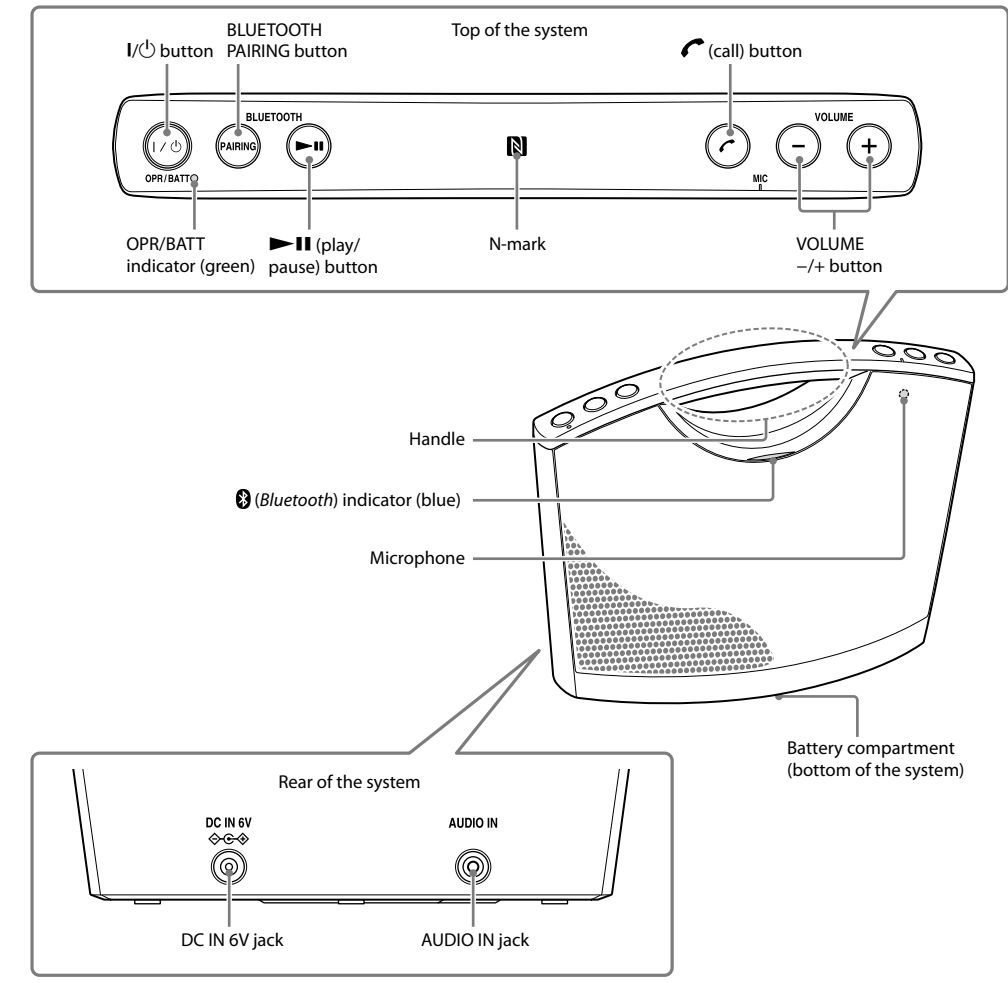


Function of Parts


I/O button Turns the system on/off. OPR/BATT indicator (green) Lights up when the system is turned on. Dims during battery operation if battery power is low. BLUETOOTH PAIRING button Press to pair with a Bluetooth device. ▶ (play/pause) button Operates a connected Bluetooth device. You cannot operate a device connected to the AUDIO IN jack. N-mark Touch to make Bluetooth connection with an NFC compatible smartphone. ☎ (call) button Press to call or operate during a call. VOLUME +/- button Adjusts the volume. A beep sounds from the speakers when the volume is set to minimum or maximum. Handle Hold to carry the system.	☎ (Bluetooth) indicator (blue) Lights up or flashes depending on the communication status. For details, see the following section, "Indications of the Bluetooth function". Microphone Use during call. AUDIO IN jack Connects to the headphone jack of a portable audio device, computer, etc., using a connecting cord (not supplied). DC IN 6V jack Connects the supplied AC adaptor. Battery compartment Insert four alkaline LR6 (size AA) batteries (not supplied).
Status Pairing with a device Searching for a device Connected to a device	☎ (Bluetooth) indicator (blue) Flashes quickly Flashes Lights up

Turning the System on/off

1 Connect the supplied AC adaptor.

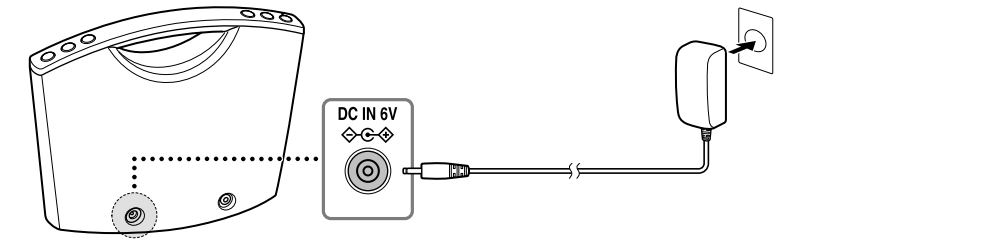


2 Press the I/O button.

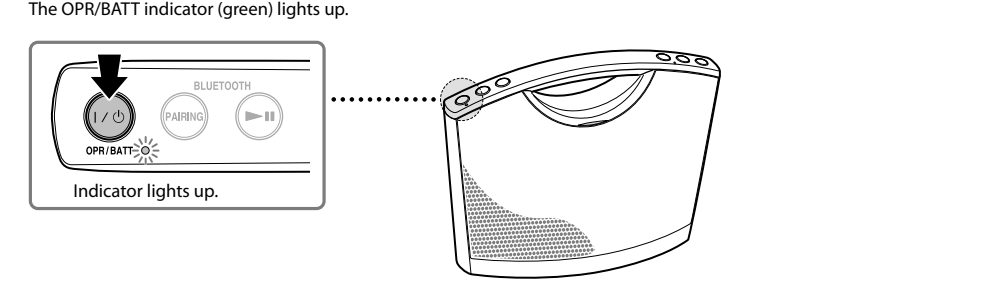

To use with LR6 (size AA) batteries (not supplied)

1 Open the cover located on the bottom of the system and install four alkaline LR6 (size AA) batteries (not supplied), then close the cover.

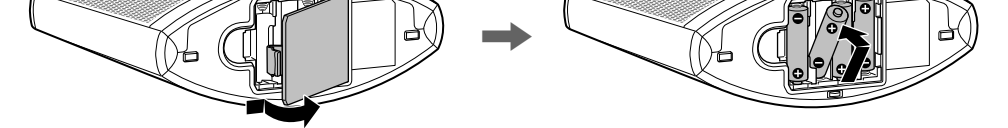

2 Press the I/O button.

Note
• If the AC adaptor is used with the system, the power source switches to the wall outlet (mains) automatically, even if batteries are installed. Installed batteries cannot be the power source when the AC adaptor is connected to the system. Make sure the plug of the AC adaptor is disconnected from the system when using the system with batteries.

How to Make Wireless Connection with Bluetooth Devices

You can enjoy music and hands-free calling with the system wirelessly by using your device's Bluetooth function.

Choose one of the following three connection methods, best suited for the Bluetooth device. For details on how to operate your device, refer to the operating instructions supplied with the device.

Pairing with a Bluetooth device: see [Pattern A]
Bluetooth devices need to be "paired" with each other beforehand.

Connecting with a paired device: see [Pattern B]
To listen to music with a Bluetooth device that has been paired, see this pattern.


One touch connection with a smartphone (NFC): see [Pattern C]
Using an NFC compatible smartphone, you can establish a Bluetooth connection by just touching the system with it.

Check the following before operating the system.
• Both the system and the device are placed within 1 m of each other.
• The system is connected to a power source, or batteries are installed in the system.
• The operating instructions supplied with the device are kept at hand.

[Pattern A] Pairing and connecting with a Bluetooth device

- Turn on the system.
- Set the Bluetooth function of the Bluetooth device to on.
For details, refer to the operating instructions supplied with the device.
- Press and hold the BLUETOOTH PAIRING button on the system until beeps are heard and the ☎ (Bluetooth) indicator (blue) begins to flash quickly.

Tip
• When the system is turned on first, the ☎ (Bluetooth) indicator (blue) starts flashing quickly.

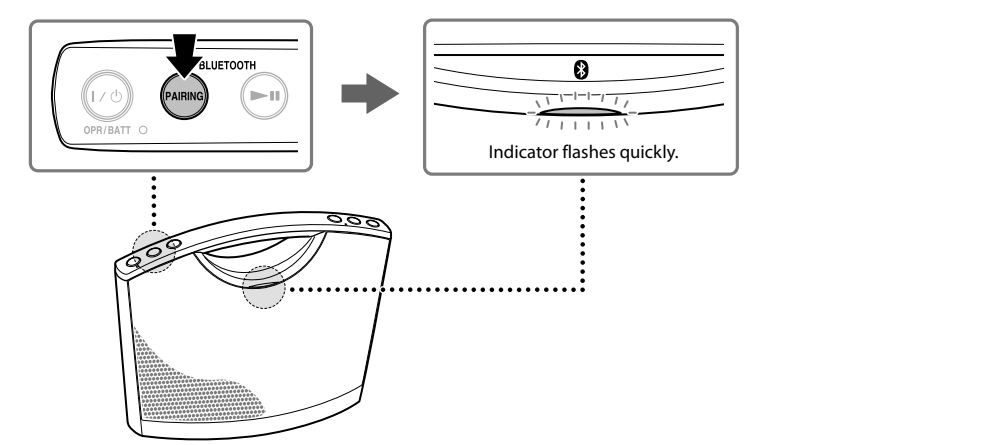

4 Perform the pairing procedure on the Bluetooth device to detect the system.

If "SRS-BTM8" does not appear on the device's display, repeat from step 2.

Note
• Some devices cannot display a list of detected devices.

5 Select "SRS-BTM8" shown in the display of the Bluetooth device.

6 If Passcode* input is required on the display of the Bluetooth device, input "0000".

The Bluetooth connection is established and the ☎ (Bluetooth) indicator (blue) on the system stays on.

* Passcode may be called "Passkey," "PIN code," "PIN number," or "Password."

Tip
• To pair with other Bluetooth devices, repeat steps 2 to 6 for each device.

Notes
• Pairing mode of the system is cancelled after about 5 minutes, and the ☎ (Bluetooth) indicator (blue) flashes slowly. If the pairing mode is cancelled while performing this procedure, start over from step 3.

• Passcode of the system is fixed as "0000." The system cannot be paired with a Bluetooth device whose Passcode is not "0000."

• Once Bluetooth devices are paired, there is no need to pair those devices again. However, in the following cases, you will need to perform the pairing procedure again.

– Pairing information is deleted after repair, etc.
– The system is paired with 5 or more devices.

– The system can be paired with up to 4 Bluetooth devices. If a new device is paired after 4 devices have been paired, the device whose latest connection time is the oldest among the 4 paired devices is replaced by the new one.

• More than one device can be paired with the system, but sound will be heard from just one of those devices.

To delete all pairing information from the system
Hold the I/O button for more than 15 seconds while the system is turned off. The system is reset to its default and all pairing information is deleted.

[Pattern B] Connecting with a paired Bluetooth device

1 Turn on the system.

The ☎ (Bluetooth) indicator (blue) flashes.

2 Set the Bluetooth function of the Bluetooth device to on.

Tip
• When turned on, the system tries to establish Bluetooth connection with the Bluetooth device connected to the system last time. When Bluetooth connection is established, the ☎ (Bluetooth) indicator (blue) on the system stays on.

3 Select "SRS-BTM8" shown in the display of the Bluetooth device.

If necessary, select a Bluetooth profile that the system supports from the following: A2DP, HSP or HFP. For details on each profile, see "Listening to Music" or "Using Hands-free Calling While Listening to Music."

Note
• This step may not be necessary for some devices.

The Bluetooth connection is established and the ☎ (Bluetooth) indicator (blue) on the system stays on.

[Pattern C] Connecting with a smartphone by One touch (NFC)

By just touching the system with an NFC compatible smartphone, the system is turned on automatically and then paired and connected with the smartphone.


1 Download and install the app "NFC Easy Connect" on the smartphone.

"NFC Easy Connect" is an original app by Sony for Android phones, and is available at Google Play Store.

Search for "NFC Easy Connect" or scan the following two-dimensional code to download and install the free app. Communication fees are required to download the app.

The App may not be available in some countries and/or regions.

By the two-dimensional code:
Use a two-dimensional code reader app.

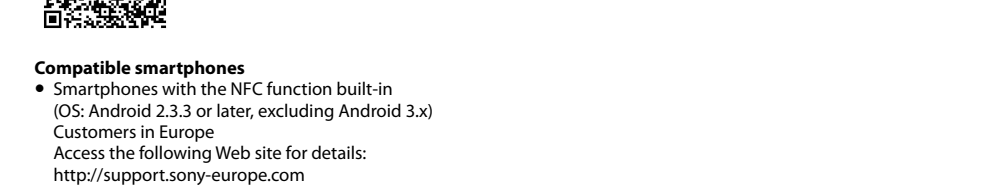

Compatible smartphones
• Smartphones with the NFC function built-in (OS: Android 2.3.3 or later, excluding Android 3.x)
Customers in Europe
Access the following Web site for details:
<http://support.sony-europe.com>

About NFC
NFC (Near Field Communication) is a technology enabling short-range wireless communication between various devices, such as mobile phones and IC tags. Thanks to the NFC function, data communication can be achieved easily just by touching the relevant symbol or designated location on NFC compatible devices.


2 Start the app "NFC Easy Connect" on the smartphone.

Make sure that the application screen is displayed.

3 Touch the system with the smartphone.

Keep touching the smartphone on the N marked part of the system until the smartphone vibrates.

Smartphone vibrates (system recognized)

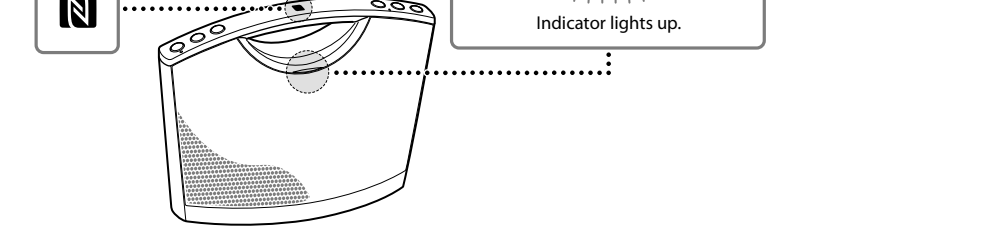

Follow the on-screen instructions to establish the connection.
When the Bluetooth connection is established, the ☎ (Bluetooth) indicator (blue) stays on.

Tips
• If it is difficult to establish the connection, try the following.
– Activate the app "NFC Easy Connect" and move the smartphone slightly on the N marked part of the system.
– If the smartphone is in a case, remove it.

• Touch the system with the smartphone again to disconnect.

• If you have multiple NFC compatible smartphones, you can switch the connection to that device. For example, when your smartphone is connected with NFC compatible headphones, just touch the smartphone to the system to change the Bluetooth connection to the system (One touch connection switching).

Listening to Music

You can enjoy listening to music and basic remote control operation of a Bluetooth device via Bluetooth connection. The Bluetooth device is required to support the following Bluetooth profiles.

• A2DP (Advanced Audio Distribution Profile): enables you to enjoy high-quality audio content wirelessly.

• AVRCP (Audio Video Remote Control Profile): enables you to enjoy basic remote control operation (play, stop, etc.) of a Bluetooth device.



Operations may vary depending on the Bluetooth device. Refer also to the operating instructions supplied with your Bluetooth device.

1 Make the Bluetooth connection between the system and the device.

For details on the Bluetooth connection procedure, see "How to Make Wireless Connection with Bluetooth Devices." When the Bluetooth connection is established, the ☎ (Bluetooth) indicator (blue) on the system stays on.

2 Start playback on the Bluetooth device, then adjust the volume.

Set the volume of the Bluetooth device to a moderate level, and press the VOLUME +/- buttons on the system.

Pressing ▶|| (play/pause) button on the system, you can operate a Bluetooth device that supports AVRCP. Available functions may vary depending on the Bluetooth device. Refer to the operating instructions supplied with the Bluetooth device.

After use
Do any of the following.
• Set the Bluetooth function of the Bluetooth device to off. For details, refer to the operating instructions supplied with the device.

• Turn off the Bluetooth device.

• Turn off the system.


• Touch the system with the smartphone again to disconnect (NFC compatible smartphones only).

Tip
• When connected with a Bluetooth device via A2DP/AVRCP and playback has been stopped for about 20 minutes, the system turns off automatically.

Using Hands-free Calling While Listening to Music

You can enjoy hands-free calling via Bluetooth connection with a Bluetooth mobile phone that has a music function and supports the Bluetooth profile A2DP (Advanced Audio Distribution Profile), and HFP (Hands-free Profile) or HSP (Headset Profile).

If your Bluetooth mobile phone supports both HFP and HSP, set to HFP.



Operations may vary depending on the Bluetooth mobile phone. Refer also to the operating instructions supplied with your mobile phone.

1 Make the Bluetooth connection between the system and the mobile phone.

For details on the Bluetooth connection procedure, see "How to Make Wireless Connection with Bluetooth Devices." When the Bluetooth connection is established, the ☎ (Bluetooth) indicator (blue) on the system stays on.

2 Start playback on the Bluetooth mobile phone, then adjust the volume.

Set the volume of the Bluetooth mobile phone to a moderate level, and press the VOLUME +/- buttons on the system.

By pressing ▶|| (play/pause) button on the system, you can operate a Bluetooth mobile phone that supports AVRCP. Available functions may vary depending on the Bluetooth mobile phone. Refer to the operating instructions supplied with the Bluetooth mobile phone.

To call
Operate the Bluetooth mobile phone. Check that a dialing tone is heard on the system and talk using the microphone. If no dialing tone is heard, press the ☎ (call) button on the system for about 2 seconds to change the call device to the system.

To receive a call
When an incoming call arrives, the playback pauses and a ring tone is heard from the system. Press the ☎ (call) button on the system and talk using the microphone.

Tips
• If no ring tone is heard from the system when incoming call arrives, stop playback and press the ☎ (call) button to talk.

• You can use the hands-free calling when playback is completed.

• During a call, press the VOLUME +/- buttons on the system to adjust the volume. The volume of a call and that of a playback are set separately.

Note
• When using a mobile phone, keep it 50 cm or more away from the system. If they are too close together, noise may be heard.

To end a call
Press the ☎ (call) button. If you were listening to music when the call arrived, it will be resumed when the call has finished.

After use
Do any of the following.
• Set the Bluetooth function of the Bluetooth device to off. For details, refer to the operating instructions supplied with the device.

• Turn off the Bluetooth device.

• Turn off the system.

• Touch the system with the smartphone again to disconnect (NFC compatible smartphones only).

Unit button functions during a call
Available functions may vary depending on the Bluetooth mobile phone, or the profiles supported by the Bluetooth mobile phone. Refer to the operating instructions supplied with the Bluetooth mobile phone.

Incoming call	• Press once to answer call. • Press for about 2 seconds to reject call.
During call	• Press once to finish call. • Press for about 2 seconds to change call device between the system and mobile phone.

Avant d'utiliser le système, lisez attentivement ce guide et conservez-le afin de pouvoir le consulter ultérieurement.

AVERTISSEMENT

Pour réduire les risques d'incendie ou d'électrocution, n'ouvrez pas le coffret. Ne faites les réparations qu'à un technicien qualifié.

Pour réduire les risques d'incendie ou d'électrocution, n'ouvrez pas cet appareil à des gouttes ou des éclaboussures et ne placez pas d'objets remplis de liquides, tels que des vases sur l'appareil. Ne placez pas de sources de flammes nues, telles que des bougies allumées, sur l'appareil.

Pour réduire les risques d'incendie ou d'électrocution, n'exposez pas cet appareil à des gouttes ou des éclaboussures et ne placez pas d'objets remplis de liquides, tels que des vases sur l'appareil.

N'installez pas l'appareil dans un espace restreint, comme une bibliothèque ou un meuble encastré.

Comme la fiche principale de l'adaptateur secteur sert à le débrancher du secteur, raccordez le système à une prise secteur facilement accessible. Si vous observez une anomalie, débranchez immédiatement le système de la prise secteur.

Le système est toujours connecté à la source d'alimentation secteur tant qu'il reste branché sur la prise murale, même s'il est lui-même éteint.

A propos des droits d'auteur et des licences

La marque *Bluetooth*[®] et les logos appartiennent à Bluetooth SIG, Inc. et doivent être utilisés par Sony Corporation uniquement sous licence.

La marque *Android* est une marque commerciale ou une marque commerciale déposée de NFC Forum, Inc., aux États-Unis et dans d'autres pays.

Android est une marque commerciale de Google Inc.

Les autres marques commerciales et noms commerciaux appartiennent à leurs propriétaires respectifs.

ATTENTION

N'oubliez pas que toute modification non expressément approuvée dans ce manuel peut annuler votre droit d'utilisation de cet équipement.

Précautions

Remarques lors de l'utilisation d'un téléphone mobile

- Pour plus de détails sur le fonctionnement de votre téléphone mobile lorsque vous recevez un appel et que vous transmettez des données audio à l'aide de la connexion *Bluetooth*, reportez-vous au mode d'emploi fourni avec votre téléphone mobile.
- Lorsque vous raccordez ou débrazchez l'adaptateur secteur, mettez d'abord le système hors tension. Sinon, vous risquez de provoquer un dysfonctionnement.
- Servez-vous uniquement de l'adaptateur secteur fourni. Pour éviter d'endommager le système, n'utilisez aucun autre adaptateur secteur.


Sécurité

La plaque signalétique indiquant la marque commerciale Sony, le numéro de modèle et les caractéristiques électriques se trouve sous le système, à l'extérieur et sur la surface de l'adaptateur secteur.

Remarques sur l'adaptateur secteur

• Lorsque vous raccordez ou débrazchez l'adaptateur secteur, mettez d'abord le système hors tension. Sinon, vous risquez de provoquer un dysfonctionnement.

• Servez-vous uniquement de l'adaptateur secteur fourni. Pour éviter d'endommager le système, n'utilisez aucun autre adaptateur secteur.



- Branchez l'adaptateur secteur sur la prise murale la plus proche. En cas de dysfonctionnement, retirez immédiatement la fiche de la prise murale.
- N'installez pas l'adaptateur secteur dans un espace restreint, comme une bibliothèque ou un meuble encastré.
- Pour réduire les risques d'incendie ou d'électrocution, n'exposez pas l'adaptateur secteur à des gouttes ou des éclaboussures et ne placez pas d'objets remplis de liquides, tels que des vases sur l'adaptateur secteur.

Rangement

- N'installez pas l'enceinte en position inclinée.
- Ne placez pas le système à proximité d'une source de chaleur ou dans un endroit exposé aux rayons directs du soleil, à une poussière excessive ou à des chocs mécaniques et gardez-le à l'abri de l'humidité ainsi que de la pluie.
- N'exposez pas la pile à une chaleur excessive, notamment aux rayons directs du soleil, à une flamme, etc.

Fonctionnement

- N'insérez pas de petits objets, et dans les prises. Cela risquerait de provoquer un court-circuit ou un dysfonctionnement du système.

Entretien

- Nettoyez avec de l'alcool, de l'essence ou de diluant pour nettoyer le boîtier.

Autres

- Si vous avez des questions ou des problèmes concernant ce système, qui ne sont pas abordés dans ce mode d'emploi, contactez votre revendeur Sony le plus proche.

Qu'est-ce que la technologie sans fil Bluetooth ?

La technologie *Bluetooth* est une technologie sans fil à courte portée permettant la communication de données sans fil entre des appareils numériques, tels qu'un ordinateur ou un appareil photo numérique. La technologie sans fil *Bluetooth* fonctionne dans un rayon d'environ 10 m.

La connexion de deux appareils est courante et certains appareils permettent également de se connecter simultanément à plusieurs périphériques.

Il est inutile d'utiliser un câble pour le raccordement, et il n'est pas non plus nécessaire de diriger les appareils l'un vers l'autre, comme c'est le cas avec la technologie infrarouge. Par exemple, vous pouvez utiliser ce type d'appareil dans un sac ou une poche.

La technologie *Bluetooth* est une norme internationale prise en charge et utilisée par des milliers de sociétés dans le monde entier.

Système de communication et profils Bluetooth compatibles du système

Le profil est la normalisation du fonctionnement de chaque spécification d'un périphérique *Bluetooth*. Ce système prend en charge les profils et la version *Bluetooth* suivants :

- Système de communication
 - Spécification *Bluetooth* version 3.0
 - Profils *Bluetooth* compatibles :
 - A2DP (Advanced Audio Distribution Profile) : transmission ou réception de contenu audio de haute qualité.
 - AVRCP (Audio Video Remote Control Profile) : contrôle des équipements audiovisuels ; fonctions de pause, d'arrêt et de démarrage de la lecture, etc.
 - HSP (Headset Profile) : discussion téléphonique/utilisation du téléphone portable.
 - HFP (Hands-free Profile) : discussion téléphonique/utilisation du téléphone portable en mode mains libres.

Portée de communication maximale

Utilisez des périphériques *Bluetooth* à une portée de 10 m environ (en ligne directe) du système.

Dans les conditions suivantes, la plage de communication maximale peut être réduite.

- Un obstacle, par exemple une personne, un objet métallique ou un mur, se trouve entre le système et le périphérique *Bluetooth*.
- Un périphérique LAN sans fil est utilisé à proximité du système.
- Un four à micro-ondes est utilisé à proximité du système.
- Un appareil émettant des radiations électromagnétiques est mobile.

Interférences provenant d'autres appareils

Étant donné que les périphériques *Bluetooth* et les périphériques LAN sans fil (IEEE802.11b/g) utilisent la même fréquence, des interférences en hyperfréquences peuvent survenir et entraîner une dégradation de la vitesse de communication, des parasites ou une connexion non valide si le système est utilisé à proximité d'un périphérique LAN sans fil. Dans ce cas, procédez comme suit.

- Utilisez le système à 10 m au moins du périphérique LAN sans fil.

Si le système est utilisé dans un rayon de 10 m environ d'un périphérique LAN sans fil, mettez ce dernier hors tension.

Interférences causées à d'autres appareils

Les émissions d'hyperfréquences d'un périphérique *Bluetooth* peuvent perturber le fonctionnement des appareils médicaux électroniques. Dans les emplacements suivants, mettez hors tension le système, ainsi que tout autre périphérique *Bluetooth*, au risque de provoquer un accident :

- endroits où du gaz inflammable est présent, dans un hôpital,
- train, un avion ou une station essence
- à proximité de portes automatiques ou d'alarmes incendie

Remarques

- Pour pouvoir utiliser la fonction *Bluetooth*, le périphérique *Bluetooth* à connecter doit posséder un profil identique à celui du système.
- Notez également que même si les périphériques disposent du même profil, les fonctions qu'ils proposent peuvent varier selon leurs caractéristiques techniques.
- En raison des caractéristiques de la technologie sans fil *Bluetooth*, le son lu sur le système est légèrement décalé par rapport au son lu sur le périphérique *Bluetooth* lors d'une conversation téléphonique ou lors de l'écoute de musique.
- Ce système prend en charge les capacités de sécurité conformes à la norme *Bluetooth* pour assurer une connexion sécurisée lors de l'utilisation de la technologie sans fil *Bluetooth* ; cependant, la sécurité peut être insuffisante selon le réglage. Soyez prudent lorsque vous communiquez au moyen de la technologie sans fil *Bluetooth*.
- Nous ne pouvons être tenus responsables de la fuite d'informations lors d'une communication *Bluetooth*.
- Un périphérique doté de la fonction *Bluetooth* doit être conforme à la norme *Bluetooth* spécifiée par *Bluetooth SIG* et être authentifié. Même si le périphérique raccorde est conforme à la norme *Bluetooth* précédemment mentionnée, certains périphériques risquent de ne pas se connecter ou de ne pas fonctionner correctement, selon leurs caractéristiques ou spécifications.
- Selon le périphérique *Bluetooth* connecté au système, l'environnement de communication ou l'environnement d'utilisation, il se peut que le son saute ou s'accompagne de parasites.

Spécifications

Enciente : 50 mm
Type de caisson : Bass Reflex

Amplificateur
Puissance de sortie de référence : 2 W + 2 W (10 % DHT, 1 kHz, 6 Ω)

Entrée : Mini prise stéréo x 1

Bluetooth
Système de communication : Spécification *Bluetooth* version 3.0
Sortie : Spécification *Bluetooth* Power Class 2
Portée de communication maximale : En ligne directe, environ 10 m*)
Bande de fréquences : Bande des 2,4 GHz (2,4000 GHz - 2,4835 GHz)
Méthode de modulation : FHSS

Profils *Bluetooth* compatibles*) : A2DP (Advanced Audio Distribution Profile)
AVRCP (Audio Video Remote Control Profile)
HSP (Headset Profile)
HFP (Hands-free Profile)

Codecs pris en charge*) : SBC**

Plage de transmission (A2DP) : 20 Hz - 20 000 Hz (fréquence d'échantillonnage de 44,1 kHz)
*) La portée réelle varie en fonction de nombreux facteurs, tels que la présence d'obstacles entre les périphériques, les champs magnétiques autour des tours à micro-ondes, l'électricité statique, la sensibilité de la réception, les performances de l'antenne, le système d'exploitation, le logiciel, etc.

*) Les profils standard *Bluetooth* indiquent la fonction des communications entre périphériques *Bluetooth*.

**) Codec : format de conversion et compression du signal audio

*) Codec : bande secondaire

Micro
Type : Condensateur à électret
Caractéristiques directionnelles : Omnidirectionnel

Plage de fréquences efficaces : 200 Hz - 3 600 Hz
Température de fonctionnement : 0 °C à 45 °C

Généralités
Alimentation : 6 V CC (lors de l'utilisation de l'adaptateur secteur fourni raccorde à une source d'alimentation 230 V CA, 50 Hz) ou 4 piles alcalines LR6 (taille AA)

Consommation électrique nominale : 6 W (lors de l'utilisation de l'adaptateur secteur fourni)

Environ 0,2 W (en mode de veille lors de l'utilisation de l'adaptateur secteur fourni)

Autonomie des piles (lors de l'utilisation de la connexion *Bluetooth*) : Pile alcaline Sony LR6 (taille AA) : environ 20 heures**

Pile rechargeable nickel-hydrure métallique Sony NiMH-2CR (taille AA) : environ 20 heures**


Dimensions : Environ 245 mm × 185 mm × 88 mm (l'inv.)

Masse : environ 1 060 g, piles comprises

Accessoires fournis : Adaptateur secteur (1)
Mode d'emploi (le présent document) (1)
Consignes de sécurité

*) La durée peut varier en fonction de la température ou des conditions d'utilisation.

La conception et les caractéristiques techniques sont sujettes à modification sans préavis.

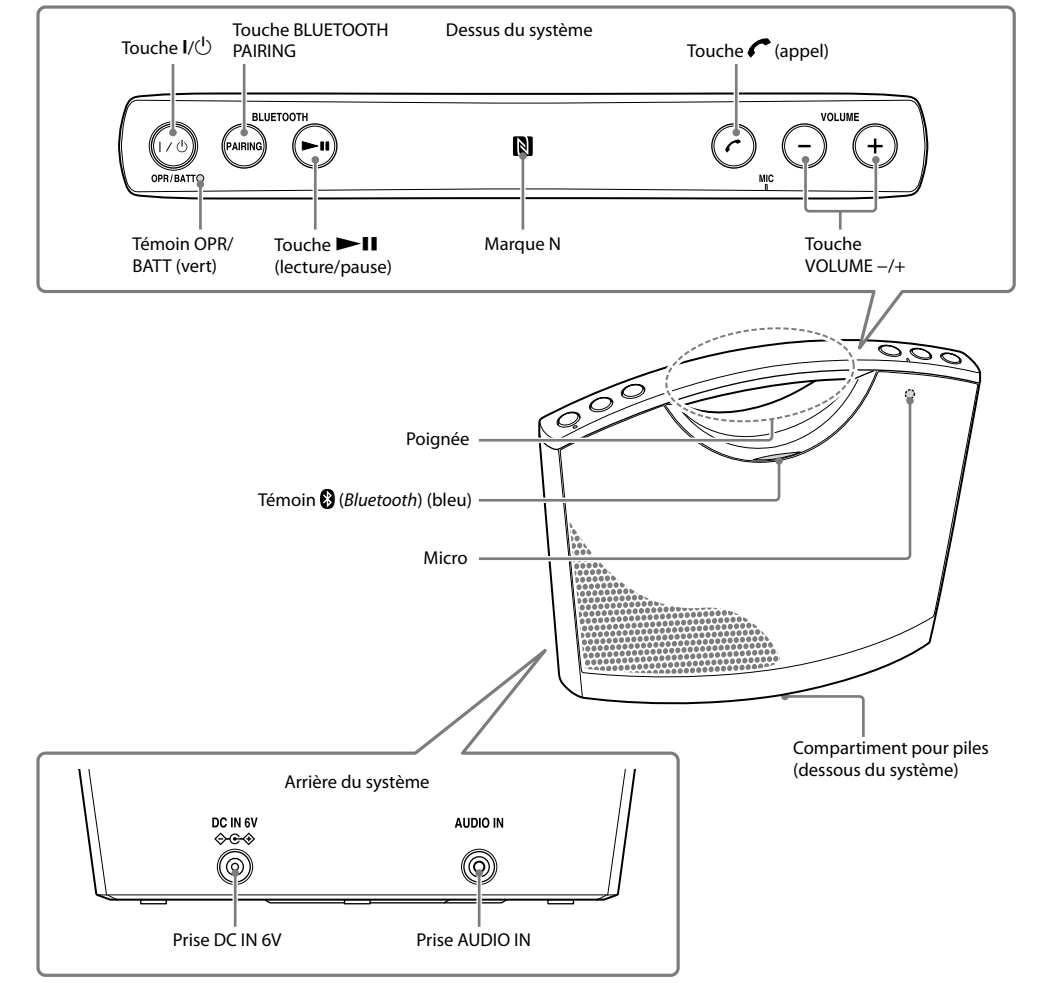

Fonction des pièces

Touche I/O

Pour mettre le système sous/hors tension.

Témoïn OPR/BATT (vert)

S'allume lorsque le système est sous tension. Baisse d'intensité lorsque le système est alimenté par des piles et que celles-ci sont faibles.

Touche BLUETOOTH PAIRING

Appuyez pour procéder au pairage avec un périphérique *Bluetooth*.

Touche ►|| (lecture/pause)

Permet de faire fonctionner un périphérique *Bluetooth* connecté. Vous ne pouvez pas faire fonctionner un périphérique connecté à la prise AUDIO IN.

Marque N

Touchez cette marque pour établir la connexion *Bluetooth* avec un périphérique LAN sans fil, mettez ce dernier hors tension.

Touche (appel)

Appuyez pour appeler ou faire fonctionner en cours d'appel.

Touche VOLUME +/-

Pour régler le volume. Un bip sonore est émis par les enceintes lorsque le volume est réglé au minimum ou au maximum.

Poignée
Saisissez-la pour transporter le système.

Témoïn (Bluetooth) (bleu)
S'allume ou clignote selon l'état de la communication. Pour plus de détails, reportez-vous à la section suivante, « Indications de la fonction *Bluetooth* ».

Micro

À utiliser en cours d'appel.

Prise AUDIO IN

Pour la connexion à la prise casque d'un périphérique audio portable, d'un ordinateur, etc. à l'aide d'un cordon de raccordement (non fourni).

Prise DC IN 6V

Pour le raccordement de l'adaptateur secteur fourni.

Compartment pour piles


Insérez quatre piles alcalines LR6 (taille AA) (non fournies).

Indications de la fonction Bluetooth

État	Témoïn (Bluetooth) (bleu)
Pairage avec un périphérique	Clignote rapidement
Recherche d'un périphérique	Clignote
Connecté à un périphérique	S'allume


Mise sous/hors tension du système

1 Raccordez l'adaptateur secteur fourni.

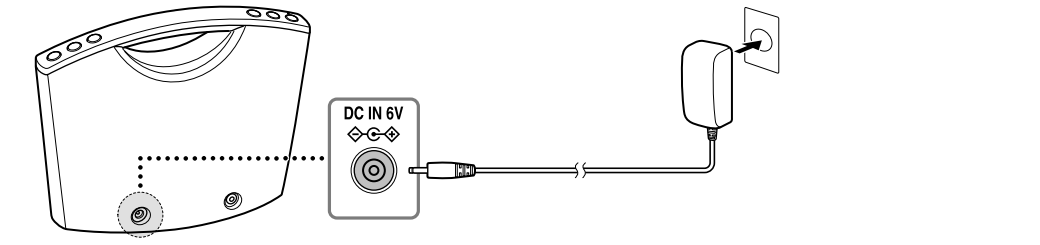


2 Appuyez sur la touche I/O.

Le témoïn OPR/BATT (vert) s'allume.

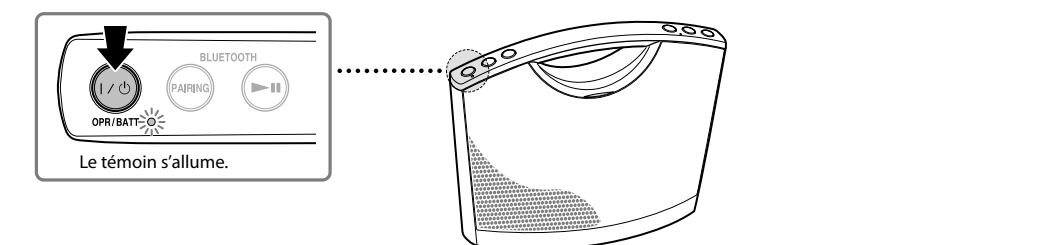

Pour une utilisation avec des piles LR6 (taille AA) (non fournies)

1 Ouvrez le couvercle situé sur le dessous du système et installez quatre piles alcalines LR6 (taille AA, non fournies), puis refermez le couvercle.

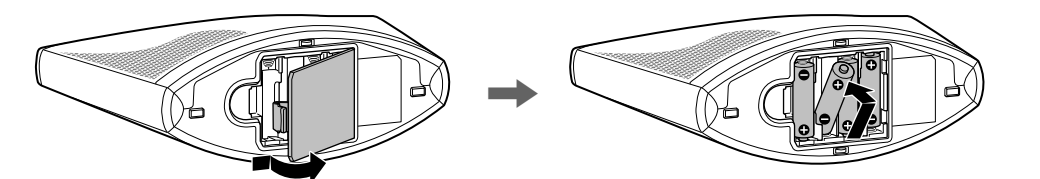

2 Appuyez sur la touche I/O.

Remarque

- Dès que l'adaptateur secteur est branché, le système s'alimente automatiquement sur le secteur, même si les piles sont en place. Lorsque l'adaptateur secteur est raccorde au système, celui-ci ne peut plus être alimenté par les piles en place. Assurez-vous que la fiche de l'adaptateur secteur est débranchée lorsque le système est alimenté sur piles.

Comment établir une connexion sans fil avec des périphériques Bluetooth

Vous pouvez écouter de la musique et téléphoner en mode mains libres sans fil avec le système à l'aide de la fonction *Bluetooth* de votre périphérique.

Choisissez, parmi les trois méthodes de connexion suivantes, la mieux adaptée au périphérique *Bluetooth*. Pour plus de détails sur le fonctionnement de votre périphérique, reportez-vous au mode d'emploi qui l'accompagne.

Pairage avec un périphérique *Bluetooth* : voir « Modèle A »

Il est nécessaire au préalable de procéder au « pairage » des périphériques *Bluetooth*.

Connexion avec un périphérique paîré : voir « Modèle B »

Pour écouter de la musique avec un périphérique *Bluetooth* paîré, reportez-vous à ce modèle.

Connexion One Touch avec un smartphone (NFC) : voir « Modèle C »

Vous pouvez établir une connexion *Bluetooth* en touchant simplement le système avec un smartphone compatible NFC.

Avant d'utiliser le système, vérifiez les points suivants.

- Le système et le périphérique sont installés à moins de 1 m l'un de l'autre.
- Le système est raccorde à une source d'alimentation ou des piles sont installées dans le système.
- Vous avez à disposition le mode d'emploi fourni avec le périphérique.

Modèle A Pairage et connexion avec un périphérique Bluetooth

1 Mettez le système sous tension.


2 Activez la fonction *Bluetooth* du périphérique *Bluetooth*.

Pour plus de détails, reportez-vous au mode d'emploi fourni avec votre périphérique.

3 Maintenez la touche BLUETOOTH PAIRING du système enfoncée jusqu'à ce que vous entendiez des bips sonores et que le témoïn (Bluetooth) (bleu) se mette à clignoter rapidement.

Conseil

- Lorsque le système est mis sous tension en premier, le témoïn (Bluetooth) (bleu) commence à clignoter rapidement.

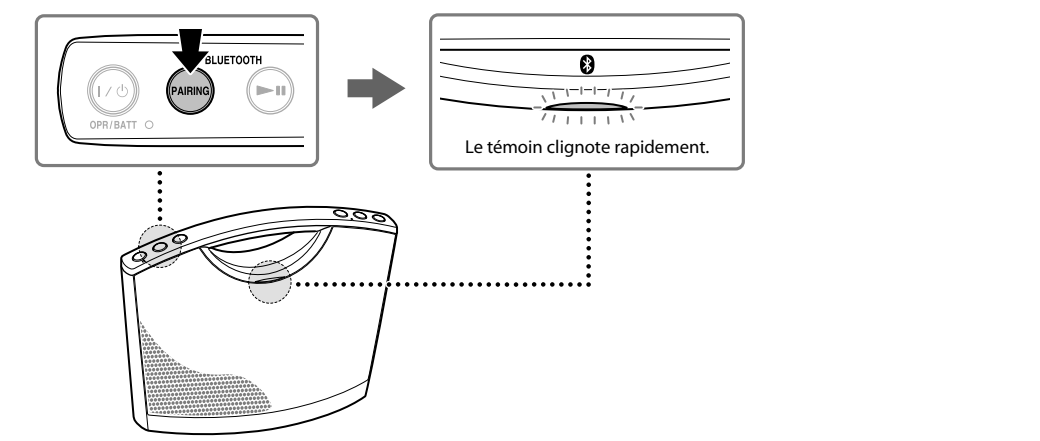

4 Exécutez une procédure de pairage sur le périphérique Bluetooth pour que le système soit détecté.

Si « SRS-BTM8 » ne s'affiche pas sur l'écran du périphérique, recommencez à l'étape 2.

Remarque

Certains périphériques ne peuvent pas afficher la liste des périphériques détectés.

5 Sélectionnez « SRS-BTM8 » sur l'écran du périphérique *Bluetooth*.

6 Si un code d'authentification* est requis, sur l'écran du périphérique *Bluetooth*, saisissez « 0000 ». La connexion *Bluetooth* est établie et le témoïn (Bluetooth) (bleu) du système reste fixe.

* Le code d'authentification peut également être nommé « cle d'authentification », « code PIN », « nombre PIN » ou « mot de passe ».

Conseil

- Afin de procéder au pairage avec d'autres périphériques *Bluetooth*, répétez les étapes 2 à 6 pour chaque périphérique.

Remarques

- Le mode de pairage du système est annulé après environ 5 minutes et le témoïn (Bluetooth) (bleu) clignote lentement. Si le mode de pairage est annulé pendant l'exécution de cette procédure, recommencez à l'étape 3.
- Le code d'authentification défini pour ce système est « 0000 ». Vous ne pouvez pas procéder au pairage d'un périphérique *Bluetooth* dont le code d'authentification n'est pas « 0000 ».
- Une fois les périphériques *Bluetooth* paîrés, il n'est plus nécessaire de répéter cette opération. Cependant, dans les situations suivantes, la procédure de pairage doit être répétée.

- Les informations de pairage ont été supprimées après une réparation, etc.
- Le système est paîré avec 3 périphériques ou davantage.
- Le système ne peut pas être paîré avec plus de 4 périphériques *Bluetooth*. En cas de pairage d'un nouveau périphérique et si la procédure de pairage a déjà été réalisée sur 4 périphériques, le périphérique dont la date de dernière connexion est la plus ancienne est remplacé par le nouveau.
- Plusieurs périphériques peuvent être paîrés avec le système, mais le son reproduit ne provient que d'un seul périphérique.

Pour supprimer toutes les informations de pairage du système

Maintenez la touche I/O enfoncée pendant plus de 15 secondes alors que le système est éteint. Les valeurs par défaut du système sont rétablies et toutes les informations de pairage sont supprimées.

Modèle B Connexion avec un périphérique Bluetooth paîré

1 Mettez le système sous tension.

2 Activez la fonction *Bluetooth* du périphérique *Bluetooth*.

Conseil

- Lorsqu'il est mis sous tension, le système essaie d'établir une connexion *Bluetooth* avec le dernier périphérique *Bluetooth* connecté au système. Lorsque la connexion *Bluetooth* est établie, le témoïn (Bluetooth) (bleu) du système reste fixe.

3 Sélectionnez « SRS-BTM8 » sur l'écran du périphérique Bluetooth.

Si nécessaire, sélectionnez un profil *Bluetooth* supporté par le système parmi les suivants : A2DP, HSP ou HFP. Pour plus de détails concernant chaque profil, reportez-vous à la section « Écoute de la musique » ou « Téléphoner en mode mains libres tout en écoutant de la musique ».

Remarque

- Cette étape n'est pas nécessaire pour tous les périphériques.

La connexion *Bluetooth* est établie et le témoïn (Bluetooth) (bleu) du système reste fixe.

Modèle C Connexion One Touch avec un smartphone (NFC)

Le système est automatiquement mis sous tension en le touchant simplement avec un smartphone compatible NFC ; il est alors paîré et connecté avec le smartphone.

1 Téléchargez et installez l'application « Connexion NFC facile » sur le smartphone.

« Connexion NFC facile » est une application originale développée par Sony pour les téléphones Android ; elle est disponible sur Google Play Store.

Recherchez « Connexion NFC facile » ou scannez le code à deux dimensions suivant pour télécharger et installer l'application gratuite. Des frais de communication sont facturés pour le téléchargement de l'application.

Il est possible que l'application ne soit pas disponible dans certains pays et/ou dans certaines régions.

A proximité du code à deux dimensions :

Utilisez une application de lecture de code à deux dimensions.



Smartphones compatibles

- Smartphones avec fonction NFC intégrée (OS : Android 2.3.3 ou version ultérieure, sauf Android 3.x)
- Clients en Europe
- Consultez le site internet suivant pour plus de détails : http://support.sony-europe.com

À propos de la NFC

La NFC (Near Field Communication, communication en champ proche) est une technologie permettant d'établir une communication sans fil à courte portée entre différents périphériques, comme les téléphones portables et les étiquettes CL. Grâce à la fonction NFC, la communication des données peut être réalisée en touchant simplement le symbole correspondant ou la zone spécifiée sur les