
ELECTRO

Play Force Pro X
Wireless Controller

Multi-Platform Compatibility

iPhone & iPad • Android • Windows PC • Nintendo Switch

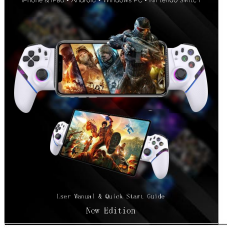

User Manual & Quick Start Guide

New Edition

KEY INSTRUCTION:



1. LB Button (Left Mouse)
2. RB Button (Click)
3. D-Pad
4. Left Analog Stick (L3 when pressed)
5. TURBO Button
6. HOME Button (Power Mode Pairing)
7. MENU Button
8. MACRO Button
9. RB Button (Right Mouse)
10. R3 Button (Back)
11. A / B / X / Y Buttons
12. Right Analog Stick (R3 when pressed)

13. USB-C Charging Port
14. RT Trigger
15. R2 Real Pedals
16. LT Trigger
17. L2 Real Pedals

QUICK START & CONTROLLER MODES



Select the correct mode based on the device you are connecting to:

Device Type	Mode Name	Button Functionality	LED Indic.	Device Name
iPhone / iPad / Mac	Apple Controller Mode	B = HOME	BLUE	Electro Play Force Pro X
Android Mobile (Legacy)	Android Controller Mode	B = HOME	ALT. BLUE	Electro Play Force Pro X
Android Mobile (Mapping)	Key Mapping Mode	A = HOME	YELLOW	Electro Play Force Pro X
Nintendo Switch	Switch Controller Mode	Y = HOME	PURPLE	Electro Play Force Pro X


- USB Turbo will cancel if controller is turned off or connection is lost.
- Device does not stay signed in to browser unless
- If pairing fails, power off the controller and try again.

IPHONE / IPAD / MAC SETUP



Note: Some games may not support touch and will require a controller.

ANDROID SETUP

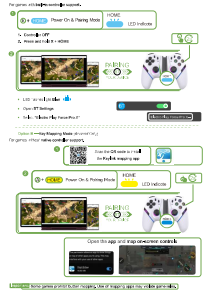


Note: Some games prohibit button mapping, like if mapping apps may violate game rules.

WINDOWS PC & NINTENDO SWITCH



ADVANCED FEATURES

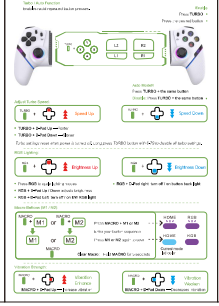

CHARGING & SPECIFICATIONS



- Low-battery LED flashes
- Charges LED will on
- Fully charged LED stable
- Use a standard USB-C charging cable.

Technical Specifications

- **Battery:** 3.7V 1100mAh
- **Play Time:** Approx. 6–8 hours
- **Charging Time:** 1.5–2 hours
- **Wireless Technology:** 2.4GHz
- **Charging Port:** USB-C
- **Weight:** Approx. 320g

PREMIUM FEATURES

TMR TECHNOLOGY
Ultra Precise. Drift Resistant.

CHARGING & SPECIFICATIONS

FCC Compliance

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Warranty

We warrant this product against manufacturing defects for 12 months from the date of purchase.
This warranty does not cover damage caused by misuse, liquid exposure, unauthorized repair, or modification.
Proof of purchase is required.

Support

For setup help, updates, or warranty service, visit:
www.electrowireless.com

Trademark Notice

Apple, iPhone, iPad, Mac, Android, Windows, and Nintendo Switch are trademarks of their respective owners.
This device is not affiliated with or endorsed by these companies.

Thank you for using

ELECTRO
Play Force Pro X
Wireless Controller

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.
This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.