
DREO | TurboPoly™ Fan 353

USER MANUAL

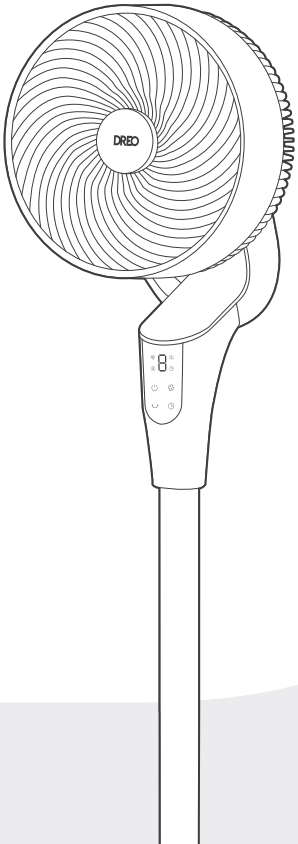

"

Thanks for Choosing DREO!

Your support means the world to us. We hope you enjoy our product as much as we did creating it.

CONTENTS

01
ASSEMBLING YOUR APPLIANCE
1-3

02
KNOWING YOUR APPLIANCE
4

03
USING YOUR APPLIANCE
5-8

04
CLEANING AND MAINTENANCE
9-12

05
TROUBLESHOOTING
13


ASSEMBLING YOUR APPLIANCE

01

Assembly Instructions

When using the appliance for the first time, remove the wraps and attach the parts by following the steps below.

❶

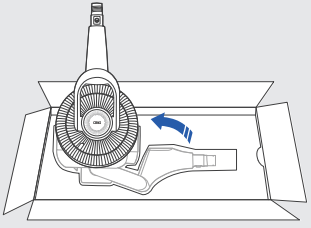


Turn the fan body upside down.

❷




Install the short pedestal into the fan body column by rotating the pedestal until tightened.

❸

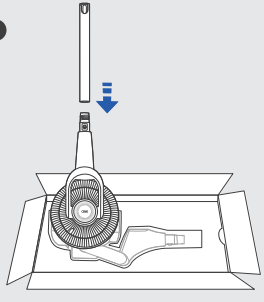


Install the combined column from step 2 onto the fan head by rotating the pedestal until tightened.

❹

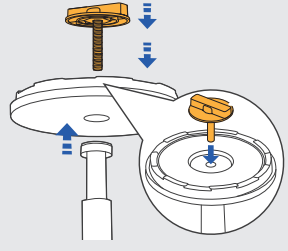


Push the column into the base, then screw it into the bottom of the column.

❺

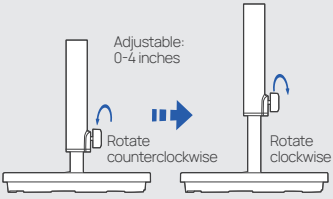


Raise or lower the appliance to the desired height.

❻

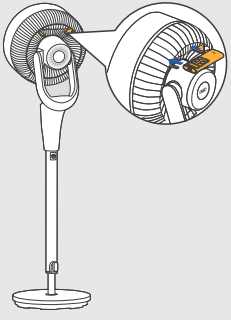


You can put the remote control in the holder at the back of the fan head.

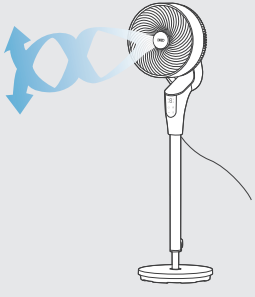

CAUTION


Do not operate the air circulator fan if the base has not been installed.
Please exercise caution and handle the base with care during installation.

Package Contents

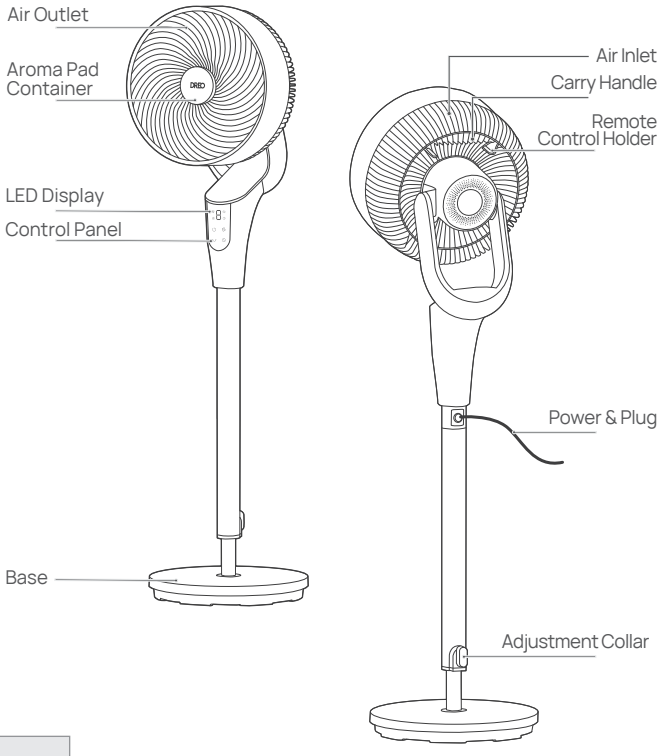

User Manual

Quick Start Guide



Remote Control



2x AAA Batteries



3X Aroma Pads (1 pre-installed)



Base Screw

KNOWING YOUR APPLIANCE

02

Control Panel


Power Button
- Turn power on/off.
- Long press for 10 seconds to reset factory settings.


Fan Speed Button
- 1-8 levels & Turbo Mode (display will show "H").
- Long press for 3 seconds to switch between Normal/Auto modes.

Timer Button
- Select to set a timer (0-8h).

Horizontal Oscillation Button
- Sweep airflow horizontally (0°-80°).

LED Display

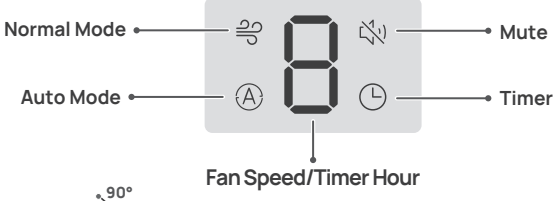

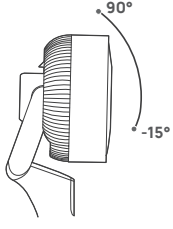


Tip: You can adjust the airflow vertical direction manually (-15°~90°).

USING YOUR APPLIANCE

03


Getting the Most out of Your Air Circulator

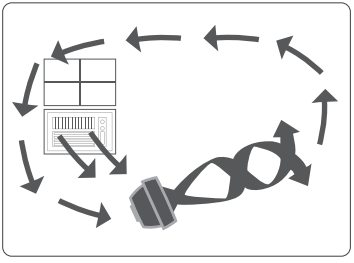

Summer:

Use with Air Conditioner


Position the air circulator in front of your AC to circulate cold air and provide better cooling.

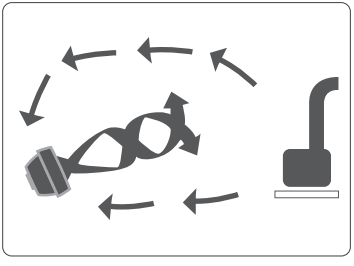

Winter:

Use with Heater

Send the heat to the corner of the room and circulate warm air faster.

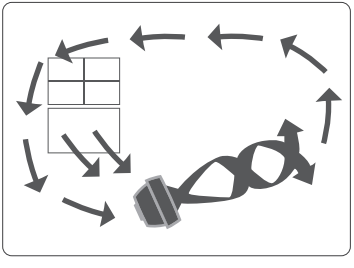

Spring & Fall:

Circulation


Make the indoors as fresh and pleasant as the outdoors.

Working Modes (Press on the remote)

	Normal Mode Fan runs at the fixed speed.
A	**Auto Mode** Fan automatically increases speed when room temp is higher and decreases speed when temp is lower.
TURBO	**Turbo Mode** Fan runs at the maximum speed.


Adding Essential Oil

1

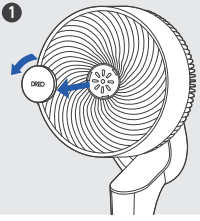


Rotate the aroma pad container counterclockwise to take it off.

2

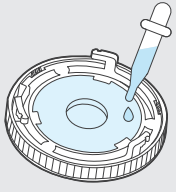

Add the essential oil to the aroma pad on the aroma pad container.

3

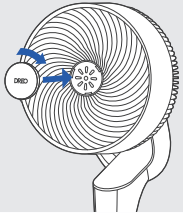

Put the aroma pad container back in place by rotating it clockwise (You will hear a "click").

Additional Features



Timer

When the fan is ON/OFF, touch the timer button on the remote control repeatedly to set a timer from 0 to 8 hours. When the timer ends, the fan will stop/start running automatically. To cancel, set the time to 0 hour.

Note: When the auto off timer is enabled, display will return to fan speed after 3 seconds.



Mute

Press on the remote control to turn on/off the button sounds.



Memory


If the fan is turned OFF or disconnected from power, it will operate under the previous settings (except the Timer setting) when it is turned ON again.



Display Auto Off


Display turns off after 1 minute.
Wake up the display with any button.

Remote Control

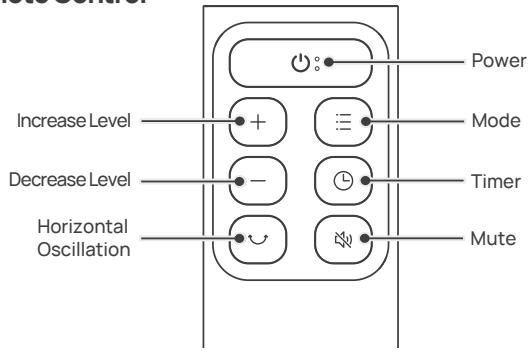

CLEANING AND MAINTENANCE

04

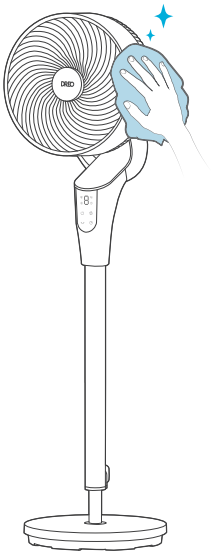


Outer Surface

Gently wipe off the dust with a soft, dry cloth.

Base

The base can be disassembled in the reverse order of assembly.

Aroma Pad Container & Aroma Pad

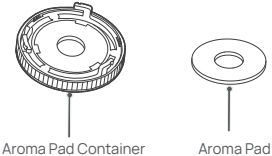

Remove the aroma pad container. Take out the aroma pad, clean it with water and dry it up.
Put the dried aroma pad back into the aroma pad container, and install back in place.


CAUTION

1. Always unplug the fan before any cleaning or maintenance to avoid the risk of fire, electric shock, or injury to persons.
2. Do not immerse in water or get water inside the motor housing.
3. Do not use any chemical agents when cleaning the fan.
4. Store in a cool, dry place and cover it to protect from dust.
5. It is recommended to disassemble and clean under professional guidance.
6. Clean the aroma pad container and aroma pad before adding new essential oils if it hasn't been used for a long time.
7. Keep the essential oils away from parts other than the aroma pad container (such as the grille or main unit) to avoid damage. If contact occurs, clean immediately or wipe with a dry cloth.

WARNING


To reduce the risk of electrical shock and injury to persons, turn off and unplug the appliance before any cleaning and maintenance.

1

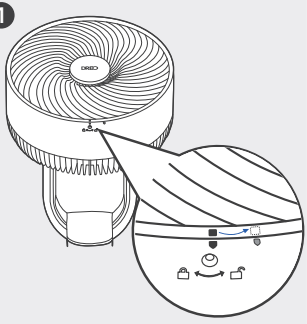


Remove the screw on the front grille, rotate the grille counterclockwise to take off.

2

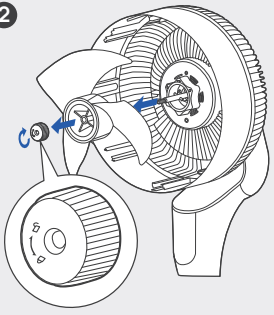


Remove the blade cap by rotating it as shown and take the blade assembly out of the shaft.

3

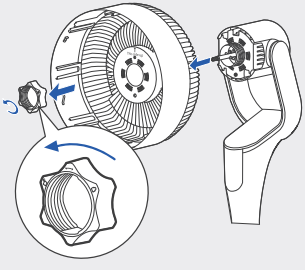


Remove the hexagram screw to take off the rear grille.

4

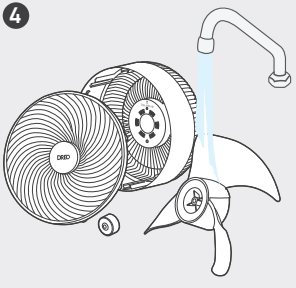


Rinse cap, blades, and grilles under running water or with a clean, damp cloth.

5

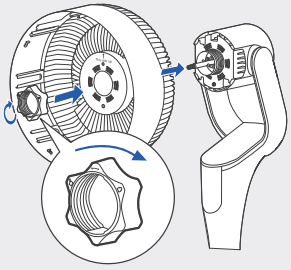


Dry up all parts, and screw the rear grill back into place by aligning the "This side up" arrow with the top hole, then put the hexagram screw back into place

6

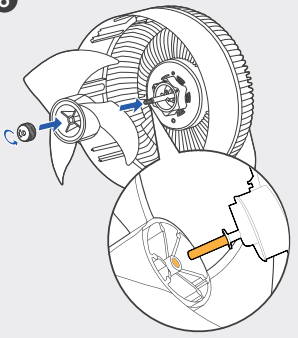

Insert the blade assembly back into the shaft by aligning the centers.


7

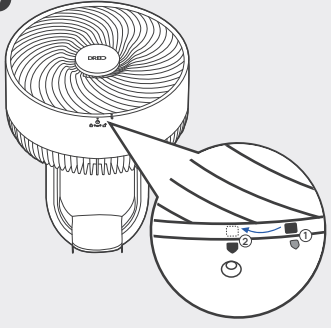

① Align the point on the front grille with the right point on the casing.
② Rotate the grille clockwise and install the screw back in place.

User Servicing Instructions (Fuse)

This appliance features a fused safety plug that protects against overload or short-circuit situations. If the fuse blows, please cut off power and follow the below instructions or consult a qualified electrician.

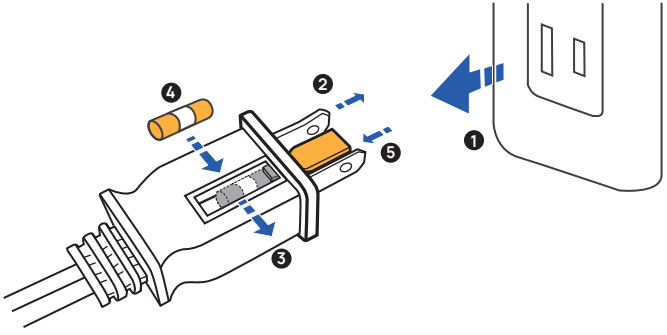

1. Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord.
2. Open fuse cover. Slide open fuse access cover on top of attachment plug towards blades.
3. Remove fuse carefully. Push the fuse from the other side to remove the fuse.
4. Risk of fire. Replace fuse only with 5 Amp.125 Volt fuse.
5. Close fuse cover. Slide closed the fuse access cover on top of attachment plug.

WARNING

Risk of fire. Do not replace attachment plug.
Contains a safety device (fuse) that should not be removed.
Discard product if the attachment plug is damaged.

TROUBLESHOOTING 05

My appliance won't turn on!

Make sure that the cord is connected to a powered outlet and the mains voltage corresponds with the voltage indicated on the appliance.

My appliance is shaky and wobbling!

1. Place the appliance on a flat, level surface.
2. Incorrect installation might also cause shakiness. Please refer to the assembly instructions in page 4-5.

My appliance is making vibration and noise!

1. Place the appliance on a flat, level surface.
2. Be sure not to insert anything into the air inlet and outlet.

If your problem is not listed or still persists, please contact our Customer Support **(see page 15)**

Model No.: DR-HPF013
Rev_1.0_EN

We're Here to Help!
(888) 290-1688 (Mon - Fri, 9:00 am-5:00 pm PST/PDT)
support@dreo.com
www.dreo.com
DREO PTE. LTD.
112 ROBINSON ROAD, #03-01, ROBINSON 112, SINGAPORE 068902

www.dreo.com

Looking for help?

Contact us to get expert support.

support@dreo.com (888) 290-1688 www.dreo.com
Mon - Fri, 9:00 am-5:00 pm PST/PDT