SENCOR®

SRC 150

USER'S MANUAL

LED DIGITAL FM CLOCK RADIO
WITH DUAL ALARM AND NAP TIMER

EN

CONTENTS

LOCATION OF CONTROL EN-1
INSTALLATION EN-2
BACKUP BATTERY INSTALLATION EN-2
SETTIMG TIME, 12/24HR TIME AND THE SNOOZE DURATION EN-2
SETTING THE ALARMS EN-2
STOPPING AND RESETTING THE ALARM TO COME ON THE NEXT DAY EN-3
SNOOZE OPERATION (default snooze duration is 5 minutes) EN-3
USING THE HI-LO DIMMER EN-3
USING THE NAP TIMER EN-3
SETTING UP THE FM ANTENNA EN-3
LISTENING TO THE FM RADIO EN-3
USING THE PRESET MEMORY EN-4
TO USE THE SLEEP TIMER EN-4
TROUBLE SHOOTING EN-4
CARE OF YOUR PRODUCT EN-4
SPECIFICATIONS EN-5
INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL
OF USED PACKAGING MATERIALS EN-5
DISPOSAL OF USED ELECTRICAL AND ELECTRONIC APPLIANCES EN-5

LED DIGITAL FM CLOCK RADIO WITH DUAL ALARM AND NAP TIMER

LOCATION OF CONTROL
FRONT VIEW

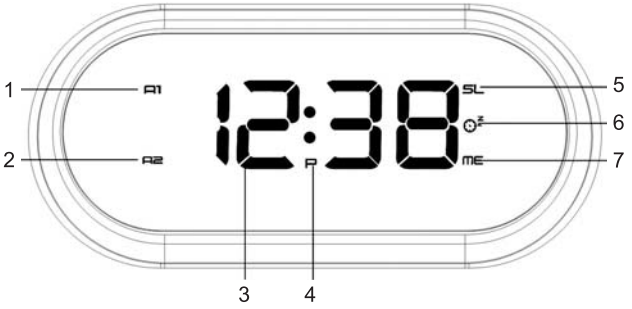

1. ALARM 1
2. ALARM 2
3. TIME
4. PM INDICATOR
5. SLEEP
6. NAP TIMER
7. MEMORY

TOP VIEW

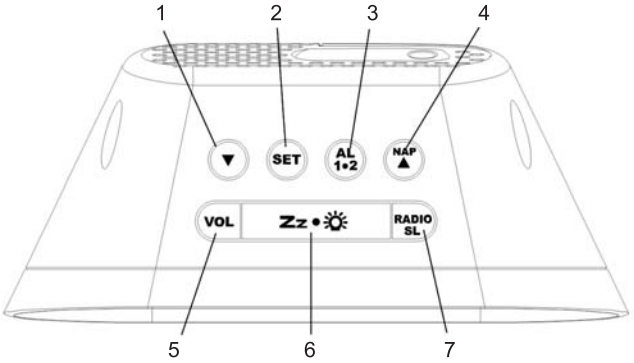

1. DOWN
2. SET/MEMORY
3. ALARM 1-2
4. NAP/UP
5. VOLUME
6. SNOOZE/DIMMER
7. RADIO/SLEEP

BACK VIEW

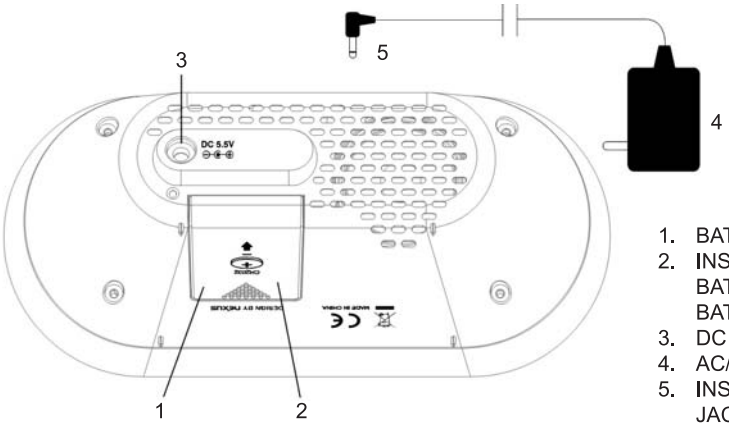

1. BATTERY DOOR
2. INSERT 1 x CR2032 BATTERY INSIDE THE BATTERY COMPARTMENT
3. DC SOCKET
4. AC/DC ADAPTOR
5. INSERT AC/DC ADAPTOR JACK

INSTALLATION

Plug the AC/DC adaptor to an AC household outlet, and then plug the DC jack to the back of the unit. Your clock radio is ready to work for you.

BACKUP BATTERY INSTALLATION

Your clock radio requires one CR2032 lithium battery (not included) to provide backup power to the clock in the event of a temporary power interruption.

1. Place your unit face down on a flat surface.
2. Slide and remove the battery cover at the bottom of your unit.
3. Insert one CR2032 lithium battery into the battery compartment with the "+" side facing up as indicated.
4. Replace the battery cover.

If AC power is interrupted, the LED display will go off and both the radio and the alarm will not function. The backup battery will keep the time and all settings of your unit. Make sure a new CR2032 lithium battery is used. A new CR2032 battery could backup your clock continuously for around 3 days.

SETTIMG TIME, 12/24HR TIME AND THE SNOOZE DURATION

1. Press **SET** once, the hour digits flash. Press ▲ or ▼ to set the current hour (hold to advance rapidly).
2. Press **SET** again, the minute digits flash. Press ▲ or ▼ to set minutes.
3. Press **SET** again, the display shows "**24Hr**" and flashes. Press ▲ or ▼ to select "**12Hr**" or "**24Hr**" time format.
4. Press **SET** again, the display shows "**05**" and flashes. Press ▲ or ▼ to select your snooze time from 5 to 60 minutes.
5. Press **SET** again or if no key pressed for approx. 10 seconds to exit the setting mode.

Note:
When 12-hour time format is selected, the **P** *(PM) icon will appear on the lower middle time display to indicate the afternoon time; there is no AM indicator.*

SETTING THE ALARMS

1. Press **AL 1.2** once, the **A1** icon and the hour digits flash. Press ▲ or ▼ to set the alarm 1 hour.
2. Press **AL 1.2** again to adjust minutes. Press ▲ or ▼ to set the alarm 1 minutes.
3. Press **AL 1.2** again, LED displays "**OFF**" (alarm off). To select wake to sound sources, press ▲ or ▼ to select:

   rd = wake-by-radio
   bu = wake-by-buzzer
   OFF = alarm off

4. Press **AL 1.2** again, the **A2** icon and the hour digits flash. Press ▲ or ▼ to set the alarm 2 hour. Repeat step 2) and 3) to set alarm 2.
5. Press **AL1.2** again or no button around 10 seconds to exit alarm setting mode. When wake-to-radio or wake-to-buzzer is selected, the related alarm is turned on, indicated by apperance of the **A1** and / or the **A2** icon on the left side of the display.

STOPPING AND RESETTING THE ALARM TO COME ON THE NEXT DAY

When alarm 1 or 2 is sounding, the related **A1 or A2** icon flashes. Press the **AL 1.2** once to stop the alarm and reset it to come on the following day. After that **A1** or **A2** icon keep lighting up on the display.

Note:
*When alarm is sounding, press the ▲ / **NAP** or **RADIO / SLEEP** will activate the nap timer or the radio and stop the alarm for the day.*

SNOOZE OPERATION (default snooze duration is 5 minutes)

When alarm is sounding, presses Zz • ☼ once, the alarm will be silenced and come on again after the set snooze duration.

Note:
If your second alarm activates while the first alarm is sounding or it is in the snooze mode, the second alarm overrides the first alarm (the first alarm is reset to come on the next day).

USING THE HI-LO DIMMER

Press Zz • ☼ to adjust the brightness of the LED display. This can only be done when the radio is off or the unit is not sounding.

USING THE NAP TIMER

The NAP Timer allows you to rest and automatically wake up in 5, 15, 30, 45, 60, 75 or 90 minutes.

1. Press ▲ / **NAP** once, the display shows the nap icon and the default naptime "**05**" (5 minutes).
2. Press ▲ / **NAP** again to select your desired naptime. It will exit to time display if no button pressed for 5 seconds.
3. The nap icon lights up when the nap timer is counting. When the nap timer reaches 0, the alarm will sound and the nap icon will flash. Press ▲ / **NAP** once to stop the nap alarm, the nap icon will go off.

SETTING UP THE FM ANTENNA

Extend the FM wire antenna fully and vary the direction for best FM reception. Do not strip, alter or attach to other antennas.

LISTENING TO THE FM RADIO

1. To turn on the radio, press **SLEEP/RADIO** once, the display shows "**ON**" and then the radio frequency readings in **Mhz**.
2. Press ▲ / ▼ to tune the radio to a desired station. Press and hold ▲ / ▼ to scan for the next clear station.
3. To adjust the volume, press **VOL** once, the display shows "**L07"**, press ▲ / ▼ to adjust volume from **L01** (minimum) to **L15** (maximum)
4. Press Zz • ☼ to turn off the radio.

Remark:
Keep your radio away from fluorescent lamps or other electronic devices, which may cause interference to the radio.

USING THE PRESET MEMORY

This clock radio features a total of 10 preset memories of FM stations. These allow you to preset your favorite stations and access them quickly.

1. Turn on the radio and select a radio station you like to memorize.
2. Press and hold the **SET** until "**ME**" appears and "**01**" flashes. Press **SET** once to store Memory 1.
3. Press ▲ or ▼ to select another station you like to memorize. Then press and hold **SET** until "**ME**" appears and "**01**" flashes. Press ▲ or ▼ once, "**02**" appears. Press **SET** once to store Memory 02.
4. Repeat Step 2 to 3 to preset memories 3 through 10.
5. To access a preset station at any time, press the **SET** one at a time while the radio is on.
6. To edit a preset station, select another station and then repeat Step 2 to 4. This overrides the original settings.

TO USE THE SLEEP TIMER

1. Press the **RADIO/SLEEP** twice to enter the sleep mode. The sleep icon "**SL**" and the sleep time "**05**" (5 minutes) and will flash on the display.
2. Press the **RADIO/SLEEP** again as needed to adjust the sleep timer from 15, 30, 45, 60, 75 or 90 minutes..
3. When the display changes back to show the time, press the **RADIO/SLEEP** twice to show the sleep time remaining.
4. The radio will play for the programmed sleep time and then shut off.
5. To turn off the radio before the sleep time has elapsed, press Zz •☼ once.

TROUBLE SHOOTING

If your clock displays irrelevant time or does not function properly, which maybe caused by electro-static discharge or other interference, unplug the DC jack to disconnect the AC power (and remove the backup battery). The clock radio will be reset to default settings and you need to set it again.

CARE OF YOUR PRODUCT

1. Place your clock radio on a stable surface, away from sources of direct sunlight or excessive heat or moisture.
2. Protect your furniture when placing your units on a natural wood and lacquered finish by using a cloth or protective material between it and the furniture.
3. Clean your unit with a soft cloth moistened only with mild soap and water. Stronger agents such as Benzine, thinner or similar materials can damage the surface of the unit. Make sure the unit is unplugged before cleaning.
4. If the unit is not to be used for a prolonged period, such as a month or longer, remove the battery to prevent possible corrosion. Should the battery compartment become corroded or dirty, clean the compartment thoroughly and replace the battery.

SPECIFICATIONS

Alarm duration	1 hour (3-minute on, 9-minute off interval)
Snooze duration	5 to 60 minutes
Nap timer duration	5 minutes
Nap timer selections	5, 15, 30, 45, 60, 90 minutes to OFF
Sleep timer selections	5, 15, 30, 45, 60, 90 minutes to OFF
Volume	L01 (minimum) to L15 (maximum)
Preset Memories of radio	10
Default settings:	
Time format	24 hour
Time	0:00
Alarm 1 and 2	0:00
Volume	L07 (Level 7)
Snooze duration	05 (5 minutes)
FM radio frequency range	87.5 – 108 MHz
Power supply	power adapter DC 5.5 V, 500 mA (included)
Backup battery	CR2032, not included
Dimensions	63 x 150 x 70 mm
Weight	175 g

SRC 150 W – white display with a grey frame
SRC 150 R – red display with a red frame

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of packaging material at a public waste disposal site.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC APPLIANCES

The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this product at your applicable collection point for the recycling of electrical & electronic equipment waste. Alternatively in some states of the European Union or other European states you may return your products to your local retailer when buying an equivalent new product. The correct disposal of this product will help save valuable natural resources and help in preventing the potential negative impact on the environment and human health, which could be caused as a result of improper liquidation of waste. Please ask your local authorities or the nearest waste collection centre for further details. The improper disposal of this type of waste may fall subject to national regulations for fines.

For business entities in the European Union

If you wish to dispose of an electrical or electronic device, request the necessary information from your seller or supplier.

Disposal in other countries outside the European Union

If you wish to dispose of this product, request the necessary information about the correct disposal method from local government departments or from your seller.

CE This product meets all the basic EU regulation requirements that relate to it.

Changes to the text, design and technical specifications may occur without prior notice and we reserve the right to make these changes.

© Copyright 2012, FAST CR, a. s.

Revision 06/2012