


正面



soundplay
V3
ACTIVE NOISE CANCELLING

USER GUIDE Bluetooth S,4 BC


Introduction

Wireless and compact, the SoundPlay V3 ANC earbuds are the perfect companions for your daily life. Their convenient, rechargeable design lets you enjoy clear stereo sound, active noise-canceling technology, and up to 5 hours of talk/play time while on the go.

What's Included:

- SoundPlay V3 ANC earbuds
- Charging case
- USB-C charging cable
- Small, medium & large earbud tips
- User Guide

Product Overview & Contents

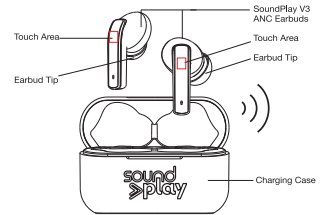


Features:

- Active Noise-Canceling Technology
- 5 Hours of Play & Talk Time
- Bluetooth 5.4 Compatibility
- Auto-Pairing to Your Devices
- IPX4 Waterproof Level


Pairing to Your Devices

1. Remove the SoundPlay earbuds from the case.
2. Open the Bluetooth pairing list on your device and click on "SOUNDPLAY V3 ANC."
3. You will hear a voice prompt say "Device Connected."
4. Your earbuds should now be paired to your mobile device and ready to be used.

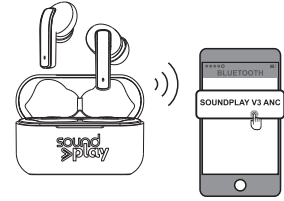

Charging the Earbuds & Case

- Place the SoundPlay earbuds inside of the charging case, and they will automatically begin charging.
- To charge the charging case, insert one end of the included USB-C cable into the charging port, and the other end into a USB power source.
- The LED indicator light on the charging case will flash green while the case is charging, and turn solid green once it is fully charged.

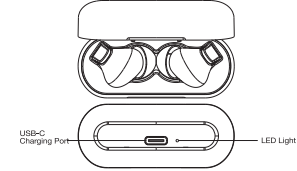

Power ON

- Remove your earbuds from the charging case. They will automatically power on, and you will hear a voice prompt announce the earbuds' current battery percentage.
- Alternatively, touch and hold the RIGHT or LEFT earbud for 2 seconds, or until you hear a voice prompt announce the earbuds' current battery percentage.

Power OFF

- Place your earbuds inside of the charging case.
- Alternatively, touch and hold the RIGHT or LEFT earbud for 5 seconds, or until you hear "Power Off."

Answering a Call

- Touch the RIGHT or LEFT earbud once.

Ending a Call

- Touch the RIGHT or LEFT earbud 2 times.

Rejecting a Call

- Touch and hold the RIGHT or LEFT earbud for 2 seconds, or until you hear a prompt sound.

Play/Pause

- Touch the RIGHT or LEFT earbud 2 times.

Next Song

- Touch the RIGHT earbud 3 times.

Rewind/Previous Song

- Touch the LEFT earbud 3 times.

ANC Mode


- Touch and hold the RIGHT earbud for 2 seconds, or until you hear "Noise Cancelling ON" or "Noise Cancelling OFF."

Voice Assistant

- Touch and hold the LEFT earbud for 2 seconds, or until you hear a prompt sound to activate the Voice Assistant/Siri function. This function may not work with all devices.

Resetting the SoundPlay V3

In the event that the earbuds are not working properly, a reset may be needed to fix the issue.



1. Remove both earbuds from the case.
2. Make sure both earbuds are powered off.
3. Touch and hold both the LEFT and RIGHT earbuds for 10 seconds, or until you hear "Device Pairing." This clears all previous connections to other devices.
4. The earbuds will start auto-pairing to each other after the prompt "SoundPlay Connected" is heard.
5. Follow the instructions in the "Pairing to Your Devices" section to pair to a new device.

Specifications

Battery Capacity (Earbuds)	40mAh
Battery Capacity (Charging Case)	500mAh
Charging Port Type	USB-C
Input Power	5V/0.4A
Earbuds Charging Time	approx. 1.5 hrs.
Case Charging Time	approx. 2 hrs.
Playing Time (ANC is off)	approx. 5 hrs.
Playing Time (ANC is on)	approx. 5 hrs.
Frequency	20Hz - 20KHz

Important Safeguards

- Do not use this unit for anything other than its intended purpose.
- Keep the unit away from heat sources, direct sunlight, humidity, and liquids.
- Do not expose the device to extremely high or low temperatures, as doing so may damage the battery.
- To prevent electric shocks, injuries to yourself, and/or damage to the unit, do not operate this device if it has been exposed to liquids.
- Do not use the unit if it has been dropped or damaged in any way.
- Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.
- Keep the unit out of the reach of children. This unit is not a toy.

BATTERY DISPOSAL:

This product contains a lithium polymer battery. Lithium polymer batteries are environmentally safe when fully discharged. Please refer to your local and state laws for battery disposal procedures.


FCC RULES:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

If you have any questions or issues with product use and/or care, please contact tzumi Technical Support at: **1-855-G0-TZUMI** or **support@tzumi.com**.




SoundPlay V3 ANC Earbuds, Distributed by tzumi® Inc, NY, NY 10016.
©Copyright 2025. All Rights Reserved. Made in China. All other trademarks and trade names are the property of their respective owners. Subject to change without prior notice.

折叠尺寸：宽100*高54mm

展开尺寸：宽293*高105mm 材质：128双铜 正反面印刷

反面



soundplay
V3
CANCELACIÓN ACTIVA DEL RUIDO

GUÍA DEL USUARIO

Bluetooth 5.4 BC


Introducción

Inalámbricos y compactos, los auriculares SoundPlay V3 de cancelación activa del ruido (ANC) son los compañeros perfectos para su vida diaria. Su diseño conveniente y recargable te permite disfrutar de un sonido estéreo nítido, la tecnología de cancelación activa del ruido y hasta 5 horas de conversación/reproducción mientras estás en movimiento.

Lo que incluye:

- Auriculares SoundPlay V3 ANC
- Estuche de carga
- Cable de carga USB-C
- Puntas de auriculares pequeñas, medianas y grandes
- Guía del usuario


Descripción y contenido del producto

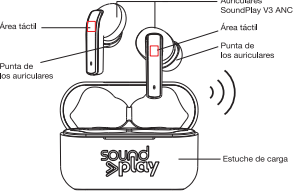

Características:
Tecnología de cancelación activa del ruido
5 horas de tiempo de conversación y reproducción
Compatibilidad con Bluetooth 5.4
Emparejamiento automático con sus dispositivos
Nivel de impermeabilidad IPX4


Emparejamiento con tus dispositivos

1. Extrae los auriculares SoundPlay del estuche.
2. Abre la lista de emparejamiento Bluetooth de tu dispositivo y haz clic en "SOUNDPLAY V3 ANC".
3. Oírás una voz que dice "Device connected" (Dispositivo conectado).
4. Tus auriculares deberían estar ahora emparejados con tu dispositivo móvil y listos para ser utilizados.

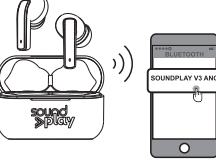

Cargar los auriculares y el estuche

- Coloca los auriculares SoundPlay dentro del estuche de carga y comenzarán a cargarse automáticamente.
- Para cargar el estuche de carga, inserta en el puerto de carga un extremo del cable USB-C incluido y el otro extremo en una fuente de alimentación USB.
- El indicador LED del estuche de carga parpadeará en verde mientras se carga y se iluminará en verde fijo cuando esté completamente cargado.

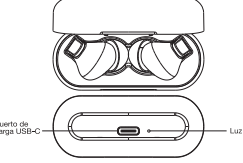

Encender

- Retira los auriculares del estuche de carga. Se encenderán automáticamente y oírás una voz anunciando el porcentaje de batería actual de los auriculares.
- Alternativamente, toca y mantén pulsado el auricular DERECHO o IZQUIERDO durante 2 segundos, o hasta que oigas una voz anunciando el porcentaje de batería actual de los auriculares.

Apagar

- Coloca los auriculares dentro del estuche de carga.
- Alternativamente, toca y mantén pulsado el auricular DERECHO o IZQUIERDO durante 5 segundos, o hasta que oiga "Power Off" (Apagado).

Responder a una llamada

- Toca el auricular DERECHO o IZQUIERDO una vez.

Finalizar una llamada

- Toca el auricular DERECHO o IZQUIERDO 2 veces.

Rechazar una llamada

- Mantén pulsado el auricular DERECHO o IZQUIERDO durante 2 segundos o hasta que oigas un sonido de aviso.

Reproducir/pausar

- Toca el auricular DERECHO o IZQUIERDO 2 veces.

Siguiente canción

- Toca el auricular DERECHO 3 veces.

Rebobinar/canción anterior

- Toca el auricular IZQUIERDO 3 veces.

Modo de cancelación del ruido (ANC)


- Mantén pulsado el auricular DERECHO durante 2 segundos o hasta que oigas "Noise Cancelling ON" (Cancelación del ruido ENCENDIDO) o "Noise Cancelling OFF" (Cancelación del ruido APAGADO).

Asistente de voz

- Toca y mantén pulsado el auricular IZQUIERDO durante 2 segundos, o hasta que oigas un sonido de aviso para activar la función Asistente de voz/Siri. Es posible que esta función no funcione con todos los dispositivos.

Cómo restablecer SoundPlay V3

En caso de que los auriculares no funcionen correctamente, puede ser necesario restablecerlos para solucionar el problema.



1. Extrae ambos auriculares del estuche.
2. Asegúrate de que ambos auriculares estén apagados.
3. Mantén pulsados los auriculares IZQUIERDO y DERECHO durante 10 segundos, o hasta que oigas "Device Pairing" (Emparejamiento con dispositivo). Esto borra todas las conexiones anteriores con otros dispositivos.
4. Los auriculares comenzarán a emparejarse automáticamente entre sí después de escuchar la indicación "SoundPlay Connected" (SoundPlay conectado).
5. Sigue las instrucciones de la sección "Emparejamiento con tus dispositivos" para emparejarlos con un nuevo dispositivo.

Especificaciones

Capacidad de la batería (auriculares)	40 mAh
Capacidad de la batería (estuche de carga)	500 mAh
Tipo de puerto de carga	USB-C
Potencia de entrada	5 V / 0,4 A
Tiempo de carga de los auriculares:	1,5 horas aprox.
Tiempo de carga del estuche	2 horas aprox.
Tiempo de reproducción (ANC desactivado)	5 horas aprox.
Tiempo de reproducción (ANC activado)	5 horas aprox.
Frecuencia	20 Hz ~ 20 KHz.

Medidas de seguridad importantes

- No utilices esta unidad para fines distintos de los previstos.
- Mantén la unidad alejada de fuentes de calor, luz solar directa, humedad y líquidos.
- No expongas el aparato a temperaturas extremadamente altas o bajas, ya que podría dañar la batería.
- Para evitar descargas eléctricas, lesiones personales y/o daños en la unidad, no utilices este dispositivo si ha estado expuesto a líquidos.
- No utilices la unidad si se ha caído o sufrido algún daño.
- Las reparaciones de equipos eléctricos solo deben ser realizadas por un electricista cualificado. Las reparaciones inadecuadas pueden poner en grave peligro al usuario.
- Mantén la unidad fuera del alcance de los niños. Esta unidad no es un juguete.

ELIMINACIÓN DE LA BATERÍA:
Este producto contiene una batería de polímero de litio. Las baterías de polímero de litio son seguras para el medio ambiente cuando están completamente descargadas. Consulta las leyes locales y estatales para conocer los procedimientos de eliminación de baterías.


NORMATIVA DE LA FCC:
Este dispositivo cumple con el Apartado 15 de la Normativa de la FCC. El funcionamiento está sujeto a las siguientes dos condiciones: (1) este dispositivo no puede causar interferencias perjudiciales, y (2) este dispositivo debe admitir las interferencias recibidas, incluso interferencias que causen un funcionamiento no deseado. Advertencias: los cambios y modificaciones a esta unidad que no sean aprobados de forma expresa por la parte responsable del cumplimiento, podrían invalidar la autoridad del usuario de operar el equipo.

NOTA: Se han realizado pruebas en este equipo y se ha comprobado que cumple con los límites establecidos para los dispositivos digitales de clase B, de acuerdo con el Apartado 15 de la Normativa de la FCC. Estos límites están diseñados para proporcionar una protección razonable contra las interferencias perjudiciales en una instalación residencial. Este equipo genera, utiliza y puede irradiar energía de radiofrecuencia, y si no se instala y se utiliza de acuerdo con las instrucciones suministradas, podría ocasionar interferencias perjudiciales para las comunicaciones por radio.

Sin embargo, no hay garantía de que no vayan a ocurrir interferencias en una instalación en particular. Si este equipo causa interferencias perjudiciales en la recepción de radio o televisión, que se puedan determinar al apagar y encender el equipo, se anima al usuario a tratar de corregir la interferencia tomando una o más de las siguientes medidas:

- Reorientar o reubicar la antena receptora.
- Aumentar la separación entre el equipo y el receptor.
- Conectar el equipo a un tomacorriente de un circuito distinto a aquel en el que está conectado el receptor.
- Pedir ayuda al distribuidor o a un técnico de radio/TV experimentado.

Si tienes alguna otra pregunta o problema con el uso y/o cuidado del producto, comunícate con el Soporte técnico de tzumi en:
1-855-60-TZUMI o support@tzumi.com.



live awesome!

Auriculares SoundPlay V3 ANC. Distribuidos por tzumi® Inc. NY, NY 10016. ©Copyright 2025. Todos los derechos reservados. Hecho en China. Todas las demás marcas y nombres comerciales pertenecen a sus respectivos propietarios. Sujeto a cambios sin previo aviso.

折叠尺寸：宽100*高54mm

展开尺寸：宽293*高105mm 材质：128双铜 正反面印刷



<p>FCC Warning 15.19 Labeling requirements. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.</p> <p>15.21 Information to user. Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.</p> <p>15.105 Information to the user.Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.</p>	<p>FCC RF Exposure Warning Statement:This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment can be used in portable exposure conditions.</p> <p>FCC ID:2AON7-RT50A2</p>
<p>This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:</p> <ul style="list-style-type: none"> -Reorient or relocate the receiving antenna. -Increase the separation between the equipment and receiver. -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. -Consult the dealer or an experienced radio/TV technician for help. 	

