



Panasonic


Operating Instructions
(Household use) Nose/Ear/Facial Trimmer Head
Model No. ER-CNT1




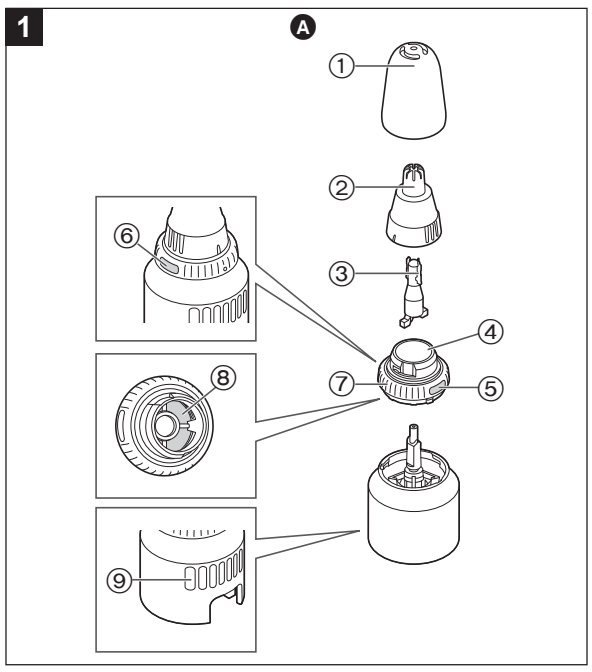


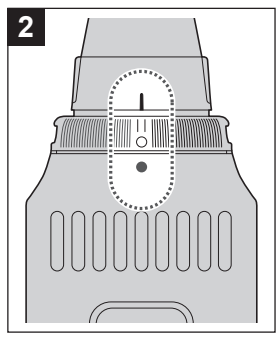


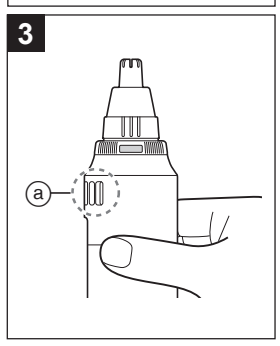


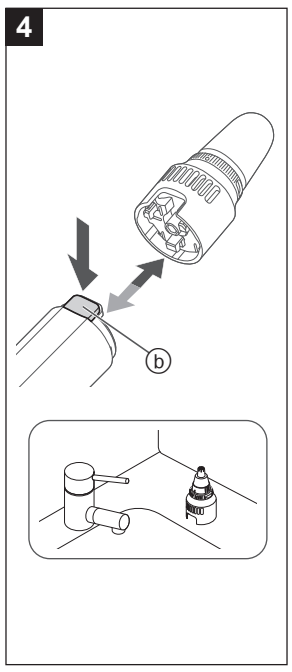


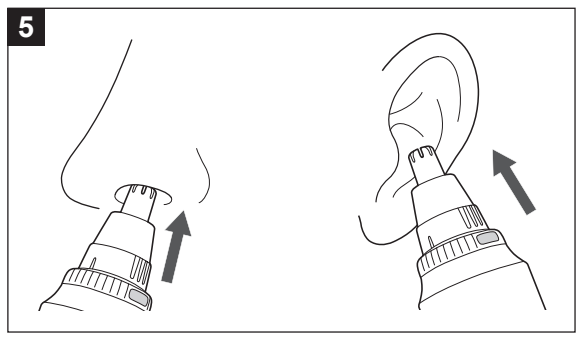


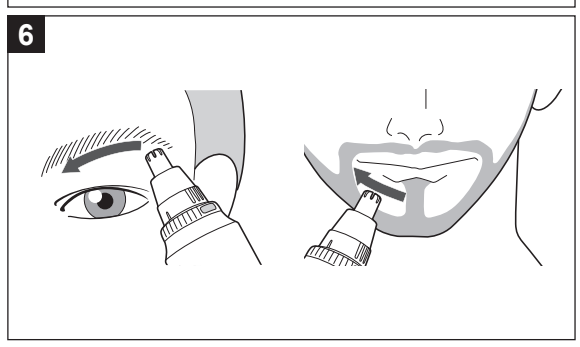


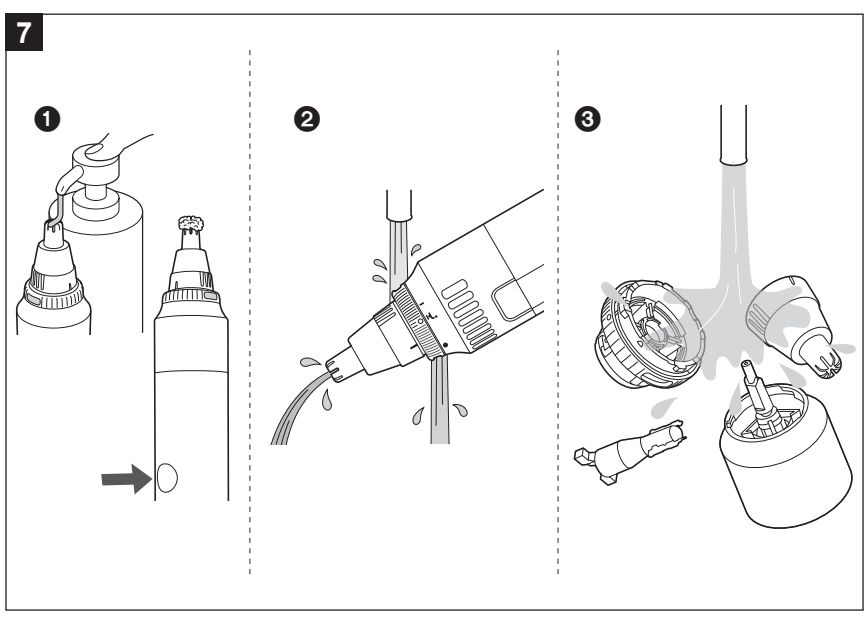

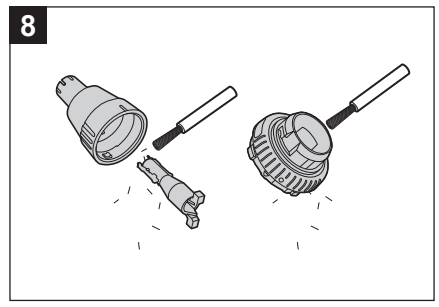

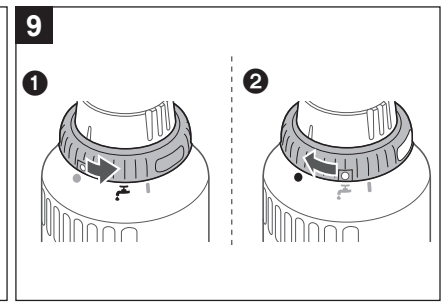

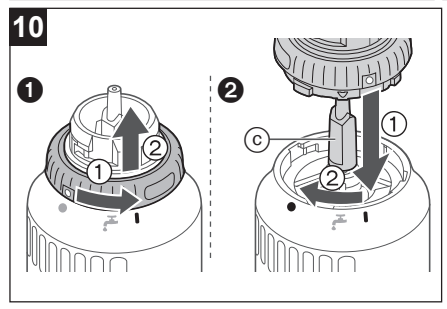

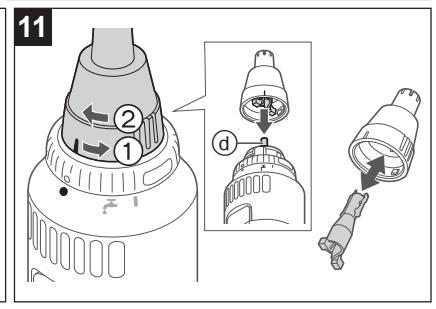

Safety precautions

Follow these instructions.

To prevent accidents, injuries or damage to property, please follow the instructions below.

■ **The following chart indicates the degree of damage caused by improper operation.**

⚠ **WARNING**	Indicates potential hazard that could result in serious injury or death.
⚠ **CAUTION**	Indicates potential hazard that could result in minor injury or property damage.

⚠WARNING

►**Preventing accidents**

- **Do not place within reach of children or infants. Do not let them use it.**
  - Putting parts or accessories in the mouth may cause an accident or injury.

⚠CAUTION

►**Protecting the skin**

- **Do not press the blade firmly against the skin.**
- **Do not press the blade with excessive force or insert too deeply into your nostril/ear canal.**
- **Do not touch the blade section (metallic section) of the inner blade.**
- **Do not use this appliance for any purpose other than to trim nose hair, ear hair, outline eyebrows, moustache or beard.**
  - Doing so may cause injury to skin or hand.
- **Check the blades are not damaged or deformed before use.**
  - Failure to do so may cause injury to the skin.

►**Note the following precautions**

- **Do not share with your family or other people.**
  - Doing so may result in infection or inflammation.

Important information

- Note the following precautions to avoid malfunction or deformation.
  - Do not bring the blade into contact with hard objects.
  - Do not drop or hit against other objects.
  - Be sure to place the protective cap on the head when carrying around or storing.

Parts identification (Fig. 1)

Ⓐ **Head**
① Protective cap
② Outer blade
③ Inner blade
④ Trimmings box
⑤ Water inlet
⑥ Water outlet
⑦ Wash switch ring
⑧ Filter
⑨ Exhaust hole

Before use (Fig. 2)

Be sure to close the water inlet of the wash switch ring during use. Otherwise, the main body cannot provide sufficient suction power.
→ Check that the marks of "▯", "○" and "●" align.

How to use

- Clean the appliance after use.

1 **Mount the head to the main body until it clicks.**

2 **Remove the protective cap and hold the main body so as not to block the exhaust hole (ⓐ). (Fig. 3)**

3 **Turn on the power before putting the head in your nostril.**
- Cut hairs using the tip of the outer blade (metallic part).
- The outer blade surface may get a little warm during use, but performance will not be diminished.

Note
- The use time after a full charge is as follows.
  ER-CBL1: 80 minutes
  ER-CBN1: 60 minutes
  (Based on dry using at 20 °C – 30 °C [68 °F – 86 °F])
  The operating time may differ depending on the frequency of use and the operating method.

Quick charge (ER-CBL1 only)
Even though the battery runs out, you can use for 5 minutes after 3-minute charge. (This will differ depending on usage.)

Removing and mounting the head (Fig. 4)

- Make sure that the main body is turned off.

►**Remove**
Remove the head while pushing the head release button (ⓑ).
- Stand the head when it is removed.

►**Mount**
Mount the head to the main body until it clicks.

Trimming your nose hair and ear hair (Fig. 5)

1 **Insert the tip of the outer blade into your nostril or ear canal.**
- Insert it slowly so as not to injure your nostril or ear canal.

2 **Cut the nose hair and ear hair by moving the main body.**
- Some trimmings may remain inside your nostril or ear canal after cutting, so remove them using a tissue or similar.

Outlining your eyebrows, moustache, or beard (Fig. 6)

1 **Apply the tip of the outer blade to the hair (eyebrow, moustache or beard) you would like to cut.**

2 **Cut the hair by moving the appliance slowly against the direction of hair growth.**
- You cannot trim the hair to length with this head.
- It is not suitable for the hair below 0.5 mm (1/64″).

Maintenance

- Make sure that the main body is turned off.
- After cleaning, be sure to store with the blades, the trimmings box and the protective cap attached.

How to clean

► With water

1. Apply some hand soap and some water to the outer blade.
2. Turn on the power and turn off the power after 10 seconds. (Fig. 7-❶)

To remove light dirt	To remove heavy dirt
3. Open the water inlet and turn on the power again. ▪ If the trimmings box is removed, open the water inlet after attaching the trimmings box. 4. Run water down the water inlet, rinse well and turn off. (Fig. 7-❷)	3. Remove the head,the blades and the trimmings box. 4. Rinse them with running water. • Cover the drainage outlet of washbasin to prevent the inner blade from flowing away. (Fig. 7-❸)

5. Wipe off the water with a dry cloth and dry it well.
▪ It will dry faster with the blades and the trimmings box removed.

Notes
- Note the following precautions to avoid malfunction and damage.
  - Do not use hot water or any detergents other than hand soap.
  - Do not wipe with thinner, benzine, alcohol etc.

► With the cleaning brush (Fig. 8)
1. Remove the head, blades and the trimming box.
2. Brush off any hair trimmings from the head, blades and the trimming box.
▪ Be careful not to deform the inner blade.
▪ Be careful not to damage the filter.

How to open and close the water inlet

► Open
Rotate the wash switch ring until its "○" mark aligns with the "🚰" mark of the head to open the water inlet. (Fig. 9-❶)

► Close
Rotate the wash switch ring until its "○" mark aligns with the "●" mark of head. (Fig. 9-❷)

Removing and mounting the trimmings box

► Remove (Fig. 10-❶)
Rotate the wash switch ring until its "○" mark aligns with the " ▌ " mark of the head.

► Mount (Fig. 10-❷)
1. Align the "○" mark of the trimmings box with the " ▌ " mark of the head.
▪ Be careful not to damage the filter with the shaft (ⓒ).
2. Rotate the wash switch ring until its "○" mark aligns with the "●" mark of the head.

Removing and mounting the blade (Fig. 11)

► Outer blade
Remove
Rotate the outer blade in the direction of the arrow and remove the blade. (①)

Mount
Insert the head's shaft (ⓓ) into the hole of the inner blade.
Rotate the outer blade to align its " ▯ "mark with the "●" mark of the head. (②)

► Inner blade
Remove
Pull to remove the inner blade.

Mount
Insert the inner blade straight into the outer blade.

Troubleshooting

Problem	Action
The cutting performance has reduced.	► Replace the blade.
There is an odd odour.	► Clean the inner blade.
Blade does not move/rotate smoothly.	► Clean the inner blade.
The suction power is low.	► Clean the inner blade. ► Clean the trimmings box. ► Close the water inlet.

If the problems still cannot be resolved, contact your dealer or a service center authorized by Panasonic for repair.

Personal Care & Beauty Care Products

FOR USA ONLY

30-Day Quality Satisfaction Guarantee

If you are dissatisfied with any Panasonic Personal Care & Beauty Care Products for any reason, simply return it to the place of purchase with a dated proof of purchase, in the original packaging, with all accessories, parts and instructions, within 30 days of the date of purchase, for a full refund, or call Panasonic at 1-800-338-0552. Abuse or misapplication of this product voids the guarantee.

PRODUCT REGISTRATION
(U.S. customers only)

Go to www.panasonic.com/register and register your product now to receive these benefits:

Safety Notification
We contact our customers in case of recall

Owner Verification
Proof of purchase in case of product theft or loss

Efficient Warranty Service
In case there is a problem with your product

Special Offers and Promotions from Panasonic

FOR YOUR CONVENIENCE, WE HAVE ESTABLISHED A TOLL-FREE (IN USA ONLY) NATIONAL ACCESSORY PURCHASE HOTLINE AT 1-800-332-5368.

IN USA CONTACT:
Panasonic Corporation of North America
Two Riverfront Plaza, Newark, NJ 07102-5490

Service • Assistance • Accessories

Call 1-800-338-0552 (In USA)
https://shop.panasonic.com/personal-care
https://shop.panasonic.com/support
https://www.panasonic.com

© Panasonic Corporation 2022

Printed in Thailand
ER971WCNT11X
Ⓕ EN F0222-0