WALI

Sound Bar Wall Mount

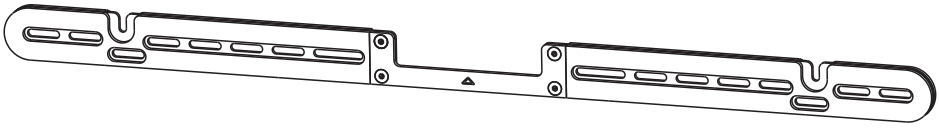

SON003-W
SON003-B

support@walielectric.com

WARNING!

If you do not understand these directions, or if you have any doubts about the safety of the installation, please call a qualified technician. Check carefully to make sure there are no missing or defective parts. Improper installation may cause damage or serious injury. Do not use this product for any purpose that is not explicitly specified in this manual. Do not exceed weight capacity. We cannot be liable for damage or injury caused by improper mounting, incorrect assembly or inappropriate use.

⚠ TIPOVER WARNING

SERIOUS OR FATAL CRUSHING INJURIES CAN OCCUR FROM TIPOVER. TO HELP PREVENT TIPOVER:

- *NEVER ALLOW CHILDREN TO CLIMB, STAND, HANG, OR PLAY ON ANY PART OF MONITOR OR STAND.*
- *USE TIPOVER RESTRAINT OR ANCHOR STAND TO WALL.*

USE OF TIPOVER RESTRAINTS MAY ONLY REDUCE, BUT NOT ELIMINATE RISK OF TIP OVER.

SMALL PARTS- NOT FOR CHILDREN UNDER 3 YEARS. ADULT SUPERVISION IS REQUIRED.

Supplied Parts List

Bracket
A (x2)

Center Plate
B (x1)



Bolt
C (x4)

Knob
D (x2)

Allen Key
E (x1)

ST4.8x50 Screw
W-A (x4)

Φ8x40 Anchor
W-B (x4)

Step 1

Attach the Center Plate Ⓑ to the Brackets Ⓐ with Bolt Ⓒ, and tighten using Allen Key Ⓔ.

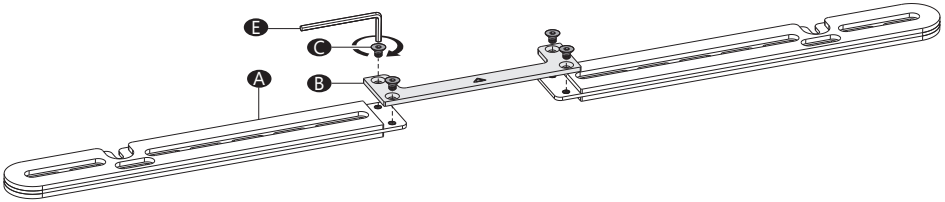

Step 2

Option A Solid Wood Wall

1. Align the top edge of the mount with the bottom of your TV and keep 5.5 inch away from your TV and mark the 4 screw locations. Making sure the arrow in the center is pointed into the center of TV.





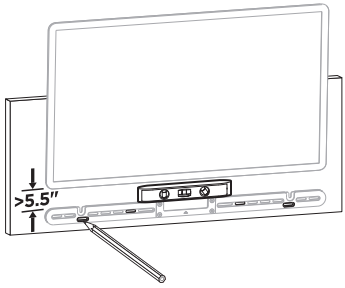

2. Drill holes at the marked positions.

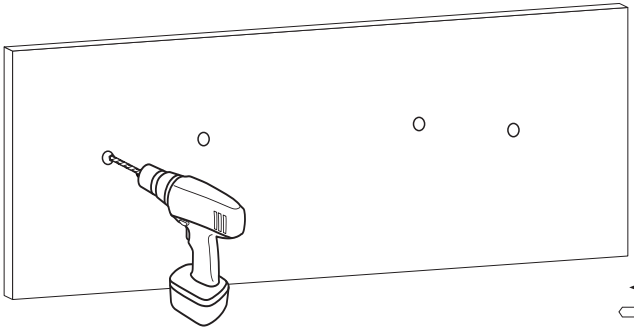

3. Place the wall mount bracket over the marked screw locations. Insert Screws W-A into the mounting holes and tighten using a screwdriver.

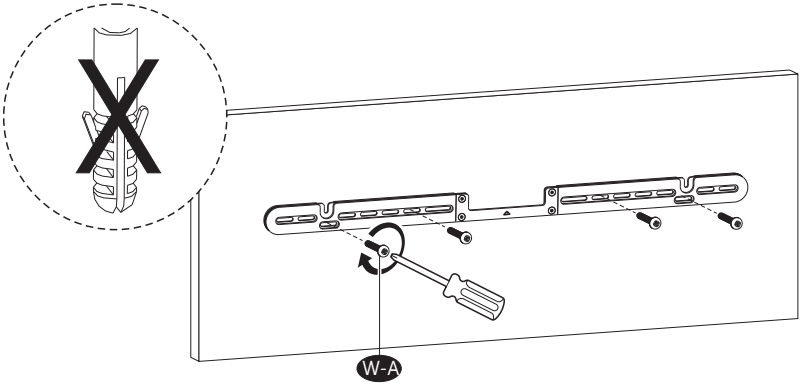

Step 2

Option B Wood Stud

1. Align the top edge of the mount with the bottom of your TV and keep 5.5 inch away from your TV and mark the 2 screw locations. Making sure the arrow in the center is pointed into the center of TV.

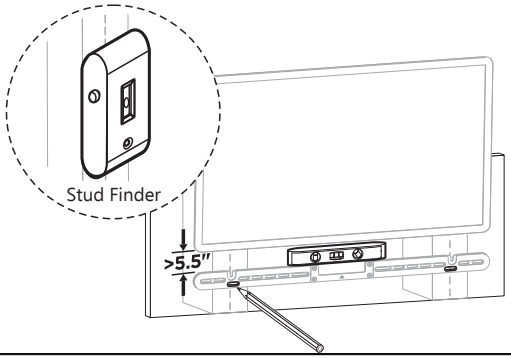

2. Drill holes at the marked positions.

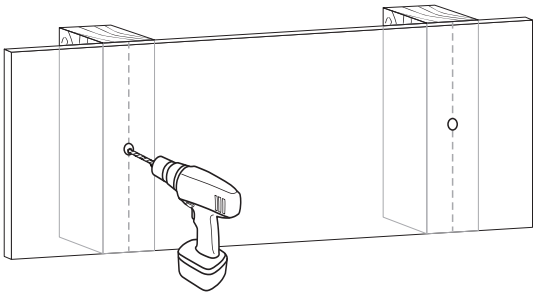

3. Place the wall mount bracket over the marked screw locations. Insert Screws W-A into the mounting holes and tighten using a screwdriver.

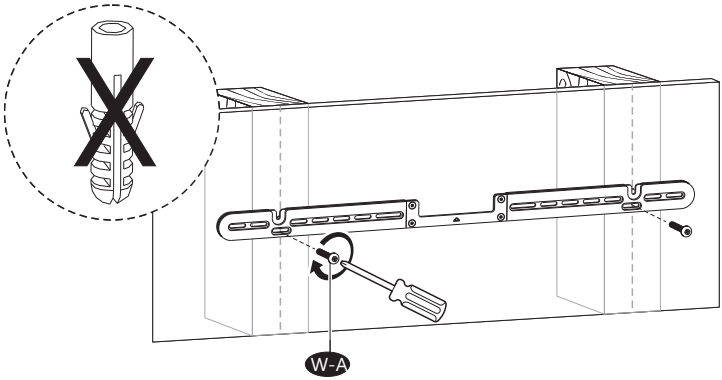

Step 2

Option C Concrete/Brick Wall

1. Align the top edge of the mount with the bottom of your TV and keep 5.5 inch away from your TV and mark the 4 screw locations. Making sure the arrow in the center is pointed into the center of TV.

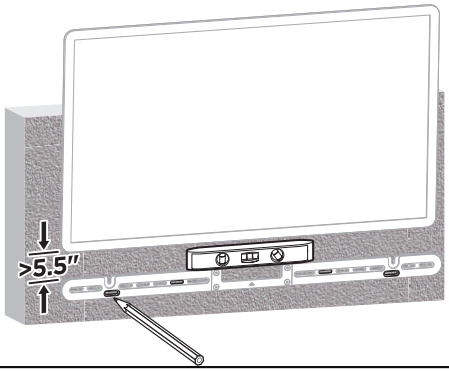

2. Drill holes at the marked positions.

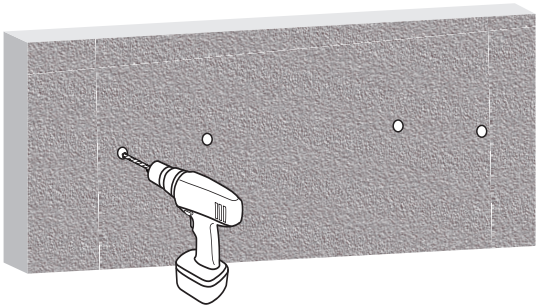

3. Insert the Anchors W-B into the mounting holes. Place the wall mount bracket over the marked screw locations. Insert Screws W-A into the mounting holes and tighten using a screwdriver.

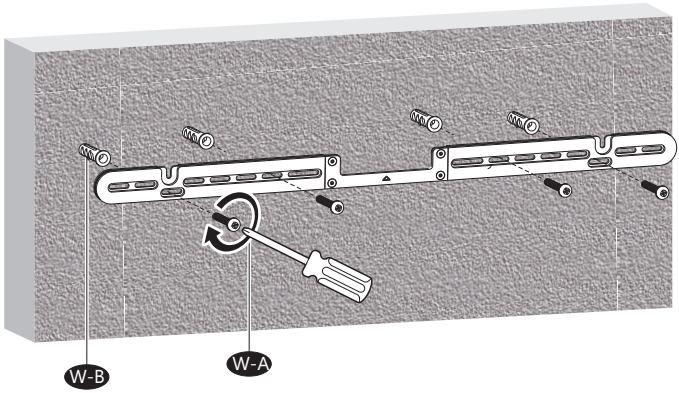

Step 3

Screw the 2 Knobs Ⓓ into the back of soundbar until they are fully tightened.

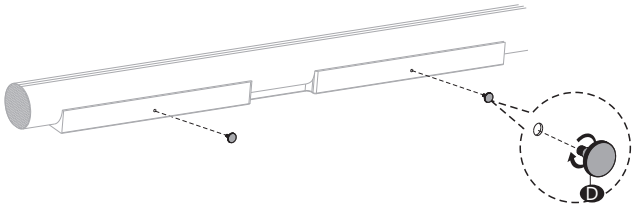

Step 4

Connect the power and HDMI cabels to the back of the soundbar. Note: if you are connecting the cabels to the TV at this time, be sure to plug the HDMI cabel into HDMI ARC port on your TV.

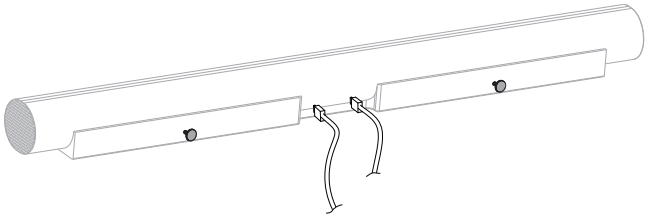

Step 5

Slide the soundbar down so the knobs fit into the slots on the bracket. Make sure the touch controls are facing up and SONOS ARC is fully seated.

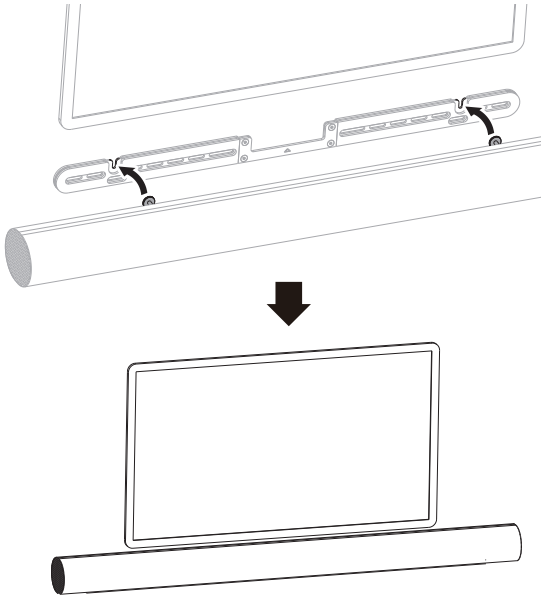

Thank you for choosing us!

We support the technology that brings your home to life.
We offer high quality products, professional customer service,
and extensive technical support.

If you have any questions,please contact us.

1-844-SATTLER (18447288537) support@walielectric.com www.walielectric.com