
DREO | Air Circulator Fan
CF307

# USER MANUAL

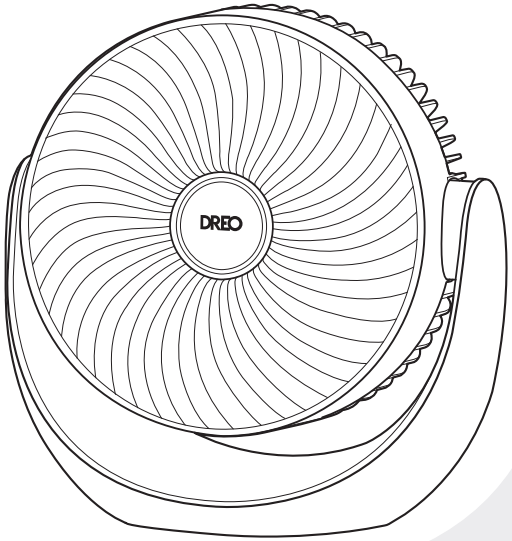

# Thanks for Choosing DREO!

Your support means the world to us.
We hope you enjoy our product as much as we did creating it.

# CONTENTS


01
IMPORTANT SAFETY INSTRUCTIONS
1-2

02
KNOWING YOUR AIR CIRCULATOR FAN
3

03
USING YOUR AIR CIRCULATOR FAN
4-6

04
CLEANING AND MAINTENANCE
7-11


05
TROUBLESHOOTING
12

06
DREO CUSTOMER CARE
13-16

# IMPORTANT SAFETY INSTRUCTIONS 01



READ ALL CAUTIONARY MARKINGS ON THE APPLIANCE AND SAFETY INSTRUCTIONS IN THE USER MANUAL BEFORE USE.

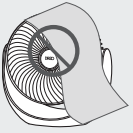

**Do not** cover the air inlet and outlet while in operation.



**Do not** use the air circulator near flammables and combustibles.

## General Safety

1. Children shall not play with the appliance. Cleaning and maintenance shall not be performed by children without supervision.
2. Use the appliance as described in the user manual only. Any other use not recommended in the user manual may cause fire, electrical shock, or personal injury.
3. This appliance can be used by children aged above 8 years and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of this appliance in a safe way and understand the hazards involved.

## Operation Safety

1. Place the appliance on a flat, dry surface before use.
2. **Do not** immerse in water and any other liquids.
3. **Do not** use the appliance until the base is installed.
4. **Do not** insert your fingers, pencil and any other objects into the grilles under any circumstances.
5. **Do not** dismantle, repair, or modify. All servicing should be performed by qualified personnel.

## Electricity Safety

1. Make sure that the voltage of your electricity supply is the same as that indicated on the appliance.
2. Always unplug before cleaning or leaving the appliance unused for a long period of time. Keep your hands dry when plugging/unplugging.

3. Do not operate any air circulator with a damaged cord or plug. Discard air circulator or return to an authorized service facility for examination and/or repair.
4. Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
5. **WARNING:** To Reduce The Risk Of Fire, Electric Shock Or Injury To Persons, Do Not Use Replacement Parts That Have Not Been Recommended By The Manufacturer (e.g. Parts Made At Home Using a 3D Printer).
6. **WARNING:** To Reduce The Risk Of Fire Or Electric Shock, Do Not Use This Air Circulator With Any Solid-State Speed Control Device.
7. Turn off the appliance before plugging.
8. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.
9. This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded or returned to an authorized service facility for examination and/or repair.
10. Risk of fire. Do not replace attachment plug. Contains a safety device (fuse, AFCI, LCDI) that should not be removed. Discard product if the attachment plug is damaged.

# FOR HOUSEHOLD USE ONLY
# READ AND SAVE THESE INSTRUCTIONS

## Gentle Reminder:



Check the appliance regularly and refer to TROUBLESHOOTING or contact our customer support if it shows any of the following signs:

- Power cord or plug is damaged.
- Loud noise, unusual smell or excessive heat.


## Specifications

| | |
|---|---|
| Model No. | DR-HAF007 |
| Input | AC 120V 60Hz |
| Rated Power | 40W |

# KNOWING YOUR AIR CIRCULATOR FAN

# 02


## Package Contents

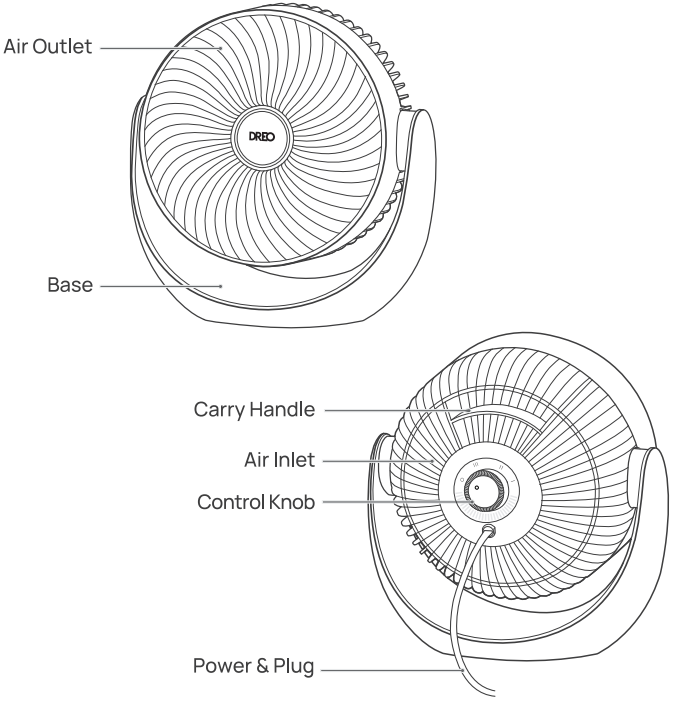

# USING YOUR AIR CIRCULATOR FAN

# 03


## Getting the Most out of Your Air Circulator Fan

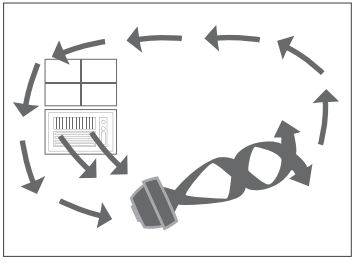

### Summer:

**Use with Air Conditioner**


Position the air circulator in front of your AC to circulate cold air and provide better cooling.

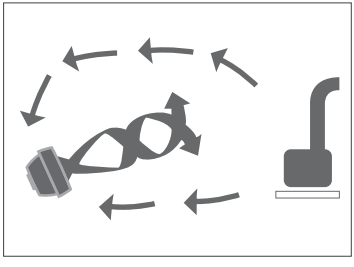

### Winter:

**Use with Heater**

Send the heat to corner of the room and circulate warm air faster.

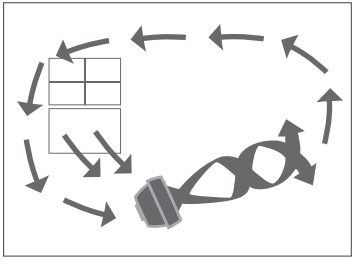

### Spring & Fall:

**Circulation**

Make the indoors as fresh and pleasant as the outdoors

# Wall Mounting Your Fan (Optional)

**Tools Needed:**

Included:




2 x Wall Anchors



2 x Screws

Not Included:



Electric Drill (15/64", 96 mm)




Phillips Screwdriver (15/64", 150 mm)




Pencil

1. Find a brick or concrete wall and mark the position where the fan will be mounted.


2. Make sure there is a 85.6mm/3.37" distance between the two holes.

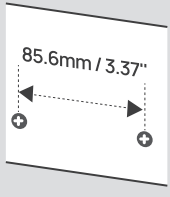



3. Screw the plastic anchors onto the wall with a drill. Leave 1/3" of the screws exposed.

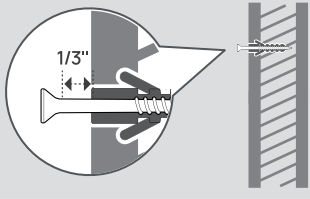


4 Line up the holes on the base of the fan with the screws on the wall and hang the fan.

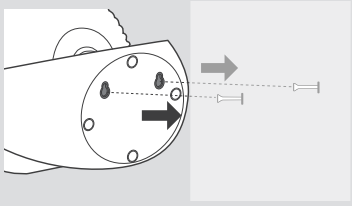

## General Operations

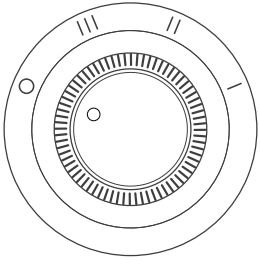


Plug in and twist the control knob clockwise to adjust the fan speed to High, Medium, and Low.

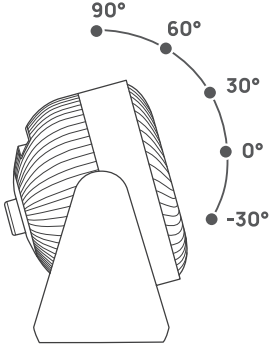


Tilt the fan head by hand to the desired angle.

# CLEANING AND MAINTENANCE

# 04

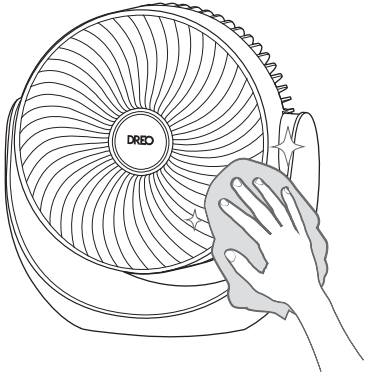


## Outer Surface

Gently wipe off the dust with a soft, dry cloth.

## CAUTION


1. Always unplug the air circulator before any cleaning or maintenance to avoid the risk of fire, electric shock, or injury to persons.
2. Do not immerse in water or get water inside the motor housing.
3. Do not use any chemical agents when cleaning the fan.
4. Store in a cool, dry place and cover it to protect from dust.
5. It's recommended to disassemble and clean under professional guidance.

## Front Grille and Blades

**WARNING**

To reduce the risk of electrical shock and injury to persons, turn off and unplug the appliance before any cleaning and maintenance.


1

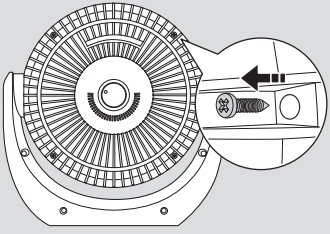

Place the fan upside down on a flat surface.


Remove the four screws on the back using a screwdriver.

2

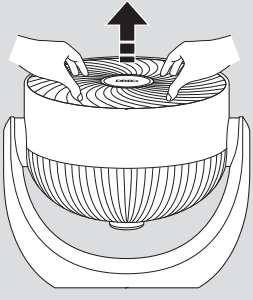


Turn the fan right side up and remove the front grille.

3

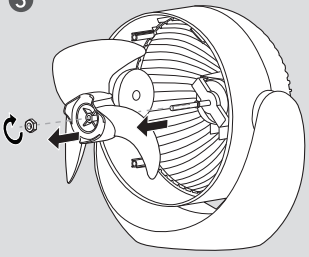

Use a wrench to loosen the nut on the blade assembly by rotating it as shown, then remove the assembly from the shaft.


4

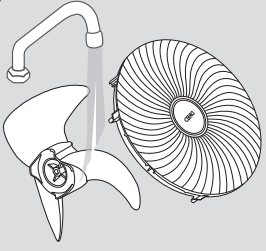

Rinse the blades and the front grille under running water or with a clean, damp cloth.


Note: Ensure all parts are completely dry before reassembling your fan.

5

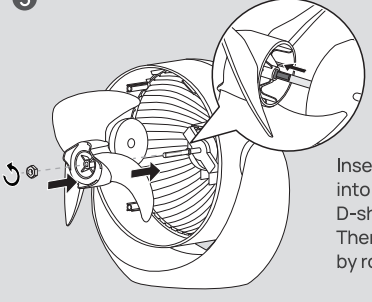


Insert the blade assembly back into the shaft by aligning the D-shaped points in the center. Then, tighten the nut back in place by rotating it as shown.

6

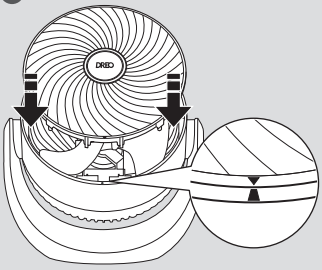


Align the front grille with the right point on the casing.


7

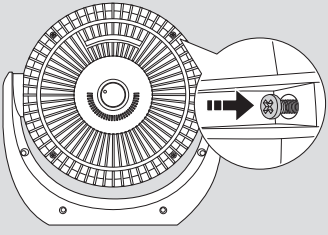

Carefully turn the fan upside down again, and install the four screws back in place.

## User Servicing Instructions (Fuse)

This appliance features a fused safety plug that protects against overload or short-circuit situations. If the fuse blows, please cut off power and follow the below instructions or consult a qualified electrician.

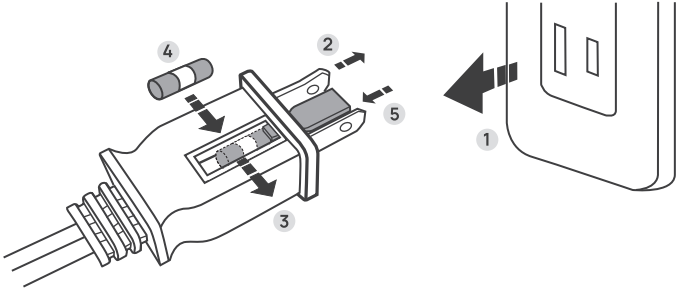


1. Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord.
2. Open fuse cover. Slide open fuse access cover on top of attachment plug towards blades.
3. Remove fuse carefully. Push the fuse from the other side to remove the fuse.
4. Risk of fire. Replace fuse only with 5 Amp, 125 Volt fuse.
5. Close fuse cover. Slide closed the fuse access cover on top of attachment plug.

### WARNING

Risk of fire. Do not replace attachment plug. Contains a safety device(fuse) that should not be removed. Discard product if the attachment plug is damaged.

# TROUBLESHOOTING 05

## My air circulator won't turn on!

Make sure that the cord is connected to a powered outlet and the mains voltage corresponds with the voltage indicated on the air circulator.

## My air circulator is shaky and wobbling!

Place the air circulator on a flat, level surface.

## My air circulator is making vibration and noise!

1. Place the air circulator on a flat, level surface.
2. Be sure not to insert anything into the air inlet and outlet.
3. It is normal that the fan makes a little noise when manually adjusting the fan head.

If your problem is not listed or still persists, please contact our Customer Support (see page 16)
View, download, or print the most current version of these instructions at **https://support.dreo.com/en/support/product.**

# DREO CUSTOMER CARE 06

## 12-MONTH LIMITED WARRANTY

**What is Covered**
DREO warrants to you that your product will be free from original defects in materials and workmanship for a period of twelve (12) months from the date of your purchase, when you use your product for intended purposes in accordance with this User Manual.
Please retain your proof of purchase. If you do not retain your proof of purchase, your warranty will start two (2) months from the date of manufacture printed on your product label.

**What is Not Covered**
This limited warranty only applies to the original purchaser of your product and is non-transferable. This warranty is only valid if your product is used in the country in which you originally purchased it. In addition, this warranty will not apply, and DREO will not be liable for any costs, damages, or repairs, in connection with any of the following:

- Accidents or use of your product with inappropriate force;
- Damage or destruction caused by wrong voltage or unstable electric current;
- Normal wear and tear;
- Careless operation or handling, misuse, abuse, neglect, and/or failure to maintain or use your product in accordance with this User Manual;
- Any partially or completely altered, modified and/or dismantled products;
- Reduction in battery discharge time due to battery age or use (as applicable);
- Products with altered or removed serial numbers;
- Clearing any blockages from the product;
- Purchases from retailers and distributors not authorized by DREO to sell this product;
- Defects caused by or resulting from damages from shipping or handling by any third party not authorized by DREO to ship or handle your product; or
- Defects caused by or resulting from repairs, service, improper maintenance, or alteration to your product or any of its components by anyone other than a repair person authorized by DREO.

Any service and customer support that DREO provides to you under this limited warranty will not extend the duration of this limited warranty.

## Warranty Limitations and Exclusions

ANY IMPLIED WARRANTIES RELATING TO YOUR PRODUCT, INCLUDING BUT NOT LIMITED TO THE WARRANTY OF MERCHANTABILITY AND THE WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE DURATION OF THE LIMITED WARRANTY SET FORTH ABOVE AND ARE OTHERWISE DISCLAIMED. THIS LIMITED WARRANTY SHALL BE THE SOLE REMEDY OF THE PURCHASER OR USER OF THE PRODUCT, AND DREO SHALL NOT BE LIABLE FOR AN ALLEGEDLY DEFECTIVE OR DAMAGED PRODUCT EXCEPT TO REPAIR OR REPLACE IT IN ACCORDANCE WITH THIS LIMITED WARRANTY. DREO WILL NOT BE LIABLE FOR SPECIAL, INCIDENTAL, INDIRECT, CONTINGENT, OR CONSEQUENTIAL DAMAGES OR LOSSES OF ANY NATURE THAT YOU MAY INCUR IN CONNECTION WITH YOUR PURCHASE OR USE OF YOUR PRODUCT.

Some jurisdictions do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This limited warranty gives you specific legal rights, and you also may have other rights which vary from jurisdiction to jurisdiction.

## Limited Remedies

If your product fails because of an original defect in material and/or workmanship during the warranty period, DREO will repair or replace (in DREO's sole discretion) your product.
To obtain warranty service on your product, contact us at support@dreo.com or at (888) 290-1688 (available from Monday-Friday, 9:00 AM-5:00 PM PST/PDT) for further instructions.

IN THE EVENT OF AN ORIGINAL DEFECT IN MATERIAL AND/OR WORKMANSHIP, TO THE EXTENT PERMITTED BY LAW, THE REMEDIES SET FORTH IMMEDIATELY

## FCC Statement

This device complies with Part 15 of the FCC Rules.Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Please note that changes or modifications of this product is not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Model No.: DR-HAF007
Rev_1.2_EN

## We're Here to Help!

(888) 290-1688 (Mon - Fri, 9:00 am-5:00 pm PST/PDT)
support@dreo.com
www.dreo.com

www.dreo.com

## Looking for help?

Contact us to get expert support.

support@dreo.com (888) 290-1688 www.dreo.com
Mon - Fri, 9:00 am-5:00 pm PST/PDT