

150x110mm

折页：英语一面日语一面

材质：80g双胶纸（此页不印刷）

Motorcycle Carplay User Manual





Scan the QR code to get the online PDF document of the multi-language instruction manual.

If you have any question of our smart screen, please contact us.

DC@yoomail.com



We can try our best to provide solutions based on your issues.

Product Overview

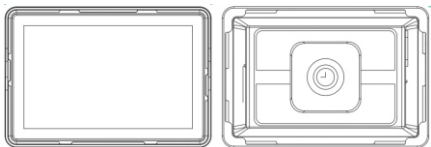

1. Microphone
2. TF card slot (Remove the screws and the waterproof cover to see the TF card slot. Insert the TF card with the label facing upwards.)

Installation

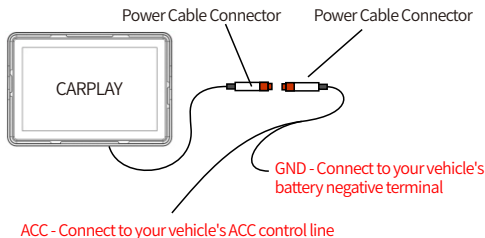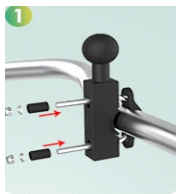


Main Interface




- ① Home Button
- ② Time
- ③ Day/Night/Screen saver Mode
- ④ Back Button

Carplay Connection

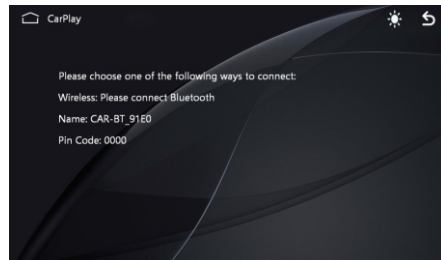


- Step 1. Click the CarPlay on the main interface.
- Step 2. Turn on the phone's WiFi and Bluetooth.
- Step 3. Select the Bluetooth named 'CAR-BT-XXXX' and connect to it.


(Note: To disconnect CarPlay, simply turn off your phone's Wi-Fi and Bluetooth.)

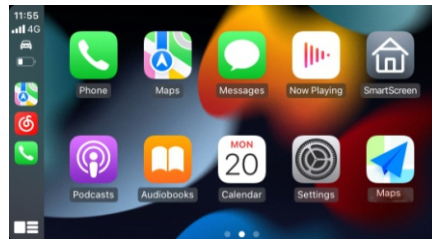


Android Auto Connection

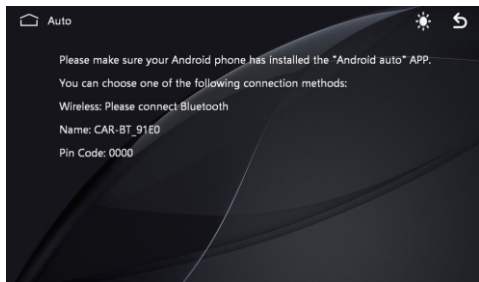

- Step 1. Click the Android Auto on the main interface.
Step 2. Turn on the phone's WiFi and Bluetooth.
Step 3. Select the Bluetooth named 'CAR-BT-XXXX' and connect to it.

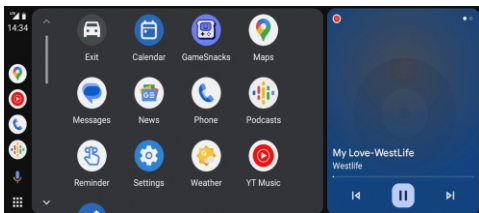

Bluetooth Phone

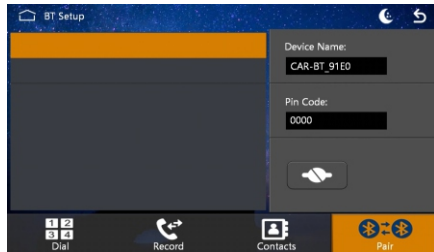

- Step 1. Click the BT button.
Step 2. Turn on Bluetooth on your phone.
Step 3. Select the Bluetooth name 'CAR-BT-XXXX' and connect to it.

FAQ

- Q: Why won't CarPlay start or turn off with the engine?
A: Check if the GND wire is properly connected to the motorcycle's ACC line. (This Carplay doesn't have a built-in battery and only powers on when the motorcycle starts.)
- Q: Why is there no sound?
A: This device does not have a built-in speaker. Check if the Bluetooth headset is connected to the phone and select the Bluetooth headset as the audio output.
- Q: Why can't I connect to CarPlay or Android Auto?
A: Ensure your phone's Bluetooth is paired successfully and Wi-Fi is turned on.


こちらは24時間以内に返信して、問題をできるだけ早く解決するために全力を尽くします。お客様は弊店の製品にご不満のところがありましたら、ご感想をお聞かせてください。こちらが是非誠心誠意で対応させていただきます!どうぞよろしくお願い申し上げます。

DC@yoomail.com



何か問題があれば、いつでもご連絡してお願いします

機能紹介

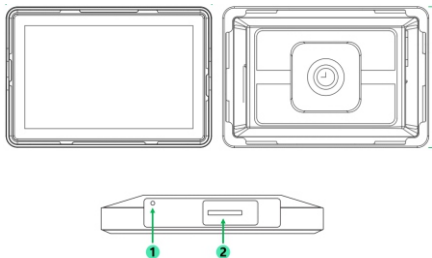

1.マイク


2.TFカードスロット、ネジを外して防水カバーを取り外すとTFカードスロットが見えます。(文字が上向きで挿入してください)

取り付けおよび接続方法


1. マウント取り付け図:



2. 配線図:

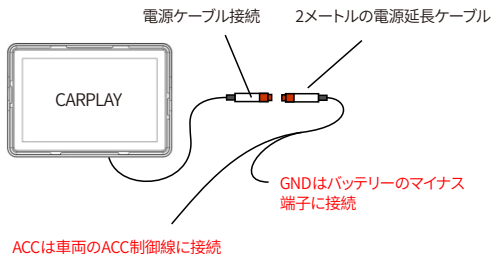

メイン画面

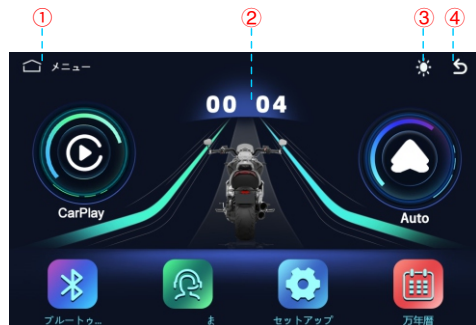


1. メイン画面に戻る
2. 時刻
3. 昼夜モード(クリックして昼/夜/スクリーンセーバーモードを切り替え)
4. 戻るボタン

CarPlay接続方法




1. 【CarPlay】ボタンをクリックします。
2. まず、スマホのWi-FiとBluetoothをオンにします。
3. スマホでBluetooth名「CAR-BT-XXXX」を接続してください。


(CarPlayオプションはiPhoneのみ対応しており、スマホのWi-Fi/BluetoothをオフにすることでCarPlay接続が切断されます)

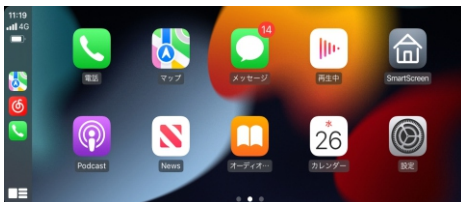


Android Auto接続方法

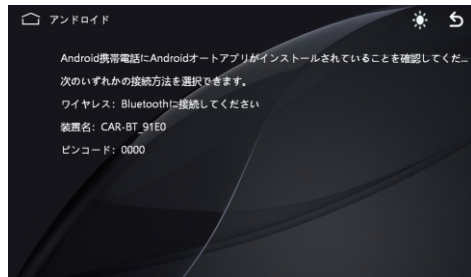

1. 【Android Auto】ボタンをクリックします。
2. まず、スマホのWi-FiとBluetoothをオンにします。
3. スマホでBluetooth名「CAR-BT-XXXX」を接続してください。

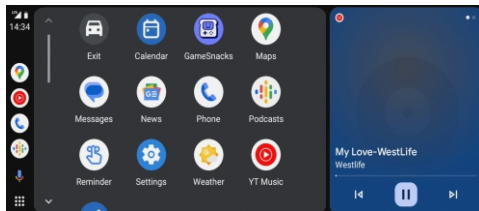

Bluetooth接続方法

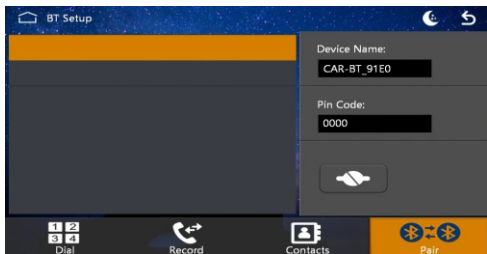

1. Bluetoothアイコンをクリックして、スマホでBluetooth名「CAR-BT-XXXX」を検索し、パスワード「0000」を入力してペアリングします。
2. 次に、スマホでBluetoothスピーカーまたはBluetoothヘッドフォンを検索し、ペアリングを成功させて音声を出力します。
(スマホで音声を出力するには、BluetoothスピーカーまたはBluetoothヘッドセットを選択してください)。

FAQ

Q: 起動しない/エンジンが切れても電源が切れない?

A: GNDがバイクの電源ACC線に接続されているか確認してください。
(製品には内蔵バッテリーがなく、バイクを始動しないと電源が入らないです)

Q: 音が出ない場合どうしますか?

A: 本体にスピーカーを搭載していませんが、スマホがBluetoothヘッドフォンまたはBluetoothスピーカーに正常に接続されているか確認してください。

Q: 初回接続時にCarPlayまたはAndroid Autoに接続できない。

A: スマホのBluetooth接続が成功しているか、Wi-Fiがオンになっているか確認してください。