



Quick Start Guide

1 Charge




Charging(red)

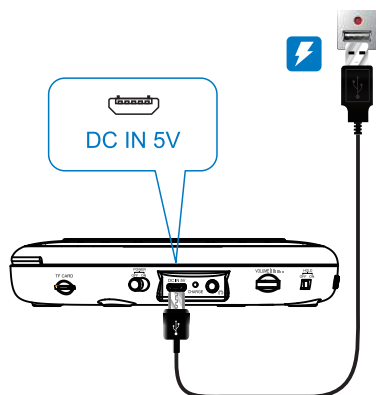


Completed(green)


Notice: When the battery is less than 2%, a low battery warning icon will appear.

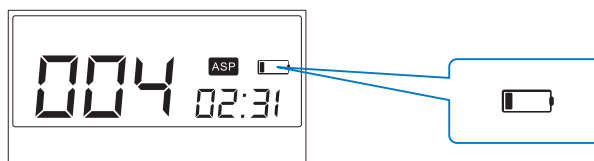


2 Power On

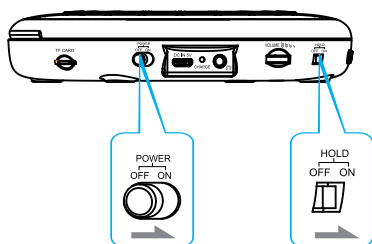

Push the power switch to ON position to turn on the player. The player will enter standby mode after 30 seconds if there is no operation. please press  restart it. HOLD: The switch has a key lock function which is designed to lock the operation of all the keys.

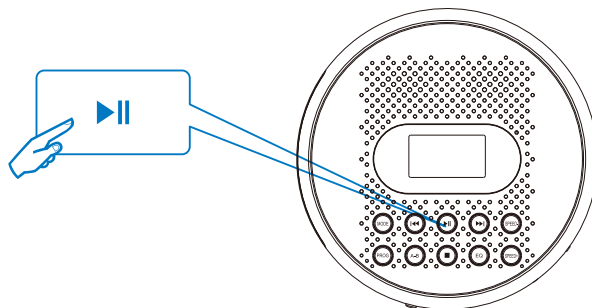

3 Play Disc


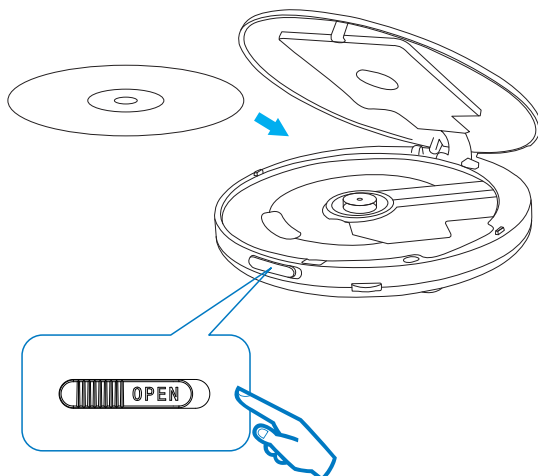


Notice: When the NOd is displayed on the screen:

- ① No disc: Please check if the disc is placed in the player;
- ② Wrong disc: Please check if the disc is CD (DVD/BD is not supported.).

4 Last Memory


The last memory function is turned on by default. Long Press **PROG** button for 3 seconds to turn on/off the last memory function. The ON or OFF will be displayed on the screen at this time.

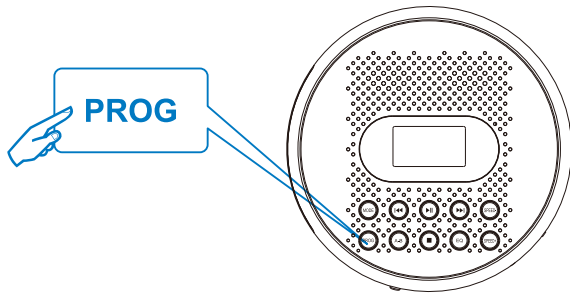

ON: After the player is turned off and restarted, it will be returned to the last stop-track on the disc.


OFF: After the player is turned off and restarted, it will start playing from the first track on the disc.

5 Button Functions

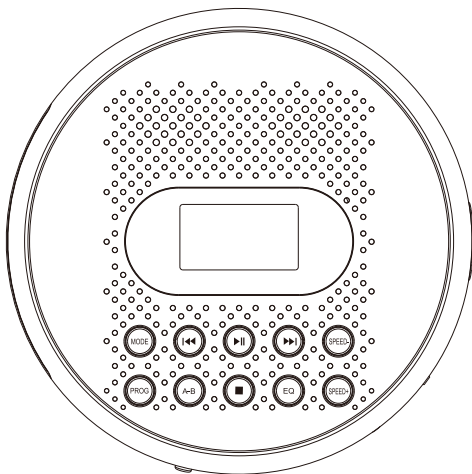


- MODE** : REP1, ALL, SHUF, INTRO
- EQ** : Adaptive equalizer
- A-B** : Repeat point A to point B
- PROG** : customize the track catalog
- Next** (Short Press) / Fast Forward (Long Press)
- Previous** (Short Press) / Fast rewind (Long Press)
- Stop** (It will start playing from the first track by pressing STOP)
- Play/Pause** (It will resume play from the last stop track by pressing PLAY/PAUSE)
- SPEED-** : Speaking slowly
- SPEED+** : Speaking fast

6 Line Control Functions

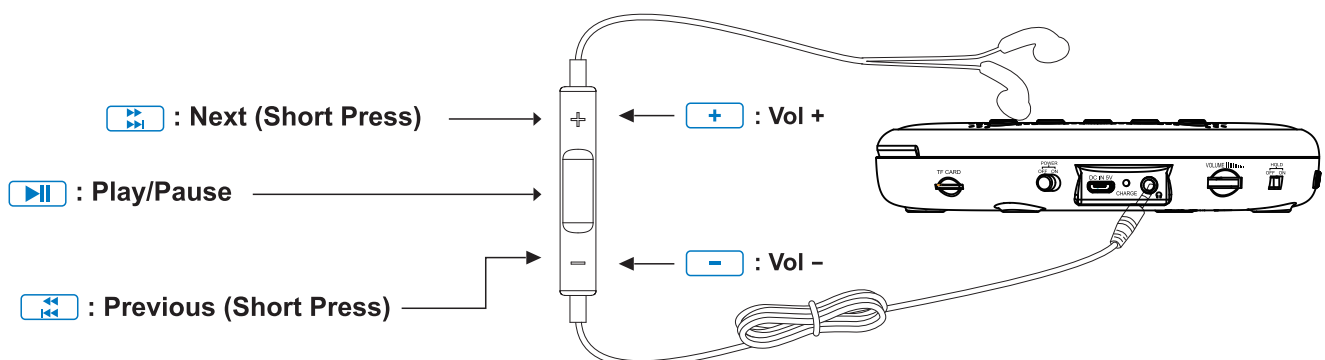

クイック操作ガイド

1 充電

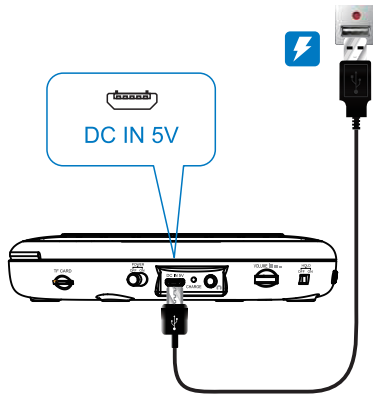

充電中(赤い)




満充電(緑)

注意: 電源の残量は2%足りない場合は、電力不足の警告アイコンが現れました。




2 電源オン

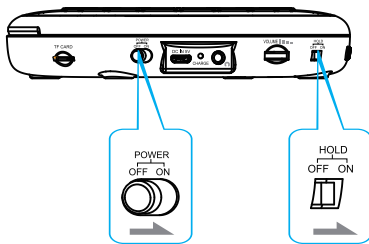


電源をオンにしたあと20秒間、何も操作しない場合、CDプレーヤーはスタンバイモードに入ります。▶▶ を押すと、再起動にします。

ホールドボタン: すべての操作キーをロックするように設計されるキーロック機能があります。

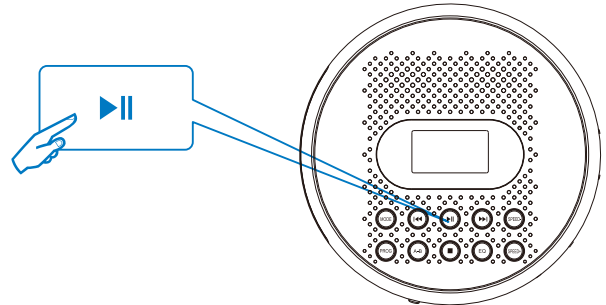

3 ディスクの再生

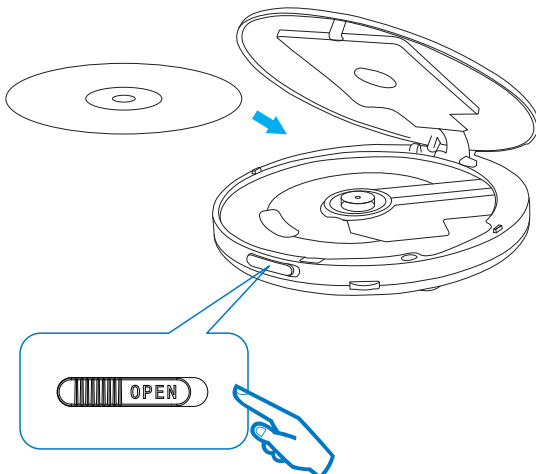


注意: 画面に“NOd”というワードが現れるとき:

- ① ディスクなし: ディスクをCDプレーヤーに入れることを確認してください。
- ② 間違いのディスク: ディスクのフォーマットを確認してください。(DVDとBDは対応不可)

4 レジューム機能

レジューム機能のデフォルト状態はオンです。
レジューム機能の設定:再生ボタンを押した後、**PROG** ボタンを長く押すとレジューム機能をオンまたオフになります。
画面に“ON” また“OFF” というワードが現れます。

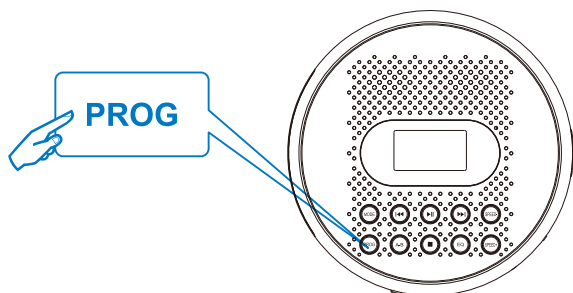


ON

OFF

レジュームオン:再生すると前回ディスクが最後に再生したところから再生を続けます。

レジュームオフ:再生するとディスク(再生中)の最初から再生します。

5 ボタン機能の紹介

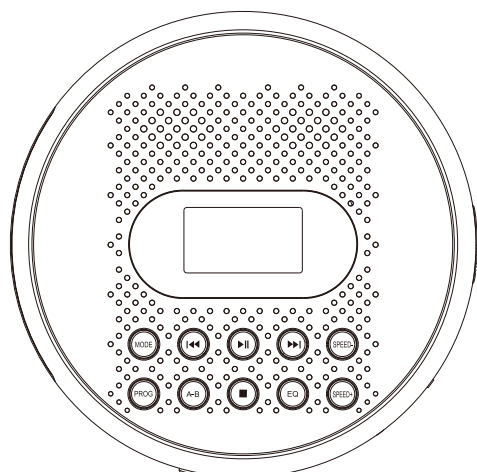

- MODE** : リピート1 (REP1)、リピートALL (ALL)、ランダム再生 (SHUF)、プレビュー再生 (INTRO)
- EQ** : 5種類のイコライザー
- A-B** : 繰り返して再生
- PROG** : 好きな音楽を登録できる
- ▶▶** : 次へ (短く押す) 早送り (長く押す)
- ◀◀** : 前へ (短く押す) 早戻し (長く押す)
- : ストップ (ストップモードに入れば、もう一回再生ボタンを押すと、最初から再生します)
- ▶||** : 再生/停止再生/停止を押すと、前回ディスクが最後に再生したところから再生を続けます。
- SPEED-** : 速度を早く調整する
- SPEED+** : 速度を遅く調整する

6 イヤホンの紹介

