

USER MANUAL

PLEASE READ THIS USER MANUAL BEFORE
OPERATING THE MACHINE



HD1013B

USER MANUAL-EN

» CONTENTS

DISCLAIMER	01
IMPORTANT SAFETY INSTRUCTIONS	01
TROUBLESHOOTING	03
PLAYBACK	05
Play discs	05
Play MP3 / MPEG-4 discs	05
SYSTEM SETTINGS	06
1.General setting page	06
1.1 TV display	06
1.2 Angle mark	06
1.3 Closed captions	06
1.4 Screen saver	06
1.5 Last memory	06
2.Dolby digital setup	06
2.1 Dual mono	06
2.2 Dynamic	06
3.Video	07
4.Preference page	07
4.1 TV Type	07
4.2 Audio, subtitle and disc menu	07
4.3 Parental	07
4.4 Password	07
4.5 Default	07
REMOTE CONTROL	08
Remote control battery replacement	08
Functions of remote control	08
SPECIFICATION	10

DISCLAIMER

It is forbidden to reproduce any or all of the contents of this publication without authorization. We reserve the right to modify the hardware and software mentioned in the specifications without prior notice.

There will be some discrepancies between the pictures and the actual items.

IMPORTANT SAFETY INSTRUCTIONS

Please read this manual carefully before using this player (hereinafter referred to as "the machine") and keep it for future reference.



This "lightning mark" indicates that non insulated parts in the machine may cause an electric shock.



This "exclamation mark" is intended to alert the user to the need to pay attention to some features, and you should carefully read the important operating procedures and maintenance issues that are shown in the manual that came with the unit. All maintenance should be carried out by qualified service personnel, please do not dismantle and try to repair the machine.

Warning:

The machine:

1. Do not let any liquids or humid gases come into contact with the machine, such as rain, water mist, etc.
2. Do not place metal parts on the machine, such as pins etc.
3. Do not expose the machine to direct sunlight, fire, heating devices or any other high temperature environment.
4. If you are not an electrician do not try to open the machine casing.
5. Do not poke or hit the machine with sharp objects.
6. Children under the age of 12 should only use under the guidance of adults.
7. Do not play any disc format that is not supported by the machine. The machine can support DIVX/ MPEG4/ MP3/ WMA/ JPEG/DVD/SVCD/VCD/CD-R/CD-RW/DVD±R/DVD±RW.
8. Please make sure that the machine is used away from other equipment to avoid any interference.
9. For your safety, please do not open or operate the equipment by yourself when you're driving, this is illegal in some countries or regions.

Power adapter:

Do not use the adapter in a tight space, such as the gap between a piece of furniture and the wall. Please make sure the power supply is compatible with the adapter before use. Please use a power outlet near the machine to easily cut off the power supply in the event of any fault.

There may be a small electric shock felt through the metal shell:

After connecting the main unit to the AC adapter, depending on the contact area, you may feel a weak electric shock through the exposed parts of the metal, such as the headphone jack. This is because the AC adapter contains the necessary components to suppress electromagnetic interference. Components in this area form the necessary connection between the primary and secondary circuits. Please be assured that this faint shock is fully compliant with EMI specifications and requirements, and this product has passed strict quality inspections and safety testing at the factory, so please be assured it is safe to use. If you have any questions, please contact us directly.

Remote control battery:

The remote control contains two batteries of type AAA, please do not swallow it; if the battery is swallowed, it may cause serious burning inside the body within 2 hours and can lead to death. If there is such an incident, please seek medical attention immediately.
Please place batteries where children cannot reach .

Hearing safety:

Listen at a moderate volume:

Please adjust the volume appropriately; if it is too loud, it may cause permanent damage to your hearing.

Setting a safe volume level:

1. Set the volume to a low volume;
2. Slowly increase the volume, until you can hear and comfortably and clearly without any distortion.

Reasonable listening time:

Long-time listening can also cause hearing loss, even if it is at the normal "Safe" level. Please use the equipment properly and take appropriate rest.

Environmental protection:

Please follow local regulations on the handling of packaging materials, waste batteries and used electrical and electronic equipment. Do not dispose of this product along with other household waste. Proper handling of your old products helps prevent potential damage to the environment and human health.

TROUBLESHOOTING


If you encounter any of the following problems while using the machine, use this troubleshooting guide to help you resolve the problem before requesting a repair. If any questions still exist, please contact us.

Problem	Reason	Solution
Cannot read discs.	The disc is installed incorrectly.	1.Make sure the label side of the disc is facing up; 2. Ensure the disc is fully into the place.
	The disc is dirty or damaged.	1.Make sure the disc is not heavily scratched or damaged; 2.Wipe the disc from the center radically out to the edge with a clean, soft cloth; 3.Try another new disc to check if the disc is faulty.
	The loader is dirty.	Wipe the lens gently with a non-oily cotton swab.


Machine cannot be turned on.	Switch is not turned on.	Press the "POWER/MODE" button on the machine or the "POWER" button on the remote control to turn on the power.
	The plug is not plugged in correctly.	Make sure that the two plugs of the power cord are properly connected.
	There is no current at power outlet.	Make sure that the power outlet is working.
	The charger is damaged.	Replace a charger with the same specifications.
	The machine is damaged.	Please contact us or ask professional to repair.
AV no output.	Wrong connection.	Yellow: video Y; Red:audio R; White:audio L.
	AV cable is damaged.	Replace AV cable.
	The machine is damaged.	Please contact us or ask professional to repair.
The display doesn't light.	The switch is not turned on.	Press the "TFT OFF / ON" button.
	Screen is damaged.	Please ask professional to replace the screen or contact us.
No sound from speaker.	In mute mode.	Press "VOL+" button to quit.
	Earphone is plugged into the jack.	Remove earphone from jack or listen via the earphone.
	Machine is damaged.	Please contact us or ask professional to repair.
Remote control is not working.	Batteries of remote are installed incorrectly.	Ensure batteries are correctly installed, pay attention to the positive and negative connectors.
	Signal from the remote control is blocked.	Remove all obstacles between the machine and remote control.
	Distance or angle between the remote control and the machine is too large.	Please align the machine in front of the infrared receiver window, the angle deviation should not be more than 45 degrees, the distance should not exceed 3 meters.
	Battery is exhausted.	Replace with new batteries.

Connect A and B DVD Player

Please press the "MODE" button on the remote control to set DVD Player B to AV-IN mode first.

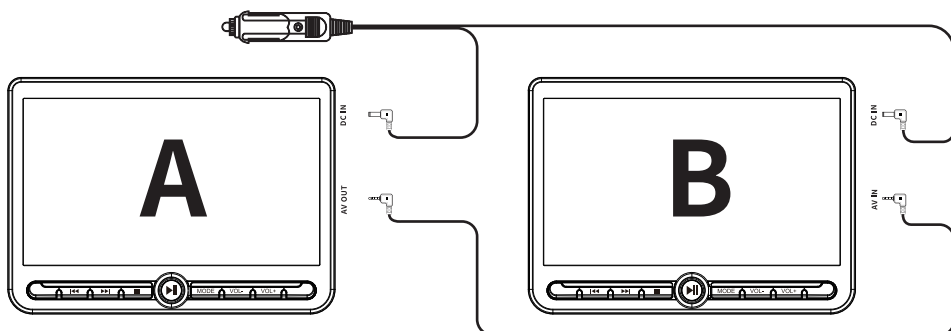

TV connection

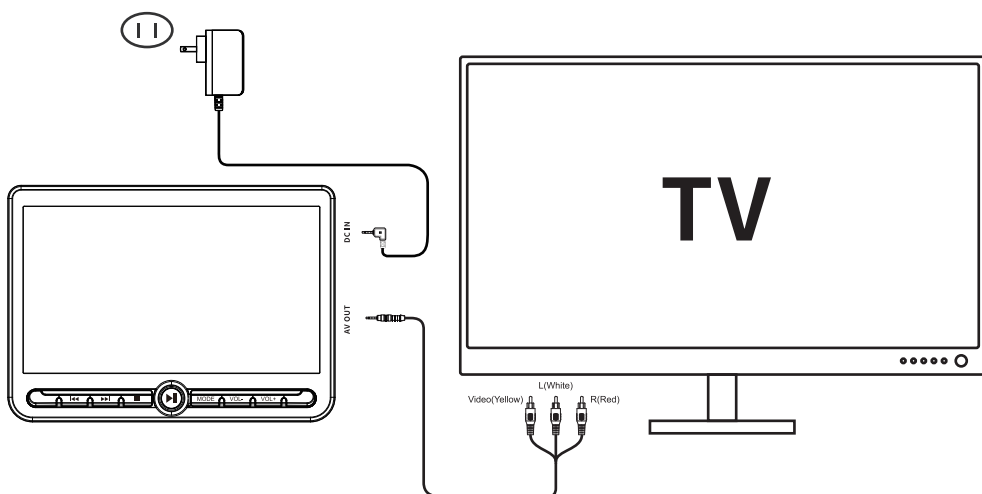

PLAYBACK

Play discs

Turn on the power

Connect car charger or wall charger to the machine, and push the machine's "OFF/ ON" button to "ON" to turn the machine on.

Open the lid

Push the OPEN button to open the lid.

Load discs

Please hold the disc with index finger poking through the center hole of the disc and the thumb holding the edge of the disc. Please place the CD in the tray with the label side up and make sure the CD lock into place.

Close the lid

Please close the lid gently and make sure it's completely closed, otherwise the machine will not read the disc.

Confirm playback

Wait for a few seconds until the machine reads the disc information and press "OK" button to play, or use the arrow keys to select a file, then press OK button to play.


Play MP3 / MPEG-4 data discs

When the MP3 / MPEG-4 disc is inserted into the unit, the machine screen automatically displays all songs and MPEG-4 files. You can follow the below instructions to select the desired video or song:

1. Press the ▲ or ▼ button to select a song or MPEG-4 file from the list and press the "OK" button to select and start playing the song.
2. Use the ►► button to move to the next song and press the ◀◀ button to move to the beginning of the previous song.

Maintenance of discs

1. Please do not put disc near to any heat sources, such as under the sun or near the heater, etc.
2. Do not use tape on the surface of the disc, hit the disc or pour liquid onto the disc.
3. Please do not touch the disc surface with your hand, hold the center and edge of the disc while using;
4. Please do not rub the disc with hard or rough objects.
5. Temperature for disc storage should be between -5 ° C and 50 ° C, relative humidity of 5% RH to 90% RH.
6. Before using, use a soft cloth to wipe the disc from the inside to outside; after using, please put the disc in the CD case for storage to avoid dust.
7. Do not use petrol or non-specialized antistatic cleaning agents to clean discs, which will damage the disc.

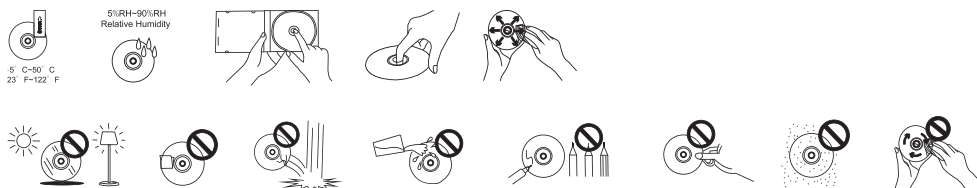

SYSTEM SETTINGS

- 1. Press "SETUP" to display the main screen of the Setup Menu on the screen and [General Setup Page] appears. At same time, "General" is highlighted. Press ► to select other setting items. Press "SETUP" again to exit the Setup Menu and the unit will resume it's last playback mode.
- 2. When "General" is highlighted, Press the "OK" button, "TV Display" is highlighted.
- 3. Press the ▲ or ▼ button to select the other menus in general setup page.
- 4. Press ► to enter the sub menu.
- 5. Press the ▲ or ▼ button to select the sub menu and press the [OK] to confirm your selection.
- 6. Press ◀ to return to the previous menu.
- 7. Repeat steps 3-5 for other menus.

1.General settings page

1.1 TV display

- a. 4:3 PS: When the player outputs signal to a normal monitor. Wide-screen images are shown on the screen. But with some parts cropped automatically.
- b. 4:3 LB: When the player outputs signal to a normal monitor, a normal picture is shown on the screen with a black strip at both the top and bottom of the screen.
- c. 16:9: When the player outputs signal to a wide screen monitor, a wide picture is shown on the full screen.

1.2 Angle mark

ON: The screen will show the angle mark icon.
(If an angle option is available.)
OFF: The screen will not display the Angle Mark.
Note: Not all discs contain above features. The above features are disc dependent.

1.3 Captions

ON: Captions are displayed. (If an captions available.)
OFF: The screen will not display captions.

1.4 Screen saver

ON: Enables screen saver.
OFF: Disables screen saver.
Note: The DVD player will enter the Screen Saver mode after approximately five minutes if the same image remains on the screen.

1.5 Last memory

ON: The machine will return to the last stop-point on the disc.
OFF: The machine will not return to the last stop-point on the disc.
Note:The above function is not supported when the files in USB and TF card are in HD 1080P format.




2. Dolby digital setup

2.1 Dual mono

STEREO: Left/Right channel audio will be played back by the Left/Right speakers.
L-MONO: Playback of Left channel audio only.
R-MONO: Playback of Right channel audio only.
MIX-MONO: Both Left/Right channels are mixed to one mono channel.

2.2 Dynamic


Use this mode to level all sound channels to ensure even sound levels.

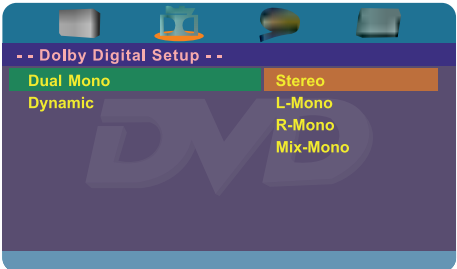

3.Video

Adjust the image quality.
Sharpness: Select from High, Medium or Low sharpness settings.

1. Use the ▲ or ▼ buttons to select the option to change and the press the OK button.
2. Press the ◀ or ▶ buttons to adjust the setting and then press the OK button to confirm the changes. Options are as below:
 - Brightness
 - Contrast
 - Hue
 - Saturation

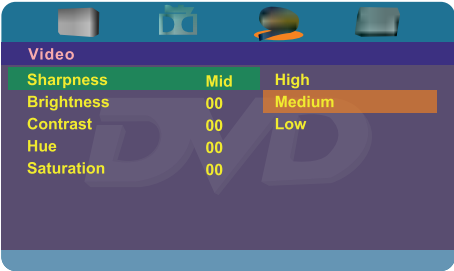

4.Preference page

4.1 TV Type

Set the video output type, it is recommended to set to "Multi".When the TV is shown in black and white, please select the appropriate option to suit the TV.

4.2 Audio, subtitle and disc menu

Sets the default audio,subtitle and disc menu language of DVDs played on this player.

Note: Audio, subtitle and disc menu settings are subject the availability of your selection on the DVD.

4.3 Parental


Select the parental level you desire for disc with lock-out function or multiple rating levels. There are listed from the level (1 Kid Safe) to the highest level (8 Adult). The setting allows PLAYBACK to be restricted via password.

Note: This function will only work if the disc contains a parental control lockout.

4.4 Password

This function allows you to re-set a new password.


Note: You have to input the correct default password to change the password setting. The default password is 136900.

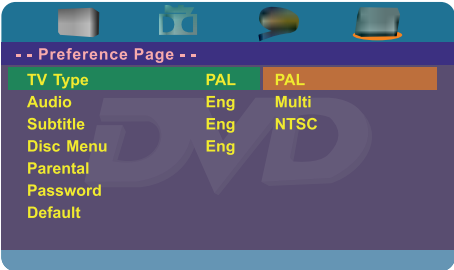

4.5 Default

Select "Default" in preference page to make the setting return to the factory-set mode.


Remote Control

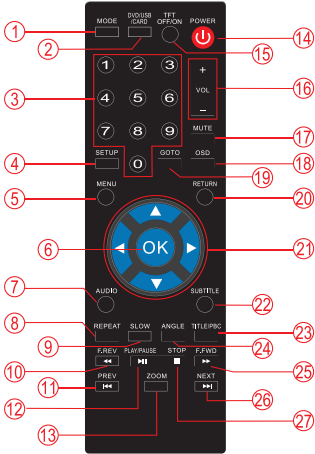

Item	Function	Item	Function
1	Mode	14	Power
2	DVD/USB/CARD	15	TFT Off/On
3	Number Pad	16	Volume +/-
4	Setup	17	Mute
5	Menu	18	OSD
6	OK	19	Goto
7	Audio	20	Return
8	Repeat	21	Up/Down/Left/Right
9	Slow	22	Subtitle
10	Fast Rewind	23	Title/PBC
11	Previous	24	Angle
12	Play / Pause	25	Fast Forward
13	Zoom	26	Next
		27	Stop

Replacing remote control battery

1. Open the remote control back cover.
2. Check for correct battery polarity when installing the battery.
3. Insert the two AAA model batteries and close the back cover.
4. When using the remote control, aim it at the remote sensor on the player.
5. When not using the remote control for a long time, remove the batteries and store them separately.

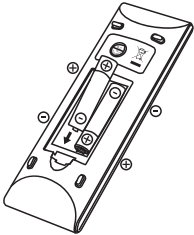

Functions of remote control

1. DVD/USB/CARD

Press the "DVD/USB/CARD" button to cycle between optical Card Reader / USB. Press the arrow keys to choose the source and then press the OK button to read.

2. MODE




Press the "MODE" button to display input source. Press the arrow keys choose the input source and then press the "OK" button to confirm.

3. AUDIO

Press the "AUDIO" button to select the audio language for the DVD, this requires disc support.

4. REPEAT

Press the "REPEAT" button constantly to select a different repeat mode as below.

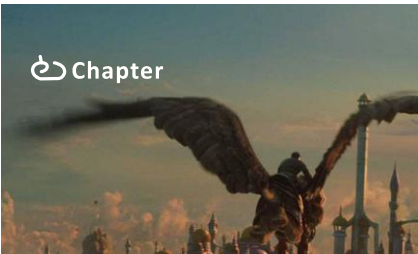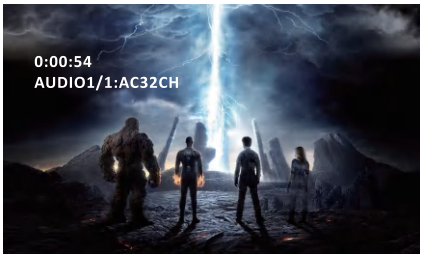



5.SLOW

Press the "SLOW" button constantly to select the slow speed, maximum 16 speed.

6. ZOOM

Press the "ZOOM" button multiple times during playback can reduce the current picture by 1/4, 1/3, 1/2 times or zoom out by 2, 3, 4 times.

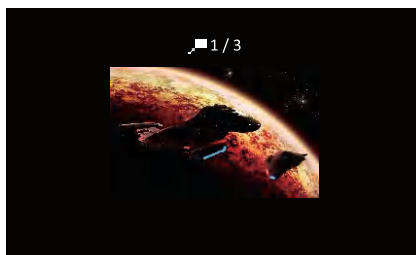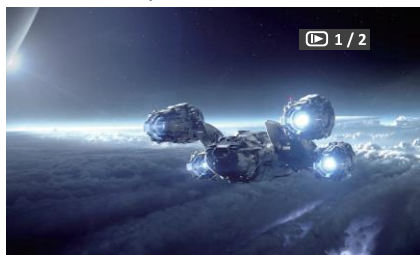

7.TFT OFF/ON

Press the "TFT OFF/ON" button to turn the screen ON or OFF.

8.OSD

Press the "OSD" button to display information about the disc.

Title Elapsed: The elapsed time of the title.

Title Remain: The remaining time of the title.


Chapter Elapsed: The elapsed time of the chapter.

Chapter Remain: The remaining time of the chapter.

Display off: The DVD's time information will not be displayed.

9.GOTO

Press the "GOTO"→"Number Pad" button to select chapters and time.

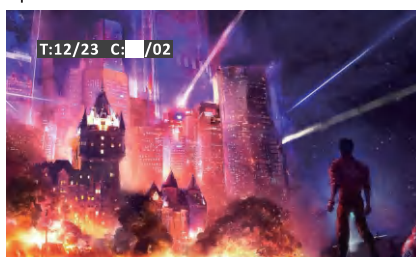


10. RETURN

Press the "RETURN" button to switch between the current play and the main menu of the disc.

11.SUBTITLE

Press the "SUBTITLE" button to select the subtitle language, this requires disc support.

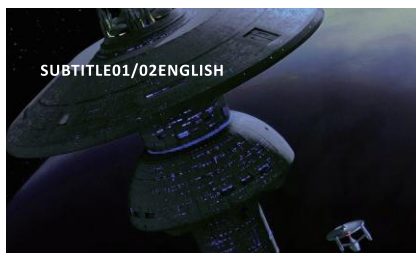


12. TITLE/PBC

Press the "TITLE/PBC" button return to the disc title menu.

13. ANGLE

Press the "ANGLE" button to display the available angles for discs containing multiple angles, with the current angle number and the total number of angles displaying. Press the "ANGLE" button to select another angle, then press again to exit and return to the normal viewing angle.


(Not all discs contain this feature.)

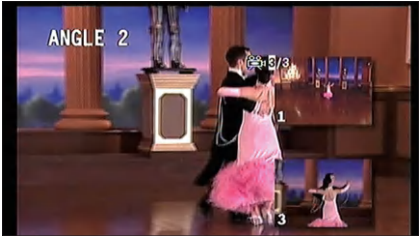

SPECIFICATION

Power source	DC 9-14.4V 1.5 Amps
Working temperature	5-40°C
Frequency response	20 Hz to 20 kHz
Video output	1 Vp-p/75 Ohm, Unbalanced
Audio S/N	> 60 dB
Dynamic range	> 85 dB
Laser wave length	650 nm / 795 nm

Warranty Card

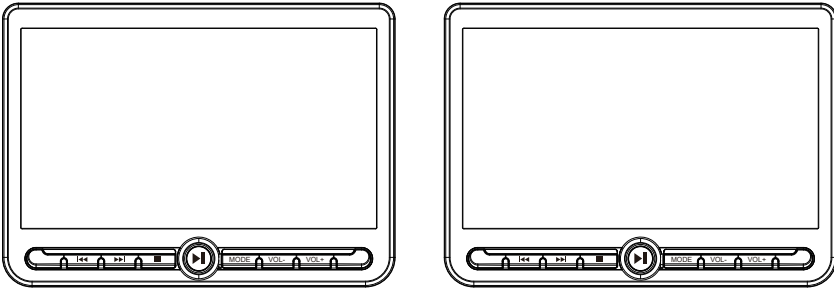

If you have any questions about the products you received, please feel free to contact us via email.

- Detailed and thoughtful customer service
- Return guarantee within one month from the date of purchase
- Replacement guarantee within 12 months from the date of purchase

We will be very grateful if you share your impression of our products. Our belief is to response to customers` needs with the best service.



arafuna-service@outlook.com

取扱説明書

本機の操作前に必ずこの取扱説明書をお読み
ください



HD1013B

ユーザーマニュアル-JP

❖ 目録

免責事項	01
安全上のご注意	01
故障排除	03
再生	05
ディスクを再生します	05
MP3 / MPEG-4ディスクを再生します	05
システム設定	06
1. 一般設定ページ	06
1.1 TVディスプレイ	06
1.2 アングルマーク	06
1.3 字幕	06
1.4 スクリーンセーバー	06
1.5 ラストメモリ	06
2. ドルビーセットアップ	06
2.1デュアルモノ	06
2.2ダイナミックレンジコンプレッサー	06
3. ビデオ	07
4. 設定ページ	07
4.1 TV タイプ	07
4.2 サウンド、字幕、言語	07
4.3 ペアレンタル	07
4.4 パスワード	07
4.5 初期設定	07
リモコン	08
リモコン電池の交換	08
リモコンの機能	08
仕様	10

免責事項

本書の内容の一部または全部を許可なしに複製、転写、転載、改変することは禁止されています。当社は、仕様に記載されているハードウェアおよびソフトウェアを改良のため予告なく変更することがありますので、あらかじめご了承ください。

安全性に関する重要事項

DVDプレーヤーを使用する前に、この取扱説明書をよくお読み（以下、「本機」という。）及び今後の参考のために保管してください。



この「雷マーク」は、機械内の非絶縁部分は、電気ショックを引き起こし得ることを示しています。



この「感嘆符」記号は、一部の機能に注意する必要性があることを使用者に警告を喚起するものであり、本機の取扱説明書装置に記載されている重要な操作手順及びメンテナンス問題をよくお読みください。すべてのメンテナンスは資格のある担当者が必ず行ってください。本機を分解したり修理したりしないでください。

警告:

本機:

1. 雨や湿度の高いような場所あるいは水気のある場所で本機と水を接触させないでください。
2. ビンなどのメタル部品を本機の上に置かないでください。
3. 本機を直射日光、裸火、加熱装置やその他の高温環境などから離して設置してください。
4. 修理は資格のある修理担当者に依頼し、電気技術者でない場合、本機の修理を試みないでください。
5. 鋭利なもので本機を押し付けたり、ぶつけたりしないでください。
6. 12歳未満の子供は、大人の指導の下でのみ使用する必要があります。
7. 本機器でサポートされていないディスクフォーマットは再生しないでください。本機は DIVX/MPEG4/MP3/WMA/JPEG/DVD/SVCD/VCD/CD/CD-R/CD-RW/DVD±R/DVD±RW. をサポートします。
8. 干渉を避けるために、他の装置から必ず離して使用されていることをご確認ください。
9. 安全のために、運転中に開封したり操作したりしないでください。一部の国や地域によっては違法です。

電源アダプタ:

家具と壁の間の隙間など、狭いスペースでアダプタのご使用はおやめください。アダプタとの互換性を確認するために、ご使用前に電源装置を確認してください。万が一障害などが発生した場合に電源を切断出来るよう、機器の近くにある電源コンセントをご使用ください。

金属シェルに小さな感電が感じられる可能性があります：

本機をACアダプタに接続後、接触面積に応じヘッドホン差し込み口など金属の露出部分を通し弱い電気ショックを感じることができます。これは、ACアダプターに電磁干渉を抑制するために必要な構成要素が含まれているためであり、またこのエリア内の構成要素は、一次回路と二次回路との間に必要な接続を形成します。この微弱な感電は、EMI規格や要求事項に完全に準拠しており、工場での厳しい品質検査基準と安全試験に合格していますので、安心してご使用ください。ご不明な点がございましたら、お問い合わせください。

リモコンの電池について：

リモコンはタイプAAAの電池が2個含まれています、絶対に飲み込まないでください。万が一、飲み込んでしまうと体内で重度の燃焼を2時間以内に引き起こし、死に至ることがあります。このような事態が発生した場合、すみやかに医師の診断を受けてください。お子様の手に届かない所へ電池を保管してください。

聴覚の安全性：

適度な音量で聞きます

適切な音量に調整してください。音量が大きすぎると聴力が損なわれ、永続的な損傷を引き起こす原因となります。

安全な音量に設定する：

1. 低い音量に設定する
2. ゆっくりと音量を上げ、はっきりと歪みがなく快適と感じるレベルまで調節してください。

合理的な音楽タイムを：

たとえ「安全」基準であっても、長時間の音楽鑑賞は、難聴を引き起こす可能性があります。正しくご使用し、適切に休息を取るようにしてください。

環境保護：

包装や電池、使用済みの電化製品の処理法に基づいてご処分ください。家庭ごみとともに本機を出さないでください。適切な処分は環境保護そして生態系の保護につながります。

故障排除


次のような問題と直面したら、問題回避表を使って解決してください。問題が解決されない場合には、弊社へご連絡ください。

問題	理由	解決方法
ディスクを読み取ることができません。	ディスクが正しくインストールされていません。	1. ディスクのラベル面が上を向いていることを確認してください。 2. ディスクが完全に正しい位置にあることを確認してください。
	ディスクが汚れているまたは破損します。	1. ディスクにひどい傷や損傷がないことを確認します。 2. 清潔で柔らかい布でディスクを中央から根本的に端まで拭きます。 3. ディスクが故障しているかどうかを確認するために別の新しいディスクを試してみてください。
	ローダが汚れています。	非油性綿棒でそっとレンズを拭いてください。


機器が起動できない。	電源が入っていない。	本体のパワー・モードボタン若しくはリモコンのパワーボタンで機械をオンにします。
	正しくささっていない。	電源ケーブルが二つつながっていることを確認してください。
	コンセントから出来が流れていない。	コンセントを確かめる。
	充電器が壊れている。	同様の充電器と取り換える。
	機械が壊れている。	弊社にお問合わせてください。或は専門家への修理を依頼してください。
AV出力はありません。	間違った接続。	黄：映像Y；赤：オーディオR；ホワイト：オーディオL。
	AVケーブルが破損しています。	AVケーブルを交換します。
	機械が損傷している。	弊社にお問合わせてください。
スピーカーから音が出ない。	ミュートモード。	“VOL +” ボタンを押すと終了します。
	イヤホンがジャックに差し込まれています。	ジャックからイヤホンを取り外してください。
	本体が破損しています。	弊社にお問合わせてください。或は専門家への修理を依頼してください。
リモコンが動作しません。	リモコンのバッテリーが正しくインストールされています。	電池が正しくインストールされていることを確認し、マイナスとプラスの間違えないようにご注意ください。
	リモコンからの信号が遮断されています。	本体とリモートコントロールとの間のすべての障害物を取り除いてください。
	リモコンと本体の距離または角度が大きすぎます。	距離が3メートルを超えてはならない、角度のずれが45度以上であってはならない、赤外線受信窓の前に機械を揃えてください。
	バッテリーが消耗しています。	新しい電池で交換してください。
画面が真っ黒になる。	スイッチがオンになっていません。	TFT OFF/ONボタンをもう一度押してください。
	画面が破損しています。	弊社にお問合わせてください。

2台のDVDプレーヤーを接続する

リモコンの"MODE"ボタンを押して、BのDVDプレーヤーをAV-IN (AV入力) に切り替えてください。

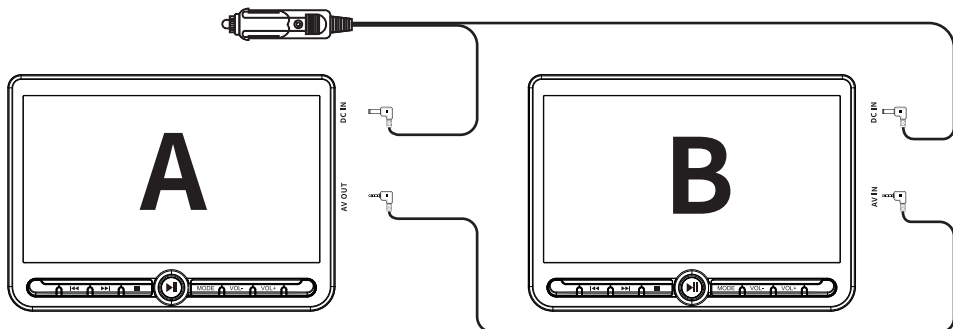

テレビと接続する

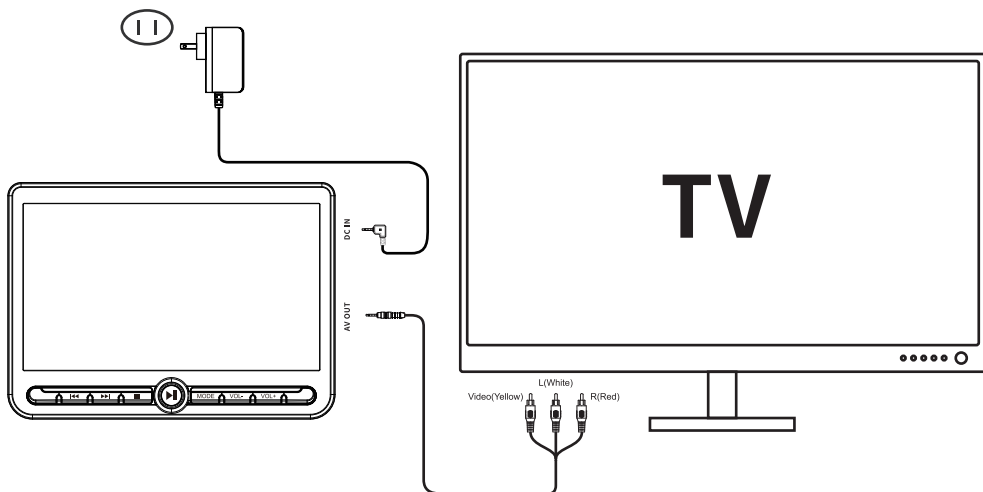

再生

ディスクを再生

電源をオンにする

車専用、もしくはコンセント用の充電器をつなげて、オン オフボタンを押して機器をオンにします。

ふたを開ける

OPENボタンを押すと蓋を開けます。

ディスクを入れる

ディスク中央を人差し指で持ち、親指でディスク端を適切に押さえ、ラベル面を上向きにDVDドライブに置きます、ゆっくりディスクを押して固定する。正常に入れたことをご確認ください。

蓋を閉じる

ディスクの蓋をゆっくりと押し、完全に閉じてください。でなければ、ディスクの読み込みができません。

再生を確認する

数秒待つと、本機はディスクを読み込みます、「OK」ボタンを押すと再生します。


MP3/MPEG-4データディスクを再生し

MP3 / MPEG-4ディスクを装置に挿入すると、本機は全曲とMPEG-4ファイルを自動的に表示します。次の手順を行い、好きなビデオまたは曲を選択することができます。

1. ▲または▼ボタンを押してリストから曲またはMPEG-4ファイルを選択し、[OK]ボタンを押してソングの選択と再生を開始します。
2. ►►ボタンを使用して次の曲に移動し、◄◄ボタンを押すと前の曲の先頭に移動します。

ディスクのメンテナンス

- 1) 直射日光や高温の場所などの熱源の近くにディスクを放置しないでください。
- 2) ディスクの表面にテープの使用はしたり、ディスクを叩くまたは液体を流すなどの行為はおやめください。
- 3) ディスクの表面を手で触れないでください、必ず中央の穴と端を持って使用してください。
- 4) 硬物や紙やすりなどざらざらした物でディスクをこすらないでください。
- 5) ディスクの許容保管温度は-5℃～50℃、相対湿度は5%RH～90%RHの範囲内である必要があります。
- 6) ご使用前は、柔らかい布を使用してディスクを内側から外側に向かって優しく拭きます。ご使用後は必ずCDケースに入れて保管してください。
- 7) ディスクの清掃時、ディスクの損傷の原因となりますのでガソリンや非専門的静電気防止剤を使用しないでください。

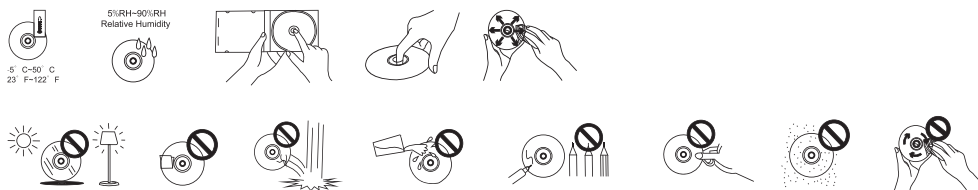

システム設定

- 1) [SETUP] を押すとセットアップメニューのメイン画面が表示され、それに「一般設定ページ」が表示されます。同時に“一般”が強調します。 ボタンを押すと他の設定項目を選択します、もう一度 [SETUP] を押すと、セットアップメニューが終了し、最後の再生モードに戻ります。
- 2) 「一般」がハイライトに表示されているとき、[OK] ボタンを押して、“TV Display” がハイライトに表示されます。
- 3) ▲または▼ボタンを押して、一般設定ページ以外のメニューを選択します。
- 4) ►ボタンを押してサブメニューに入ります。
- 5) ▲または▼ボタンを押してサブメニューを選択し、 [OK] を押して選択を確定します。
- 6) ◀を押すと、前のメニューに戻ります。
- 7) 他のメニューについても 3－5 の手順で操作します。

1. 一般設定ページ

1.1 ディスプレイモード

4:3 PS: DVDプレーヤーが通常のモニターに信号を出力している時、画面にワイドスクリーンの画像が表示されます。しかし、自動的にいくつかの部分が切り取られます。

4:3 LB: DVDプレーヤーは通常のモニターやTVに信号を送るとき、通常の画像が表示され、画面の上部と下部の両方に黒い帯状が表示されます。


16:9: ワイド画面のモニターに信号を出力すると、ワイド画面が全画面に表示されます。

1.2 アングルマーク

オン: 画面は角度マークのアイコンが表示されます。（角度オプションが有効の場合）

オフ: 画面には、アングルマークを表示しません。

ご注意: 全てのディスクには上記の機能が付いているわけではありません。上記の機能はディスクに依存します。

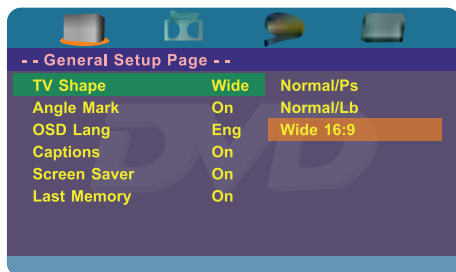

1.3 クローズキャプション

オン: キャプションが表示されます。（キャプションが利用可能な場合）。

オフ: 画面には、字幕を表示しません。

1.4 スクリーンセーバー

オン: スクリーンセーバーを有効にします。

オフ: スクリーン・セーバー（オフ）を無効にします

注: 同じ画像が画面上に残っている場合は、DVDプレーヤーは、約5分後にスクリーンセーバーモードに入ります。

1.5 最後の記憶

オン: ディスクの最後の位置に戻ります。

オフ: ディスクの最後の位置に戻りません。

注意: 上の機能はUSBとTFカードが1080P再生時には無効となります。

2. ドルビーセットアップ

2.1 デュアルモノ

ステレオ: 左/右チャンネルのオーディオは、左/右のスピーカーで再生されます。

左チャンネル: 左チャンネルの音声のみを再生します。

右チャンネル: 右チャンネルのオーディオのみを再生します。

混合チャンネル: 左/右チャンネル両方は、一つのモノチャンネルに混合されます。

2. ダイナミックレンジコンプレッサー

このモードを使用すると、全てのサウンドチャンネルのレベルを調整し、音量を均一にします。

3. ビデオ

画質の調整

シャープネス：高、中、低のシャープネス設定から選択します。

1、▲または▼キーで、機能を選択し、「OK」ボタンで確認します。

2、◀または▶キーをクリックし、設定を調整した後、「OK」を押します 変更を確認する。

オプション

- 明るさ
- コントラスト
- 色相
- 彩度



4. 設定ページ

4.1 TV タイプ

ビデオ出力システムを設定し、「Multi」に調整することをお勧めします、テレビディスプレイが白黒の場合には、テレビシステムに適応するためにさまざまな規格を調整する必要があります。

4.2 サウンド、字幕、言語

設定メニューでは、サウンド、字幕、及メニューの言語のデフォルト設定を選択できます。

ご注意：オーディオ、字幕およびディスクメニューが設定できるかどうかはDVDによって異なります。

4.3 ペアレンタルコントロール

ロック機能

ロック機能が付くDVDのレベルを選択してください、最低レベルから最高レベルまで。この設定はパスワードで再生を制限できます。

ご注意：この機能は、ディスクにこのペアレンタルコントロールのロック機能が付く場合にのみ機能します。



4.4 パスワード


新しいパスワードを設定することができます。

注：パスワードの変更には、まずデフォルトのパスワードを入力してください。デフォルトのパスワードは136900です。

4.5 デフォルト

オリジナル工場出荷時に設定します。


リモコン

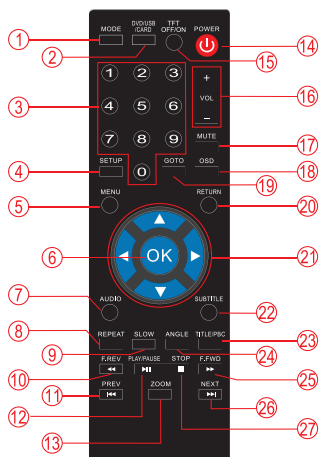

項目	機能	項目	機能
1	モード	14	電源
2	DVD/SD/USB	15	TFT OFF/ON
3	数字パッド	16	音量 +/-
4	セットアップ	17	ミュート
5	メニュー	18	OSD
6	OK	19	Goto
7	オーディオ	20	戻り
8	リピート	21	上/ 下 / 左/右
9	スロー	22	字幕
10	巻き戻し	23	タイトル/ PBC
11	前へ	24	角度
12	再生 / 一時停止	25	早送り
13	ズーム	26	次へ
		27	停止

リモコンの電池を交換します

1. リモコン背面カバーを開けます。
2. バッテリーをインストールする際、正しいバッテリーの極性を確認してください。
3. 単4電池2本を挿入し、背面カバーを閉じます。
4. リモコンを使用するには、プレーヤーのリモートセンサーに向けます。
5. 長時間リモコンを使用しない場合は、電池を取り外し、それらを別々に保管してください。

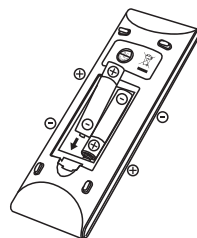

リモコンの機能について

1. DVD/USB/CARD

このボタンを押すとデTFカード/ USBの間に繰り返します。 矢印キーを押してソースを選択し、OKボタンを押すと読み込みます。

2. MODE



“MODE” ボタンを押して入力ソースを表示されます。矢印キーを押して入力ソースを選択してください、“OK” ボタンを押して確定します。

3. AUDIO

DVDの再生でオーディオ言語が選択できます。対応させるには適切ディスクを必要です。

4. REPEAT

繰り返し“REPEAT”を押し続けると、異なるリピートモードが選択されます、下記のように。

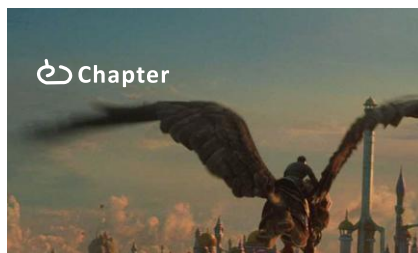



5. SLOW

“SLOW” を押し続けると遅いスピードで再生されます、最大 1/6 を対応します

6. ZOOM

“ZOOM” を押して、現在の画像の 1/4X, 1/3X, 1/2X, 2X, 3X または 4X の倍率で拡大/縮小することができます。

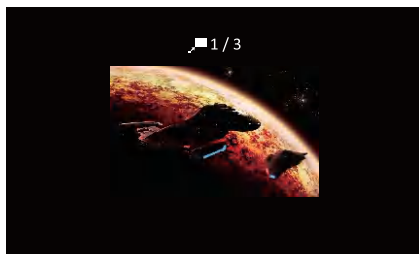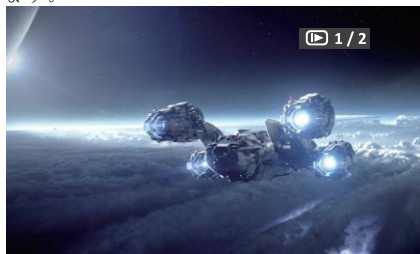

7. TFT OFF/ON

“TFT OFF/ON” を押すとプレーヤーの画面がON または OFFに切り替わります。

8. OSD

OSD を押し続けると以下のオプションが選択することができます：

タイトル経過：タイトルの再生した時間。

タイトル残り：タイトルの残り時間。


見たチャプター：再生したチャプターで使用された時間。

残りチャプター：まだ再生しないチャプターが再生時間。

ディスプレイオフ：DVD再生の時間情報は表示されません。

9. GOTO

“GOTO” → “Number Pad” を押してチャプターと時間を選択します。

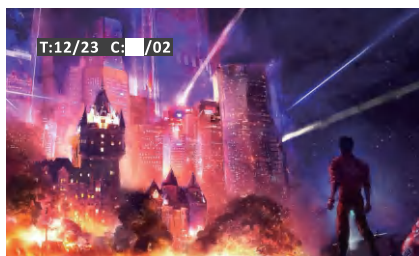


10. 戻り

“RETURN” を押すと、今の再生とディスクのメインメニューの間に切り替わります。

11. 字幕

“SUBTITLE” を押して字幕言語を選択します。対応させるには適切ディスクを必要です。

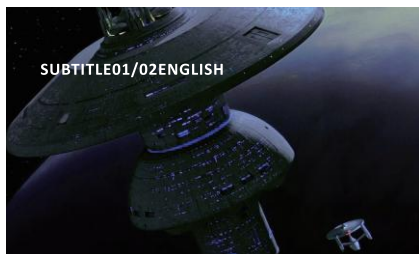

12. タイトル

ディスクのメインメニューに戻ります。

13. ANGLE


ディスクの再生中は、角度を押すと、転換できる角度が表示され、もう一度押して、通常の視野角に戻るまたは終了できる。(全てのディスクにこの機能が含まれるわけではありません。)



仕様

電源	DC 9-14.4V 1.5アンペア
作業温度	5-40° C
周波数特性	20 kHzの20 Hzの
ビデオ出力	1 VP-P / 75オーム、アンバランス
オーディオS / N	>60 dB
ダイナミックレンジ	>85 dB
レーザ 波長	650 nm /750 nm

保証カード

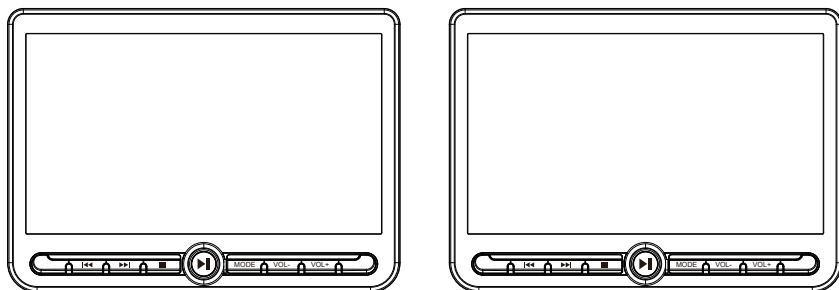

お届けした商品について、気になることやご不明な点がございましたら、いつでもなんでもメールまでお問い合わせください。

- 購入日より一ヶ月以内の返品保証
- 購入日より12ヶ月以内の交換保証
- 詳しく丁寧な顧客サービス

当方の商品やサービスに満足して頂けたら、“本当の声”を商品の評価として投稿いただけると、とても嬉しく思います。

今後ともお客様に満足して頂けるようにサービス向上のため、日々精進してまいりますので宜しくお願い致します。



arafuna-service@outlook.com

