


RedThunder

K65 MECHANICAL
KEYBOARD

Wireless Mechanical Keyboard
60% Layout Customized Mechanical Keyboard

User's Manual

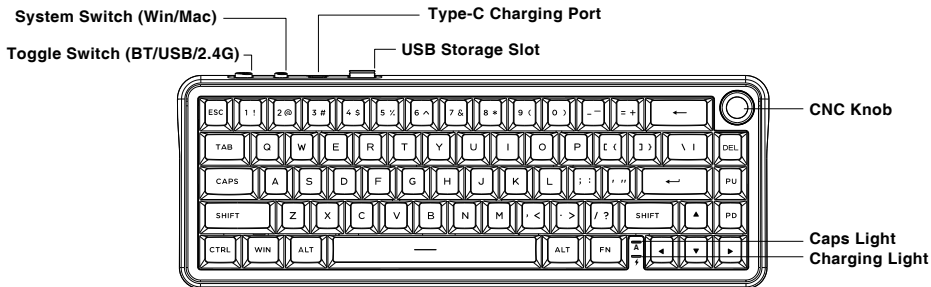

Package List



Manual



Keyboard



Switch and Keycap Puller



USB Type-C Cable



2.4G Dongle



Switches

Model	K65		
Number of Keys	66Keys + 1Knob(US version)67Keys + 1Knob(UK version)67Keys + 1Knob(DE version)		
Product Size	325 × 118 × 40 ± 2mm	Product Weight	693 ± 20g
Battery Capacity	4000mAh	Charging Port	Type-C interface
Charging Voltage/Current	5V/1A	Rating Voltage	3.7V/155mAh
Battery Life	24h (default lighting) / 120h (lights off)		
Rated Current	Operating Current: ≤150mA (default), 220mA (full white light)		
FN Key	Multifunctional key combination		
Hardware Connection	Wired USB/2.4G receiver/BT1/BT2/BT3		
Compatible Systems	Windows 7/8/10/11, macOS and others		
Power Saving	2.4G Wireless & Bluetooth Modes		
	Deep Sleep: 10min inactivity with keyboard, wake by key press Backlight Off: 1min inactivity with keyboard, reactivate by key press		
	Wired Mode		
	Follow the computer's sleep or wake status		
Macro Settings	Can only be set in wired mode		




CNC Knob:

Press & hold for 5s to switch modes.

Volume Mode: Rotate to adjust volume. Press to mute/unmute.

Lighting Mode: Rotate to adjust brightness. Press to cycle lighting effects.



Caps Lock Indicator Light:

Uppercase Letters: The indicator light is green.

Lowercase Letters: The indicator light is off.




Charging Indicator Light:

Low Battery: Indicator light flashes red.

Charging: Indicator light stays red.

Fully Charged: Indicator light turns green or off.




USB Receiver ①: Loss will not be compensated. Please keep the USB receiver properly.

Type-C Port ②: Charge/use only with the original $\leq 5V/1A$ data-capable charger.

System Switch ③: Force physical switch. Confirm system before use.

Connection Mode Switch ④: Force physical switch. Confirm connection mode before use.

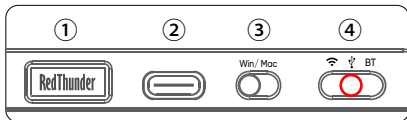

Please switch to "**Win / Mac**" system at the keyboard switch ③ before use.

How to use wired mode?

1. With the switch ④ on the "**CABLE** 🖱️" position.
2. Then insert the cable USB-C into the keyboard port ② and your device USB port.

Note: Use the original charging cable or a certified one with reliable data transfer.


Charging


How to charge?

Insert the original charging cable (with data transmission) into Keyboard Type-C Port ② and the computer USB port for charging.



Use a DC: 5V charger (computer USB port recommended).
Use original charging cable (with data transmission) for charging.
Avoid high - voltage/fast/non - certified adapters.



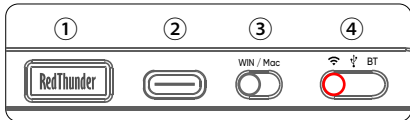

Please switch to "Win / Mac" system at the keyboard switch ③ before use.

2.4G Wireless Connection

1. Turn the switch ④ to the "2.4G 无线" position.
2. The light of the letter "R" key is flashing slowly.
3. Remove the USB receiver from the USB receiver slot ① inside the keyboard.
4. Insert the USB receiver into your device's USB port.

2.4G Code Matching Steps (Paired by default at the factory)


Before pairing:

- Ensure sufficient power.
- Keep the device and the USB receiver within 10 cm and free of obstructions to get a stable signal.
- Keep away from 2.4GHz interference sources like routers and Bluetooth devices.
- USB receiver is not plugged into device, and operate as follows.

Keyboard pairing steps:

1. Turn the switch ④ to the "2.4G 无线" position.
2. Long press the combination key "FN + R" for about 5s, and the light of the letter "R" key is flashing quickly.
3. Insert the USB receiver into the computer's USB port, the pairing is completed.



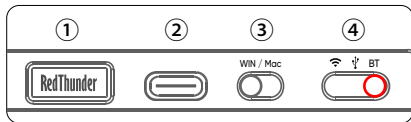

Please switch to **"Win / Mac"** system at the keyboard switch ③ before use.

1. Turn the switch ④ to **"BT"** position.



2. Press and hold the keys **"Fn + Q/W/E"** .

The light of the letter **"Q/W/E"** will flash rapidly, and it will enter the Bluetooth connection mode.

3. Search for pairing name **[K65 - 5.0]** in the Bluetooth List of your device, click connect.

Note:

- Remove the previously linked device name to avoid confusion.
- Long - press **FN + Q/W/E** to enter the pairing mode for **BT1/BT2/BT3**.
- Short - press **FN + Q/W/E** to quickly switch between **BT1/BT2/BT3** devices.

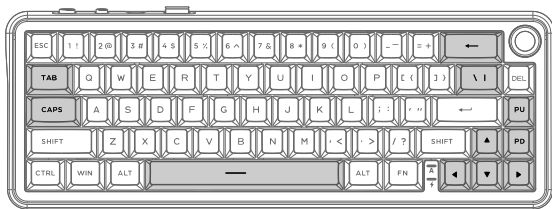

Side light

Fn + **PU**

Switch backlight color
in pure color mode

Fn + **PD**

Press once to activate Self-set Game Lighting
Press twice to start Self-set Game Lighting

Fn + **\ |**

(US) Switch backlight mode

Fn + **~ #**

(UK) Switch backlight mode

Fn + **←**

Turn on/off the backlight (including the side backlight)

Fn + **▲** **▼**

Increase/Decrease backlight brightness

Fn + **◀** **▶**

Speed up/down the backlight speed

Fn + **TAB**

Switch the side light

Fn + **—**

White light mode

Fn + **CAPS**


Switch the side light color

Step 1: Press **FN + PD** once to enter the custom backlight mode

Step 2: Press **FN + PD** again, and the signal indicator light will flash to enter the custom lighting settings

Step 3: Press the keys you want to customize, and repeat this step

Step 4: Press **FN + PD** to save the settings and exit the backlight recording mode when you complete the custom settings

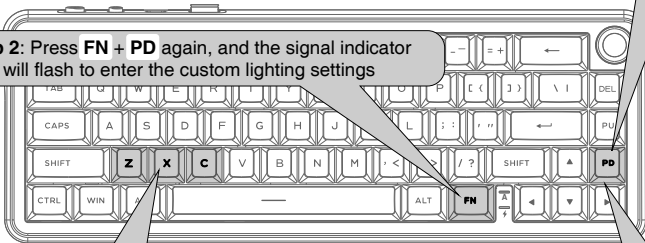

Fn+ Ctrl to switch FN Function on Windows/macOS

English

Key Position	Windows System		MacOS System	
	Single Press Function	FN+Combination	Single Press Function	FN+Combination
1!	F1	My computer	Screen brightness-	F1
2@	F2	Mailbox	Screen brightness+	F2
3#	F3	Homepage	Array running program	F3
4\$	F4	Search	Mission control	F4
5%	F5	Refresh	Keyboard brightness +	F5
6^	F6	Music	Keyboard brightness -	F6
7&	F7	Previous song	Previous song	F7
8*	F8	Play/Pause	Play/Pause	F8
9(	F9	Nextsong	Nextsong	F9
0)	F10	Mute	Mute	F10
-_	F11	Volume-	Volume-	F11
=+	F12	Volume+	Volume+	F12
Win	Windows	Win Lock	Option	\
Alt(left)	Alt	\	Command	\

FN + Ctrl (Toggle between the number keys and the FN keys)

1!, 2@, 3#, 4\$ -_, =+ ⇌ F1, F2, F3, F4 F11, F12

Other FN Shortcut Key Instructions

English

Fn + L	PrtSc	Fn + · >	Home
Fn + ; :	ScrLk	Fn + / ?	End
Fn + ←	Long press for 5s to restore factory settings	Fn + , <	Insert
Fn + @ ,	(UK) Pause	Fn + ' "	(US) Pause
Fn + ESC	(UK) `	Fn + ESC	(US) `
Fn + SHIFT + ESC	(UK) ~	Fn + SHIFT + ESC	(US) ~
Fn + AltGr + ESC	(UK) !		

Driver Download

<https://redthundergame.com>


Warranty Matters

Warranty Coverage: Product malfunctions due to unstable electrical performance are covered.


After-Sales Service: support@redthunder.online

Troubleshooting Updates: <https://redthundergame.com/QA>

Key Puller



The Switch Puller tool aligns Vertically to the Switch to unclip the plastic securing the switch to the plate.




**Support 3-pin/
5-pin switches**


South light position

Mechanical Switch


Example of a switch as seen from top after you remove the keycap to prepare for switch removal.



Switch

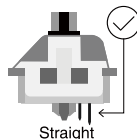

Straight

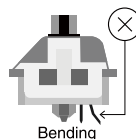

Bending



Remove Switches

1. Grab your Switch Removal Tool and align the gripping teeth vertically (on the Y-Axis) at the center of the switch, as shown in the example graphic above.
2. Grab the switch with the Switch Puller and apply pressure until the switch releases itself from the plate.
3. Using firm but gentle force pull the switch away from the keyboard using a vertical motion.

Install Switches

1. Check that all switch metal pins are completely straight and clean to avoid bending.
2. Align the switch vertically with the WGA logo facing upwards, ensuring that the pins align with the keyboard PCB.
3. Depress the switch until you hear a distinct click, indicating that your switch clips have securely to the keyboard plate.
4. Inspect the switch to ensure it's properly attached to your keyboard, and test it.

Note:

- If the key doesn't work, it is possible you may have bent one of the switches while installing it. Take it out, straighten it, repeat the above steps, reinstall it, or replace it with a new switch.
- Pins may be damaged beyond repair and need replacement if this process is not done correctly. Never apply excessive force when replacing keycaps or switches.
- If you cannot remove or install keycaps or switches, please contact customer service ASAP to avoid damage to the keyboard due to operating errors.

• Charging Issues:

- Unplug when not in use.
- Use a DC: 5V charger (computer USB port ecommended).
- For battery life protection: Charge the keyboard/mouse at least once a month.
- Avoid high - voltage/fast/non - certified adapters.
- Check charging cable, USB and Type - C ports (no damage/debris/loose connections).
- If unused for long, the battery may self - discharge and fail to charge. Use 3V - 4V low voltage with a weak current to slowly charge for about 2 hours to restore battery charging.
- Charge in 10–25°C (cool/dry). Avoid high temperature (accelerates aging), low temperature (reduces activity), humidity, corrosion and direct sunlight.
- Improper battery use (short circuit of the charging line or overload charging, etc.) may cause fire/leakage. RedThunder is not liable for such incidents.

• Usage Issues:

- Ensure power supply or sufficient battery when in use.
- Ensure that the USB receiver and USB port are not loose or damaged during use.
- Ensure the system switch is in the correct position during use to prevent key errors.
- Ensure the mode switch and connection method are in the correct positions during use.
- Ensure to use the original data cable with data transmission function in wired mode.
- Ensure there are no mutual interfering(such as microwaves, etc.) when using the 2.4G/BT wireless connection mode.
- When a connection failure occurs during use, please re-plug or re-pair the connection.
- Avoid heavy impacts or accidental drops during use to prevent component damage.

• **USB Receiver:**

- Do NOT forcefully insert/remove the USB receiver.
- There is no separate USB receiver for sale, please keep the USB receiver safe.
- Loss/damage from improper storage (e.g., misplacement, physical abuse) is NOT covered by the warranty.

• **Usage Environment and Maintenance:**

1. **Usage and Maintenance Risks:**

- Use ONLY RedThunder-approved parts. RedThunder is not liable for issues caused by non-approved accessories.
- Wipe with a dry, lint-free cloth or non - corrosive cleaning paste; liquid cleaning is prohibited.
- Keep away from fire sources and do not discard it into fire.

2. **Storage and Other Warnings:**



- Unplug when not in use.
- This product contains small parts with a choking hazard.
- Store out of children's and pets' reach.

• **Other Issues:**

- Press FN+ESC to restore factory settings to solve the problem.
- Extreme cold or hot environments can impede the functionality of electronic components as their activity gets subdued.
- Damage from violent handling (e.g., dropping, crushing) is NOT covered by the warranty.
- For computer device failures (e.g., damaged USB port), contact the supplier's customer service.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Note: This device has been tested to meet the restrictions for ClassB digital devices as per Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in residential installations. The device generates, uses, and emits radio frequency energy, if not installed and used according to instructions, may cause harmful interference with radio communications.

However, there is no guarantee that interference will not occur in a specific installation. If this device does cause harmful interference with radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase distance between the interfered device and receiver.

Connect the device to a different port from that connected to the receiver.

Seeking assistance from a dealer or experienced radio/TV technician.

Warning:

Changes or modifications to this unit not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment. FCC Radiation Exposure Statement. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

English:

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device. The digital apparatus complies with Canadian CAN ICES-3(B)/NMB-3(B).


This device complies with the ISED Limit per RSS-102 Issue 5 for the uncontrolled RF Exposure of portable device.

Français:

Cet appareil contient des émetteurs/récepteurs exemptés de licence qui sont conformes aux RSS exemptés de licence d'Innovation, Sciences et Développement Économique Canada. Le fonctionnement est soumis aux deux conditions suivantes:

- (1) Cet dispositif ne peut pas causer d'interférence.
- (2) Cet appareil doit accepter toute interférence, y compris toute interférence qui pourrait causer un fonctionnement indésirable de l'appareil. L'appareil numérique est conforme aux normes canadiennes CAN ICES-3(B)/NMB-3(B).


Cet appareil est conforme à la limite fixée par RSS-102 numéro 5 pour l'exposition RF non contrôlée des appareils portables.

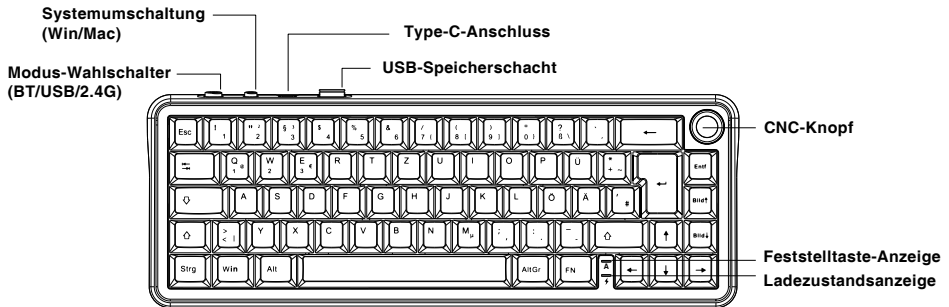

Produktliste



Anleitung



Tasten



Switch und
Keycap-Entferner



USB Typ-C Kabel




2,4G Dongle



Switches

Modell	K65		
Anzahl der Tasten	66Keys + 1Knob(US version)67Keys + 1Knob(UK version)67Keys + 1Knob(DE version)		
Produktabmessungen	326 × 120 × 27 ± 2mm	Produktgewicht	693 ± 20g
Akkukapazität	4000mAh	Ladeschnittstelle	Typ-C-Schnittstelle
Ladespannung/-strom	5V/1A	Nennspannung	3.7V/155mAh
Batterielaufzeit	24h (Standardbeleuchtung)/120h (Beleuchtung aus)		
Nennstrom	Betriebsstrom: ≤ 150mA (Standard), 220mA (voller Weißlicht)		
FN Tasten	Multifunktionstastenkombination		
Hardware-Verbindung	Kabelgebundener USB/2,4G-Empfänger/BT1/BT2/BT3		
Kompatible Systeme	Windows 7/8/10/11, macOS und andere		
Energiesparmodus	2,4-GHz-Funk & Bluetooth-Modi		
	Tiefschlaf: 10 Minuten Inaktivität mit der Tastatur, Aufwachen durch Tastendruck Hintergrundbeleuchtung aus: 1 Minute Inaktivität mit der Tastatur, durch Tastendruck reaktivieren		
	Kabelgebundener Modus		
	Folgt dem Ruhe- oder Aktivierungsstatus des Computers		
Makro-Einstellungen	Nur im kabelgebundenen Modus		

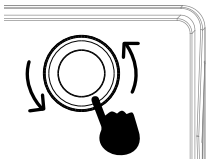

CNC Knob:

5 Sekunden gedrückt halten zum Moduswechsel.

Lautstärkemodeus: Drehen zur Lautstärkeregelung.
Drücken zum Stummschalten/Einschalten.

Beleuchtungsmodus: Drehen zur Helligkeitsregelung.
Drücken zum Wechsel der Lichteffekte.



Caps Lock-Anzeigeleuchte:

Großbuchstaben: Die Anzeigeleuchte leuchtet grün.

Kleinbuchstaben: Die Anzeigeleuchte ist ausgeschaltet.




Ladeanzeige:

Schwacher Akku: Die Anzeige blinkt rot.

Ladevorgang: Die Anzeige leuchtet rot.

Vollständig geladen: Die Anzeige leuchtet grün.




USB-Empfänger ①: Verlust wird nicht ersetzt. Bitte bewahren Sie den USB-Empfänger ordnungsgemäß auf.

Typ-C-Anschluss ②: Laden/Nutzen ausschließlich mit dem originalen $\leq 5V/1A$ -Datenfähigen Ladegerät.

Systemschalter ③: Physischer Schalter. Überprüfen Sie das System vor der Verwendung.

Verbindungsmodusumschalter ④: Physischer Schalter. Überprüfen Sie den Verbindungsmodus vor der Verwendung.

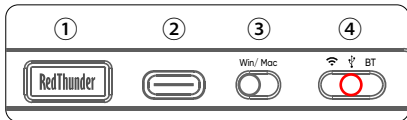

Schalten Sie vor der Benutzung auf "Win / Mac" System am Tastaturschalter ③ um.

Wie verwendet man den kabelgebundenen Modus?

1. Schalter ④ auf Position "CABLE" stellen.
2. USB-C-Kabel in Tastaturanschluss ② und Geräte-USB-Port einstecken.

Hinweis: Verwenden Sie nur das Original-Ladekabel oder ein zertifiziertes Kabel mit zuverlässiger Datenübertragung.


Aufladung


Wie wird aufgeladen?

Stecken Sie das mitgelieferte Ladekabel in den Type-C-Anschluss ② der Tastatur und das andere Ende in den USB-Port Ihres Computers.



Verwenden Sie ein Ladegerät mit 5V Gleichstrom (USB-Anschluss am Computer empfohlen).
Verwenden Sie zum Laden das originale Datenkabel (mit Datenübertragungsfunktion).
Vermeiden Sie Hochspannungs-/Schnelllade-/nicht zertifizierte Netzteile.

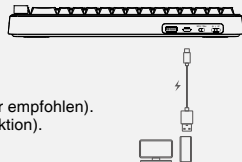

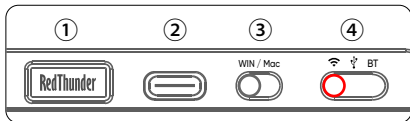

Schalten Sie vor der Benutzung auf **"Win / Mac"** System am Tastaturschalter ③ um.

2,4-GHz-Drahtlosverbindungsmodus:

1. Stellen Sie den Schalter ④ auf die Position **"2.4G"** mit dem WLAN-Symbol.
2. Die Leuchte der Taste **"R"** blinkt langsam.
3. Entfernen Sie den USB-Empfänger aus dem USB-Empfängerschacht ① in der Tastatur.
4. Stecken Sie den USB-Empfänger in den USB-Anschluss Ihres Geräts.

2.4G-Code-Abgleichsschritte (werkseitig standardmäßig gekoppelt)


Vor dem Koppeln:

- Stellen Sie ausreichend Stromversorgung sicher.
- Halten Sie das Gerät und den USB-Empfänger innerhalb von 10 cm Abstand und frei von Hindernissen für ein stabiles Signal.
- Halten Sie Abstand von 2.4GHz Störquellen wie Routern und Bluetooth-Geräten.
- USB-Empfänger ist nicht an das Gerät angeschlossen, und führen Sie folgende Schritte aus.

Tastatur-Kopplungsschritte:

1. Stellen Sie den Schalter ④ auf die Position **"2.4G"** mit dem WLAN-Symbol.
2. Halten Sie die Tastenkombination **"FN + R"** etwa 5 Sekunden lang gedrückt, bis die Leuchte der Taste **"R"** schnell blinkt.
3. Stecken Sie den USB-Empfänger in den USB-Anschluss des Computers, um die Kopplung abzuschließen.



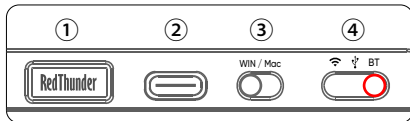

Schalten Sie vor der Benutzung auf **"Win / Mac"** System am Tastaturschalter ③ um.

1. Schalter ④ auf Position **"BT"** stellen.

2. Tastenkombination **"Fn + Q/W/E"** gedrückt halten





Die **"Q/W/E"** -Leuchte blinkt schnell und der BluetoothVerbindungsmodus wird aktiviert.

3. Suchen Sie in der Bluetooth-Liste Ihres Geräts nach dem Pairing-Namen **[K65 - 5.0]** und klicken Sie auf Verbinden.

Hinweis:

- Alte Gerätenamen löschen (Verwechslungen vermeiden).
- **FN + Q/W/E** halten: **BT1/BT2/BT3**-Kopplungsmodus.
- **FN + Q/W/E** kurz drücken: Schnellwechsel zwischen **BT1/BT2/BT3**.

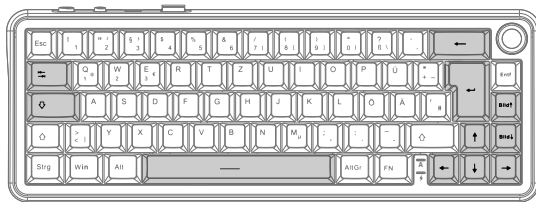

Seitenbeleuchtung

Fn + **Bild↑** Hintergrundbeleuchtungsfarbe im Einfarbmodus wechseln

Fn + **' #** Modus der Beleuchtung umschalten

Fn + **—** Weißlichtmodus

Fn + **←** Beleuchtung ein-/ausschalten (einschließlich Seitenbeleuchtung)

Fn + **←** **→** Geschwindigkeit der Hintergrundbeleuchtung verlangsamen/beschleunigen

Fn + **↑** **↓** Helligkeit der Beleuchtung erhöhen/verringern

Fn + **Bild↓** Einmal drücken, um die selbst eingestellte Spielbeleuchtung zu aktivieren

Fn + **↔** Zweimal drücken, um die benutzerdefinierte Spielbeleuchtung zu starten

Fn + **↕** Die Farbe des Seitenlichts wechseln

Schritt 1: Drücken Sie einmal **FN** + **Bild↓**, um den Modus zum Anpassen der Hintergrundbeleuchtung aufzurufen.

Schritt 2: Drücken Sie erneut **FN** + **Bild↓**, und die Signalanzeige blinkt, um die benutzerdefinierten Beleuchtungseinstellungen aufzurufen.

Schritt 3: Drücken Sie die Tasten, die Sie anpassen möchten, und wiederholen Sie diesen Schritt.

Schritt 4: Drücken Sie **FN** + **Bild↓**, um die Einstellungen zu speichern und den Aufzeichnungsmodus für die Hintergrundbeleuchtung zu verlassen, wenn Sie die benutzerdefinierten Einstellungen abgeschlossen haben.



Fn+Strg zum Umschalten der FN-Funktion (Windows/macOS)

Deutsch

Key Position	Windows System		MacOS System	
	Einzeldruck-Funktion	FN+Kombination	Einzeldruck-Funktion	FN+Kombination
1 ₁	F1	Mein Computer	Bildschirmhelligkeit-	F1
" ₂	F2	E-Mail-Postfach	Bildschirmhelligkeit+	F2
§ ₃	F3	Startseite	Array Programm ausführen	F3
\$ ₄	F4	Suchen	Missionskontrolle	F4
% ₅	F5	Aktualisieren	Tastaturhelligkeit +	F5
& ₆	F6	Musik	Tastaturhelligkeit -	F6
/ ₇ {	F7	Vorheriger Titel	Vorheriger Titel	F7
(₈	F8	Wiedergabe/Pause	Wiedergabe/Pause	F8
) ₉ }	F9	Nächster Titel	Nächster Titel	F9
= ₀	F10	Stummschaltung	Stummschalten	F10
? _{ß \}	F11	Lautstärke-	Lautstärke-	F11
` _,	F12	Lautstärke+	Lautstärke+	F12
Win	Windows	Win Lock	Option	\
Alt(links)	Alt	\	Befehl	\
FN + Strg (Umschalten zwischen den Zahlentasten und den FN-Tasten) 1, " 2, § 3, \$ 4, ? \, , ⇒ F1, F2, F3, F4 F11, F12				

Weitere Anweisungen zu den FN-Tastenkombinationen

Deutsch

Fn + **ESC** $\wedge$

Fn + **; ,** Insert

Fn + **L** PrtSc

Fn + **: .** Home

Fn + **Ö** ScrLk

Fn + **- _** End

Fn + **Ä** Pause

Fn + **SHIFT** + **ESC** °

Fn + **←** 5 Sekunden lang drücken,
um Werkseinstellungen wiederherzustellen.

Treiber herunterladen

<https://redthundergame.com>

Garantieangelegenheiten

Garantieumfang: Produktfehler aufgrund instabiler elektrischer Leistung sind abgedeckt.


Kundendienst: support@redthunder.online

Fehlerbehebungs-Updates: <https://redthundergame.com/QA>

Tastatur-Abzieher



Das Werkzeug des Abziehen wird senkrecht auf den HOT-SWAP FÄHIG ausgerichtet, mit dem Schalter an der Platte befestigt ist.




Unterstützt 3-polige/
5-polige Schalter

Südliche Lichtposition


Mechanical Switch

Example of a switch as seen from top after you remove the keycap to prepare for switch removal.

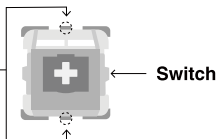

Abnehmbarer HOT-SWAP FÄHIG

1. Nehmen Ihr Werkzeug zum Entfernen von Schalter und richten die Greifzähne vertikal (auf der Y-Achse) auf die Mitte des Schalters aus, wie in der obigen Beispielgrafik gezeigt.
2. Greifen Sie den Schalter mit dem Schalterabzieher und üben Druck aus, bis sich der Schalter von der Platte löst.
3. Ziehen den Schalter mit fester, aber sanfter Kraft in einer vertikalen Bewegung von der Tastatur weg.

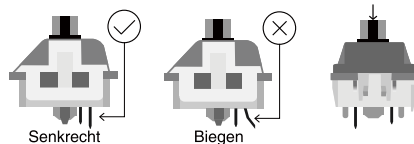

Install Switches

1. Prüfen Sie, ob alle Metallstifte des Schalters völlig gerade und sauber sind, um ein Verbiegen zu vermeiden.
2. Richten den Schalter vertikal aus, so dass das WGA-Logo nach oben und achten, dass die Stifte mit der Platine fluchten.
3. Drücken den Schalter herunter, ein Klicken zu hören. Dies zeigt an, dass der Schalter fest mit der Platte verbunden ist.
4. Überprüfen den Schalter, um sicherzustellen, dass er ordnungsgemäß an Ihrer Tastatur befestigt ist, und testen ihn.

Hinweis:

- Falls die Taste nicht funktioniert, könnte ein Schalter beim Einbau verbogen worden sein. Ziehen Sie den Schalter heraus und wiederholen Sie den Vorgang.
- Wenn dieser Vorgang nicht korrekt durchgeführt wird. Wenden beim Austausch von Tastenkappen oder Schalter niemals übermäßige Kraft an.
- Wenn Tastenkappen oder Schalter nicht abnehmen oder einbauen können, wenden sich bitte so schnell wie möglich an den Kundendienst, um Schäden an der Tastatur aufgrund von Bedienungsfehlern zu vermeiden.

• Lade-Probleme:

- Stecker ziehen bei Nichtgebrauch.
- Ladegerät mit Gleichstrom: 5V verwenden (Computer-USB-Anschluss empfohlen).
- Zum Schutz der Akkulaufzeit: Tastatur/Maus mindestens einmal monatlich laden.
- Hochspannungs-/Schnell-/nicht zertifizierte Adapter vermeiden.
- Ladekabel, USB- und Typ-C-Anschlüsse überprüfen (keine Beschädigungen/Verunreinigungen/lockere Verbindungen)
- Bei längerer Nichtnutzung kann sich der Akku selbst entladen und nicht mehr aufladen. Mit 3V - 4V Niederspannung und schwachem Strom etwa 2 Stunden langsam laden, um die Akkuladung wiederherzustellen.
- Bei 10-25°C laden (kühl/trocken). Hohe Temperaturen vermeiden (beschleunigt Alterung), niedrige Temperaturen (vermindert Aktivität), Feuchtigkeit, Korrosion und direkte Sonneneinstrahlung.
- Unsachgemäße Akkunutzung (Kurzschluss des Ladekabels oder Überlastung beim Laden etc.) kann zu Brand/Austritt führen. RedThunder haftet nicht für derartige Vorfälle.

• Verwendungshinweise:

- Achten Sie darauf, dass die Stromversorgung angeschlossen ist oder der Akku ausreichend geladen ist.
- Achten Sie darauf, ob der USB-Empfänger und der USB-Anschluss nicht locker oder beschädigt sind.
- Achten Sie darauf, den Systemschalter während der Nutzung in die richtige Position zu stellen, um Tastaturfehler zu vermeiden.
- Achten Sie darauf, dass der Modus-Schalter und die Verbindungsmethode während der Nutzung korrekt eingestellt sind.
- Achten Sie darauf, im Kabelmodus das originale Datenkabel mit Datenübertragungsfunktion zu verwenden.
- Achten Sie darauf, Störquellen wie Mikrowellen im 2.4G/BT-Funkverbindungsmodus zu vermeiden.
- Achten Sie darauf, bei Verbindungsproblemen den Empfänger neu einzustecken oder die Verbindung neu zu koppeln.
- Achten Sie darauf, starke Stöße oder Stürze zu vermeiden, um Schäden an den Komponenten zu verhindern.

• **USB-Empfänger:**

- Den USB-Empfänger NICHT gewaltsam einstecken oder entfernen.
- Es wird kein separater USB-Empfänger verkauft, bitte bewahren Sie den USB-Empfänger sicher auf.
- Verlust/Beschädigung durch unsachgemäße Aufbewahrung (z.B. Verlegen, mechanische Beschädigung) ist NICHT durch die Garantie abgedeckt.

• **Verwendung und Wartung:**

1. Usage and Maintenance Risks:

- Nur von RedThunder zugelassene Teile verwenden. RedThunder übernimmt keine Haftung für Probleme durch nicht zugelassenes Zubehör.
- Mit einem trockenen, fusselfreien Tuch oder nicht korrosiver Reinigungspaste abwischen; Flüssigreinigung ist untersagt.
- Von Zündquellen fernhalten und nicht in Feuer werfen.

2. Lagerung und weitere Warnhinweise:



- Bei Nichtgebrauch den Stecker ziehen.
- Dieses Produkt enthält Kleinteile, die eine Erstickungsgefahr darstellen.
- Außerhalb der Reichweite von Kindern und Haustieren aufbewahren.

• **OWeitere Hinweise:**

- Drücken Sie FN+ESC, um die Werkseinstellungen wiederherzustellen und das Problem zu beheben.
- Extreme Kälte oder Hitze können die Funktionsfähigkeit elektronischer Komponenten beeinträchtigen, da deren Aktivität eingeschränkt wird.
- Schäden durch grobe Behandlung (z.B. Fallenlassen, Quetschen) sind von der Garantie ausgeschlossen.
- Bei Ausfällen von Computergeräten (z.B. beschädigter USB-Anschluss) wenden Sie sich bitte an den Kundendienst des Lieferanten.

RedThunder

Light up your gaming world

If you have any problems with our products, please contact us at any time and we will do our best to solve all problems for you.

Brand Owner: Shenzhen Honglei E-commerce CO. Ltd

Official Website: redthundergame.com

E-mail: support@redthunder.online

