MARTIN®

FURNITURE

SET-UP INSTRUCTIONS FOR ITEM

# IMPA396FP FIREPLACE CONSOLE


info@martinfurniture.com
619-671-5100

| N0: | Parts List | | Q'TY |
|---|---|---|---|
| A |  | Fireplace Console | 1 PC |
| B |  | Adjustable Shelves | 2 PCS |
| C |  | Legs | 4 PCS |
| D |  | Center Support Leg | 2 PCS |
| E |  | Handle | 2 PCS |
| F |  | Shelf Pins | 8 PCS |
| G |  | Screws (12mm) | 8 PCS |


| N0: | Hardware List | | Q'TY |
|---|---|---|---|
| 1. |  | Bolt M6 * 55mm | 08 PCS |
| 2. |  | Spring washer Ø1/4" | 08 PCS |
| 3. |  | Flat washer Ø1/4"*19*2mm | 08 PCS |
| 4. |  | Allen wrench (4mm) | 1 PC |
| 5. |  | Screw Ø5/32" * 30mm | 4 PCS |

Caution: Please read all instructions before assembly and check the carton for any parts that may have come loose during shipment.
It is recommended to ***use two or more people during the assembly process.***


1. Install legs (C) at each corner of the Console (A) and secure in place using a bolt (1) with spring washer (2) and flat washer (3).

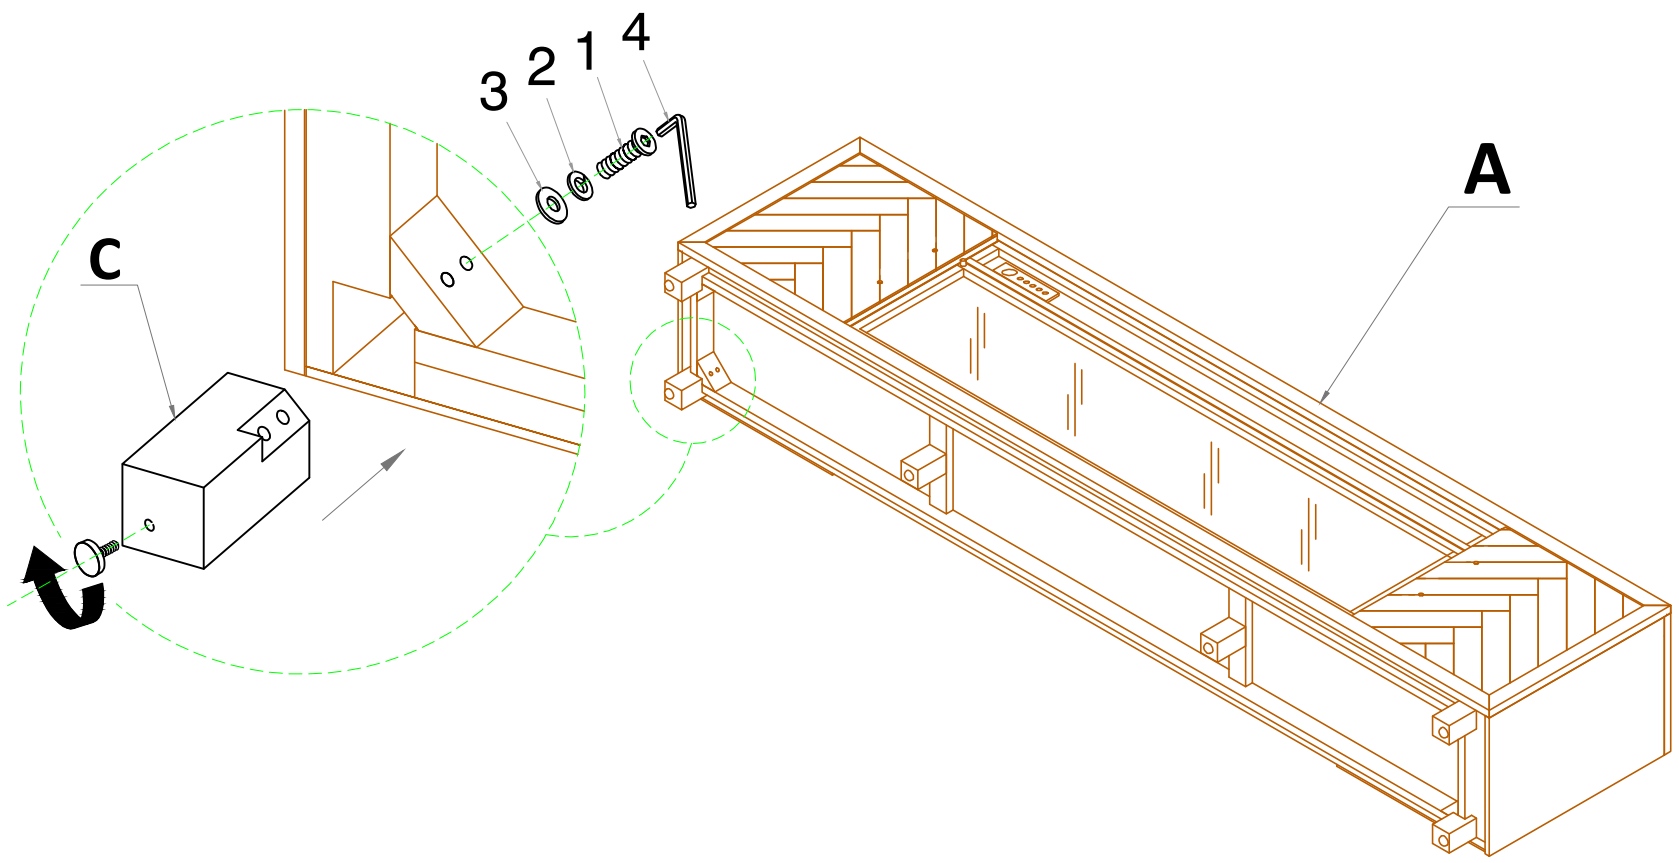


2. Install center support leg (D) and adjust leveler if needed

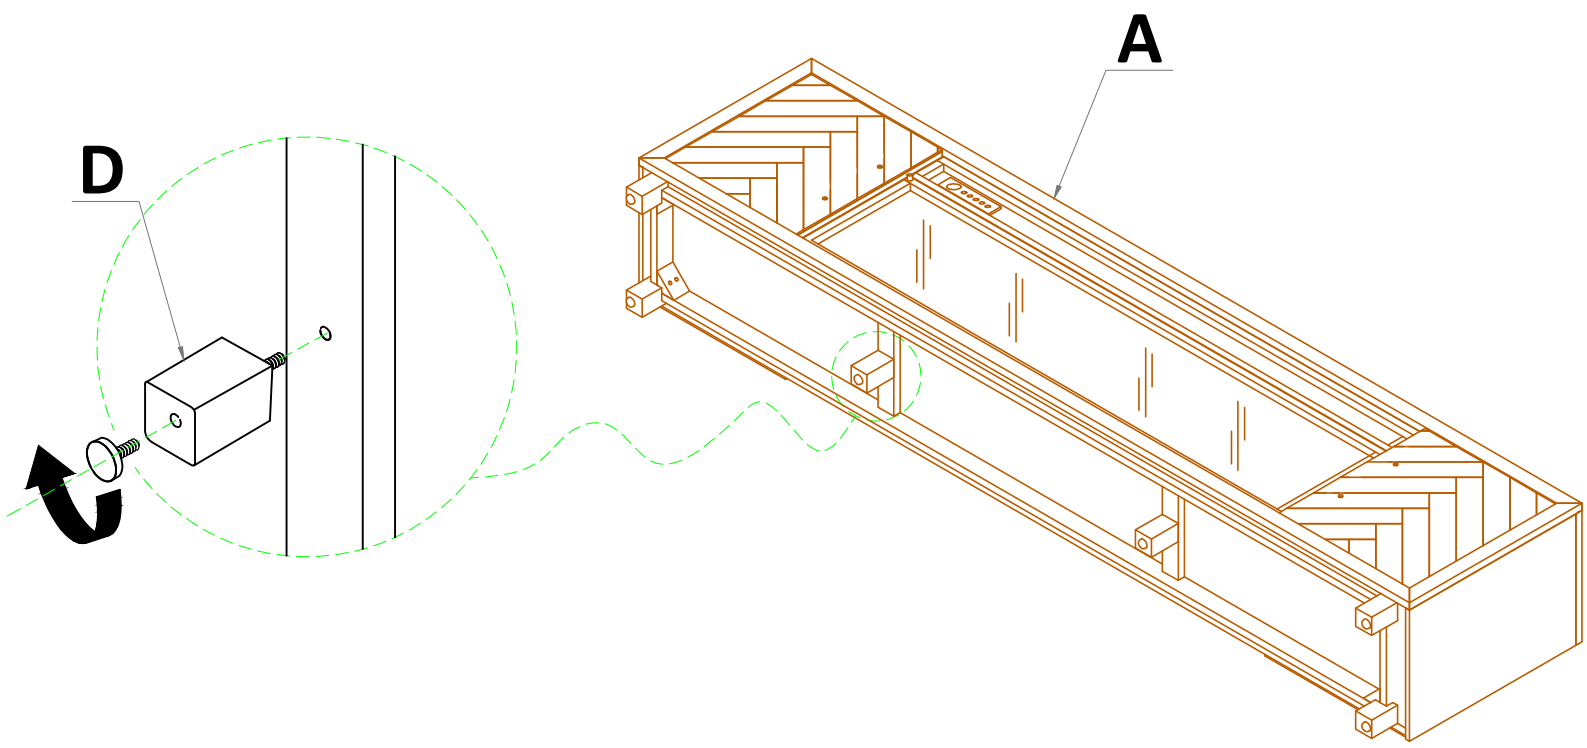


3. Turn the console upright. Install handles (E) on the doors using a screw (5).

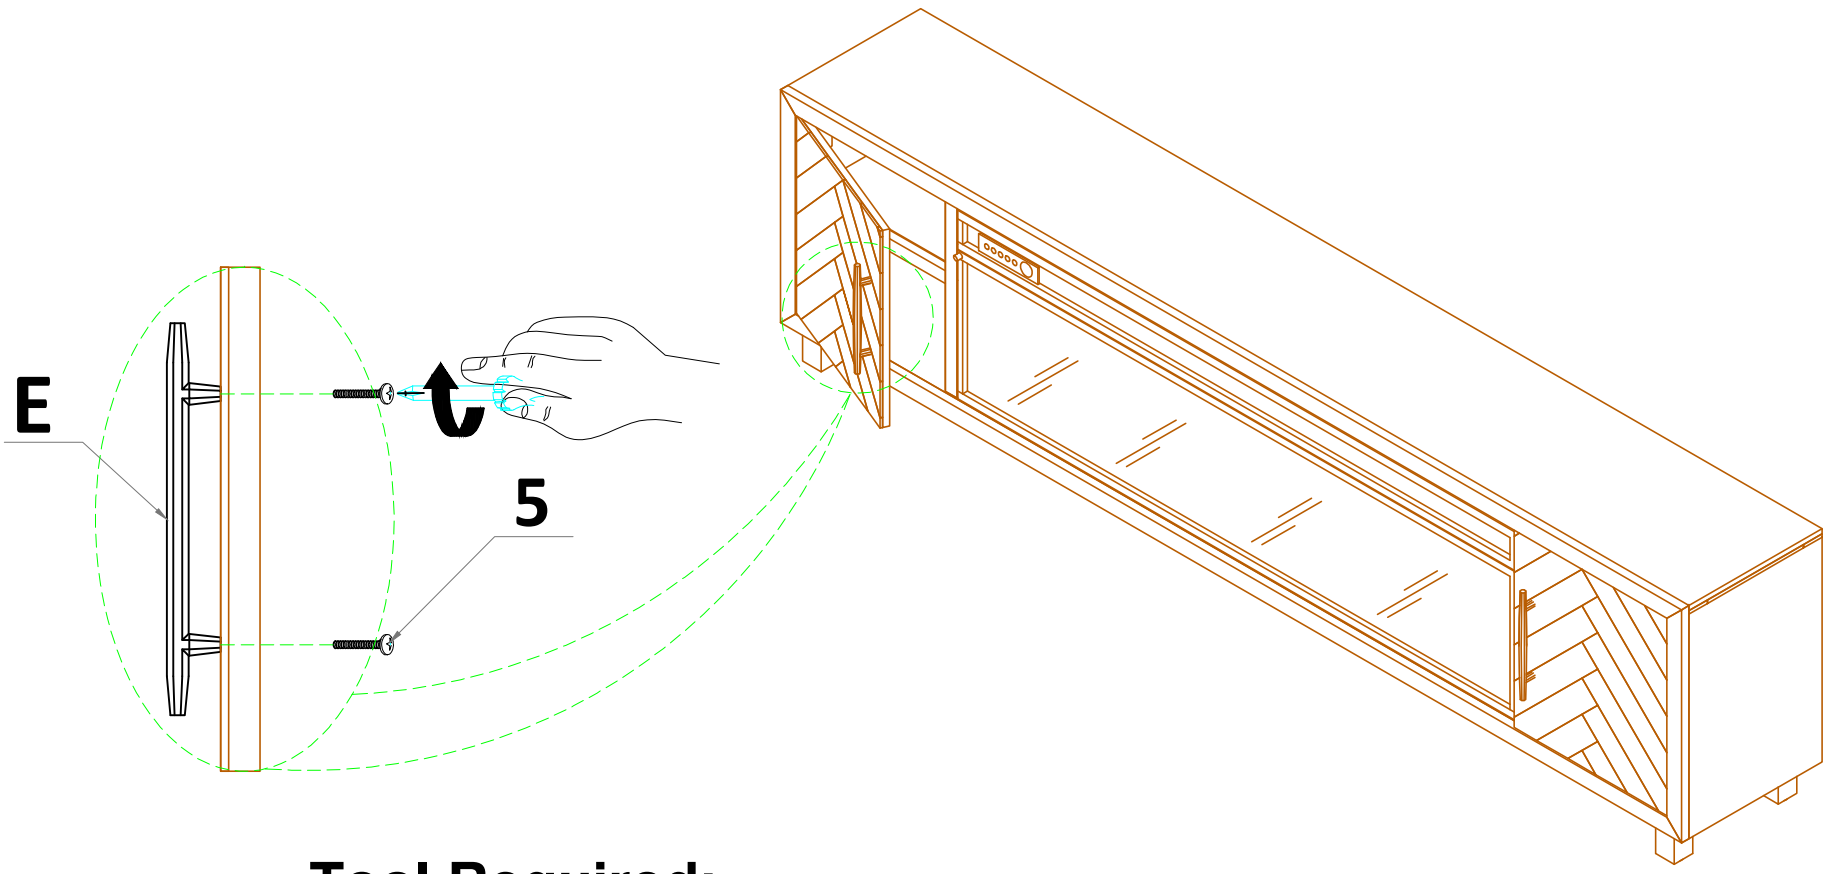


**Tool Required:**
**Philip Screw Driver**
**( not provided )**


4. The Shelves (B) are secured in place with screws (G) through a metal shelf pin (F) for packing and shipping. To adjust shelf height, loosen the screws and remove the shelf and the shelf pins. Position the shelf pins at desired height, place the shelf on the shelf pins and tighten with screws as shown in the illustration.

Tool Required: Philip Screw Driver (not provided)

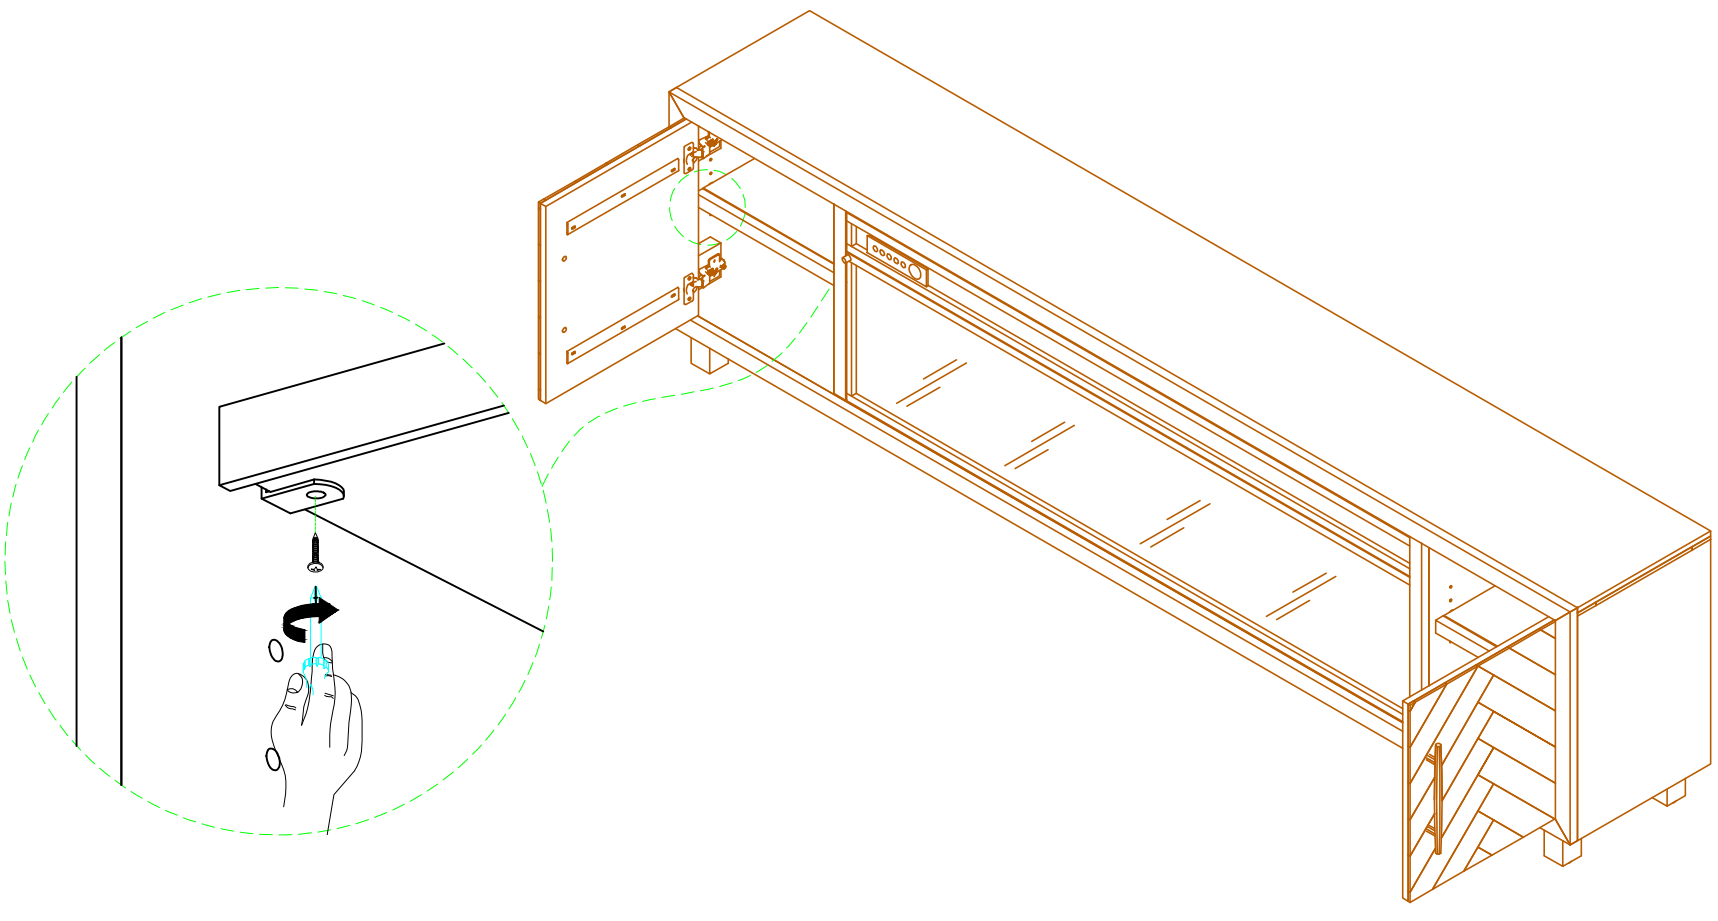


6. Spread the crystals


6.1 Unscrew 2 screws of the glass front.

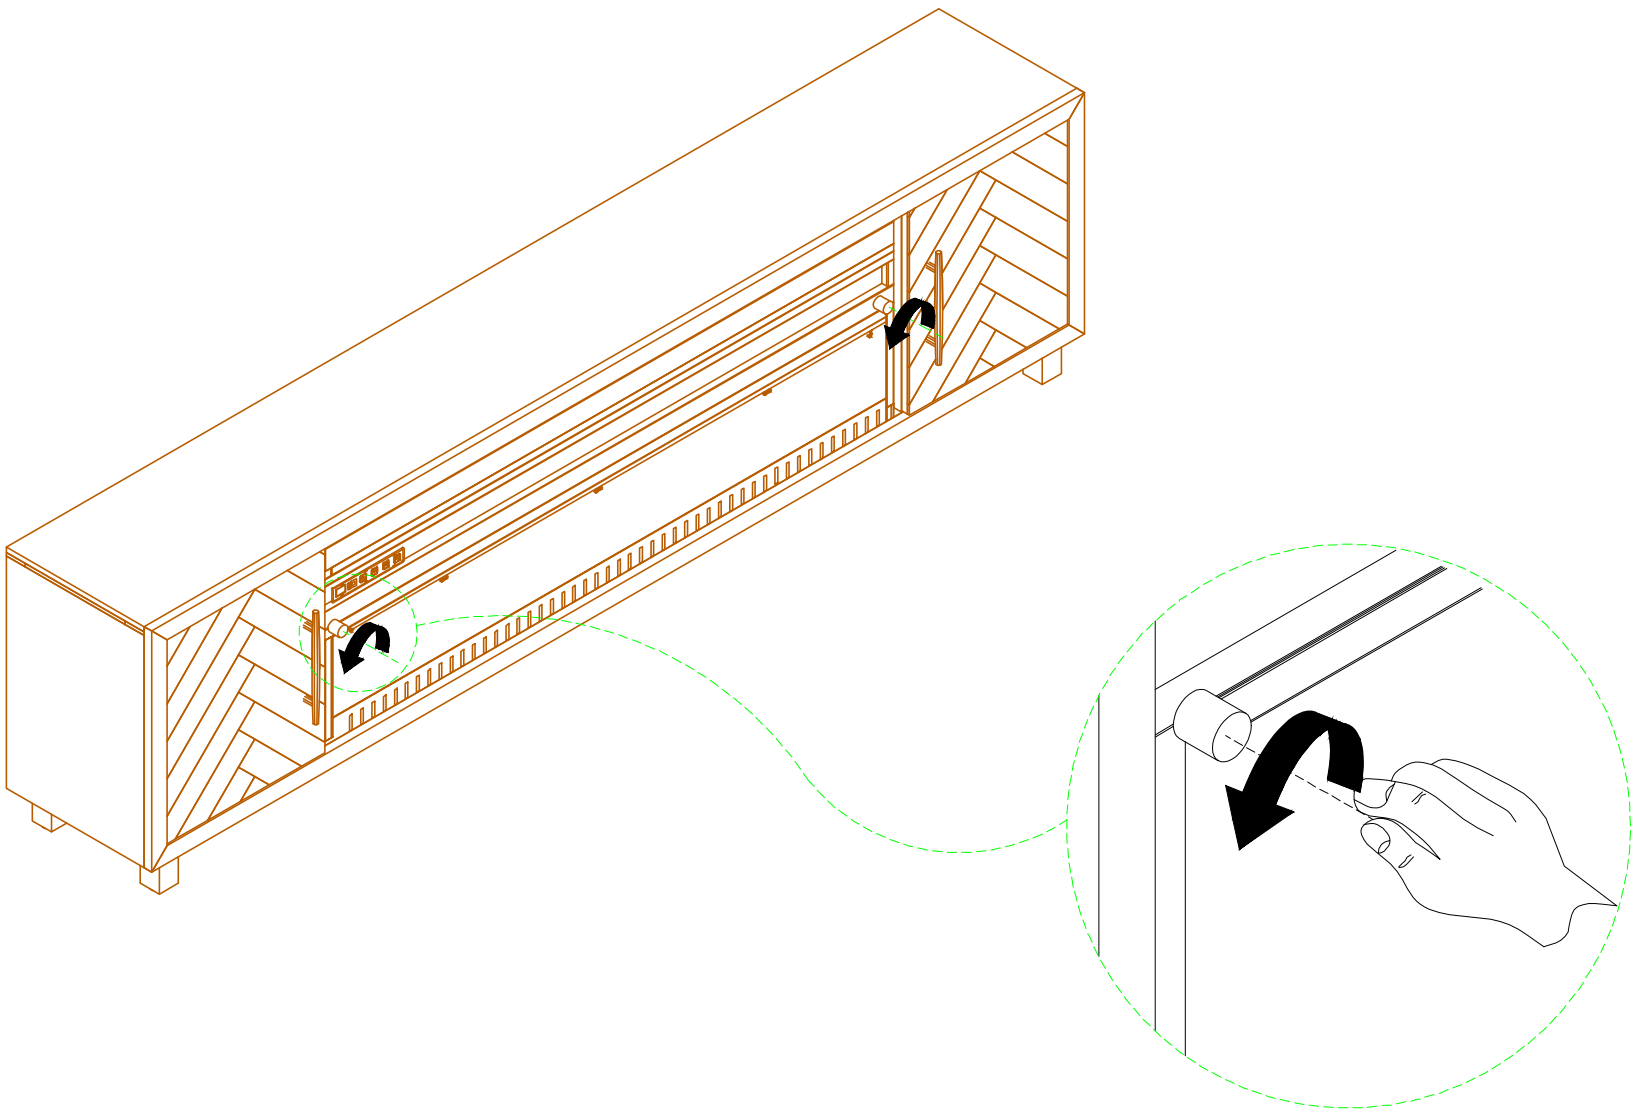


6.2 Carefully open the glass front of the fireplace insert.

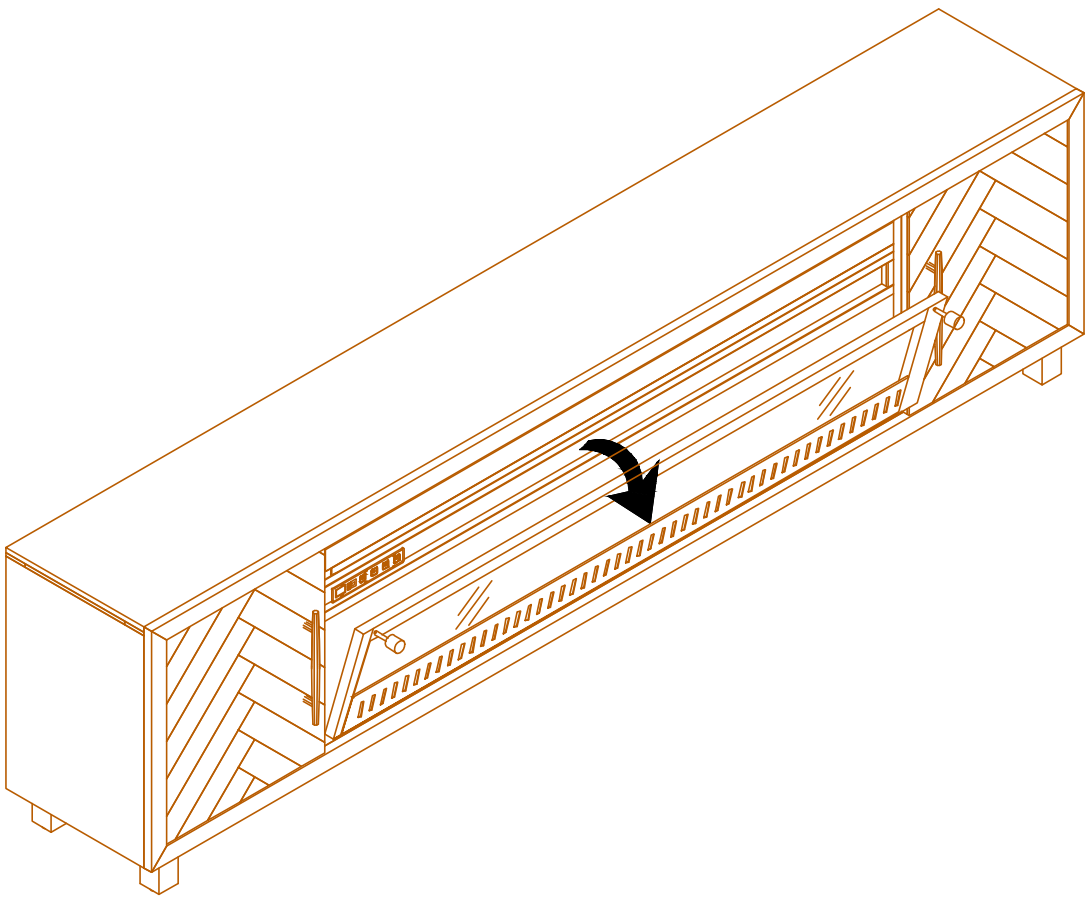

6.3 Spread the crystals evenly along the bottom of the fireplace (the bag of crystals comes with the hardware box).

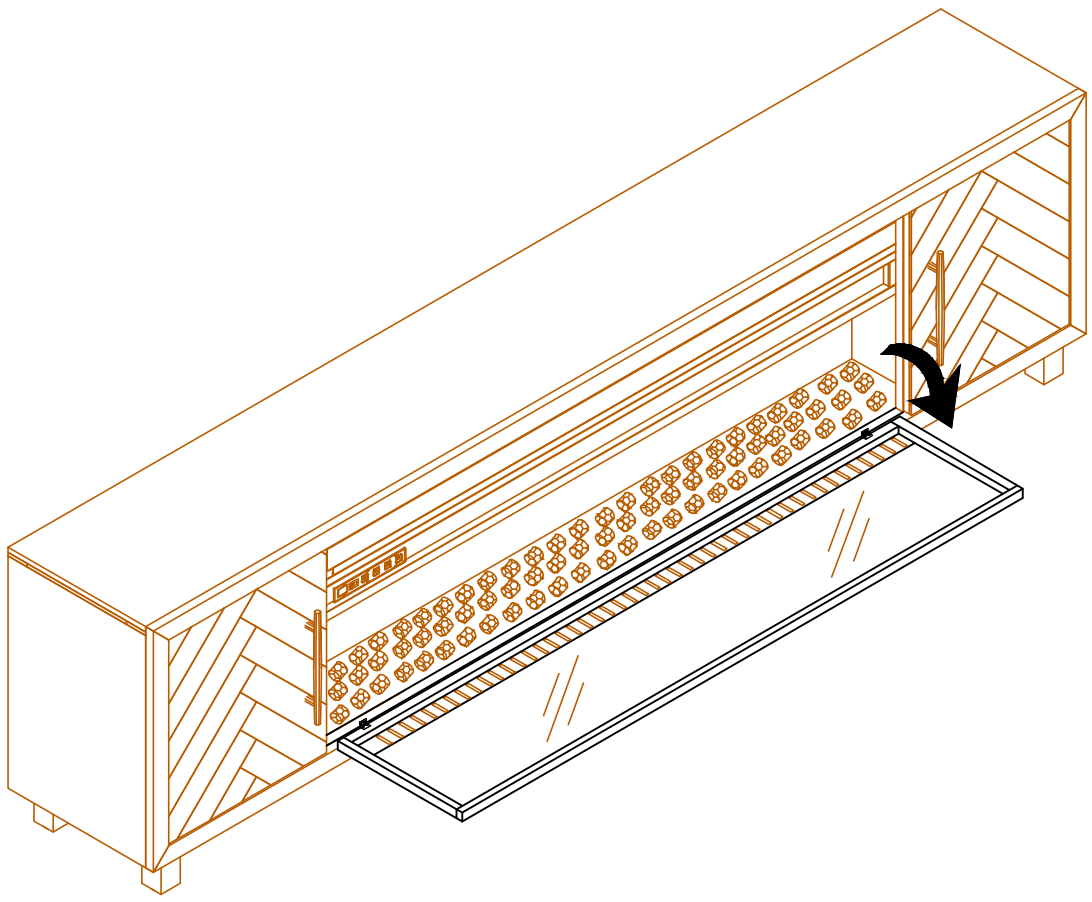


6.4 Close the glass front.

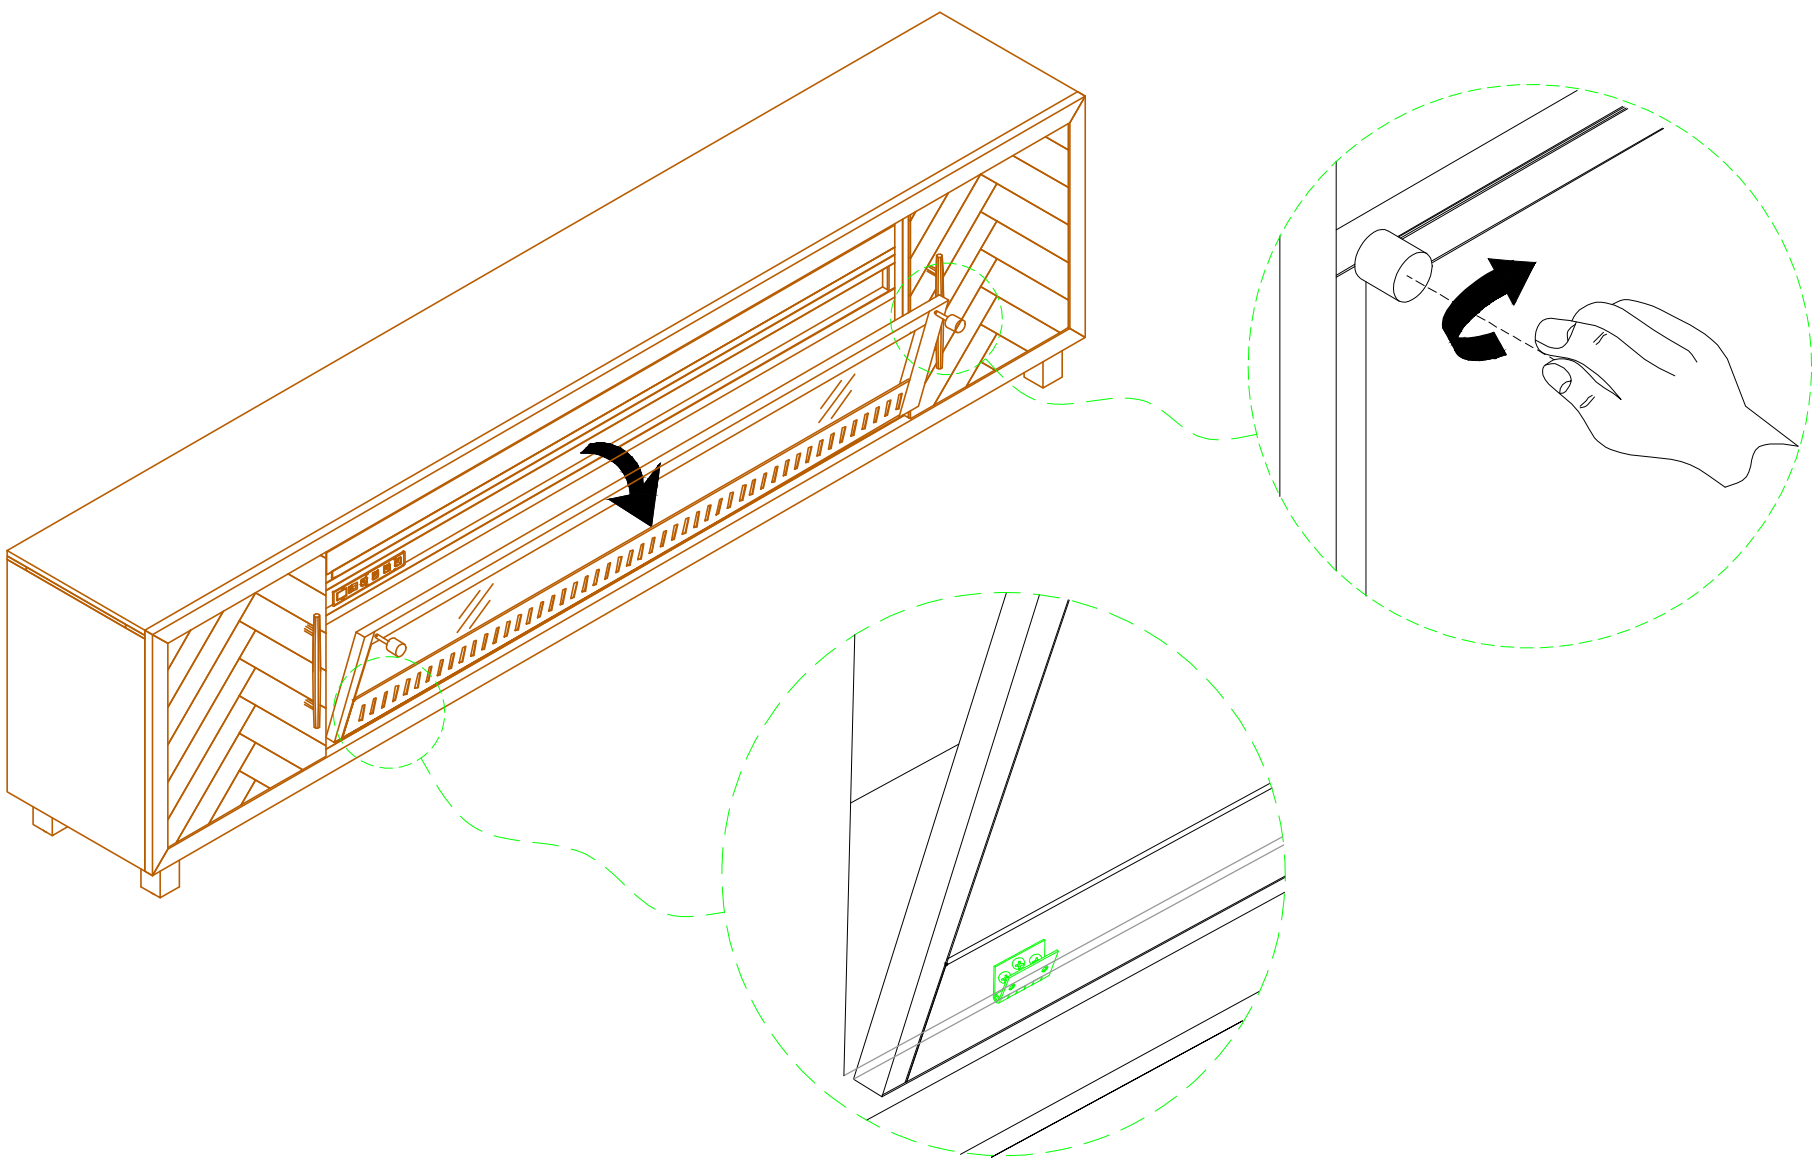


7. Aligning the doors (optional).

If you need to adjust the doors, do so in the following manner.


7.1 To adjust the door up or down, loosen screws (a) on both hinges (1), adjust door (2), and retighten screws (3).

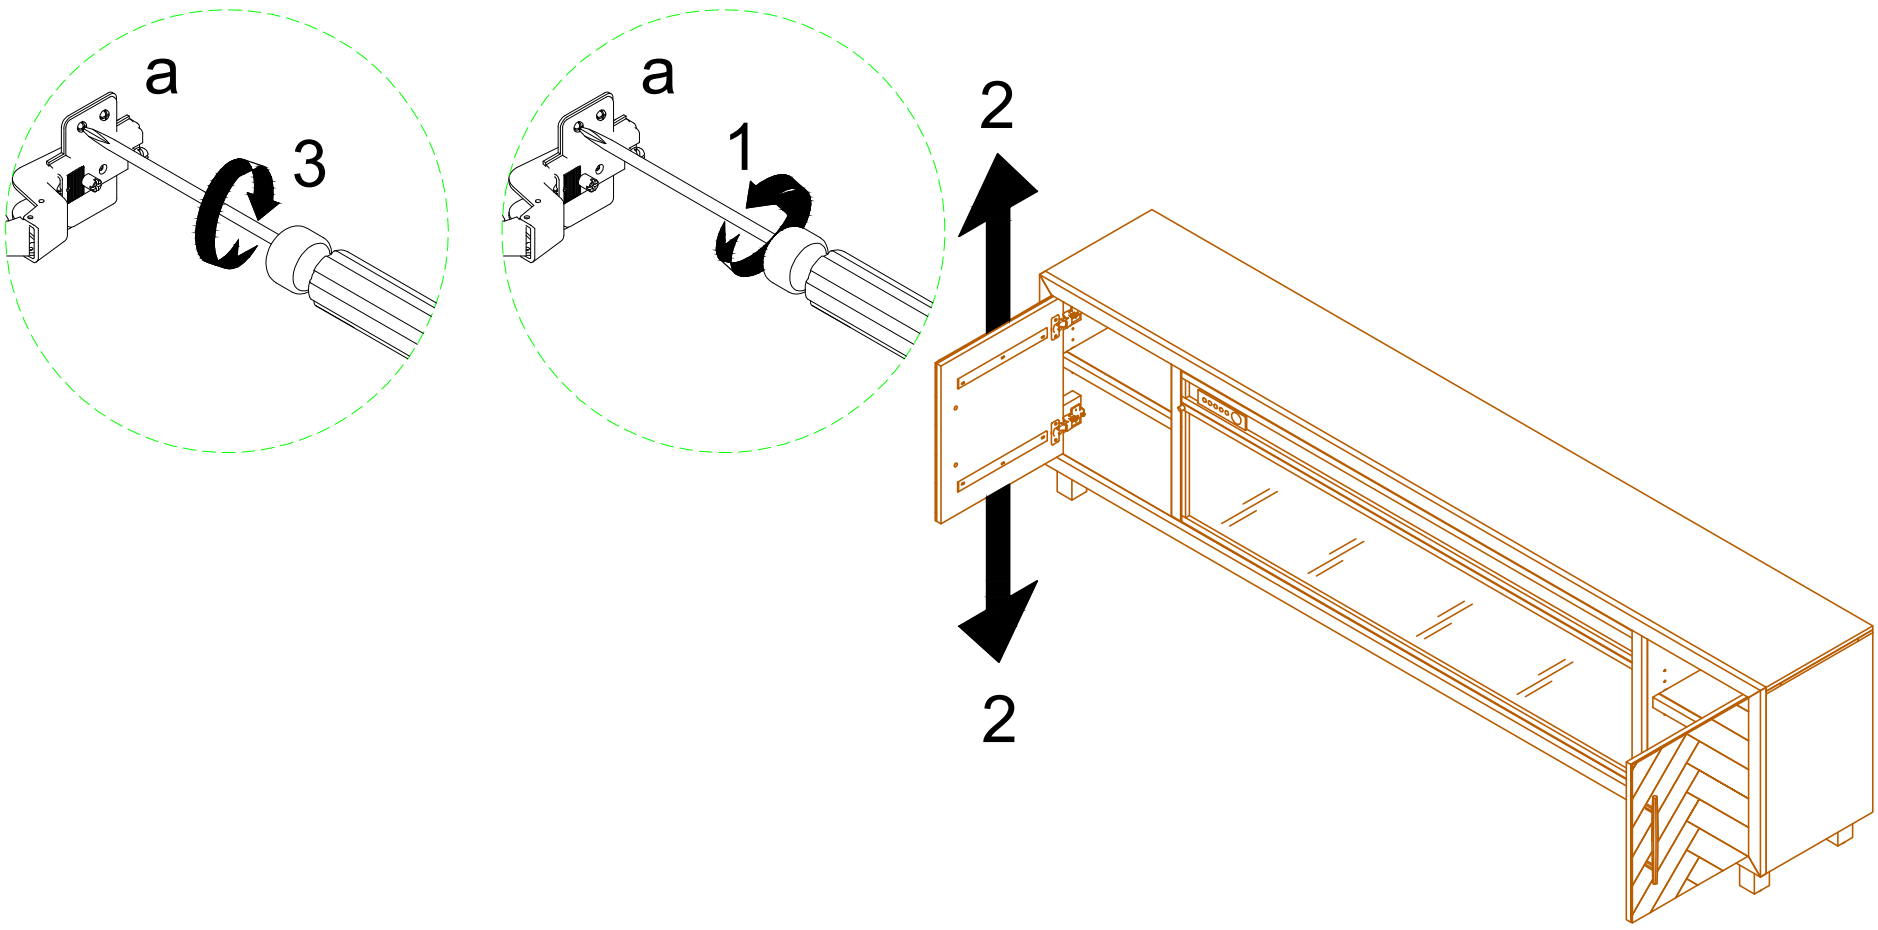


7.2 To adjust the door left or right, turn screws (b) on both hinges (1), in or out (2).

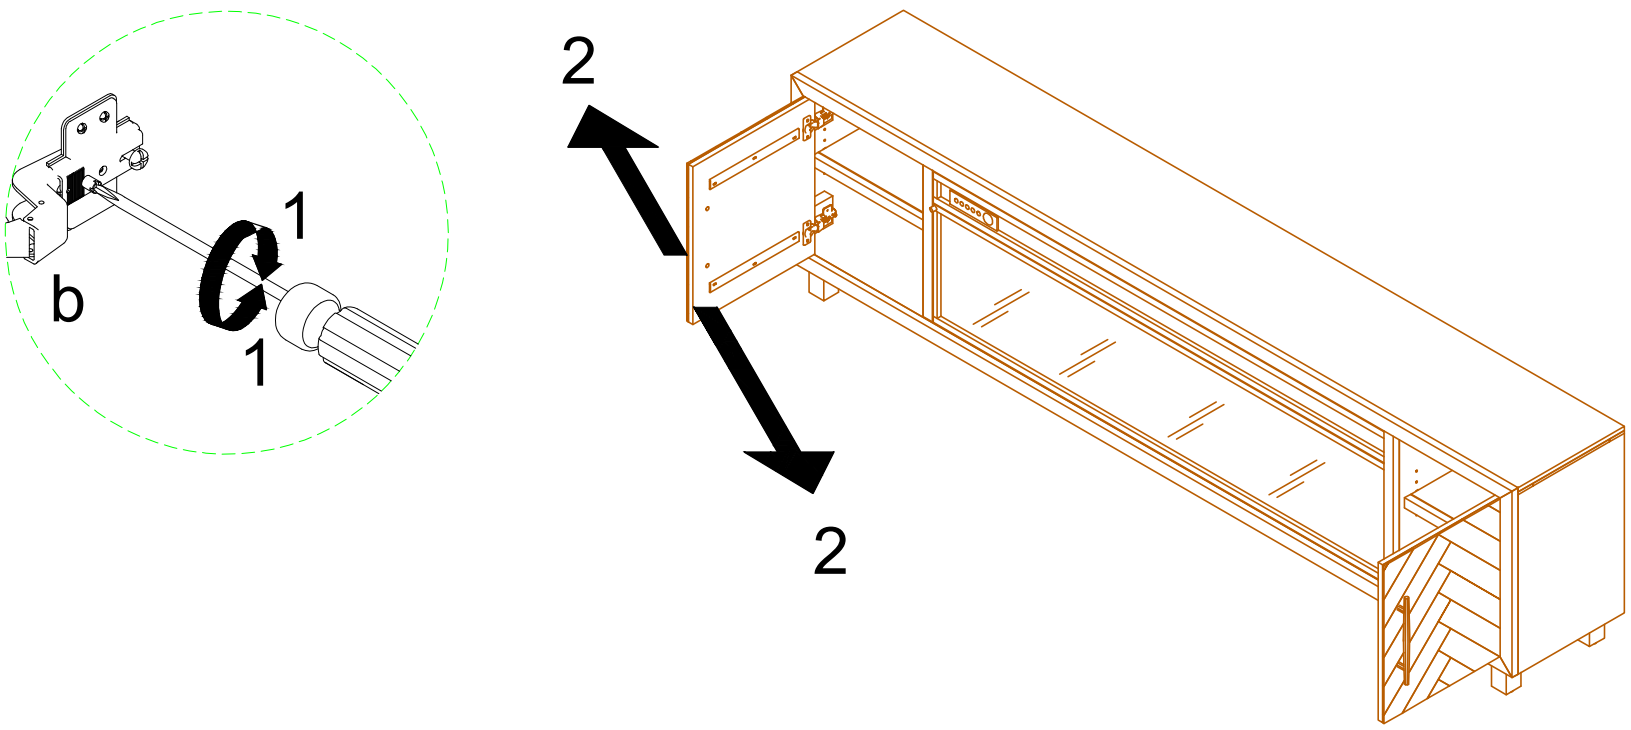

7.3 To adjust the door in or out, loosen screws (c) on both hinges (1), adjust door (2), and retighten screws (3).

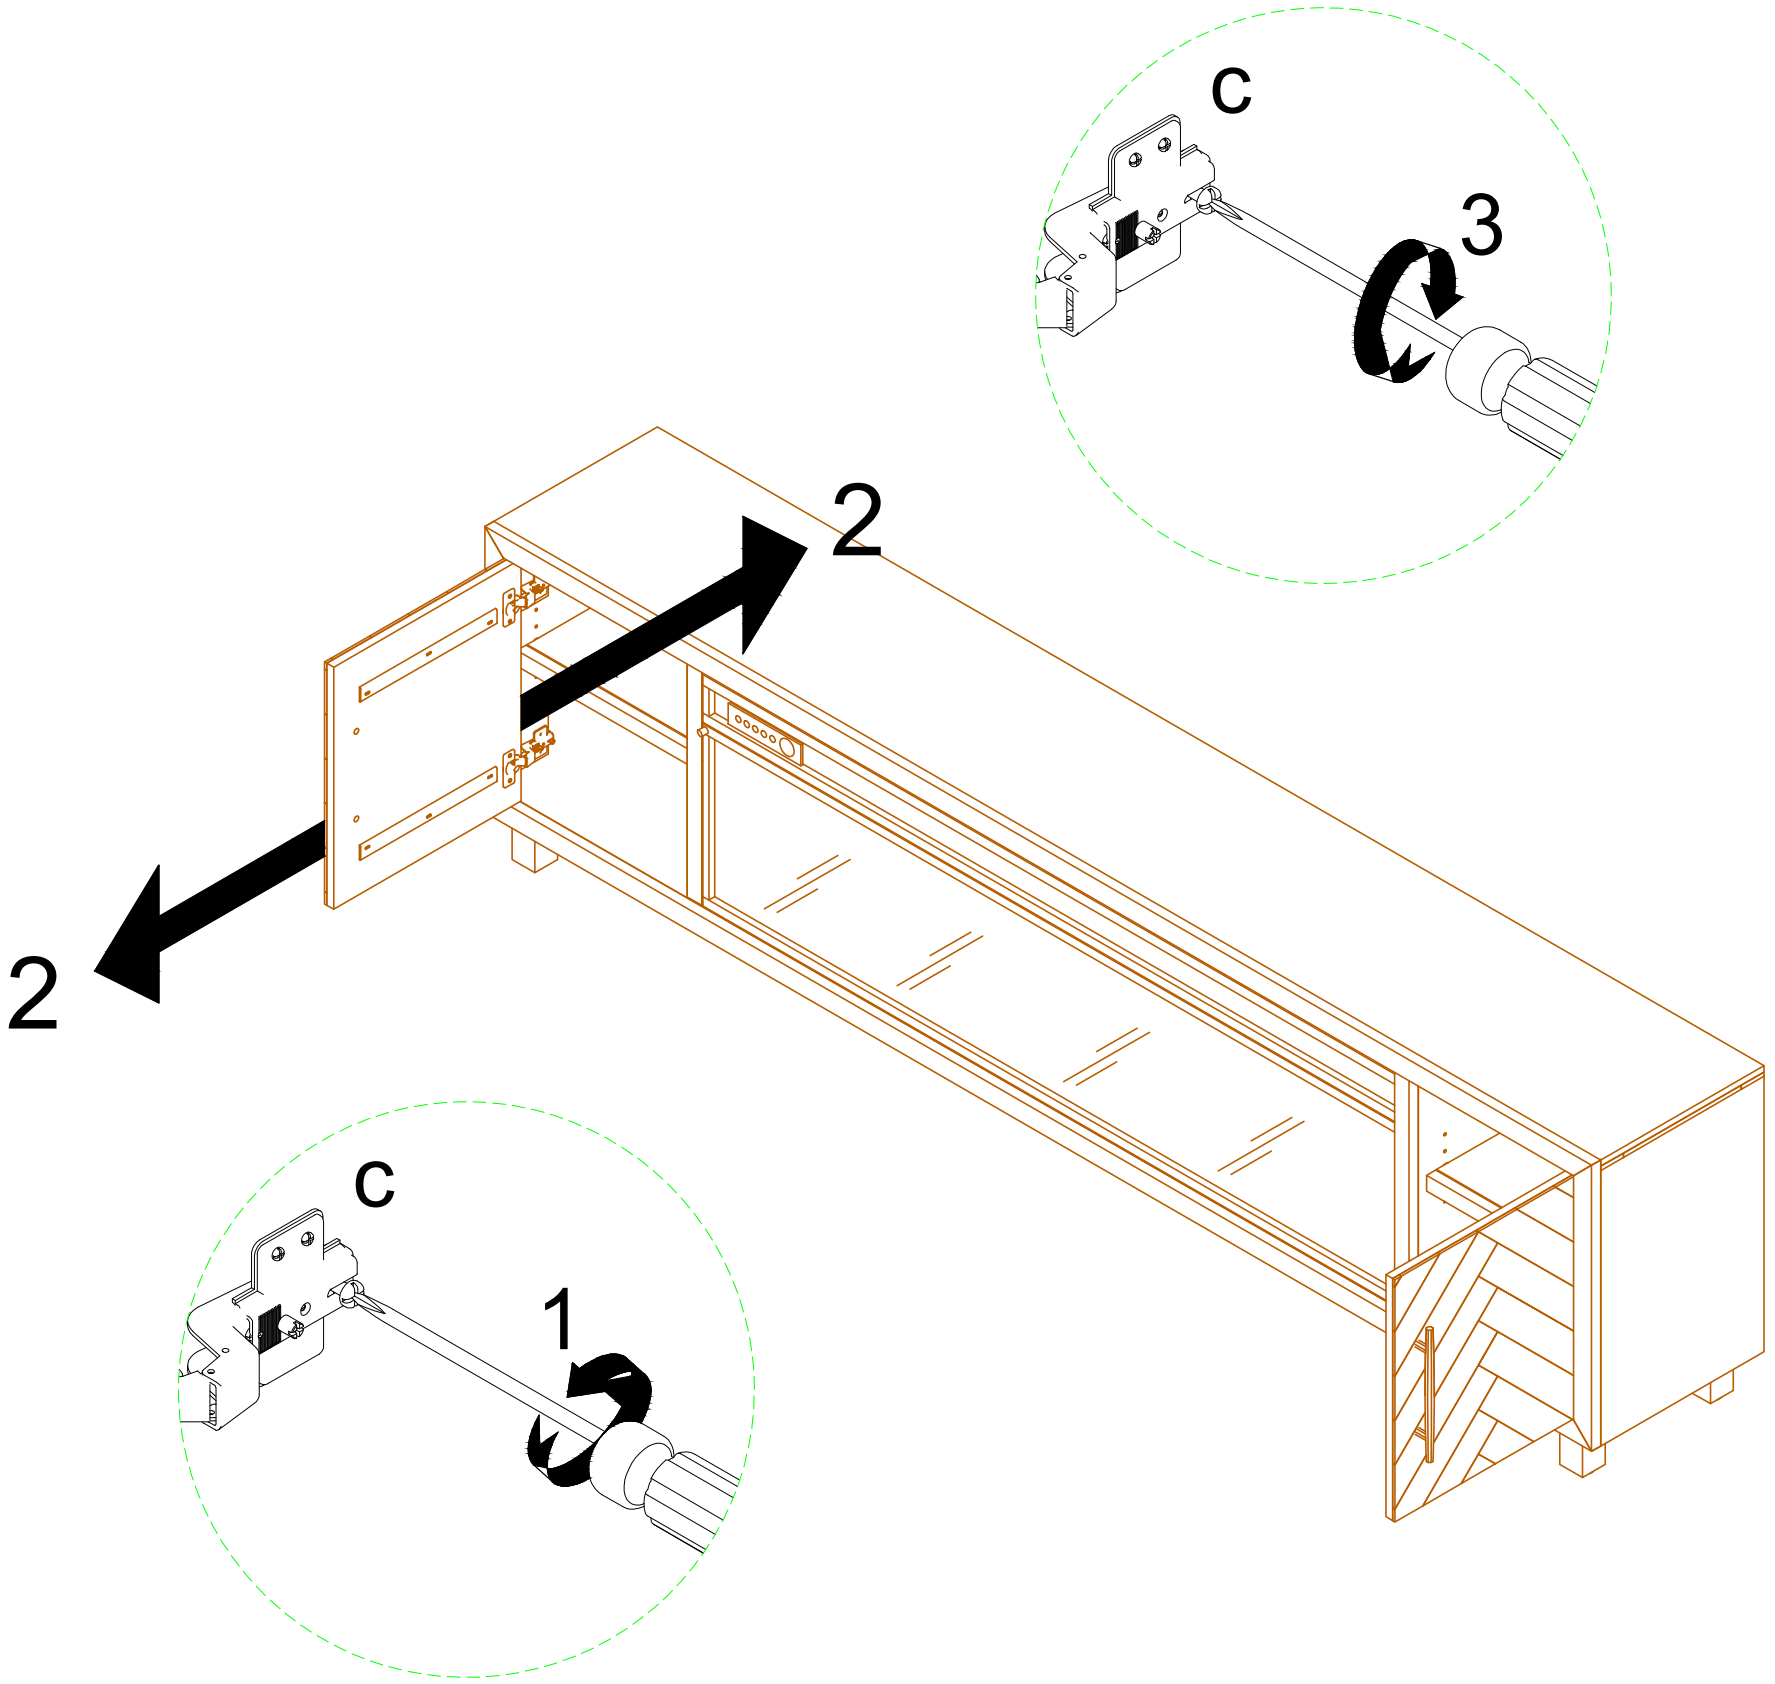


## WARRANTY PROTECTION

- Please register your product at martinfurniture.com  You will find the warranty link on the bottom of the Home Page

## CARING FOR YOUR FURNITURE

- Use a soft, clean cloth that will not scratch the surface when dusting.
- Use of furniture polishes are not necessary. Should you choose to use polishes, test in an inconspicuous area first.
- Using solvents of any kind on your furniture may damage your furniture finish.
- Never use water to clean your furniture as it may cause damage to the finish.
- Always use coasters under beverage glasses and flowerpots.
- Liquid spills should be removed immediately. Use a soft, clean cloth, blot the spill gently. Avoid rubbing.
- Direct sunlight may damage wood finishes.
- Extreme temperature and humidity changes can cause warping, shrinking and splitting of wood furniture. It is best to keep furniture in a climate controlled environment.
- Always use protective pads under hot dishes and plates. Heat can cause chemical changes that may create spotting within the furniture finish.
- In the event that your furniture is stained or otherwise damaged during use, we recommend that you call a professional to repair your furniture.