



FPO

VORA 8

OmniWave™ Air Circulator

Use & Care Guide

Circulador De Aire OmniWave™
Manual de Uso y Cuidado

READ AND SAVE THESE INSTRUCTIONS
LEER Y GUARDAR ESTAS INSTRUCCIONES

Vornado.com

5 Year
Satisfaction
Guaranteed

We expect this
product to be
perfect.

If it is not, we
will make it
right.

vornado.com
800-234-0604
help@vornado.com

CONTENTS

Product Support.....	4	Cleaning	10
Features	6	Troubleshooting	12
How to Use	7	Warranty.....	14
Remote Control.....	9		

Español p. 15

PRODUCT SUPPORT

For Model VORA 8

READ AND SAVE ALL IMPORTANT SAFETY INSTRUCTIONS

The Important Safety Instructions included with this product contain important information for multiple Vornado products. Specific instructions are included for varied product types. Refer to the list below for product types that pertain to your specific model. **Unless otherwise noted, all non-specified content is considered important information for all Vornado models and should be referred to regardless of model.** See www.vornado.com to view, download and print the most current version of these instructions.

MODEL VORA 8 PRODUCT TYPE(S):

Product with Removable Grille
Non-Button Cell Battery Unit
Detachable Power Supply Unit



MOST CURRENT
IMPORTANT SAFETY
INSTRUCTIONS



DIGITAL USE & CARE GUIDE

For further assistance, product support, or parts replacement, contact Vornado Consumer Service at:
800-234-0604 | help@vornado.com | vornado.com



glish

FCC Compliance Statement

NOTE: This equipment has been tested and complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this product does cause harmful interference to radio or television reception, which can be determined by turning the product off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Contact Vornado Consumer Service or dealer or an experienced radio/TV technician for help.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

Supplier's FCC Declaration of Conformity

Unique Identifier: Vornado Model VORA 8


Responsible Party: Vornado Air LLC

Mailing Address : 415 E. 13th St., Andover, KS 67002

Contact: www.vornado.com

RF Exposure Statement: This equipment complies with the FCC RF exposure limit set forth for an uncontrolled environment and is safe for intended operation as described in this manual.

FEATURES

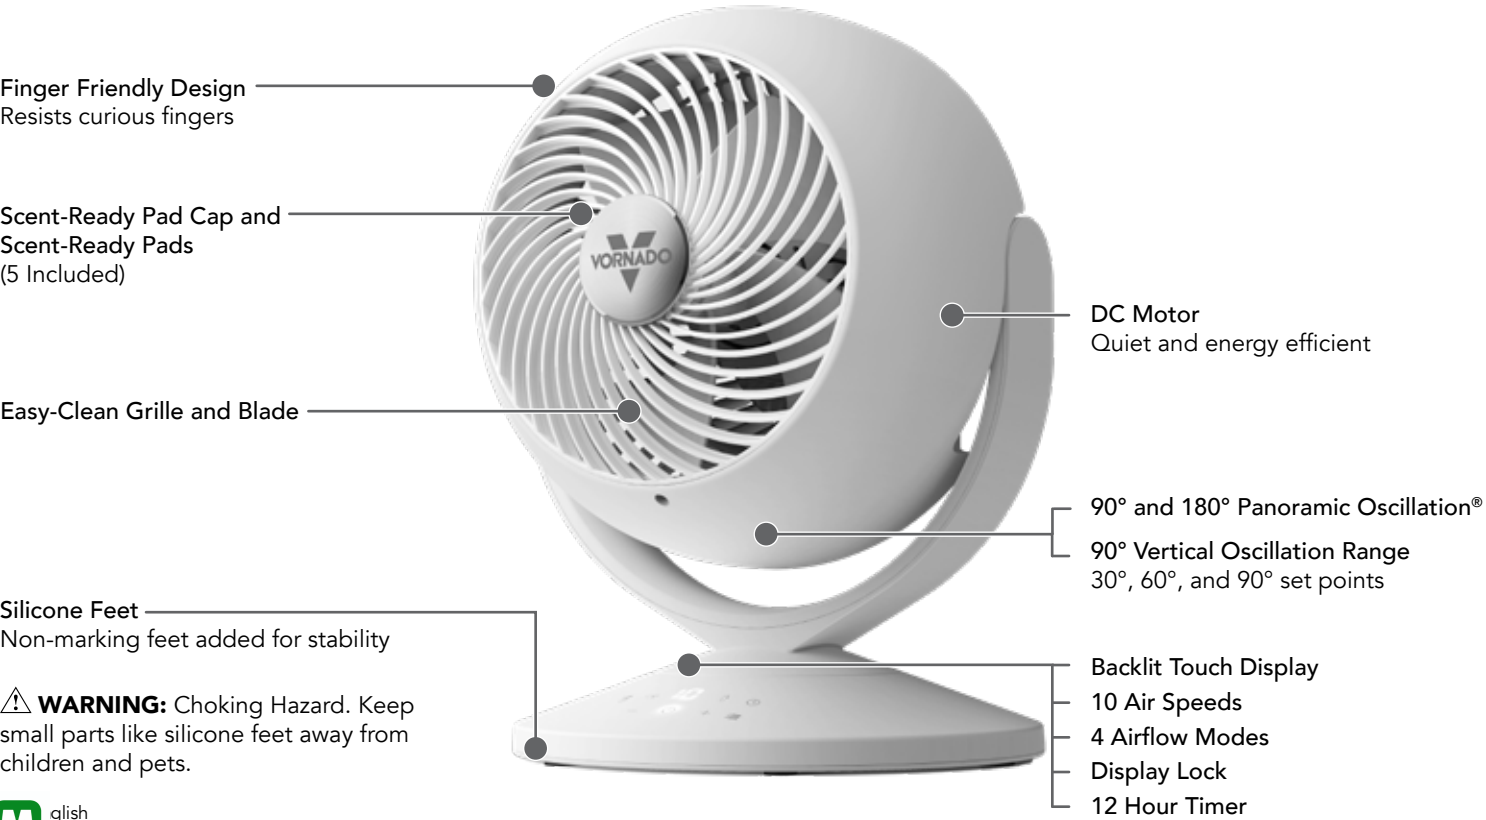

Finger Friendly Design
Resists curious fingers

Scent-Ready Pad Cap and Scent-Ready Pads
(5 Included)

Easy-Clean Grille and Blade

Silicone Feet
Non-marking feet added for stability

WARNING: Choking Hazard. Keep small parts like silicone feet away from children and pets.

DC Motor
Quiet and energy efficient

90° and 180° Panoramic Oscillation®
90° Vertical Oscillation Range
30°, 60°, and 90° set points

Backlit Touch Display
10 Air Speeds
4 Airflow Modes
Display Lock
12 Hour Timer

HOW TO USE

1. Connect the provided power supply by inserting the DC plug into the bottom of the unit. Route cord through the cord path.
2. Connect power supply to a power outlet. Use only the power supply that was provided with your product.

 **Power**

 **Selection Buttons**

 **Horizontal Oscillation Modes**
0: Oscillation Off
1: 90° Oscillation
2: 180° Panoramic Oscillation®

 **Vertical Oscillation Modes**
0: Oscillation Off
1: 30° Oscillation
2: 60° Oscillation
3: 90° Oscillation

Tip: Combine both horizontal and vertical oscillation for Omniwave oscillation.

 **12 Hour Timer**
Press, then use -/+ buttons to set the number of hours unit will run.

 **Airflow Modes**
0: Vornado's Standard Vortex Action
1: Sleep Mode - Fan speed will reduce every 30 minutes over two hours until the fan powers off, unless a timer is set.
2: Breeze Mode - Fan speed fluctuates (up to selected maximum speed) to simulate natural breeze.
3: Cyclic Mode - Fan speed will rise to maximum selected speed then fall at a consistent interval.

 **Display Lock**
Hold for 3 seconds to turn ON/OFF.

- Tips:**
- When the unit is plugged in, it will oscillate until it locates its "default" position as part of the setup process. Following this, standard operation will begin.
 - To disable/enable beep function, press and hold 12 Hour Timer and Airflow Modes buttons for three (3) seconds. There will be a long beep to indicate the change has been made.

HOW TO USE

Scent-Ready Pad

This pad is unscented. To add your favorite essential oil to the pad, please follow the below instructions:


1. Remove the Scent-Ready Pad Cap.
2. Add a few drops of essential oil to the pad.
NOTE: Use caution when adding essential oil. Do not oversoak the scent pad.
3. Install Scent-Ready Pad.
4. Replace the Scent-Ready Pad Cap.

 **WARNING:** The material used on the scent-ready pad cap and pad holder are designed specifically for use with essential oils. To maintain product longevity, do not put essential oils anywhere else on the product.



REMOTE CONTROL

Remote Functions

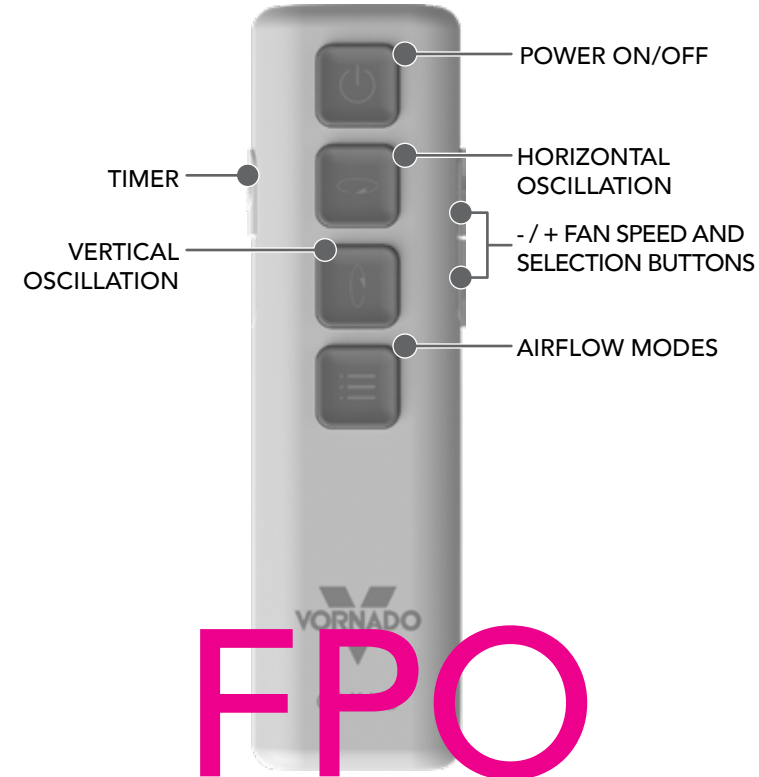

Battery Installation & Replacement

The remote control for this fan operates with two (2) AAA batteries (included). To install the batteries, gently press down and slide the battery door downward, following the direction indicated by the textured arrow. Insert the new batteries, then replace the battery door.

Note: Remove the batteries from the remote control if it will not be used for an extended period. Always replace dead batteries immediately and avoid storing them in the remote.

 **WARNING:** Choking Hazard. Keep small parts like batteries away from children and pets.

Remote Setup

The remote that comes with your unit is paired and ready to use out of the box. If you need to pair a remote, follow these steps:

1. Plug the unit in but leave the unit turned off.
2. Hold the + button on the fan for 3 seconds or until the entire display flashes.
3. Hold the + button on the remote. Remote is now paired.


CLEANING

Grille Removal Screwdriver required. 

⚠ WARNING: To reduce the risk of electrical shock and injury to persons, unplug the circulator before removing grille.

1. Remove the screw located on the bottom of the Cowl. Rotate the Grille counterclockwise and pull directly out to remove.
2. Dust or wash Grille with a mild dishwashing soap. Do not place Grille in the dishwasher. The excessive heat can distort the plastic.
3. To reattach – align the screw boss on the bottom backside of the Grille slightly to the right of the screw boss on the Cowl.
4. Ensure notches on top of Grille are aligned with indents on Cowl.
5. Rotate Grille clockwise until it “clicks” into place.
6. Replace screw.

 **Tip** Use the brush attachment on your household vacuum cleaner to vacuum any accumulated dust off the Grille and Cowl.

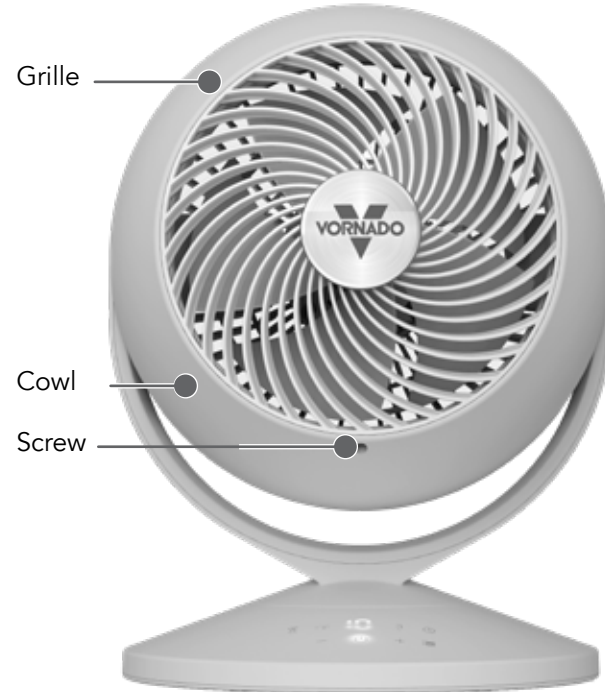

CLEANING

Blade Removal

⚠ WARNING: To reduce the risk of electrical shock and injury to persons, unplug the circulator before removing blade.

1. Unscrew the blade cap by holding the blade in place with one hand while turning the blade cap **clockwise**. Pull the blade straight out from the shaft.
2. Wipe the blade with a damp cloth. If your circulator is used in a greasy environment, such as a kitchen, mild soap or a common household cleaner may be necessary. Do not use solvents. Do not place blade in the dishwasher. The excessive heat can distort the plastic.
3. To reattach - be certain the flat side of the shaft aligns directly with the corresponding flat side on the blade's socket. Push the blade all the way on the shaft until it bottoms out and the threads on the shaft are completely through the blade socket. **Do not use a hammer as this could result in bearing damage.**
4. Reinstall blade cap and ensure it has been firmly tightened.



TROUBLESHOOTING

Problem	Possible Cause and Solution
Unit fails to power on.	Unit is not plugged in. Plug Power Cord into electrical outlet.
	Ensure power button has been pressed. Once the power button is pressed, ALL buttons and displays should light up.
	Unit is damaged or in need of repair. Cease usage and unplug. Contact Consumer Service for assistance.
	Fuse needs to be replaced. See IMPORTANT SAFETY INSTRUCTIONS booklet for how to replace the fuse or contact Consumer Service.
	The outlet is worn or damaged. Try another outlet or contact a qualified electrician.
Unit is not producing sufficient amount of air.	Ensure unit is set to highest setting for maximum air circulation.
	Airflow is blocked. Remove obstruction.
	Adjust direction of airflow toward the user.
GFCI has tripped.	Under certain conditions, it is possible for a reset GFCI (Ground Fault Circuit Interrupter) outlet to trip when the user is changing speeds on a Vornado circulator. In this event, change to an outlet that is not connected to a GFCI device. It could also indicate a weak or defective GFCI outlet. Contact a qualified electrician to check the GFCI outlet.
Remote Control is not working.	The batteries are dead. Replace with two (2) new AAA batteries. Refer to Remote Control section.
	Remote has not been successfully paired. Refer to REMOTE SETUP for instructions.

TROUBLESHOOTING

Problem	Possible Cause and Solution
Unit is not oscillating.	Oscillation must be turned on.
	Ensure there are no obstructions in the path of the fan.
Fan is on, but the settings cannot be changed.	Ensure the Display Lock is not active and icon on display is not lit up. To deactivate, press and hold Display Lock button  for 3 seconds.

WARRANTY

5 Year Satisfaction Guaranteed

We're Here To Help

800.234.0604 | vornado.com | help@vornado.com

Vornado Air LLC ("Vornado") warrants to the original consumer or purchaser this Vornado® Whole Room Circulator ("Product") is free from defects in material or workmanship for a period of five (5) years from the date of acquisition. If any such defect is discovered within the warranty period, Vornado, at its discretion, will repair or replace the Product at no cost.

For warranty service: Call 1-800-234-0604 or email help@vornado.com to obtain a Return Authorization ("RA"). Please have or include your Product's model number and serial number, as well as your name, address, city, state, zip code, e-mail, and phone number when contacting Vornado for warranty service. To file a contactless warranty claim, visit vornado.com/contact-us.

This warranty does not apply to defects resulting from abuse of the Product, modification, alteration, mishandling, improper maintenance, commercial use or repair or service of the Product by anyone other than Vornado; damages which occur in shipment or are attributed to acts of God. Improper product use, which includes using an external device that alters or converts the voltage or frequency of electricity, or shipping a Vornado product to a country not intended for use will void all warranties. Any unauthorized product modification, repair by unauthorized repair center, or use of non-approved replacement parts is not recommended and any consequences will not be covered by support services or product warranties. The product warranty will be honored only on models

that are being used in the country intended. REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. VORNADO SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY. Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state. The manufacturer assumes no responsibility for damage caused by failure to follow these instructions or improper product use. Any such actions will invalidate the product warranty.

All company names and product names are trademarks of their respective owners. © All rights reserved. All technical information, data, and instructions for the installation, connection, and operation contained in these instructions for use correspond to the latest available information at time of printing. The contents of this manual may differ slightly from the actual product. Observe any additional supplements.

Esperamos que
este producto
sea perfecto.

Si no lo es,
ayúdenos a
corregirlo.

vornado.com

800-234-0604

help@vornado.com



Designed, engineered and supported in Andover, KS

© 2025 Vornado Air LLC Andover, KS 67002 Specifications subject to change without notice.
Vornado® is a trademark owned by Vornado Air LLC.

CONTENIDO

Soporte del Producto	17	Limpieza	23
Características.....	19	Resolución De Problemas	25
Cómo Usar	20	Garantía.....	27
Control Remoto	22		

SOPORTE DEL PRODUCTO

Para Modelo VORA 8

LEA Y GUARDE TODAS LAS INSTRUCCIONES IMPORTANTES DE SEGURIDAD

Las Instrucciones importantes de seguridad incluidas con este producto contienen información relevante para múltiples productos Vornado. Se incluyen instrucciones específicas para varios tipos de productos. Consulte la lista a continuación para conocer los tipos de productos que pertenecen a su modelo específico. **A menos que se indique lo contrario, todo el contenido no especificado se considera información importante para todos los modelos Vornado y debe consultarse independientemente del modelo.** Consulte www.vornado.com para ver, descargar e imprimir la versión más reciente de estas instrucciones.

TIPO(S) DE PRODUCTO(S) DEL MODELO VORA 8:
Producto con rejillas desmontables
Unidad con pilas que no son tipo botón
Unidad con fuente de alimentación desmontable



INSTRUCCIONES IMPORTANTES DE SEGURIDAD MÁS ACTUALES



GUÍA DIGITAL DE USO Y CUIDADO

Para obtener más ayuda, soporte del producto o reemplazo de piezas, póngase en contacto con el Servicio al Consumidor de Vornado:
800-234-0604 | help@vornado.com | vornado.com

Declaración de cumplimiento de la FCC

NOTA: Este equipo ha sido evaluado y se determinó cumple con la Parte 15 de las Reglas de la FCC. El funcionamiento está sujeto a las dos condiciones siguientes: (1) este dispositivo no puede causar interferencias perjudiciales, y (2) este dispositivo debe aceptar cualquier interferencia recibida, incluidas las interferencias que pueden causar un funcionamiento no deseado.

Este equipo ha sido evaluado y se determinó que cumple con los límites de un dispositivo digital Clase B en virtud del Apartado 15 de las Normas FCC. Estos límites están diseñados para proporcionar una protección razonable contra la interferencia nociva en una instalación residencial. Este producto genera, utiliza y puede irradiar energía de radiofrecuencia y, si no se instala y utiliza de acuerdo con las instrucciones, puede causarinterferencia nociva en las comunicaciones de radio. Sin embargo, no se garantiza que la interferencia no se producirá en una instalación particular. Si este producto causa interferencia nociva en la recepción de radio o televisión, lo que puede determinarse por el encendido y apagado del producto, se le aconseja al usuario que intente corregir la interferencia de la siguiente forma:

- Reoriente o reubique la antena de recepción.
- Aumente la distancia entre el equipo y el receptor.
- Conecte el equipo en el tomacorriente de un circuito diferente al cual está conectado el receptor.
- Póngase en contacto con el Servicio al Cliente de Vornado o consulte al distribuidor o un técnico experimentado en radio/TV para recibir ayuda.


Cambios o modificaciones a esta unidad no aprobados por la parte responsable de cumplimiento podrían anular la autoridad del usuario para operar el producto.

Declaración de conformidad de la FCC del proveedor

Identificador único: Vornado Modelo VORA 8
Parte responsable: Vornado Air LLC
Dirección postal: 415 E. 13th St., Andover, KS 67002
Contacto: www.vornado.com

Declaración de exposición a RF: Este producto cumple con el límite de exposición a RF de la FCC establecido para un entorno no controlado y es seguro para la operación prevista como se describe en este manual.

CARACTERÍSTICAS

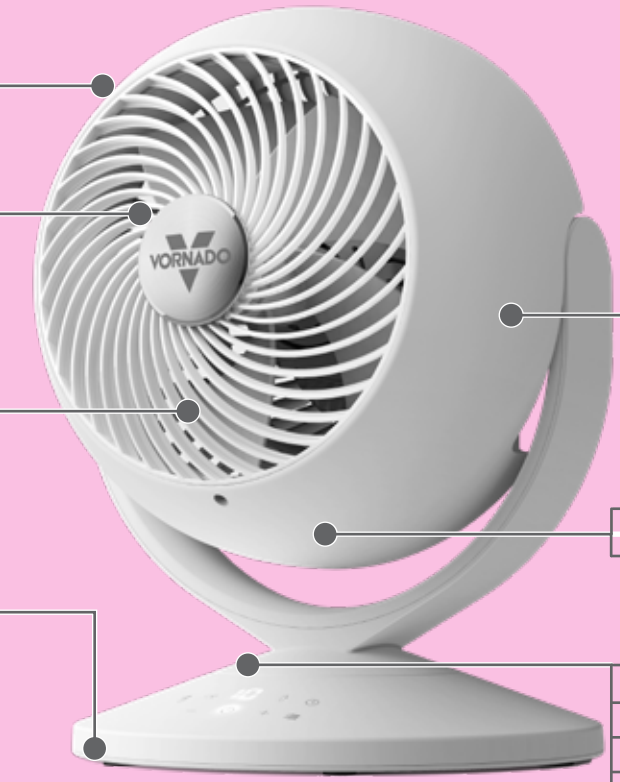

Finger Friendly Design
Resists curious fingers

Scent-Ready Pad Cap and Scent-Ready Pads
(5 Included)

Easy-Clean Grille and Blade

DC Motor
Quiet and energy efficient

90° and 180° Panoramic Oscillation®
90° Vertical Oscillation Range
30°, 60°, and 90° set points

Backlit Touch Display
10 Air Speeds
4 Airflow Modes
Display Lock
12 Hour Timer

Silicone Feet
Non-marking feet added for stability

WARNING: Choking Hazard. Keep small parts like silicone feet away from children and pets.

CÓMO USAR

1. Connect the provided power supply by inserting the DC plug into the bottom of the unit. Route cord through the cord path.
2. Connect power supply to a power outlet. Use only the power supply that was provided with your product.



Power



Selection Buttons



Horizontal Oscillation Modes

- 0: Oscillation Off
- 1: 90° Oscillation
- 2: 180° Panoramic Oscillation®



Vertical Oscillation Modes

- 0: Oscillation Off
- 1: 30° Oscillation
- 2: 60° Oscillation
- 3: 90° Oscillation

Tip: Combine both horizontal and vertical oscillation for Omniwave oscillation.



12 Hour Timer

Press, then use +/- buttons to set the number of hours unit will run.



Airflow Modes

- 0: Vornado's Standard Vortex Action
- 1: Sleep Mode - Fan speed will reduce every 30 minutes over two hours until the fan powers off, unless a timer is set.
- 2: Breeze Mode - Fan speed fluctuates (up to selected maximum speed) to simulate natural breeze.
- 3: Cyclic Mode - Fan speed will rise to maximum selected speed then fall at a consistent interval.



Display Lock

Hold for 3 seconds to turn ON/OFF.

Tips:

- When the unit is plugged in, it will oscillate until it locates its "default" position as part of the setup process. Following this, standard operation will begin.
- To disable/enable beep function, press and hold 12 Hour Timer and Airflow Modes buttons for three (3) seconds. There will be a long beep to indicate the change has been made.



pañol

CÓMO USAR

La Almohadilla Aromática

Esta almohadilla viene sin aroma. Para agregar su aceite esencial favorito a la almohadilla, siga las instrucciones a continuación:

1. Retire la tapa del compartimento de almohadillas aromáticas.
2. Añada a la almohadilla unas gotas de aceite esencial.

NOTA: Tenga precaución al añadir el aceite esencial. No sobrecargue la almohadilla aromática.


3. Install Scent-Ready Pad.
4. Instale la almohadilla aromática.

⚠ ADVERTENCIA: Los materiales utilizados para la tapa y el soporte de la almohadilla aromática se diseñaron específicamente para usarse con aceites esenciales. Para preservar la vida útil del producto, se recomienda no aplicar aceites esenciales en ninguna otra parte de este.



CONTROL REMOTO

Funciones Remotas

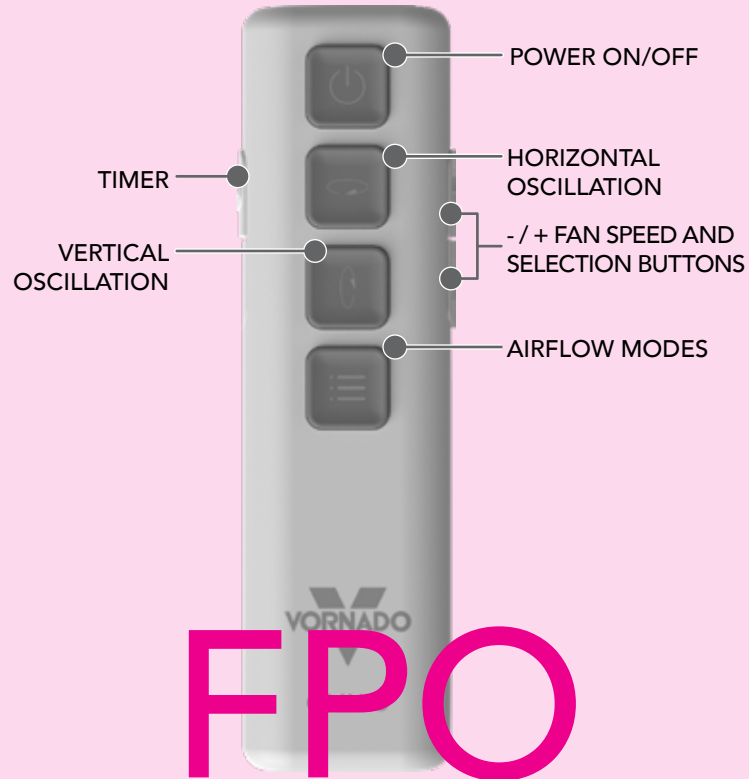

Battery Installation & Replacement

The remote control for this fan operates with two (2) AAA batteries (included). To install the batteries, gently press down and slide the battery door downward, following the direction indicated by the textured arrow. Insert the new batteries, then replace the battery door.

Note: Remove the batteries from the remote control if it will not be used for an extended period. Always replace dead batteries immediately and avoid storing them in the remote.

⚠ WARNING: Choking Hazard. Keep small parts like batteries away from children and pets.

Remote Setup

The remote that comes with your unit is paired and ready to use out of the box. If you need to pair a remote, follow these steps:

1. Plug the unit in but leave the unit turned off.
2. Hold the + button on the fan for 3 seconds or until the entire display flashes.
3. Hold the + button on the remote. Remote is now paired.


LIMPIEZA

Remoción de la Rejilla Se requiere un destornillador.

⚠ ADVERTENCIA: Para reducir el riesgo de descarga eléctrica y lesiones a personas, desenchufe el circulador antes de quitar la rejilla.

1. Remove the screw located on the bottom of the Cowl. Gire la rejilla en sentido contrario a las manecillas del reloj y tire directamente hacia afuera para retirarla.
2. Limpie o lave la rejilla con un jabón suave para lavavajillas. No coloque ninguna de las partes en el lavavajillas. El calor excesivo puede deformar el plástico.
3. Para volver a colocarla, alinee el saliente roscado en la parte inferior trasera de la rejilla ligeramente a la derecha del saliente roscado en la cowl.
4. Cerciórese de que las muescas ubicadas en la parte superior de la rejilla estén alineadas con las hendiduras de la cowl.
5. Gire la rejilla en sentido horario hasta que encaje en su lugar con un "clik".
6. Reemplace el tornillo.

Tip Utilice el cepillo del aspirador para aspirar cualquier polvo acumulado en la rejilla y la cowl.

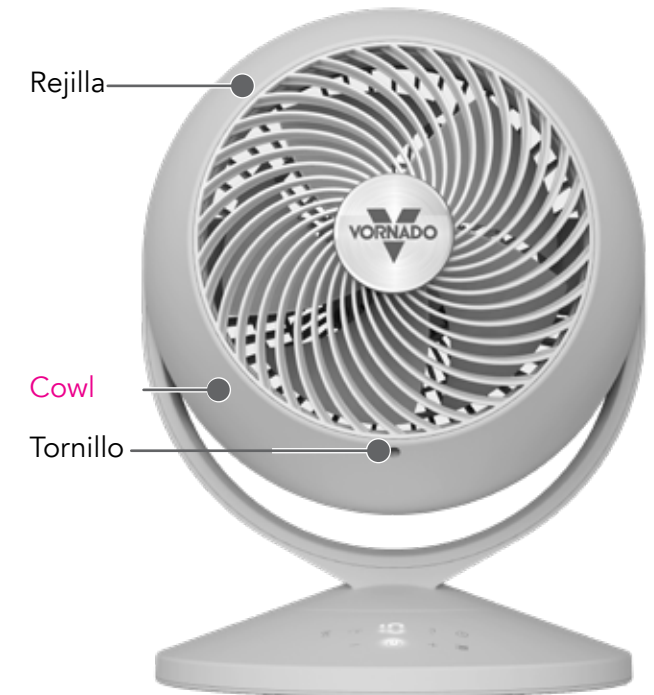

LIMPIEZA

Remoción del Aspa

⚠️ ADVERTENCIA: Para reducir el riesgo de descarga eléctrica o daños a personas, desenchufe el circulador antes de remover el aspa.

1. Desenrosque la tapa de la cuchilla sujetándola firmemente con una mano y girando la tapa en el sentido de las manecillas del reloj. Retire la cuchilla tirando de ella en línea recta desde el eje.
2. Limpie el aspa con un paño suave. Si el circulador se usa en un ambiente grasoso, como la cocina, puede ser necesario utilizar un jabón suave o un producto de limpieza común. No use solventes.
3. Para reubicar el aspa, asegúrese de que el lado plano de la varilla esté alineado directamente con el lado plano correspondiente en el enchufe del aspa. Desenrosque la tapa de las aspas sujetando las aspas en su lugar con una mano mientras gira la tapa de las aspas en sentido horario. **No utilice un martillo, pues podría dañar el artefacto.**
4. Vuelva a colocar la tapa de las aspas y asegúrese de que esté bien apretada.



RESOLUCIÓN DE PROBLEMAS

Problema	Posible Causa y Solución
El artefacto no se enciende.	La unidad no está enchufada. Enchufe el cable de alimentación en el tomacorriente eléctrico.
	Ensure power button has been pressed. Once the power button is pressed, ALL buttons and displays should light up.
	La unidad está dañada o necesita reparación. Suspenda el uso y desenchúfela. Comuníquese con el servicio de atención al cliente para obtener asistencia.
	Debe cambiarse el fusible. Consulte la sección INSTRUCCIONES DE SEGURIDAD IMPORTANTES booklet para saber cómo cambiar el fusible o comuníquese con el servicio de atención al cliente.
El flujo de aire es débil o lento.	El enchufe está gastado o dañado. Pruebe con otro enchufe o contacte a un electricista certificado.
	Asegurar la unidad está puesta en turbo (más alto) para máxima circulación de aire.
	Airflow is blocked. Remove obstruction. Adjust direction of airflow toward the user.
El GFCI se detiene.	Bajo ciertas condiciones, es posible que un enchufe GFCI recolocado no funcione cuando el usuario cambia la velocidad del circulador Vornado. En este caso, cambie a un enchufe que no esté conectado a un artefacto GFCI. Asimismo, esto podría indicar que el enchufe GFCI se encuentra en mal estado o defectuoso. Comuníquese con un electricista certificado para que verifique el enchufe GFCI.

RESOLUCIÓN DE PROBLEMAS

Problema	Posible Causa y Solución
El control remoto no funciona.	Las pilas están agotadas. Reemplácelas con dos (2) pilas AAA nuevas. Consulte la sección Control remoto.
	El control no se ha emparejado correctamente. Consulte la sección CONFIGURACIÓN DE CONTROL REMOTO para ver las instrucciones.
Unit is not oscillating.	Oscillation must be turned on.
	Ensure there are no obstructions in the path of the fan.
Fan is on, but the settings cannot be changed.	Ensure the Display Lock is not active and icon on display is not lit up. To deactivate, press and hold Display Lock button  for 3 seconds.

GARANTÍA

Satisfacción garantizada por 5 años

Estamos Aquí Para Ayudar
800.234.0604 | vornado.com | help@vornado.com

Vornado Air LLC (“Vornado”) garantiza al consumidor o comprador original que este Circulador para todo el ambiente Vornado® (“Producto”) estará libre de defectos de materiales o fabricación durante un periodo de cinco (5) años a partir de la fecha de adquisición. En caso de detectarse algún defecto de este tipo dentro del periodo de garantía, Vornado, a su discreción, reparará o reemplazará el Producto sin costo alguno.

Servicio de garantía, llame al 1-800-234-0604 o envíe un correo electrónico a help@vornado.com para obtener un formulario de Autorización de Devolución (“RA” por sus siglas en inglés). Cuando se comunique con Vornado por el servicio de garantía, tenga o incluya el número de modelo y número de serie del Producto, como también su nombre, dirección, ciudad, estado, código postal, e-mail, y número de teléfono. Para presentar un reclamo de garantía sin contacto, visite vornado.com/contact-us.

Esta garantía no se aplica a defectos generados por abuso del Producto, modificación, alteración, manipulación indebida, mantenimiento inadecuado, uso comercial o reparación o servicio del Producto por parte de una persona externa a Vornado, daños producidos durante el envío o atribuidos a hechos fortuitos. El uso inadecuado del producto, que incluye el uso de un dispositivo externo que altera o convierte el voltaje o la frecuencia de la electricidad, o el envío de un producto Vornado a un país donde su uso no está previsto invalidará todas las garantías. No se recomienda la modificación no autorizada del producto, la reparación realizada por un centro de reparaciones no autorizado, o el uso de repuestos no aprobados, y sus consecuencias no serán cubiertas por los servicios

de soporte o las garantías del producto. La garantía del producto tendrá validez solo para los modelos que se usan en el país previsto. LA REPARACIÓN O EL REEMPLAZO SEGÚN SE ESTABLECE EN VIRTUD DE ESTA GARANTÍA ES UN RECURSO EXCLUSIVO DEL CONSUMIDOR. VORNADO NO SERÁ RESPONSABLE DE LOS DAÑOS INCIDENTALES O INDIRECTOS PRODUCIDOS COMO CONSECUENCIA DEL INCUMPLIMIENTO DE UNA GARANTÍA EXPLÍCITA O IMPLÍCITA SOBRE ESTE PRODUCTO. SALVO QUE LA LEY APLICABLE LO PROHÍBA, LA VIGENCIA DE LA GARANTÍA IMPLÍCITA DE APTITUD O IDONEIDAD PARA UN FIN ESPECÍFICO DE ESTE PRODUCTO ESTARÁ LIMITADA A LA VIGENCIA DE ESTA GARANTÍA. Algunos estados no permiten la exclusión o limitación de los daños incidentales o indirectos, o limitaciones sobre la vigencia de una garantía implícita. Por ello, las limitaciones o exclusiones que se indican anteriormente pueden no aplicarse en su caso. Esta garantía le otorga derechos legales específicos, y usted puede tener otros derechos que varían entre un estado y otro. El fabricante no asume responsabilidad alguna por los daños causados por la falta de cumplimiento de estas instrucciones o el uso inadecuado del producto. Dichas acciones invalidarán la garantía del producto.

Los nombres de empresas y productos son marcas comerciales de sus respectivos propietarios. © Todos los derechos reservados. La información técnica, los datos y las instrucciones para la instalación, conexión y operación que contienen estas instrucciones de uso corresponden a la última información disponible al momento de la impresión. El contenido de este manual puede diferir ligeramente del producto real. Tenga en cuenta los suplementos adicionales.



Pensado y diseñado y respaldado en Andover, KS

© 2025 Vornado Air LLC Andover, KS 67002 Especificaciones del producto sujetas a cambio sin previo aviso. Vornado® es marca registrado de Vornado Air LLC.



Vornado Air, LLC

415 East 13th Street, Andover, Kansas 67002

800.234.0604 | vornado.com



CL3-1252 R-, V00