成品尺寸：宽105*高148mm
公差：+/-1mm
材质：128G铜版纸
折页

1.7L STAINLESS STEEL ELECTRIC KETTLE
MODEL: PE-EK023
User Guide

SAFETY INSTRUCTIONS
IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all Instructions.
- To protect against electric shock and injuries to persons do not immerse cord, plugs, or unit in water or other liquid.
- Do not touch hot surfaces. Use handles or knobs.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off ", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- To reduce the risk of injury, do not drape cord over the counter top or table top where it can be pulled on by children or tripped over unintentionally.

SAVE THE INSTRUCTIONS
HOUSEHOLD USE ONLY

WARNING: Improper use of the grounding plug can result in electric shock.

GROUNDING INSTRUCTIONS

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. To protect against electrical shock, this appliance is equipped with a cord having a 3-prong grounding-type plug for insertion into a proper grounding-type electrical outlet. DO NOT alter the plug for use in a 2-prong outlet. If the plug will not fit into an outlet, have a proper outlet installed by a qualified electrician.

a) A short power-supply cord is to be provided to reduce risks resulting from becoming entangled in or tripping over a longer cord.
b) Longer extension cords are available and may be used if care is exercised in their use.
c) If an extension cord is used:
   - The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance;
   - The longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over.
   - The extension cord should be a grounding-type 3-wire cord.

CAUTION: Risk of injury, any other servicing should be performed by an authorized service representative


US FCC Compliance Statements


This device complies with Part 15 of the US FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

WARNING: Please note that changes or modifications of this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

support@parisrhone.com
www.parisrhone.com
Manufacturer: Shenzhen Aspiron Technology Company Limited
Address: Room 1401, Tianlong Mobile Building, Headquarters Base, Liuxiandong, Nanshan District, Shenzhen, Guangdong, China

CONFORMS TO UL STD.1082
Made in China

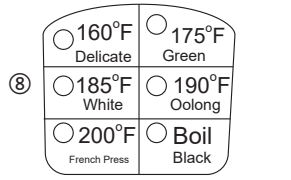

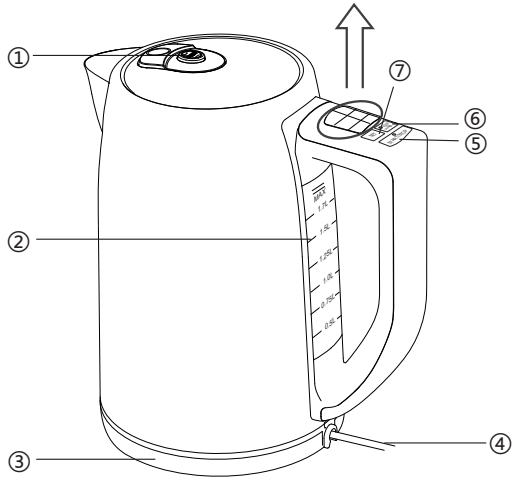

Product Diagram

①Lid Release Button
②Water Level Indicator
③Base
④Power Cord
⑤Start / Stop Button
⑥Keep Warm Button
⑦Set Button
⑧6 Temperature Settings:
160°F, 175°F, 185°F, 190°F, 200°F, Boil

Thank you for choosing the PE-EK023 1.7L Stainless Steel Electric Kettle. Please read this manual carefully and store it in a safe place for future reference. If you have any questions or concerns, please contact our customer support team by email at **support@parisrhone.com.**

How to Use

Getting ready: Place the kettle base on an even surface and connect the power cable. For first-time use, fill the kettle to the maximum water level and fully boil it, then pour the water away.

1. After the kettle is powered, all of the LED indicators will flash once and the water level indicator will keep on, the device enters standby mode with a beep sound. If no operation is detected within 5 minutes, the water level indictor will also turn off.
2. Press the Set Button once to start setting the temperatures and you will hear a beep sound. The default temperature setting is 160°F. Once the temperature is set, press the Start / Stop Button again to start boiling water. The Start/Stop Button indicator will light up and the temperature indicator will flash. When the water reaches the target temperature, you will hear 3 “beep-beep” sounds.
3. Press the Set Button to select from 6 different temperature settings. Cycle through the temperature settings with each press of the Set Button. The corresponding temperature indicator will light up. Once the maximum or minimum temperature setting is reached, keep pressing the Set Button will change the setting.
4. Press the Keep Warm button to keep the water at the preset temperature for 30 minutes once it is reached. After 30 minutes, the kettle automatically shuts off and enters standby mode. Press again within 30 minutes to disable the function and the light will turn off.
5. Press the Set Button during boiling to switch the temperature setting. Press the Keep Warm Button to activate or disable the heat preservation function. Press the Start / Stop Button to stop boiling.

Note: Do not dry boil. If you do, the kettle will enter protection mode and disable all buttons and indicators. It will only enter standby mode again after the kettle is completely cooled off.

Caution

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
2. Do not disassemble the product.
3. Please do not remove the power cable with wet hands as it may cause an electric shock.
4. Do not use the product to boil milk, coffee, tea, or to cook food.
5. Do not dry boil the kettle.