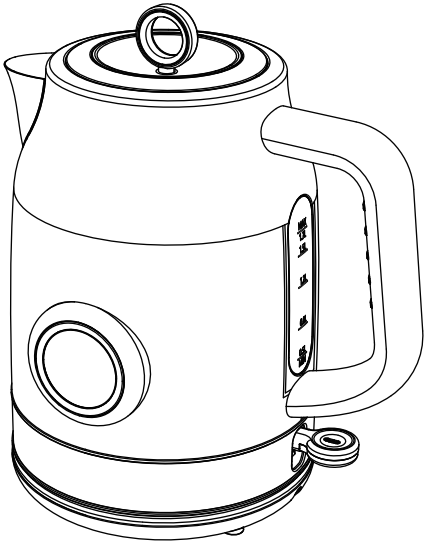


1.7L STAINLESS STEEL ELECTRIC KETTLE
MODEL: PE-EK025
User Guide

support@parisrhone.com
www.parisrhone.com
Manufacturer: Shenzhen Aspiron Technology Company Limited
Address: Room 1401, Tianlong Mobile Building, Headquarters Base, Liuxiandong, Nanshan District, Shenzhen, Guangdong, China

Intertek
Made in China

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical hazards, do not immerse cord, plugs or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.
- This appliance is not intended for use by persons [including children] with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- D0 NOT operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return the appliance to the manufacturer for examination repair or electrical or mechanical adjustment. All servicing, other than cleaning, should be performed by an authorized service representative. See Warranty section.
- The use of accessories or attachments not recommended by the manufacturer may result in fire, electric shock or personal injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'OFF', then remove the plug from the wall outlet.
- Do not use appliance for other than intended use.
- Do not leave unit unattended while in use.
- Extreme caution must be used when moving an appliance containing hot liquids.
- Do not use the Kettle without the Lid in place.
- Scalding may occur if the Lid is opened while the Kettle is hot.
- Direct kettle spout away from cabinets, walls, etc. to prevent possible steam damage.

GROUNDED PLUG

To reduce the risk of electric shock this appliance has a grounded plug (2 blades and 1 pin). If the plug does not fit fully into the electrical outlet contact a qualified electrician. Do not modify the plug in anyway or use an adaptor.


POWER CORD

A short supply cord is provided to reduce the hazards of becoming entangled in or tripping over a long cord. Extension cords may be used if care is exercised in their use, If an extension cord is used, the marked electrical rating of the detachable power supply cord or extension cord should be at least as great as the electrical rating of the appliance. If the appliance is of the grounded type, the extension cord should be a grounded 3-wire cord, The extension cord should be arranged so that it will not drape over the counter top or table top, where it can be pulled on by children or tripped over.

SAVE THESE INSTRUCTIONS
HOUSEHOLD USE ONLY

KNOWING YOUR KETTLE

Product Diagram

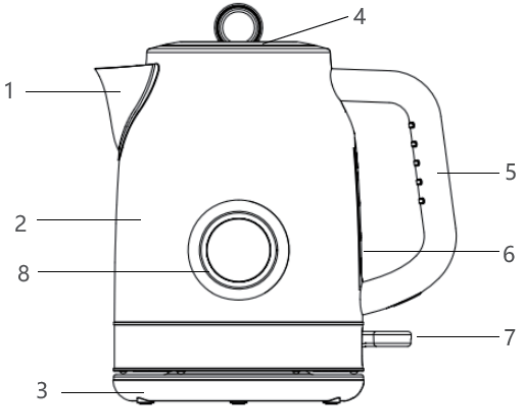

1. Spout
2. Main body
3. Base
4. Lid
5. Handle
6. Water level gauge
7. Power switch
8. Thermometer

Specifications

Model	PE-EK025
Operating voltage	120V~ 60Hz
Power	1500W
Capacity	1.7 (maximum) liters

USING YOUR KETTLE

Before First Use

• Read all instructions carefully and keep them for future reference.
• Remove all packaging.

IMPORTANT NOTES

1. Do not use the kettle without the lid in place.
• Doing so may cause water to spit out during boiling.
• The kettle may continue boiling for too long after the water has reached a boil and may not switch off automatically.
2. Fill the kettle with 1L of cold tap water and bring it to a boil.
• Add 500ml of white vinegar and let it stand for at least 1 hour or overnight.
• Discard the solution afterward.
3. Fill the kettle to the maximum level with cold tap water.
• Bring it to a boil and discard the water.
• Repeat this step once more.
4. The kettle is now ready for use.

HOW TO USE

1. Open the lid and fill the kettle with water. Alternatively, water can be added carefully through the spout. Ensure the lid is securely closed.

Note: Keep the water level between the MIN and MAX marks on the water level gauge to avoid overfilling or empty operation.

2. Place the kettle on a flat, dry, heat-resistant surface. Plug into a 120V AC outlet.

Note: Keep the spout away from cabinets, walls, or other surfaces to prevent steam damage.

3. Press the Power Switch to start boiling.

Note: Do not open the lid while the kettle is hot.

4. The kettle will switch off automatically when boiling is complete.

Note: To turn off early, lift the kettle from the base or press the Power Switch again.

5. After use, unplug the kettle.

Note: Do not connect other appliances to the base or tamper with the connector.

6. If the kettle is switched on while empty, the thermostat will cycle to prevent overheating.

Note: Unplug immediately and allow it to cool before refilling.

CLEANING AND MAINTENANCE

General Servicing

• All servicing, other than routine cleaning, should be performed by an authorized service representative.

Cleaning the Kettle

• Unplug the Base from the wall outlet and allow the Kettle to cool.
• Empty the Kettle before cleaning.
• Wipe the exterior with a soft, damp cloth.
• Dry thoroughly before use.

Note: Do not use abrasive cleaners and do not immerse the kettle or power base in water or any other liquid.

Descaling

• Scale build-up will naturally occur inside the Kettle, especially on the stainless steel heating plate.
• To remove scale:
1. Fill the Kettle with equal parts white vinegar and water (about 500 ml / 2 cups each).
2. Bring the mixture to a boil, then let it stand for several hours or overnight.
3. Empty the mixture, then fill the Kettle to the MAX level with fresh water.
4. Bring water to a boil again and discard.
• For heavy scale build-up, use a commercial descaler and follow the manufacturer's instructions.

Note: To delay scale build-up, always pour out remaining water after use and refill only when needed.

成品尺寸：宽105*高148mm
公差：+/-1mm
材质：128G铜版纸
折页