A80

USERS' MANUAL

Dear users:

Thank you for choosing this section MID product. We sincerely hope that you can get long-term enjoyment. We wish you a better multimedia experience obtained from the product!

This manual contains all the main information is correct at the time of publication. However, as we continue to be updated and improved products, and the software on your device, appearance, function described in this manual may vary slightly.

Note ⚠

This manual contains important safety measures and the proper use of the product, in order to avoid the accident, make sure to read the manual carefully before using the product.

- Please select the appropriate volume, use the headphones should not be too big volume, and if they feel tinnitus, turn down the volume or stop using it.
- Note: the machine can not be used with other models of charger, otherwise they will burn down the machine, and the company shall not be responsible, machines will need original chargers.
- Player format or ongoing upload and download. Do not suddenly disconnected, otherwise if may lead to errors in the program.
- Erase the memory loss caused because the program is damaged, repair or other reasons, the company assumes no responsibility, please follow the user manual for standard operation.
- Do not disassemble the product, do not use alcohol, thinner or benzene to clean the surface of the product.
- Do not use the product in areas that prohibit the use of electronic equipment, such as aircraft.
- Do not use when driving or walking in the street, otherwise it may cause a car accident.
- is used for both data transmission and charging.

1.1 Touch Panel

10. 1 inch touch panel. The option, to click, drag on the touch panel

1.2 Power

Start up: Long press the power button, the system will enter the main interface.
Shutdown: In the main menu interface, press the power button about 5 seconds, the system can hint "power off" option, Click "OK". You can safely shut down.
Lock screen: Short press Power button to lock the screen or unlock.

1.3 Remark

1.When power is empty, system will shut down automatically.
2.Illegal turn off the device, restart will scan and restore the disk, it may take longer time to enter into system.

1.4 Volume

If you want to turn up or down the volume, please press the up and down volume buttons.

earphone jack:
3.5mm earphone jack.

1.5 TF card

TF card slot is beside the sim card slot, max supporting 256GB T flash card.

1.6 USB

USB-TypeC: you can use it for both charging or make data transaction.

1.8 Reset

Please use a needle to short press the small whole beside the volume button if you need to reset the tablet.

Remark:

Unless unable to shutdown, otherwise don't use the reset, suggest you to shut down by normal way, if not will easy to damage the machine system.



First Use:

2.1 Battery management and charge

Before first use, please set the device's battery is fully charged. Just need to connect the adaptor. First time charging please keep about 5-6 hours.

Remark:

This tablet is using 5000MAH Li poly battery, the device is with USB-TypeC: to be charged. Charging capacity will be 5V/ 2A.
During charging, the battery icon will scroll, when the charging is full, it will turn to green color.
Please don't use the device while it is charging.


2.2 connection with PC

Use usb cable to connect the device with the PC, turn on the USB storage mode.



Setting:


3.1 Home page

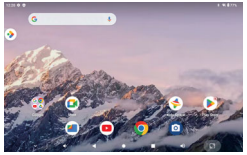

The home page will be like this, slip from the bottom to top, you will get all the applications in view.


3.2 Multi page


Short press the multi page button, slip the page that you want to close to left side or right side, then it will be closd.

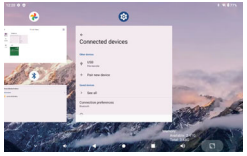

3.3 Sound, ring set, notify and screen brightness



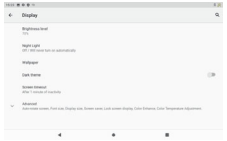

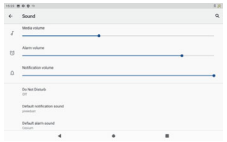

3.4 WIFI and

Choose the WIFI you want to connect with, type the password, then you will be connect with WIFI



3.5 Language


Open the setting, choose the language that you want to use. Keep pressing the language that you chose and move to top of the screen, then the language will be settled.





3.6 Date and time setting

Set date, time. Select time zone and select date format.

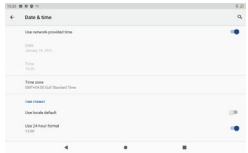

3.7 Software install and manage

This tablet supports the third party applications based on Android platform, most of the applications can be obtained from the internet, to be download into local flash or Micro TF card.
This tablet also supports Google Play Store, you can download whatever application you want through Google Play Store directly.

3.8 Recovery


This tablet supports recovery, including:

3.8.1 DRM reset

3.8.2 WIFI, & BIuetoooth

3.8.3 Reset app preference

3.8.4 Erase all data (Please consider to use this function, or your tablet will lose all the data used before)

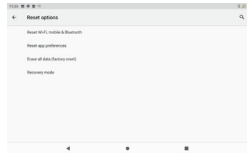

The company reserves the right to improve products, product specifications and design are subject to change without notice!

Note ⚠

The operating manual is only for reference, product specifications and appearance are subject to change without notice.

The series of pictures of this operation manual are for reference only.

STATE ⚠

Please be sure to use process of its own data backup, loss and damages of personal data caused by the company due to software, hardware malfunction, maintenance, battery replacement or other unforeseen circumstances assumes any responsibility for the loss, and we cannot control the users of this manual may cause misunderstanding, the company will not be liable in accidents that may appear in this manual process responsible for the damage, not caused by third- party claims arising out of the use of the product is respobsible for .

Thanks for choosing this device, hope you will enjoy it.

FCC Caution.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.
Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.

***RF warning for Portable device:**

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

SAR Statement:

SAR tests are conducted using standard operating positions according standards with the device transmitting at its highest certified power level in all tested frequency bands, although the SAR is determined at the highest certified power level, the actual SAR level of the device while operating can be well below the maximum value.
This model product has been tested and meets the RF exposure guidelines with the test distance 0mm for body worn. The highest SAR_{1g} value is 0.673 W/Kg for body worn. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with RF exposure requirements, and should be avoided