

1.7L STAINLESS STEEL ELECTRIC KETTLE
MODEL: PE-EK024
User Guide

support@parisrhone.com
www.parisrhone.com
Manufacturer: Shenzhen Aspiron Technology Company Limited
Address: Room 1401, Tianlong Mobile Building, Headquarters Base, Liuxiandong, Nanshan District, Shenzhen, Guangdong, China

Intertek
Made in China

IMPORTANT SAFEGUARDS

Before using the appliance, carefully read this manual.
Keep this manual, the warranty, the receipt, and, if possible, the original box and internal packaging for future reference.

Electrical Safety

- Always check that the voltage marked on the kettle matches your household supply before connecting. If not, DO NOT use the kettle and contact your dealer.
- DO NOT immerse the kettle, power base, cord, or plug in water or any other liquid.
- DO NOT let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Always disconnect the kettle from the outlet when not in use, before cleaning, and when moving the appliance. Allow it to cool before attaching or removing parts.
- Always switch the power switch to the OFF position before unplugging the kettle.
- If the power cord is damaged, it must be replaced by the manufacturer, a service technician, or a qualified person.

Usage Safety

- DO NOT operate the kettle when it is empty. This may damage the heating element.
- DO NOT overfill the kettle. Boiling water may overflow and cause burns.
- Always ensure the lid is firmly closed before operation.
- Always ensure the lid is positioned so that steam is directed away from the handle.
- Never remove the lid while the water is boiling. Steam may cause burns.
- DO NOT use the kettle with any base other than the one supplied.
- Always place the kettle on a stable, flat, heat-resistant surface.
- DO NOT place the kettle on or near a gas burner, electric burner, or in a heated oven.
- Always use the handle when moving the kettle. DO NOT touch hot surfaces.
- Always direct steam away from cabinets, walls, or hands.
- Always pour boiling water slowly and carefully. DO NOT tilt the kettle too quickly.
- Be careful when refilling the kettle if it is still hot.


Children & Supervision
• This appliance is NOT intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless supervised or instructed on safe use.
• Children MUST NOT play with the appliance.
• Always keep the kettle and its cord out of reach of children under 8 years old.
• The kettle may be operated by children aged 8 years and above only if supervised or instructed in safe use.
• Cleaning and maintenance MUST NOT be carried out by children unless they are over 8 years old and under supervision.

General Warnings
• Avoid spilling water on the connector.
• DO NOT use accessories not recommended by the manufacturer. This may cause fire, electric shock, or injury.
• DO NOT use the kettle outdoors or for purposes other than boiling water.
• DO NOT keep the kettle connected to power continuously if the room temperature is below 0°C, as this may affect the automatic thermostat.
• Always take extra care when moving the kettle if it contains hot water.
• This appliance is intended for household use only, or for similar applications such as:
- staff kitchens in shops, offices, or workplaces
- domestic housing
- use by hotel or motel guests
- bed & breakfast environments

SAVE THESE INSTRUCTIONS
HOUSEHOLD USE ONLY

KNOWING YOUR KETTLE

Product Diagram

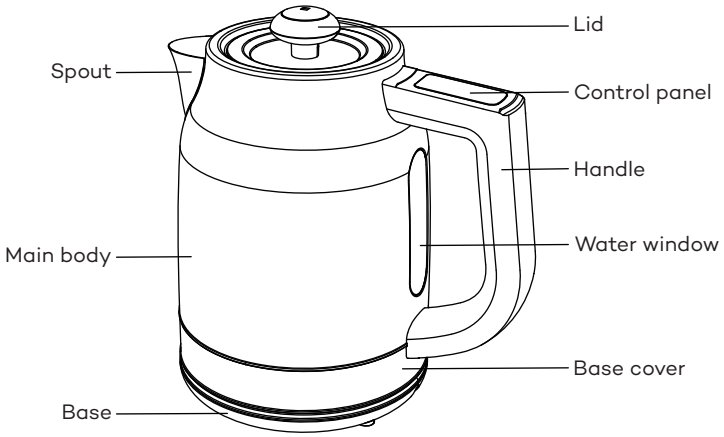

Control Panel

Temperature down	Temperature up
ON/OFF	Keep warm

Specifications

Model	PE-EK024
Operating voltage	120V~ 60Hz
Power	1500W
Capacity	1.7 (maximum) liters

USING YOUR KETTLE

Before First Use

1. Remove the kettle and all accessories from the box. Take off any stickers, protective film, or plastic parts.
2. Place the kettle on a flat, stable surface with at least 10 cm of free space around it. Do not place it in a cabinet or use it outdoors.
3. Before using for the first time, fill the kettle to the MAX mark with clean water, bring it to a boil, and then discard the water. Repeat once if necessary.
4. Connect the power cord to a suitable socket. Ensure that the rated voltage on the kettle (120V~60Hz) matches your local supply.
5. **Short power cord instructions:**

1) A short cord is provided to reduce the risk of entanglement or tripping.
2) Longer detachable cords or extension cords may be used with care. If a longer cord is used:

- The electrical rating must be at least as high as the kettle's rating.
- The cord must be a grounded 3-wire type.
- Arrange it so it does not hang over the counter where it could be pulled by children or cause tripping.

HOW TO USE

1. Open the lid and fill the kettle with water between the MIN (0.5L) and MAX (1.7L) marks. Close the lid securely.
2. Place the kettle on a flat, dry, heat-resistant surface. Plug into a 120V AC outlet. The kettle enters standby mode:

- Temperature display shows current water temperature.
- Four touch buttons light up.

Boil Water

1. Touch the ON/OFF button. The button light will flash, and the kettle will boil to 100 °C.
2. Touch the +/- buttons to set the temperature (40 °C/104 °F to 100 °C/212 °F). Touch the ON/OFF button to start heating.
3. Touch the ON/OFF button again or lift the kettle off the base to stop boiling at any time.

Keep Warm

1. Touch the Keep Warm button to heat water to 55 °C/131 °F and keep warm for 2 hours.
2. Touch the Keep Warm button first, then set your desired temperature by touching + or -. The water will heat to the set temperature and keep warm for 2 hours.
3. The Keep Warm button flashes while in keep warm mode. Press it again to exit the mode.

Intelligent Memory: Lifting the kettle and placing it back will not interrupt the keep warm mode.

Special Features

Standby Mode
After powering on, all indicators light up, and the display shows the current water temperature, ready for use. If no operation occurs within 3 min, the screen and lights turn off, and the kettle enters sleep mode.

Sleep Mode
When all lights are off, touch any button to wake the kettle and return to standby mode.

Automatic Power-off
Unless the keep-warm function is enabled, the display turns off automatically about 3 min after the last operation. In keep-warm mode, the kettle powers off after about 2 hours.

Boil-dry Protection
If the kettle operates without water, the boil-dry protection automatically turns it off. Allow it to cool and reset before using again.

CLEANING AND MAINTENANCE

Always unplug the kettle before cleaning and wait for it to cool down.

Cleaning the Kettle
- Wipe the kettle housing with a soft, damp cloth. Never use harsh or abrasive cleaners, scouring pads, or steel wool, which can damage the kettle.
- DO NOT immerse the kettle or base in water or any other liquids.

Descaling
- Descale the kettle regularly using a descaling product suitable for household appliances.
- Rinse the kettle several times with clean water after descaling.

成品尺寸：宽105*高148mm
公差：+/-1mm
材质：128G铜版纸
折页