


wanbo

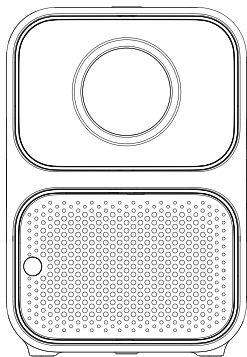

Portable Projector

TT

User Manual/Manual de usuario

English.....	01
Español.....	25

Contents

Safety Instructions.....	02
Packing List.....	05
Over View.....	06
Ready to Start.....	10
Setting.....	14
Using Method.....	16
Product Specification.....	19
Fault Diagnosis.....	20
Warranty.....	24

Safety Instructions

Read all instructions before you use this device. Do not make any changes or create settings that are not described in this manual. If physical injury, loss of data or damage is caused by failure to follow instructions, the warranty does not apply.

Setup

- To reduce the risk of fire and / or electric shock, do not expose the device to rain or moisture. Objects filled with liquids, such as vases, should not be placed on this device.
- Do not place this device on soft surfaces such as tablecloths or carpets, otherwise the device could be a fire hazard.
- Do not place this device in areas susceptible to excessive dust and dirt or near any appliance generating a strong magnetic field.
- Protect this device from overexposure to direct sunlight, heat, large temperature fluctuations and moisture. Avoid extreme temperatures. The suitable operations and storage temperature for this device and its accessories is 41°F to 95°F/ 5°C to 35°C.
- When this device is running for a long period of time, the surface may become hot. Shut it down immediately and unplug the charger. Resume operation after this device has cooled down.
- Always handle this device with care. Avoid touching the lens. Do not allow children to handle the device without supervision.
- Never place heavy or sharp objects on this device.
- To avoid electric shock, do not disassemble.
- Use attachments or accessories specified by the manufacturer only.
- Avoid extreme vibrations as they may damage the internal components.
- To prevent overheating, do not block or clog the ventilation openings.
- Do not stare directly at the operating beam. The bright light may damage your eyes.


- Install away from the wall so as to maintain proper performance and feasibility, please leave at least 30cm between the projector and the wall.

Power Supply


- Use only the provided power adapter.
- Power off the device before removing the power supply from the socket.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from this device.
- Unplug this device if there are lightning storms or when unused for a long period of time.
- Where the power plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- Before you make or change any connections, ensure that all devices are disconnected from the power outlet.
- Never touch the power cable or the power connector with wet hands.

Repairs


- Do not make any repairs to this device yourself. Only have your device repaired by an authorized service center.
- Improper maintenance can result in injuries to persons or damage to this device.

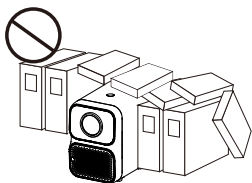


Don't install in places with poor ventilation

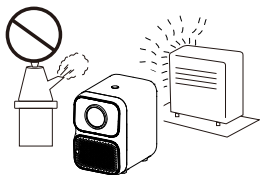

Don't install in places that hot and humid

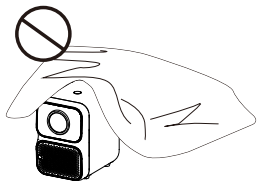

Don't block the vent (Inlet or Outlet)

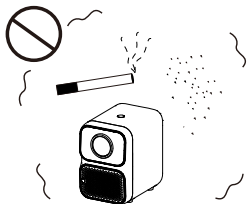

Don't install in dusty and smoky areas

Packing List



Projector TT



Remote control



Power line




Power adapter



User manual


Over View

1.Front view

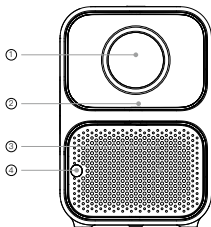


- ① Lens
- ② Infrared receiving window
- ③ Heat radiation outlet
- ④ Auto-focus camera

2.Top view

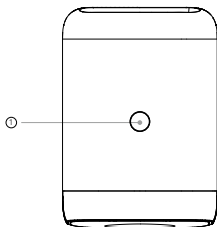


- ① Power key
Press the power key to turn on and off

3.Back view

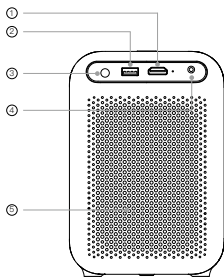


- ① HDMI input
Connect with HDMI device
- ② USB Port
Plug with USB device
- ③ Power Supply Input
Connect with power line
- ④ Headphone Jack
- ⑤ Heat radiation outlet

4.Side view

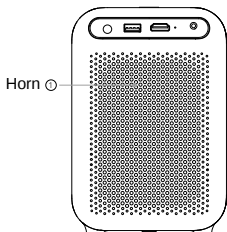


Horn ①

5.Bottom view

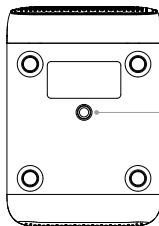

① Screw hole
for bracket

6.Remote control

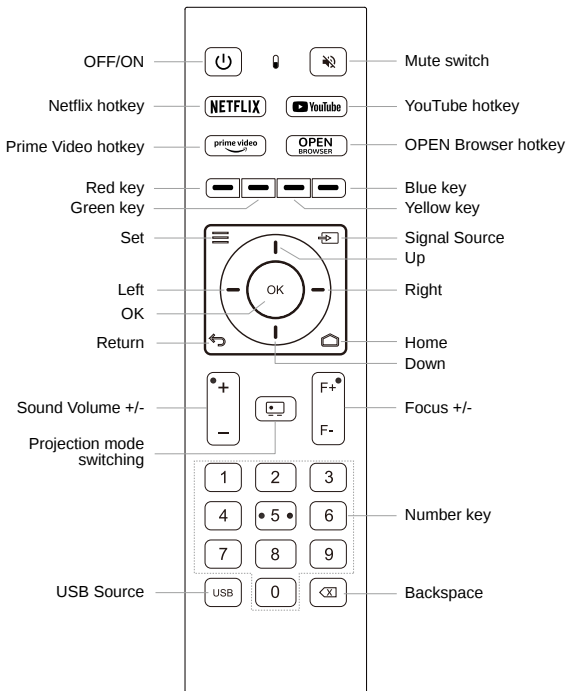


7.LED indicate light

Indicate site	LED light status	Instruction
Machine	Red light	Turn off
Machine	Green light	Turn on

Ready to Start

1.Placing

Put the product on a stable surface in front of the projector, projection surface should be white and smooth to achieve the best effect. Projection size is 40-120 inches with a distance of 1.1m to 3.3m.

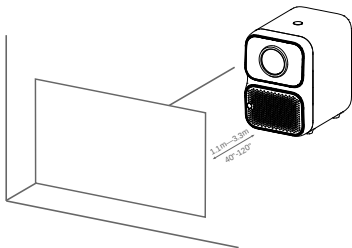

Attention:


- Side projection is supported, we can adjust image through 4 points keystone correction.
- Image size depends on distance between the projector and projection screen.

2.Prepare remote control


- ① 2 pcs of # 5 batteries are required to put into the remote control before using.
- ② Please slide the back panel of the remote control and open to change new battery if necessary, [kindly match the indicated polarity [+/-], then close the battery compartment.

3. Ready to start


- ① Please connect the projector to the power jack with the supplied adapter and power line.

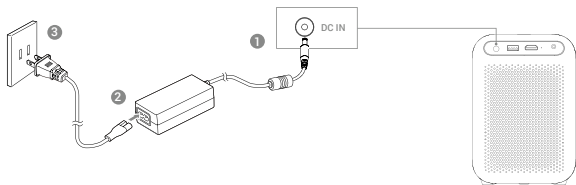


- ② Press product power key to open.

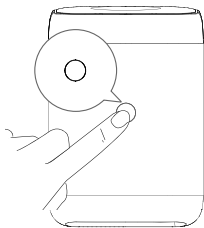

- ③ Put the product towards appropriate projection screen.
- ④ The product will focus automatically to achieve clear image, or you can focus with remote control.

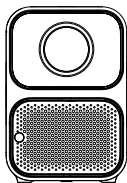

Schematic diagram of blurred image

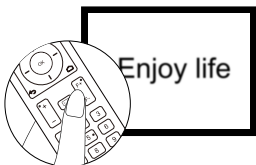

- ⑤ Please finish basic setting according to the screen instructions.

Notice: Please use the supplied adapter and power line for safely and rapidness.

4.Projection


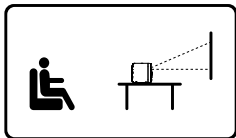


Table Mount

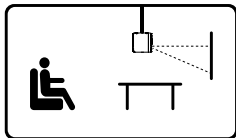

Ceiling Mount


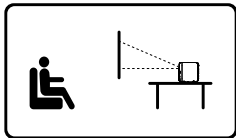


Table Mount: Mirror

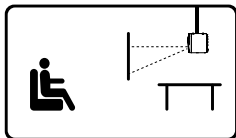

Ceiling Mount: Mirror

5.Keystone correction

Keystone correction includes keystone, zoom and focus. Please select appropriate option to adjust in the setting menu with remote control.

1. Keystone Correction: Open [Settings] on the homepage >[Keystone]>[Four points keystone], Adjust horizontal and vertical direction value of the four angles. Open [Settings] on the homepage > [Keystone] > [Auto], Adjust keystone correction automatically.
2. Zoom: Open [Settings] on the homepage >[Zoom], zoom the image to required screen pictures with remote control.
3. Focus: Open [Settings] on the homepage >[Manual Focus], adjust image with the remote control to get images as you like. Open [Settings] on the homepage >[Auto Focus], adjust image focus automatically.

Four points keystone



Zoom



Setting

1. Network

The projector can be connected to internet with Wi-Fi.

- ① On the homepage, choose[Settings]>[Network]>[Internet Connection], choose the Wi-Fi needed and press OK key.
- ② Please finish wifi connection according to screen prompts.

2. Bluetooth connection

- ① Open on the homepage [Settings]>[Bluetooth]>[Bluetooth Connection], choose the Bluetooth needed and press OK key.
- ② Follow the on-screen instructions to complete the Bluetooth connection.

3. Projector

Choose [Settings] on the homepage

Set up	
OSD language	Select an on-screen display language
Time setup	
Set the time automatically	Enable / disable automatic date and time
Date	Manually set date
Time	Manually set time
Region	Select time zone
Use 24 -hour format	Select 24-hour format or 12-hour format
Screensaver	Select the Image/Timer of Screensaver
Sleep timer	Select the time of Sleep timer
Auto sleep	Select the time of Auto sleep
USB auto upgraded	Upgrade system via USB drive APK
Internet update check	Online upgrade system
Reset default	Reset the projector to factory settings


Picture Mode	
Picture mode	[Custom]/ [Cinema]/ [Sport]/ [Vivid]/ [Hi-Bright]/ [Standard]
Sharpness	Adjust the value of Projector sharpness
Gamma	[Dark] /[Middle] /[Bright]
Color temperature	[Cool] /[Standard] /[Warm] /[User]
Audio	
Bass	Adjust the value of the sound bass
Treble	Adjust the value of the sound Treble
Sound surround	Enable / disable Sound surround
Sound style	[User] /[Standard] /[Vivid]/[Sport] /[Movie] /[Music]/[News]
Digital output mode	[Auto] /[PCM] /[Bypass] /[Dolby Audio-Dolby Digital] /[Dolby Audio-Dolby Digital plus]
Dialogue enhancement	[Off] /[Low] /[Medium] /[High]
Keystone	
Auto	Adjust keystone correction automatically
Four points correction	Get square images through adjusting values of the 4 points
Projection	Choose appropriate projection method from the four
Zoom	Zoom the image to required 50%-100% screen pictures
Focus	
Auto focus	Enable / disable auto focus
Manual focus	Adjust focus manually
About	The information of projector

Using Method

1.Connect to USB storage device

You can connect USB storage device to this projector to enjoy local music, videos and pictures.

- ① On the homepage, choose [→] Inputs] > [USB] , then press the OK key
- ② Choose the file required, then press OK key.

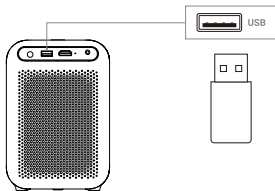

Formats supported by U Disk


File style	File formats supported
Picture	JPG/PNG/BMP
Video	HEVC/H.265, MPEG1/2, MPEG4, DivX3.11, DivX 4.12, DivX 5.x, DivX 6, XviD, Sorenson H.263, H.263, H.264, AVS, AVS+, AVS2, WMV3, VC1, Motion JPEG, RV30/RV40
Audio	MPEG1/2 Layer1, MPEG1/2 Layer2, MPEG1/2/2.5 Layer3, AAC-LC, HEAAC, VORBIS, DTS, DTS Master Audio, LPCM, IMA-ADPCM, MS-ADPCM, G711A/mu-law, FLAC, OPUS

Note: Operation are subject to actual condition due to aperiodical update of the product system.

2. Connect to HDMI device

The projector supports a variety of HDMI playback devices, such as TV box, TV sticker, DVD, STB, games console and so on.

- ① Connect the projector to HDMI playback device with HDMI cable [not provided].
- ② On the homepage, choose [➡ Inputs] > [HDMI] , then press OK key.

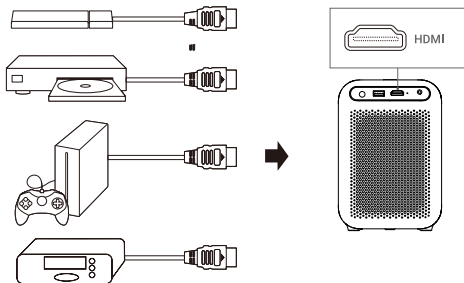

3. Phone projection

How to push content to the projector.

- ① Ensure the phone and projector under the same Wi-Fi.
- ② Open video play software of the phone, find the TV push icon, which is on either of the four corners of the video UI.

- ③ Click the icon and chose [Smart Projector] to push videos to the projector. It doesn't need to stay on the video interface during projection, we can have other operations on the phone.

Note: Push icons are different for each Apps. Not all videos have push functions due to copyright issue for some contents.



Schematic diagram of some push icons

4.Phone same screen

According to the following steps, contents of the phone can be displayed on the projection screen synchronously through wifi. Enjoy videos or other contents with larger images. There are many similar software in the market, this instruction takes "Eshare" as an example. Device requirement: devices over iOS6 or over Android 5.4.

iPhone devices tutorial:

- ① Ensure iPhone and projector are under the same Wi-Fi.
- ② Open console, AirPlay function [It's called "screen mirror"] for new system version, then find [EShare-XXXX] and click connection



Android devices tutorial:

- ① Ensure the phone and projector are under the same Wi-Fi.
- ② On the homepage, choose [EShareServer], Open EShare.
- ③ For Android phone, download "EShare" APP, install and open it correctly.
- ④ Open EShare, choose [EShare-XXXX] and Click connection.



Product Specification

We reserve the right to change specification and design without prior notice

Input voltage	110V-240V , 50-60Hz	CPU	4*A53
Overall power consumption	120 W	Recommend projection size	40-120 inches
Horn	5W*2	RAM	1G
Physical resolution	1920 x 1080p	ROM	8G
Brightness	650 ANSI	Bluetooth	Bluetooth 5.1
Contrast	3000:1	Light source	LED
Recommend projection distance	1.1 -3.3m	Recommend temperature	5℃ -35℃
Wi-Fi	2.4G/ 5G	Light source life	>20000h
Projection scale	4:3 / 16:9	Net Weight	1.67 kg
USB format	FAT32	Machine Size	170×120×180mm

Fault Diagnosis

- ① Unable to turn on the projector with remote control ?
 - Ensure the projector has been connected with power.
 - Press the power key on machine to turn on.
- ② Remote control can not work
 - Ensure batteries are put in
 - Change batteries for the Remote control
- ③ Remote control doesn't work? Images are not clear ?
 - Adjust focus through focus key of the remote control.
- ④ Flip image?
 - On the main menu, choose [Settings]>[Projection], change to the correct projection state.



Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.



NOTICE: The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.

This product contains technology subject to certain intellectual property rights of Microsoft. Use or distribution of this technology outside of this product is prohibited without the appropriate license(s) from Microsoft.

Content owners use Microsoft PlayReady™ content access technology to protect their intellectual property, including copyrighted content. This device uses PlayReady technology to access PlayReady-protected content and/or WMDRM-protected content. If the device fails to properly enforce restrictions on content usage, content owners may require Microsoft to revoke the device's ability to consume PlayReady-protected content. Revocation should not affect unprotected content or content protected by other content access technologies. Content owners may require you to upgrade PlayReady to access their content. If you decline an upgrade, you will not be able to access content that requires the upgrade.

The camera on the device will collect projection screen information when performing autofocus and auto keystone function, and the information will be released afterwards. Such information shall not be saved or uploaded.

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: This device may not cause harmful interference, and This device must accept any interference received, including interference that may cause undesired operation.

This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

IC STATEMENT

English: "

This device complies with Industry Canada licence-exempt RSS standard(s).

Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device."

French:"

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement."

L'appareil a été évalué pour répondre aux exigences générales d'exposition aux RF. L'appareil peut être utilisé sans restriction dans des conditions d'exposition portables.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Warranty

Warranty for one year

12 months' warranty service are provided upon purchase, decomposition and transformation are excluded.

Support Email: support@szwanbo.net

<http://en.szwanbo.cn/>



Facebook



Twitter



Instagram

Contenido

Instrucciones de seguridad	26
Lista de embalaje	29
Resumen	30
Listo para empezar	34
Ajustes	38
Método de utilización	40
Especificaciones del producto.....	43
Diagnóstico de averías	44
Garantía	45

Instrucciones de seguridad

Lea todas las instrucciones antes de utilizar este dispositivo. No realice ningún cambio ni cree ajustes que no estén descritos en este manual. Si se producen lesiones físicas, pérdida de datos o daños por no seguir las instrucciones, la garantía no se aplica.

Ajustes

- Para reducir el riesgo de incendio y/o descarga eléctrica, no exponga el dispositivo a la lluvia o la humedad. Los objetos que contienen líquidos, como jarrones, no deben colocarse en este dispositivo.
- No coloque este aparato sobre una superficie blanda, como un mantel o una alfombra, o este aparato puede ser un peligro de incendio.
- No coloque este dispositivo en un lugar donde sea probable que se genere polvo y suciedad excesivos, o cerca de cualquier equipo que genere un campo magnético fuerte.
- Proteja este dispositivo de la exposición excesiva a la luz solar directa, altas temperaturas, grandes fluctuaciones de temperatura y humedad. Evite las temperaturas extremas. La temperatura de funcionamiento y almacenamiento adecuada para este aparato y sus accesorios es de 41 °F a 95 °F/5 °C a 35 °C.
- Cuando este dispositivo se opera durante mucho tiempo, su superficie puede calentarse. Apague el dispositivo inmediatamente y desenchufe el cargador. Reanude el funcionamiento después de que la unidad se haya enfriado.
- Siempre maneje este dispositivo con cuidado. Evite tocar la lente. No permita que los niños operen este dispositivo sin un tutor.
- No coloque objetos pesados o afilados sobre el dispositivo.
- Para evitar descargas eléctricas, no desmonte el dispositivo.
- Utilice únicamente los accesorios o racores especificados por el fabricante.
- Evite las vibraciones violentas, ya que pueden dañar los componentes internos.
- Para evitar el sobrecalentamiento, no bloquee ni obstruya las aberturas de ventilación.
- No mire directamente al haz de luz. La luz brillante puede dañar sus ojos.


- Instale lejos de las paredes para mantener un buen rendimiento y viabilidad, deje al menos 30 cm entre el proyector y la pared.

Fuente de alimentación


- Sólo se puede utilizar el adaptador de corriente suministrado.
- Apague el dispositivo antes de retirar la fuente de alimentación de la toma de corriente.
- Proteja el cable de alimentación para que no lo pisen o aprieten, especialmente en enchufes, enchufes de conveniencia y a la salida del cable de este aparato.
- Si hay una tormenta eléctrica o si no se usa durante mucho tiempo, desenchufe este dispositivo.
- Cuando se utiliza un enchufe de alimentación o un acoplador eléctrico como dispositivo de desconexión, el dispositivo de desconexión debe permanecer operativo en todo momento.
- Antes de realizar o cambiar cualquier conexión, asegúrese de que todos los dispositivos estén desconectados de la toma de corriente.
- Nunca toque el cable de alimentación o el conector de alimentación con las manos mojadas.

Reparaciones


- Por favor, no realice ninguna reparación a este dispositivo usted mismo. Su dispositivo solo debe ser reparado por un centro de servicio autorizado.
- La reparación inadecuada puede provocar lesiones al personal o daños a este equipo.

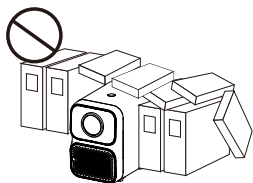


No instale en lugares con poca ventilación.

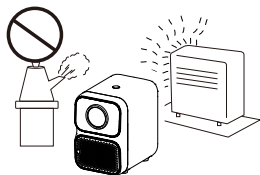

No lo instale en lugares cálidos y húmedos.

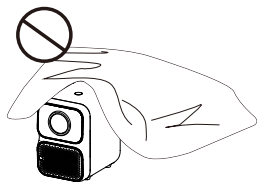

No bloquee la ventilación (entrada o salida).

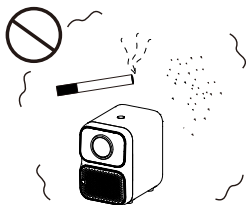

No instale en áreas polvorientas y humeantes.

Lista de embalaje



Proyector TT



Control remoto



Cable de alimentación




Adaptador de corriente



Manual del usuario


Resumen

1. Vista frontal

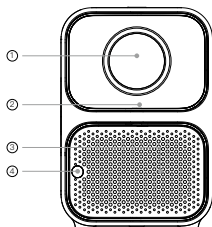


- ① Lente
- ② Ventana de recepción de infrarrojos
- ③ Salida de la radiación térmica
- ④ Cámara de enfoque automático

2. Vista superior

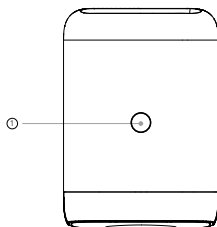


- ① Tecla de encendido
- Presione la tecla de encendido para encender y apagar

3. Vista trasera

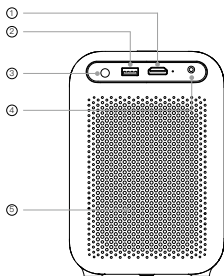


- ① Entrada HDMI
Conéctese con el dispositivo HDMI
- ② Interfaz USB
Conecte el dispositivo USB
- ③ Entrada de alimentación
Conectar con el cable de alimentación
- ④ Toma de auriculares
- ⑤ Salida de radiación térmica

4. Vista lateral

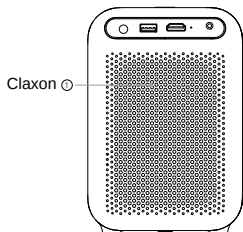


Claxon ①

5. Vista inferior

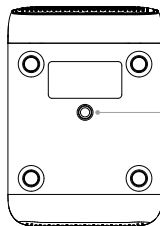

orificios de
① tornillo del
soporte

6.Control remoto

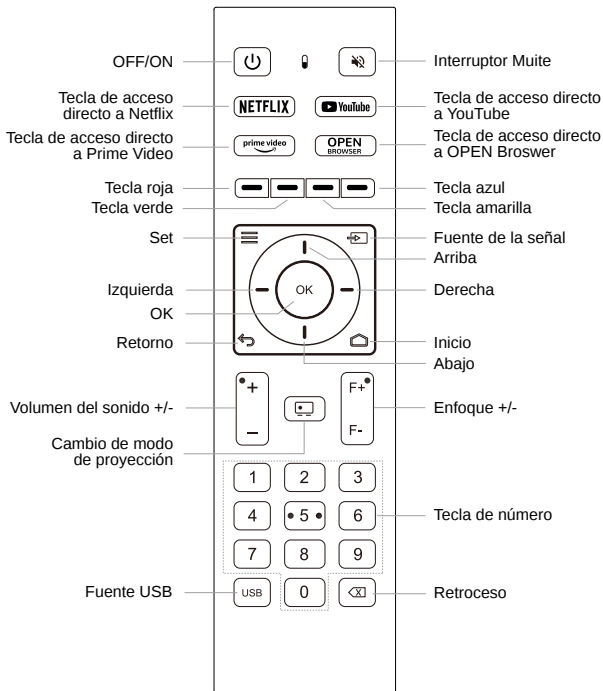


7.Luz indicadora LED

Indicar el sitio	Estado de la luz LED	Instrucción
Máquina	Luz roja	Apagar
Máquina	Luz verde	Encender

Listo para empezar

1.Colocación

Coloque el producto en una superficie estable frente al proyector, la superficie de proyección debe ser blanca y lisa para lograr el mejor efecto. El tamaño de proyección es de 40-120 pulgadas con una distancia de 1.1m a 3.3m.

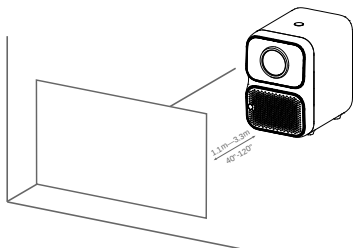

Atención:


- Se admite la proyección lateral, podemos ajustar la imagen mediante la corrección trapezoidal de 4 puntos.
- El tamaño de la imagen depende de la distancia entre el proyector y la pantalla de

2. Preparar el control remoto


- ① Es necesario colocar 2 pilas del nº 5 en el mando a distancia antes de usarlo.
- ② Si necesita reemplazar la batería, deslice el panel posterior del control remoto, abra el compartimento de la batería y reemplácelo con una batería nueva [coopere con la polaridad indicada [+/-] y luego cierre el compartimiento de la batería.

3. Listo para empezar

- ① Conecte el proyector a la toma de corriente con el adaptador y el cable de alimentación suministrados.

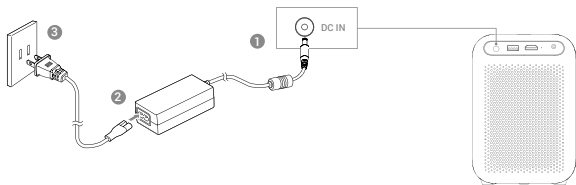

- ② Presione la tecla de encendido del producto para encenderlo.

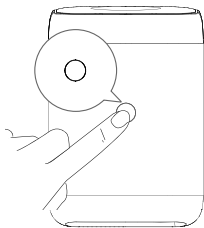

- ③ Coloque el producto hacia la pantalla de proyección adecuada.

- ④ El producto ajusta automáticamente el enfoque para obtener una imagen clara, o puede enfocar con el control remoto.

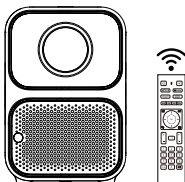



Diagrama esquemático de la imagen borrosa




- ⑤ Siga las instrucciones en pantalla para completar la configuración básica.

Atención: Utilice el adaptador y el cable de alimentación suministrados para mayor seguridad y velocidad.


4.Proyección

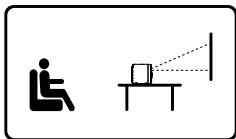


Proyección frontal

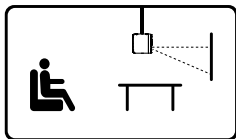

Proyección Techo frontal

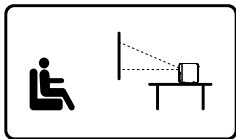

Proyección Trasero

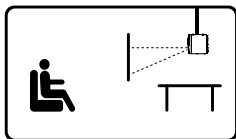

Proyección Techo trasero

5. Corrección trapezoidal

La corrección trapezoidal incluye corrección trapezoidal, zoom y enfoque. Por favor, seleccione la opción apropiada para ajustar en el menú de configuración con el mando a distancia.

1. Corrección trapezoidal: Abra [Ajustes] en la página de inicio [Piedra clave]>[Corrección de cuatro puntos], ajuste el valor de la dirección horizontal y vertical de los cuatro ángulos. Abra [Ajustes] en la página de inicio [Piedra clave] > [Auto], Ajuste la corrección trapezoidal automáticamente.
2. Zoom: Abra [Ajustes] en la página de inicio > [Zoom], amplíe la imagen a las imágenes de pantalla requeridas con el control remoto.
3. Enfoque: Abra [Ajustes] en la página de inicio [Enfoque] >[Enfoque manual], ajuste la imagen con el mando a distancia para obtener las imágenes que desee. Abra [Ajustes] en la página de inicio [Enfoque] >[Enfoque automático], ajustar el enfoque automáticamente.

Corrección de cuatro puntos



Zoom



Ajustes

1.Red

El proyector puede conectarse a Internet con Wi-Fi.

- ① En la página de inicio, elija [Ajustes] > [La red] > [Conexión a internet] , elija el Wi-Fi necesario y pulse la tecla OK.
- ② Por favor, finalice la conexión Wi-Fi de acuerdo con las indicaciones de la pantalla.

2.Conexión Bluetooth

- ① En la página de inicio, elija [Ajustes] > [Bluetooth] > [Conexión Bluetooth] , elija el Bluetooth necesario y pulse la tecla OK.
- ② Siga las instrucciones en pantalla para completar la conexión Bluetooth.

3. Proyector

Seleccione [Ajustes] en la página de inicio

Configuración	
Idioma OSD	Seleccione el idioma de visualización en pantalla
Configuración de tiempo	
Establecer la hora	Active o desactive la fecha y hora automática
Fecha	Configure manualmente la fecha
Tiempo	Configure manualmente la hora
Región	Seleccione la zona horaria
Usar el formato de 24 horas	Seleccione entre el formato de 24 horas o el formato de 12 horas
Protector de pantalla	Seleccione la Imágenes/Temporizador del Salvapantallas
Tiempo de dormir	Seleccione la hora de Tiempo de dormir
Suspensión automática	Seleccione el tiempo de Suspensión automática
Actualización automática de USB	Actualizar el sistema a través de una unidad USB APK
Comprobación de actualización de internet	Actualizar el sistema en línea
Restablecer predeterminado	Restablecer la configuración de fábrica del proyector


Modo de imagen	
Modo de imagen	[Disfraz] / [Cine] / [Deporte] / [Vívido] / [Hola-brillante] / [Estándar]
Nitidez	Ajuste del valor de la nitidez del proyector
Gama	[Medio] / [Brillante] / [Oscuro]
Temperatura del color	[Estándar] / [Cálido] / [Usuario] / [Enfriar]
Audio	
Bajo	Ajuste del valor de los graves del sonido
Triplicar	Ajuste del valor de los agudos del sonido
Sonido envolvente	Activación/desactivación del sonido envolvente
Estilo de sonido	[Usuario] / [Estándar] / [Vívido] / [Deporte] / [Película] /[Música] / [Noticias]
Modo de salida digital	[Auto] / [PCM] / [Derivación] / [Dolby Audio-Dolby Digital] /[Dolby Audio-Dolby Digital plus]
Mejora del diálogo	[Apagado] / [Bajo] / [Medio] / [Alto]
Piedra clave	
Auto	Activar/Desactivar la corrección trapezoidal automática
Four points correction	Ajustar el valor de la dirección horizontal y vertical de los cuatro ángulos
Projection	Elija el método de proyección adecuado entre los cuatro
Zoom	Ampliar la imagen a las imágenes de la pantalla requeridas
Enfoque	
Enfoque automático	Activar / desactivar el enfoque automático
Enfoque Manual	Ajustar el enfoque manualmente
Sobre	La información del proyector

Método de utilización

1. Conectarse a un dispositivo de almacenamiento USB

Puede conectar un dispositivo de almacenamiento USB a este proyector para disfrutar de música, vídeos e imágenes locales.

- ① En la página de inicio, seleccione [→] Entradas > [USB] y, a continuación, pulse la tecla OK.
- ② Elija el archivo deseado y pulse la tecla OK.

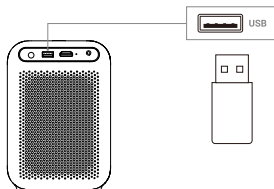

Formatos compatibles con U Disk


Estilo de archivo	Formatos de archivo compatibles
Imagen	JPG/PNG/BMP
Vídeo	HEVC/H.265, MPEG1/2, MPEG4, DivX3.11, DivX 4.12, DivX 5.x, DivX 6, XviD, Sorenson H.263, H.263, H.264, AVS, AVS+, AVS2, WMV3, VC1, Motion JPEG, RV30/RV40
Audio	MPEG1/2 Layer1, MPEG1/2 Layer2, MPEG1/2/2.5 Layer3, AAC-LC, HEAAC, VORBIS, DTS, DTS Master Audio, LPCM, IMA-ADPCM, MS-ADPCM, G711A/mu-law, FLAC, OPUS

Note: Debido a la actualización periódica del sistema del producto, la operación está sujeta a la situación real.

2. Conectarse a un dispositivo HDMI

El proyector es compatible con varios dispositivos de reproducción HDMI, como cajas de TV, pegatinas de TV, DVD, decodificadores, consolas de juegos, etc.

- ① Conecte el proyector al dispositivo de reproducción HDMI con el cable HDMI (no suministrado).
- ② En la página de inicio, seleccione [→ Entradas] > [HDMI] y, a continuación, pulse la tecla OK.

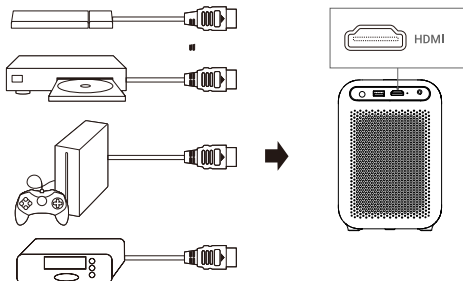

3. Proyección telefónica

Cómo enviar contenidos al proyector.

- ① Asegúrese de que el teléfono y el proyector están bajo la misma Wi-Fi.
- ② Abre el software de reproducción de vídeo del teléfono y busca el icono de transmisión de TV, que se encuentra en cualquiera de las cuatro esquinas de la interfaz de usuario de vídeo.

- ③ Haga clic en el icono y elija [Smart Projector] para enviar los vídeos al proyector. No es necesario permanecer en la interfaz de vídeo durante la proyección, podemos tener otras operaciones en el teléfono.

Nota: Los iconos de empuje son diferentes para cada aplicación, no todos los vídeos tienen funciones de empuje debido a los derechos de autor de algunos contenidos.



Diagrama esquemático de algunos iconos push

4.El teléfono está en la misma pantalla

De acuerdo con los siguientes pasos, los contenidos del teléfono se pueden mostrar en la pantalla de proyección de forma sincronizada a través de wifi. Disfrute de los vídeos u otros contenidos con imágenes más grandes. Hay muchos software similares en el mercado, esta instrucción toma "Eshare" como un ejemplo. Requisito del dispositivo: dispositivos sobre ios6 o sobre Android 5.4.

Tutorial para dispositivos iPhone:

- ① Asegúrese de que su iPhone y proyector estén en el mismo Wi-Fi.
- ② Abra la consola, la función AirPlay [la nueva versión del sistema se llama "Screen Mirroring"], luego busque [EShare-XXXX] y haga clic en Conectar.



Tutorial para dispositivos Android:

- ① Asegúrate de que el teléfono y el proyector están bajo la misma Wi-Fi.
- ② En la página de inicio, seleccione [EShareServer], Abrir EShare.
- ③ Para el teléfono Android, descargue la APP "EShare", instálala y ábrala correctamente.
- ④ Abra EShare, elija [EShare-XXXX] y haga clic en la conexión.



Especificaciones del producto

Nos reservamos el derecho de cambiar las especificaciones y el diseño sin previo aviso.

Tensión de entrada	110V-240V , 50-60Hz	CPU	4*A53
Consumo total de energía	120 W	Temperatura recomendada	5 C -35 C
Bocina	5W*2	RAM	1G
Resolución física	1920 x 1080p	ROM	8G
Brillo	650 ANSI	Bluetooth	Bluetooth 5.1
Contraste	3000:1	Fuente de luz	LED
Distancia de proyección recomendada	1.1 -3.3m	Tamaño de proyección recomendado	40-120 pulgadas
Wi-Fi	2.4G/ 5G	Peso de la máquina	1.67 kg
Escala de proyección	4:3 / 16:9	Duración de la fuente de luz	>20000h
Formato USB	FAT32	Tamaño de la máquina [W*H*D]	170×120×180mm

Diagnóstico de averías

- ① No puede encender el proyector con el mando a distancia?
 - Asegúrese de que el proyector está conectado a la corriente.
 - Pulse la tecla de encendido del equipo para encenderlo.
- ② El mando a distancia no funciona
 - Asegúrese de que las pilas están puestas.
 - Cambie las pilas del mando a distancia.
- ③ El mando a distancia no funciona? Las imágenes no son claras ?
 - Ajuste el enfoque mediante la tecla de enfoque del mando a distancia.
- ④ Voltea una imagen?
 - En el menú principal, seleccione [Ajustes]>[Proyección] , cambie al estado de proyección correcto.

Garantía

Garantía de un año

12 meses de servicio de garantía se proporcionan a la compra, la descomposición y la transformación están excluidos.

Correo electrónico de apoyo: support@szwanbo.net

<http://en.szwanbo.cn/>



Facebook



Twitter



Instagram