Vintage



VPMAXX Manual

Installation, Operation, Maintenance Instructions & Parts List

For Outdoor Use Only

Table of Contents

Safety	Safety Instructions	0
	Assembly	0
	Battery Installation	0
	Additional Safety Practices & Precautions	0
	Conversion Kit	0
	Liquid Propane Gas Connection	0
	Natural Gas Connection	0
Burners	To Light	0
	Match Lighting	0
Warranty	Warranty Registration	0
	Warranty Information	0
Appliance Cutout Dimensions		0
Wiring Diagram		0

MessagetotheProudOwner.....

Congratulations on the purchase of your high quality, high performance grill. Read this manual carefully to understand all the instructions about how to install, operate and maintain for optimum performance and longevity. Keep this manual in a safe place for future reference. For any assistance, contact us. Make sure to provide the Model Number and Serial Number of the grill. Thank you for buying our grill. We wish you years of cooking pleasure.

Safety Instructions

WARNING! Read this manual carefully and completely before using your Power Maxx burner to reduce risk of fire, burn hazard or other injury. Make sure all installation and service guidelines are followed.

Do not store or use gasoline or other flammable liquids or vapors *near this or any other appliance.*

Do not store unconnected LP cylinders in the vicinity of this or any other appliance.

FOR OUTDOOR USE ONLY!
If stored indoors, detach and leave any fuel cylinders outdoors.

Assembly

Remove all packing materials.
Ensure that the burners are positioned securely on their orifices.
Place grates in the proper location over burners.
Connect gas using proper gas regulator.

Battery Installation

Igniter module is located behind front panel.
Remove drip tray and unscrew round black cap.
Install new 9V battery into cap.
Screw cap onto igniter module, tightening completely.
Replace drip tray.

Additional Safety Practices & Precautions

Have an ABC Fire Extinguisher readily accessible. Never attempt to extinguish a grease fire with water or other liquids.

Keep electrical supply cords and fuel supply hoses away from heated surfaces.

Do not heat unopened food containers as they may explode.

Never store additional or empty fuel cylinders in the side burner cabinet or near the side burner. Do not store cylinders indoors or on their sides. Never use dented, rusty or damaged cylinders.

Do not use aluminum foil to cover cooking grates. This will alter combustion airflow and trap excessive heat in the control area leading to damaged knobs or igniter modules.

After the Power Maxx burner is installed by a professional technician be sure they show you where your gas supply shut-off valve is located. All gas lines must have a shut-off that is easily accessible. If you ever smell gas, check for leaks IMMEDIATELY. **Never check for gas leaks with an open flame.**

Never operate burner in a windy area. If windy conditions exist, install a suitable windbreak.

Damage caused by leaving operating burner unattended is not covered under the terms and conditions of the Vintage Warranty. Never leave open flame unattended.

Never use burner without drip pan in place. Make sure drip pan is properly and fully inserted. Failure to do so may allow hot grease or boil-overs to become a fire or explosion hazard.

Do not repair or replace any part of the Power Maxx burner unless specifically recommended by this manual. A qualified technician should perform all other necessary service.

Safety Practices & Precautions continued:

Gas Power Maxx burner are not designed/certified for and are therefore not to be installed in or on recreational vehicles, portable trailers, boats or any other mobile vehicle.

Children should never be left alone or unattended in an area where a Power Maxx burner is located. Install your side burner well away from areas where children play. Do not store items that may draw the interest of children in or around the side burner, island or masonry enclosure. **When in use and immediately after, areas of the Power Maxx burner are hot enough to cause severe burns!**

Avoid wearing loose-fitting, long sleeves or flammable garments when using the side burner. Never touch cooking grates, Power Maxx burner top or surrounding metal surfaces with your bare hands as these areas become extremely hot during use and could cause severe burns. Use an insulated glove or mitt when attempting to handle parts of the Power Maxx burner.

Never lean over or look directly over the cooking surface when attempting to light.

The Power Maxx burner cover must be completely removed before lighting and during operation.

Do not replace Power Maxx burner cover until the cooking surface has cooled down.

Never connect any unregulated gas supply to the side burner. **Supplied regulator must be used in order to validate Warranty.**

Burners

To light:

Remove Power Maxx burner cover.

Turn on gas supply to the Power Maxx burner.

Turn burner knob to “High” then push and hold the ignition button for 5 seconds. You should hear a rhythmic “clicking” sound. If you do not, turn all knobs to “Off”, check ignition battery and ensure the burner base and burner cap are properly positioned.

If burner does not light after 5 seconds, turn knobs to off and wait 5 minutes before retrying. This will prevent any flare-ups over cooking surface, which can result in injury.

Match lighting:

If ignition fails to light burners after several attempts or if the igniter battery dies and you do not have a ready replacement, burners may be carefully match-lit.

If match-lighting after a failed ignition attempt, wait 5 minutes before attempting to light with a match.

Make sure knobs are in “Off” position. Light a long-stemmed match and place over the burner. Keeping your face away from cooking surface, push and turn control knob to “High”. If burner does not light in 5 seconds turn knob to “Off” and wait 5 minutes before trying again.


Always wait 5 minutes before re-lighting a hot burner!

Note:

Improper lighting procedures can cause the flow control to activate, resulting in reduced heat output. If this is suspected, shut off all burner controls and cylinder valve. Wait 30 seconds, then very slowly re-open cylinder valve. Wait an additional 5 seconds before turning burner control knob and attempting to light.


Appliance Cut-out Dimensions

POWER MAXX	Cutout Dimensions		
	W	D	H
VPMAXX24	21 1/2"	22 1/2"	10 1/4"

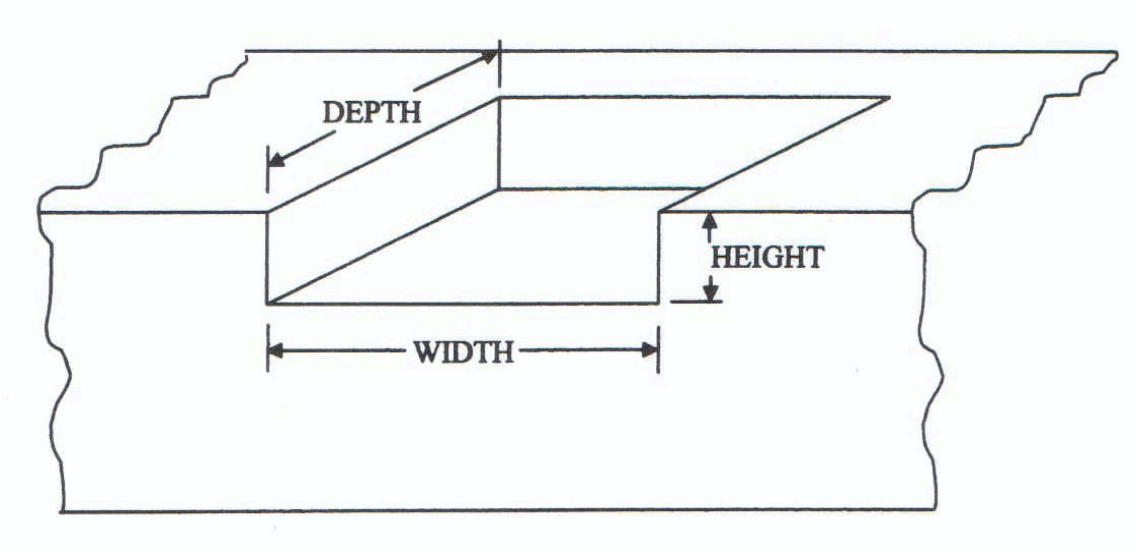


IMPORTANT: Please verify dimensions by measuring actual appliance from the box. Remember, measure twice and cut once!

Wiring Diagram

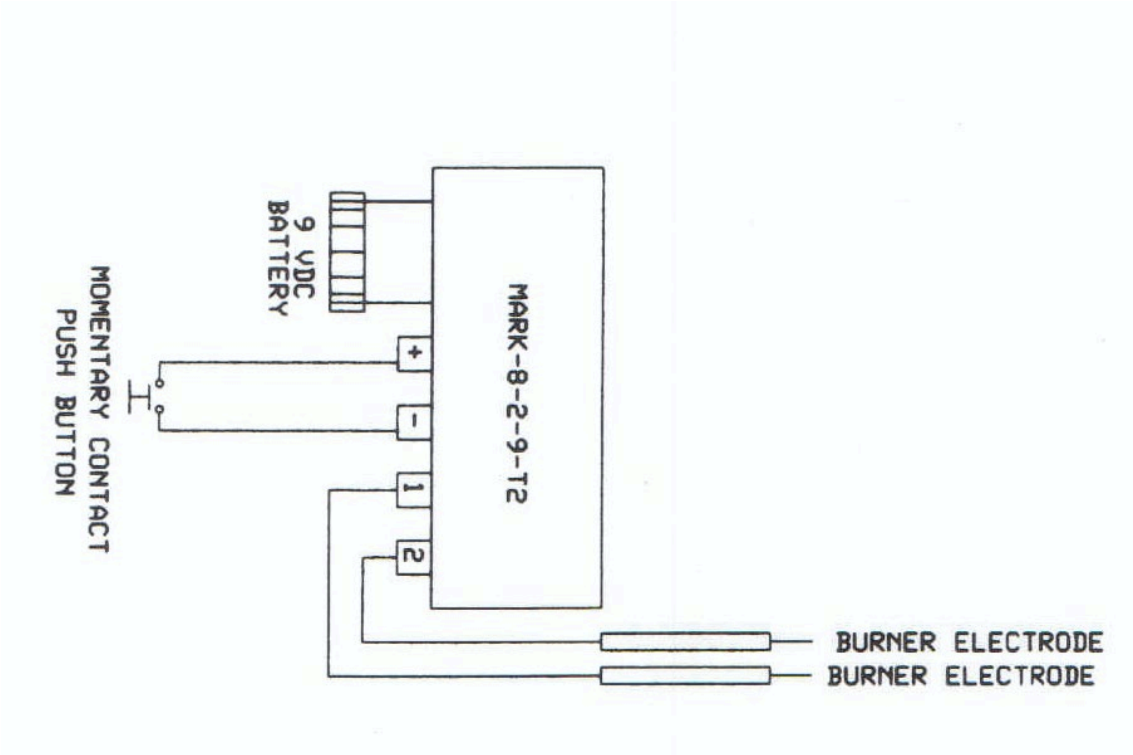

VPMAXX24 - Parts Breakdown

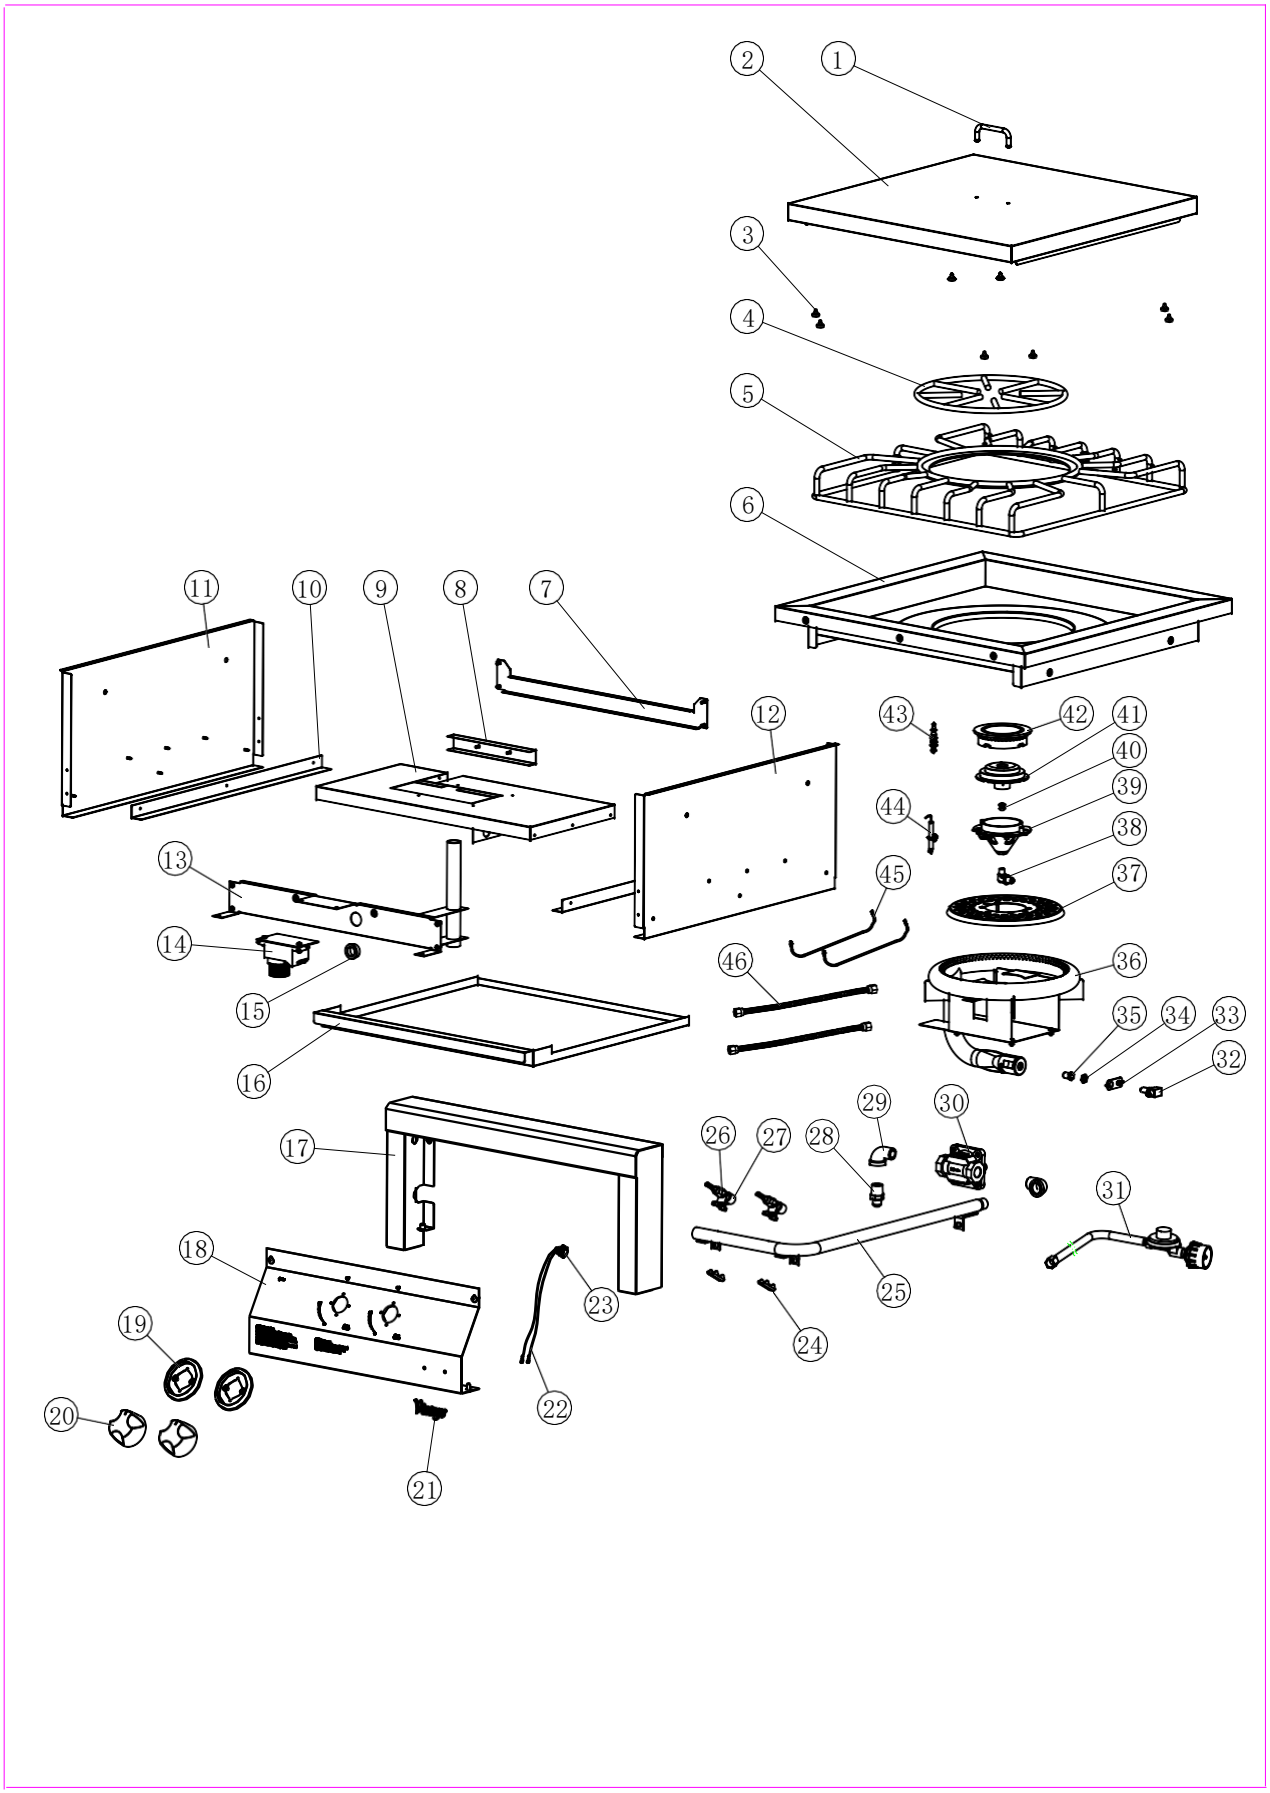

S/N	Part #	Components	Qty	
			LP	NG
1	VPMAXX24-01	Handle	1	1
2	VPMAXX24-02	Hood plate	1	1
3	VPMAXX24-03	Rubber block	8	8
4	VPMAXX24-04	Inside grate	1	1
5	VPMAXX24-05	Outside grate	1	1
6	VPMAXX24-06	Body assembly	1	1
7	VPMAXX24-07	Basin frame rear joint board	1	1
8	VPMAXX24-08	Fixing channel steel	1	1
9	VPMAXX24-09	Basin frame mid connection board	1	1
10	VPMAXX24-10	Drip tray guide	2	2
11	VPMAXX24-11	Basin frame left side panel	1	1
12	VPMAXX24-12	Basin frame right side panel	1	1
13	VPMAXX24-13	Basin frame front connection board weld seaming	1	1
14	VPMAXX24-14	Igniter	1	1
15	VPMAXX24-15	Conduct wire protective jacket	1	1
16	VPMAXX24-16	Drip tray	1	1
17	VPMAXX24-17	Front frame weld seaming	1	1
18	VPMAXX24-18	Control panel	1	1
19	VPMAXX24-19	Bezel	2	2
20	VPMAXX24-20	VBQ knob (new)	2	2
21	VPMAXX24-21	Logo	1	1
22	VPMAXX24-22	Igniter switch conduct wire	2	2
23	VPMAXX24-23	Igniter switch	1	1
24	VPMAXX24-24	Valve buckle	2	2
25	VPMAXX24-25	Airway tube welded assembly	1	1
26	VPMAXX24-26	Back burner valve assembly	2	2
27	VPMAXX24-27	Right angle joint	2	2
28	VPMAXX24-28	Inlet tube joint	1	1
29	VPMAXX24-29	1/2" Internal & External threaded elbow	2	2
30	VPMAXX24-30	Regulator (RV48)	1	1
31	VPMAXX24-31	LP Regulator	1	
32	VPMAXX24-32	Orifice right angle joint assembly	1	1
33	VPMAXX24-33	Orifice mounting plate	1	1
34	VPMAXX24-34	Orifice joint screw	1	1
35	VPMAXX24-35L	Tube burner orifice	1	
	VPMAXX24-35N	Tube burner orifice		1
36	VPMAXX24-36	Tube burner assembly	1	1
37	VPMAXX24-37	Burner base bracket	1	1
38	VPMAXX24-38	Right angle joint	1	1
39	VPMAXX24-39	Burner base	1	1
40	VPMAXX24-40L	Mid burner orifice	1	
	VPMAXX24-40N	Mid burner orifice		1
41	VPMAXX24-41	Fire lid base	1	1
42	VPMAXX24-42	Fire lid	1	1
43	VPMAXX24-43	Igniter pin	1	1
44	VPMAXX24-44	Tube burner igniter pin	1	1
45	VPMAXX24-45	Igniter wire 350mm	2	2
46	VPMAXX24-46	Ripple tube	2	2

VINTAGE GAS GRILL - OUTDOOR APPLIANCE
WARRANTY

(RESIDENTIAL USE ONLY)

LIMITED TWO-YEAR WARRANTY
Outdoor Gas Grills and all their component parts, except as detailed below "**" are warranted to be free from defective materials or workmanship when subjected to normal domestic use for a period of twenty-four (24) months from the date of original retail purchase. Vintage agrees to repair or replace, at its option, any part which fails or is found to be defective during the warranty period. **: Any painted or cosmetic items are warranted to be free of defective material or workmanship for a period of thirty days from the date of the original retail purchase, **ANY DEFECTS MUST BE REPORTED WITHIN THIRTY (30) DAYS OF THE ORIGINAL DATE OF THE RETAIL PURCHASE**. Vintage uses the latest and most up to date processes and materials to produce all the different items and parts on your Vintage product. There may however be slight variations noticed, due to inherent differences as well as differences in lighting, product locations and other factors. Failure to use the grill cover and proper maintenance may result in ineligibility for cosmetic part replacement.

LIMITED FIVE-YEAR WARRANTY
Infrared burners, stainless steel briquette trays and drip pans which fail due to defective materials or workmanship when subjected to normal domestic use and service, will be repaired or replaced, free of charge for the part itself, with the owner paying all other costs, including labor. Scratching, corrosion and discoloration due to improper use and care of the outdoor product is excluded from this warranty.

LIMITED LIFETIME WARRANTY
U-Burners, grates and any stainless steel body housings or parts (with the exception of those mentioned above) which rusts through due to defective materials or workmanship when subjected to normal domestic use during the lifetime of the grill of the original purchaser, will be repaired or replaced free of charge for the part itself, with the owner paying for all other costs. This warranty excludes surface scratches, discoloration and corrosion which may occur during regular use.

This warranty is only applicable to products purchased in the United States and Canada, and is only available to the original owner of the product and is not transferable. Product must be purchased in the country where service is requested. Manufacture requires reasonable proof of your date of purchase; therefore, you should retain your sales slip or invoice and return via mail the Product Registration information. If registration information is not available, the proof of purchase will be required. Owner shall be liable for proper installation, providing normal maintenance and care. Warranty shall not apply to damage resulting from abuse, natural disaster and improper operation and installation by anyone other than an authorized Vintage Corporation service agency or representative. If the product or one of its component parts contains a malfunction or defect during the warranty period, after reasonable number of attempts by the warrantor to remedy the defects or malfunctions, the owner is entitled to either a refund or replacement of the product or component part or parts. Warrantor's liability on any claim of any kind, with respect to the goods covered hereunder, shall in no case exceed the cost of the goods or part thereof which gives rise to the claim.

Specifications are subject to change without notice.
For parts & service please call 1-866-755-7981

EXCLUSIONS & LIMITATIONS:

- Warranty only applies to the original purchases and may not be transferred.
- Warranty shall not apply and Vintage is not responsible for damage resulting from abuse, alteration or tampering with the grill, misuse, flare-up fires, improper installation and accidents.
- Installation, start-up damages or problems resulting from improper installation or use.
- Limited to the replacement of defective parts with the owner responsible for all other costs including labor.
- Service, damage or repair by an unauthorized service provider.
- Display models are generally sold "as is." If you have purchased a display model, any missing components will be replaced at consumer's expense; major handling damage to manifold, valve and ignition system will be serviced at consumer's expense. All other standard warranty will remain in effect.
- For items deemed to be "customer replaceable" (such as light bulbs), no labor will be covered.
- If a grill requires service and the home is 50 miles or more away from the nearest servicer, an additional travel fee may apply.


Vintage