
DREO | Air Purifier
Macro AP414

USER MANUAL

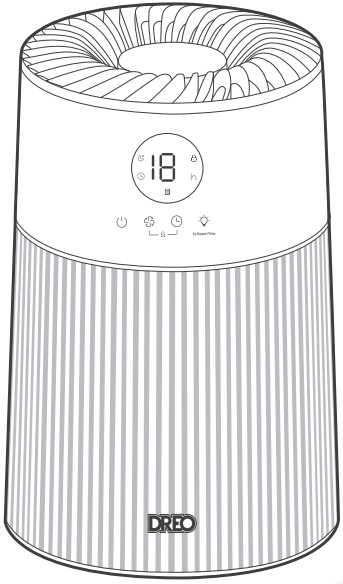

”

Thanks for Choosing DREO!

Your support means the world to us. We hope you enjoy our product as much as we did creating it.

CONTENT

01
IMPORTANT SAFETY INSTRUCTIONS
1-3

02
KNOWING YOUR APPLIANCE
4

03
USING YOUR APPLIANCE
5-8

04
CLEANING AND MAINTENANCE
9-10

05
TROUBLESHOOTING
11-13

06
DREO CUSTOMER CARE
14-16

IMPORTANT SAFETY INSTRUCTIONS

01

READ ALL CAUTIONARY MARKINGS ON THE APPLIANCE AND SAFETY INSTRUCTIONS IN THE USER MANUAL BEFORE USE.





WARNING:
In order to avoid overheating, do not cover the appliance.

Do not use the appliance near flammables and combustibles.

General Safety

1. Use the appliance as described in the user manual only. Any other use not recommended in the user manual may cause fire, electrical shock, or personal injury.
2. Children shall not play with the appliance. Cleaning and maintenance shall not be performed by children without supervision.
3. This appliance can be used by children aged above 8 years and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of this appliance in a safe way and understand the hazards involved.

Location Safety

1. Always place the appliance on a level, stable and dry surface.
2. Keep the appliance away from heat sources to avoid fire hazards.
3. Do not place the appliance in excessively humid environments.
4. Do not place the appliance directly on or against soft furnishings such as beddings or curtains. Doing so could cause blockage of the openings.
5. Do not use the appliance outdoors, or in toxic or explosive environments, or where flammable or combustible gases are present.
6. Allow at least 15'' /38 cm of clearance on all sides of the appliance.

Operation Safety

1. Do not immerse in water and any other liquids.
2. Do not plug in or operate the appliance with wet hands.
3. Do not sit, stand or place heavy objects on the appliance.
4. Do not insert your fingers, pencil and any other objects into any openings.
5. Do not attempt to repair or modify any electrical or mechanical functions on the appliance. Doing so will void your warranty. All servicing should be performed by qualified personnel only.

Electricity Safety

1. Make sure that the voltage of your electricity supply is the same as that indicated on the appliance.
2. Always unplug before cleaning or leaving the appliance unused for a long period of time. Keep your hands dry when plugging/unplugging.
3. Do not operate this appliance with a damaged cord or plug. Discard this appliance or return to an authorized service facility for examination and/or repair.
4. Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Keep the cord out of areas where people walk often. Place the cord where it will not be tripped over.
5. To avoid fire or shock hazard, plug the appliance directlyinto a wall outlet.
6. **WARNING:** To Reduce The Risk Of Fire, Electric Shock Or Injury To Persons, Do Not Use Replacement Parts That Have Not Been Recommended By The Manufacturer (e.g. Parts Made At Home Using A 3D Printer).
7. **WARNING:** To Reduce The Risk Of Fire Or Electric Shock, Do Not Use This Fan With Any Solid-State Speed Control Device.
8. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way, If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

FOR HOUSEHOLD USE ONLY READ AND SAVE THESE INSTRUCTIONS

Gentle Reminder:



Check the appliance regularly and refer to TROUBLESHOOTING or contact our customer support if it shows any of the following signs:

- Power cord or plug is damaged.
- Loud noise, unusual smell or excessive heat.


Specifications


Model No.	DR-HAP004
Input	120V~60Hz 20W
Weight	4.12lb / 1.87kg

KNOWING YOUR APPLIANCE

02

Package Contents

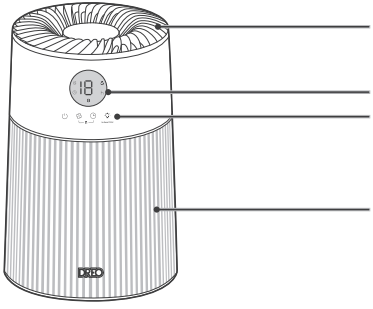

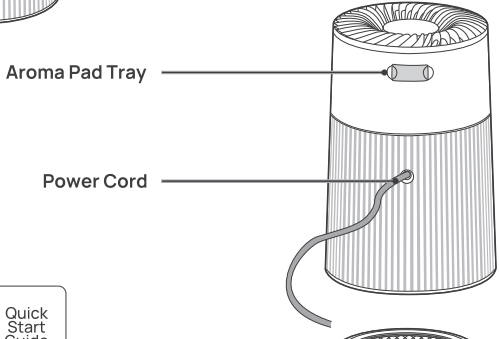



User Manual

Quick Start Guide



Aroma Pad X 2

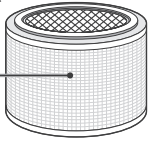




USING YOUR APPLIANCE

03


Before Use

❶

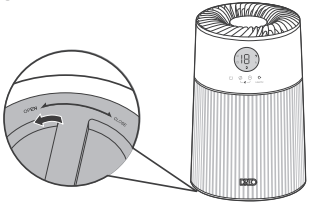


Put it upside down. Rotate the bottom cover to unlock and take the cover off.

❷

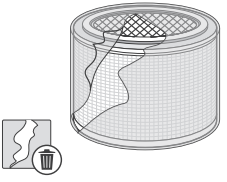


Remove the filter from its packaging then put the filter back.

❸

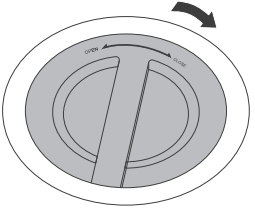


Rotate the bottom cover clockwise to lock back in place. (You'll hear a "click".)

❹

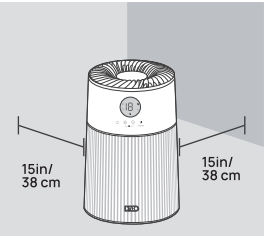

Return to upright position on a flat, stable, and clear surface.

Control Panel

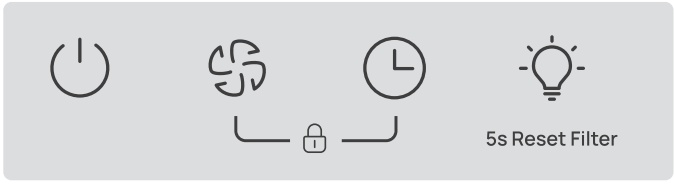

Power Button
- Turn power on/off.

Purifying Speed Button
- Adjust purifying speed across levels 1- 2 - 3 - 4 - Sleep.


Timer Button
- Select to set a timer (0H-12H)
  Note: The timer hour is shown on the LED display.

RGB Light Button / Filter Reset (5s)
- Touch to turn RGB light on, light color will start cycling.
- Touch again to lock a color.
- Touch a third time to turn off.
- Long press for 5 seconds to reset the filter change reminder.

Child Lock
- Long press and for 3 seconds to activate/deactivate the Child Lock function, when activated, the on the display will light up, and all the buttons on the appliance will be locked.

Note: Long press and for 10 seconds to purify at the highest power setting (The LED display will show "H").

LED Display

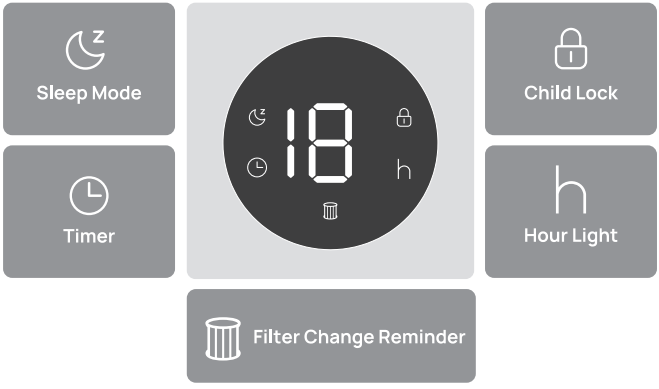

Additional Features

Child Lock

- Long press and for 3 seconds to activate/deactivate the Child Lock function.
- When activated, the on the display will light up, and all the buttons on the appliance will be locked.

On/Off Timer


When the appliance is ON/OFF, touch the timer button repeatedly to set a timer (from 0H to 12H) for the appliance to turn ON/OFF.

Memory

If the appliance is turned OFF or disconnected from power, it will operate under the previous settings (except the Child Lock function/timer setting) when it is turned ON again.

AUTO

Display turns off after 1 minute.
Wake up the display with any button.

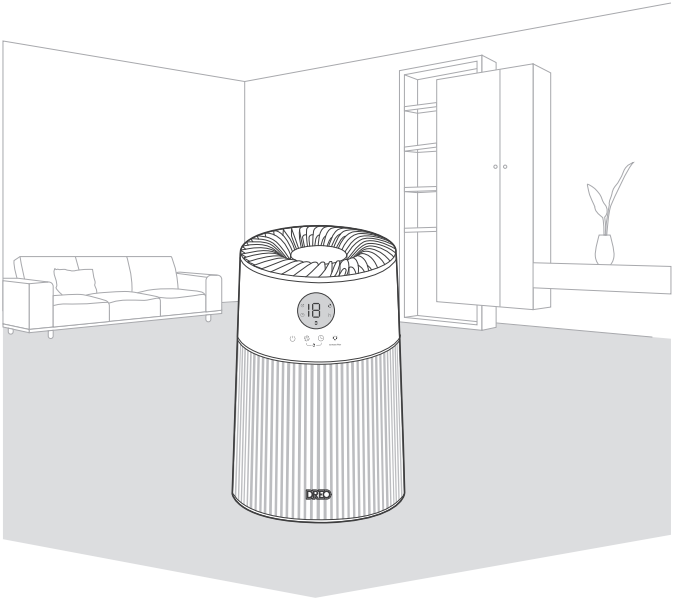


1. Keep the doors and windows closed when the appliance is on.
2. Do not block the air openings and keep away from curtains or walls.
3. Maintain and replace the filter on a regular basis for maximum efficiency.

CLEANING AND MAINTENANCE 04

Replacing the Filter


The filter life is measured by the appliance's algorithm which is based on the working mode, fan speed, run time, and indoor air quality. It's recommended to replace the filter every 6-8 months or when the filter change reminder alerts.

❶

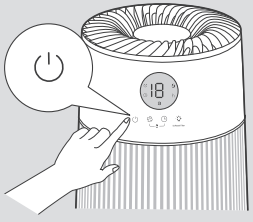


The Filter Change Reminder will flash when the filter needs to be replaced. Turn off and unplug the appliance.

❷

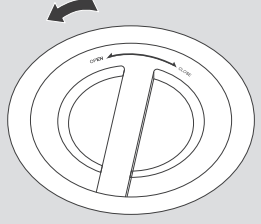


Rotate the bottom cover to unlock then take the cover off.

❸

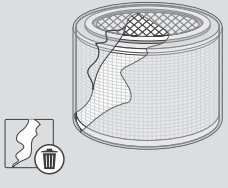


Remove the plastic packaging.

❹

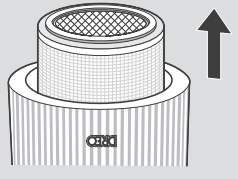


Remove the old filter then put the new filter in place.

❺

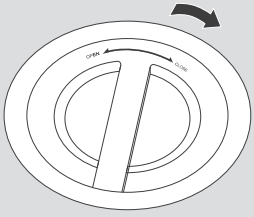

Rotate the bottom cover clockwise to lock back in place. (You'll hear a "click".)


❻

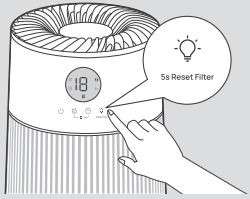

Return to upright position and long press the for 5 seconds until it beeps, to reset the filter change reminder.


Cleaning the Inside & Outside

❶

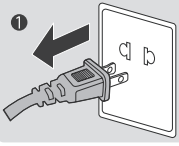

Unplug the appliance before any cleaning and maintenance.

❷

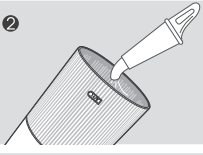

Remove the filter and clean the inside with a dust vacuum.


❸



Wipe clean the housing with a dry, soft, non-abrasive cloth.

Cleaning the Filter

- For optimal use, the outer pre-filter can be cleaned with a soft, dry brush once every 2-4 weeks.
- Keep away from water and humid areas. Moisture will allow mold to grow.

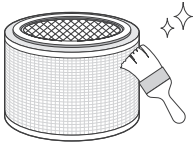

TROUBLESHOOTING 05

Related to Filter

Where can I buy a new filter?

Please purchase directly from the DREO official website at www.dreo.com or through the DREO app.

I changed the filter, but the Filter Change Reminder is still on.

The Filter Change Reminder will not automatically reset. Please long press the for 5s to reset the reminder, the indicator will turn off after reset.

The Filter Change Reminder has not turned on for a long period of time.

There are several factors that can impact the filter life, including the indoor air quality level, length of operation and particle density in the air. If your room has a better air quality level and/or you don't use your appliance often, the reminder will take longer to light up.

Related to Use

Why is my appliance not working?

Check if the power is connected, the power cord is damaged, or the electrical outlet is powered.

The airflow from my appliance is too weak.

- Make sure that there is enough space around the appliance.
- Check if the filter packaging has been removed.
- Replace the filter if the filter is clogged and overloaded.

My appliance doesn't improve the air quality.

- Check if the filter packaging has been removed.
- Use within 155 ft² areas for optimal air refresh rate (4.8X air changes per hour).
- Make sure the windows are closed as polluted air may continue coming in from outside of the windows.
- The overloaded filter will make the fan work harder to pass the air through. Consider replacing the filter if it is clogged.
- Do not place in crowded areas and corners.
- Check if air outlet and inlet are obstructed.

Why is my appliance making an unusual noise?

- Make sure the appliance is operating on a flat, stable surface.
- Check if the filter is placed properly or the filter packaging has been removed.
- If the unusual noise still exists, there may be external objects blocking the air openings. Please contact our customer support.

Why is my appliance making a loud noise?

- Switch the appliance to sleep mode or lower purifying speeds.

Why does my appliance produce an unpleasant smell?

- During the initial few days, new appliances produce a plastic smell which is normal and will dissipate eventually.
- Do not add essential oils or diffusers into the appliance or use in a excessively humid area. Humidity will cause mold to grow.
- If the filter has absorbed pollutants to its maximum capacity, then the smell may come from the dirty filter. Please replace the filter when necessary.

If your problem is not listed or still persists, contact our Customer Support **(see page 16).**

DREO CUSTOMER CARE 06

Default 12-Month Warranty

This appliance is covered by DREO warranty for 12 months from the date of its original purchase.

The warranty will not apply in cases of:

1. Accident, misuse, or repairs performed by unauthorized personnel.
2. Any unit that has been tampered with or used for commercial purposes.
3. Normal wear and tear of wearable parts.
4. Use of force, damage caused by external influences.
5. Damage caused by non-observance of the User Manual, e.g. connection to an unsuitable mains supply or noncompliance with the instructions.
6. Partially or completely dismantled appliances.
7. Defects caused by or resulting from damages from shipping or from repairs, service, or alteration to the product or any of its parts that have been performed by a repair person not authorized by DREO.

We can only provide after-sales service for products that are sold by DREO or DREO authorized retailers and distributors. If you have purchased the appliance from a different place, please contact your seller for return and warranty issues.

FCC Statement

This device complies with Part 15 of the FCC Rules.Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
Please note that changes or modifications of this product is not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.
If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.

Model No.: DR-HAP004
Rev_1.1_EN

We're Here to Help!

(888) 290-1688 (Mon - Fri, 9:00 am-5:00 pm PST/PDT)
www.dreo.com
support@dreo.com
Hesung Innovation Corp
377 Valley Rd, Unit #2686, Clinton, NJ07013 U.S.A.

MADE IN CHINA

www.dreo.com

Looking for help?

Contact us to get expert support.

support@dreo.com (888) 290-1688 www.dreo.com

Mon - Fri, 9:00 am-5:00 pm PST/PDT