用戶手冊

東芝家庭雪櫃

僅供家居使用

GR-RM352WI-PMA(**)



TOSHIBA

目錄

1. 安全警告..... 1

2. 正確使用雪櫃..... 9

3. 產品結構和功能..... 12

4. 雪櫃的維護和保養..... 18

5. 故障排除..... 21

6. 產品廢棄處理..... 22

親愛的使用者:

- 非常感謝你購買此東芝產品。
- 敬請閱讀本用戶手冊，並於使用前完全熟悉產品，以便安全正確使用本產品。
- 請將本用戶手冊存放在容易取得的地方，以供將來參考。
- 確保已收到保用證。

1. 安全警告

安裝前請先閱讀安全注意事項

為防止使用者或其他人員的死亡或受傷以及財產損壞，必須遵循以下指示。由於忽略指示而導致的不正確操作可能會導致傷害或損壞。

1.1 警告

⚠ 警告



警告：火災 / 易燃風險

- 警告：火災 / 災難和爆炸風險
  本電器的製冷劑是易燃品，注意安裝和運輸過程中請勿損壞冷卻管。如果發生氣體洩漏，請聯絡轉銷商或當地服務代理商，並應始終採取以下預防措施：
  1. 打開窗戶，確保通風良好。
  2. 附近嚴禁明火且不得使用其他電器。

- 本產品供家居及類似環境使用，如：
  – 店舖內的員工廚房區域、辦公室及其他工作環境；
  – 農舍和供客戶於酒店、汽車旅館及其他住宅類型環境；
  – 床及早餐類型環境；
  – 餐飲及類似非零售應用情境；

- 警告：火災和觸電風險
  若電綫損壞時，必須由製造商、其服務代理商或具備相關資格的人員更改，以避免發生危險。

- 清潔本電器或長時間不使用本電器時，請從插座拔除電源插頭。

- 請勿使用延長線或未接地的（雙插針）適配器。

- 警告：保持電器外殼或內建結構中的通風口暢通無阻。

- 警告 : 請勿使用裝置或其他方式來加速除霜過程 , 除非屬製造商所推薦者。
- 警告: 請勿損壞製冷劑電路。
- 警告 : 請勿於本電器的食品儲藏室內使用電器 , 除非為製造商推薦的類型。
- 警告: 由於雪櫃使用易燃環戊烷發泡材料和製冷劑，因此請根據當地法規棄置雪櫃。
- 警告 : 擺放電器時 , 請確保電源線並無夾住或損壞。
- 警告: 請勿在電器後方放置多個攜帶式插座或攜帶式電源供應器。
- 警告 : 請僅注入飲用水。請勿注入熱水或飲用水以外的液體 (例如果汁) 。
- 警告: 爲避免因雪櫃放置不穩而造成危險，必須按照説明書內容進行固定安放。
- 危險 : 兒童被困的風險。棄置舊雪櫃或冰箱之前 :
  – 移除櫃門。
  – 保留隔板，以免兒童輕易爬入。
- 嘗試安裝附件之前 , 必須先斷開雪櫃的電源。
- 雪櫃使用的製冷劑和環戊烷發泡膠材料易燃。因此，雪櫃報廢後 , 應遠離火源 , 由具有相應資格的專門回收公司進行回收 , 不得以焚化處置 , 以免對環境造成破壞或其他危害。

- 監督或指導之下，身體感到不適、精神狀態不佳或缺乏相關經驗與知識的人士（包括兒童），均不適宜使用本產品。

- 請照顧兒童，確保他們不會把玩電器。

- 8 歲及以上兒童、身體、感官或心智弱能人士，或缺乏經驗及知識人士，需在了解相關風險，並得到監督或指引有關本產品的安全使用方法之下方可使用。兒童不得把玩本產品。兒童不得在沒有監督的情況下清潔及維護產品。

- 請勿於交通工具（如船舶等）使用本電器。

- 如果出現噪音、異味或冒煙，請立即拔除插頭電源，並聯絡經銷商或當地維修代理。

- 請勿將手放在本電器下面或後面，以防受傷。

- 請將包裝材料和其他部件放在兒童接觸不到的地方，以防窒息。

- 為避免污染食物，請遵守以下說明：
  - 長時間開門會導致本電器隔間內的溫度顯著升高。
  - 定期清潔可能與食物接觸的表面以和可觸及的排水系統。
  - 如果水箱 48 小時未使用，則請沖洗清潔水箱；如果 5 日未取水，則請沖洗與供水相連的供水系統。（備註 1）
  - 將生肉和魚存放在合適的容器中，然後再放入雪櫃冷藏，以免接觸或滴落到其他食物上。
  - 二星食品冷藏格適用於儲存預先冷凍食品；儲存或製作雪糕；以及製冰。（備註 2）
  - 一星、二星和三星隔間不適合冷藏新鮮食物。（備註 3）
  - 適用沒有四星隔間的電器：本製冷電器不適合冷藏食品。（備註 4）
  - 如果製冷電器長期處於空置狀態，則應關閉、除霜、清潔、待乾並開門，以防本電器發霉。

- 備註 1、2、3、4：請根據你的產品隔間類型確認是否適用。
- 獨立式電器 : 本電器不能作嵌入式電器使用。
- LED 燈的任何更換或維護均應由製造商、其服務代理或類似的合資格人員進行。
- 請勿將含有易燃推進劑的噴霧罐等爆炸性物質存放在本雪櫃中。

1.2 安全警示符號代表意義



禁止符號

此符號表示禁止的事項。
不遵守指示可能會導致產品損壞或者危及使用者人身安全。



必須遵守事項符號

此符號表示必須遵守的事項。
標有此符號的行為必須嚴格按照要求操作執行；否則可能會導致產品損壞或者危及使用者人身安全。




注意符號


此符號表示需注意的事項。
標有此符號的行為需要特別注意。如果不加以防範，可能導致輕度或者中度的傷害，或造成產品受損。

本說明書包含許多重要的安全資訊，請務必遵守所有的安全資訊。

1.3 用電有關的警告事項

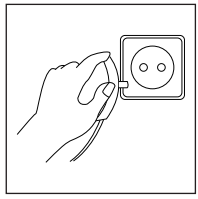


- 拔除雪櫃的電源插頭時，切勿拉扯電源線。務必緊握插頭，從插座中直接拔出。
- 為保障安全使用，任何時候請不要損壞電源線，當電源線出現破損或插頭出現磨損時，切勿使用。

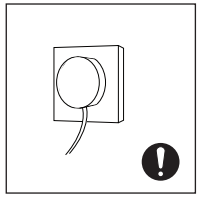

- 手濕時請勿觸摸電源插頭，以防觸電。
- 請使用專用電源插座，該插座不應與其他電器共用。電源線插頭應保持與插座牢固接觸，否則可能導致火災。




- 請務必保證插座的接地極應有可靠的接地線。
- 請尋求專業人員幫助以檢查插座是否有可靠的接地線。
- 最終使用者有責任將未接地插座更換為接地插座。

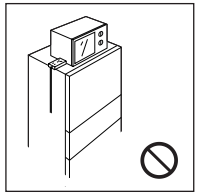


- 當煤氣等易燃氣體洩漏時，應先關閉氣體洩漏的閥門，再打開門窗。此時不要拔出電器件的插頭，以免火花引發火災。
- 請勿於本電器頂部使用電器，除非為製造商推薦的類型。

1.4 使用時警告事項

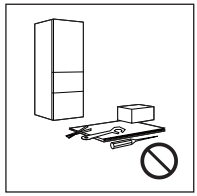


- 嚴禁私自拆卸、改造本雪櫃、禁止損壞製冷管路，維修雪櫃必須由專業人員進行。
- 如果電源軟線損壞，為了避免危險，必須由銷售商或其維修部相關的專業人員更換。

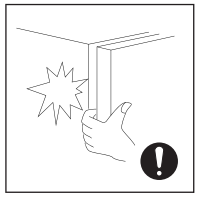

- 雪櫃門之間以及雪櫃門與機身之間的縫隙很小，注意請勿將手伸入這些地方，以免擠傷手指。開關雪櫃門時，用力不要過大，以免物品掉落。



- 請勿讓兒童進入或攀爬雪櫃，以免將兒童密封在雪櫃產品內導致窒息或電器產品倒下，傷及兒童。

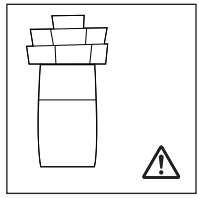


- 請不要將重物或危險物品（瓶子、餐具或含有液體的物品）放置在雪櫃頂部。
- 停電或清潔時，應拔下電源插頭，至少相隔五分鐘，才能再次接通電源，以防因連續啟動而損壞壓縮機。

1.5 放置物品警告事項



- 請勿將易燃、易爆、易揮發和強腐蝕性物品放入電器，以免導致產品損壞或火災等意外。

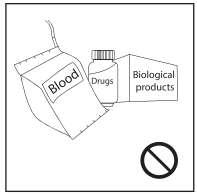

- 請不要在雪櫃附近放置或使用可燃性物品，以免發生火災。
- 本雪櫃為家用雪櫃，家用雪櫃只適用於儲藏食品，不能用於其他用途，如儲藏血液、藥品和生物製品等。



- 請不要將瓶裝或密閉容器內的流體物品如樽裝啤酒、飲料等放入冷凍室，以免凍結爆裂導致其他損失。

1.6 能源相關警告

- 如果製冷電器長期放置在低於其設計溫度範圍的低溫一端，製冷電器可能無法穩定運作（可能會出現內容物解凍或冷凍食品格溫度過高的情況）。
- 事實上，碳酸飲料不應存放在食品冷凍室或冷藏櫃中，亦不應存放在低溫冷藏室或低溫冷藏櫃中，有些產品如冰水亦不應過冷飲用。
- 需要注意，任何種類的食品，特別是在食品冷凍室和冷凍食品儲藏室或儲藏櫃中的商業急凍食品，都不能超過食品製造商建議的儲藏時間。
- 為防止冷凍食品在製冷本電器解凍時溫度過度升高而採取的必要預防措施，例如用多層報紙包裹冷凍食品。
- 手動解凍、維護或清潔過程中，冷凍食品的溫度升高可能會縮短儲存壽命。
- 對於裝有鎖和鑰匙的門或蓋，必須將鑰匙放在兒童拿不到的地方，並且不能放在製冷本電器附近，以防止兒童被反鎖在裡面。

1.7 廢棄相關警告




- 雪櫃使用的製冷劑和環戊烷發泡膠材料易燃。因此，雪櫃報廢後，應遠離火源，由具有相應資格的專門回收公司進行回收，不得以焚化處置，以免對環境造成破壞或其他危害。





- 本雪櫃廢棄不用時，請將本雪櫃門卸掉，並拆下門封條及擱物架，將門與隔板放到合適的位置，以免兒童進入玩耍，發生意外。


2. 正確使用雪櫃


2.1 放置

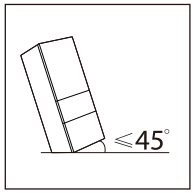

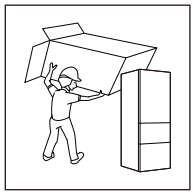

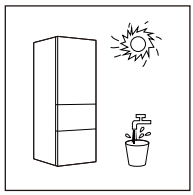

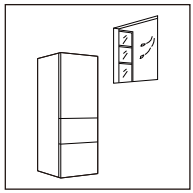

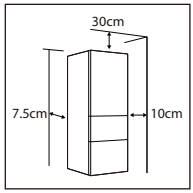

- 移動雪櫃前，請將雪櫃內的所有物品取出，用膠帶固定玻璃隔板、蔬菜架、冷凍室抽屜等，並擰緊調平腳；關閉雪櫃門並用膠帶密封。移動過程中，本電器不得倒置或水平放置，亦不得振動；移動過程中的傾斜度不得超過 45°。

- 使用前，請先清除所有包裝材料，包括雪櫃內的按鈕墊、泡沫墊和膠帶；以及撕掉雪櫃門和機身上的保護膜。遠離熱源，避免陽光直射。請勿將雪櫃放在潮濕或有水的地方，以防生鏽或絕緣效果降低。

- 請勿對雪櫃進行噴水或沖洗；請勿將雪櫃放置在容易被水濺到的潮濕地方，以免影響雪櫃的電力絕緣屬性。

- 雪櫃應放置在室內通風良好的地方；地面應平整、堅固（如不穩定，可左右旋轉調整滾輪以放平）。

- 雪櫃頂部空間應大於30cm，雪櫃應靠墻放置，兩側自由距離大於10cm，以利於散熱，電器背面宜靠墻放置，自由距離不超過 7.5 厘米，靠近墻壁時注意請勿損壞電源線。


安裝前的注意事項：
嘗試安裝或調整配件之前，必須保證雪櫃沒有接通電源。請做好防護，以免造成人身傷亡。

2.2 調平腳

1. 操作前的注意事項：
操作附件之前，應確保雪櫃與電源斷開連接。

2. 調平腳示意圖：
調整水平調節腳之前，應採取預防措施，以防止任何人身傷害。


3. 調整步驟：
a. 順時針旋轉支腳，升起雪櫃；
b. 逆時針旋轉支腳，放下雪櫃；
c. 根據上述步驟將左右腳調整到水平位置。

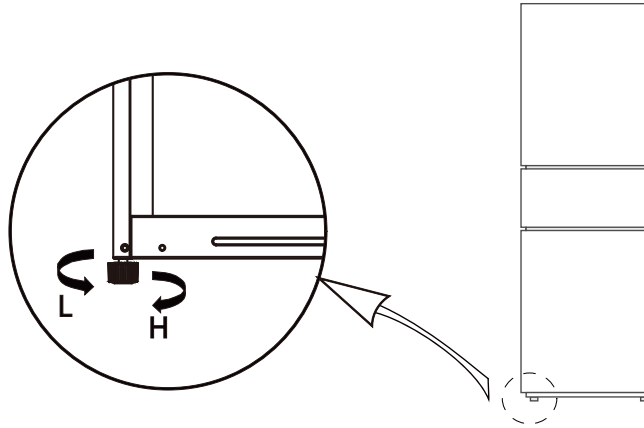


（上圖僅供參考。實際配置以購買實物或銷售商聲明為準）


2.3 燈部品更換

LED 燈的任何更換或維護均應由製造商、其服務代理或類似的合資格人員進行。



2.4 啟動

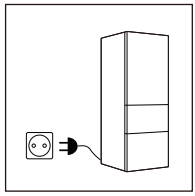

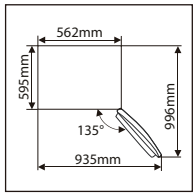


- 雪櫃首次啟動請靜置半小時後再插上電源。
- 在裝入新鮮或冷凍食品前，先讓雪櫃運作 2 至 3 小時；夏季環境溫度較高，應先讓雪櫃充分運作 4 小時以上。
- 為保障開門順暢及抽屜等取出方便，請留出足夠的空間。

2.5 節約能源小貼士

- 本電器應放置在房間最涼爽的地方，遠離發熱本電器或暖氣管道，避免陽光直射。
- 將熱的食物冷卻至室溫後再放入本電器中。本電器超載會迫使壓縮機運作更長時間。冷凍太慢的食物可能會降低品質或變質。
- 將食品放入本電器之前，務必妥善包裝食品並擦乾容器。這樣可以減少本電器內部結霜。
- 電器儲藏箱內不得鋪設鋁箔、蠟紙或紙巾。襯墊會影響冷空氣的流通，從而降低本電器的效率。
- 整理食物並貼上標籤，以減少開門並更易尋找。盡可能一次過取走所需的物品，並盡快關門。

3. 產品結構和功能

3.1 關鍵部件

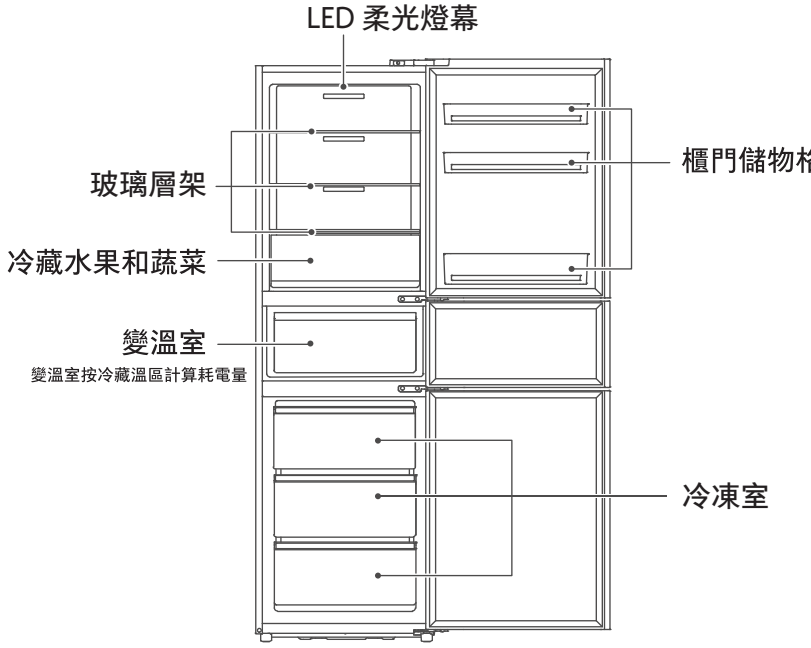

（上圖僅供參考。實際配置以購買實物或銷售商聲明為準）

冷藏室

- 冷藏室適合儲存各種水果、蔬菜、飲料和其他短期食用的食物，建議儲存時間為 3 日至 5 日。
- 熟食冷卻到室溫之前不得放入冷藏室。
- 建議將食物密封後再放入雪櫃。
- 玻璃層架可上下調節，以獲得合理的儲存空間，方便使用。


冷凍室

- 低溫冷凍室可以長時間保持食物新鮮，主要用於儲存冷凍食品和製冰。
- 冷凍室適用於儲存肉類、魚類、飯糰和其他短期內不食用的食物。
- 大塊肉類最好分成小塊，以方便使用。務請注意，食品應在保質期內食用完畢。

  按照上圖的位置擺放抽屜、食品盒、玻璃架等最具能源效益。

註：初始製冷後的運作期間儲存過多食物。儲存的食物不得堵塞出氣口；否則亦會對冷凍效果產生不利影響。

3.2 功能

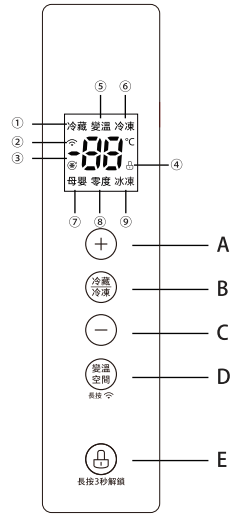

以上圖片僅供參考。實際配置以購買實物或銷售商聲明為準

1. 顯示螢幕

① 冷藏圖標
② 無線網絡圖標
③ 溫度顯示區域
④ 鎖定 / 解鎖圖標
⑤ 變溫圖標
⑥ 冷凍圖標（冷凍室）
⑦ 母嬰圖標（變溫室）
⑧ 零度圖標（變溫室）
⑨ 冰凍圖標（變溫室）

2. 按鈕操作

A 溫度上升按鈕
B 溫度選擇按鈕
C 溫度下降按鈕
D 變溫室選擇按鈕
E 鎖定 / 解鎖按鈕

3. 操作說明

1) 首次通電

雪櫃初次通電後，顯示螢幕會亮著。雪櫃預設的設置溫度為冷藏室 5℃，急凍室 -20℃，變溫室母嬰水平。

2) 鎖定 / 解鎖

在鎖定狀態下，持續按住 長按3秒解鎖 按鈕 3 秒鐘，進入非鎖定狀態。解鎖蜂鳴聲音響起。



按下 3 秒 → 進入解鎖狀態

在解鎖狀態下，按住 長按3秒解鎖 按鈕 3 秒鐘，進入鎖定狀態。鎖定蜂鳴聲音響起。



按下 3 秒 → 進入鎖定狀態

- 除了報警聲解除操作在鎖定狀態下可進行操作外，以下所有操作均須在解鎖狀態下進行。

3) 冷藏 / 冷凍 / 變溫溫度設定

冷藏室 2℃~8℃	解鎖後，按 冷藏冷凍 鍵，冷藏圖標顯示，可按 − 或 + 觸控按鍵調節冷藏室溫度。可設定溫度範圍為 2℃ 至 8℃；鎖定後設定生效。
冷凍室 -24℃~-16℃	解鎖後，按 冷藏冷凍 鍵，冷凍圖標顯示，可按 − 或 + 觸摸按鈕調節急凍室的溫度。可設定溫度範圍為 -24℃ 至 -16℃；鎖定後設定生效。
變溫室	解鎖後，按 變溫空間 長按 按鈕。每按一次，檔位改變一級，依次為：母嬰 → 零度 → 冰凍 → 關閉 → 母嬰 ... 鎖定後設定生效。三個檔位圖標全部不顯示代表變溫室關閉。

4) 冷藏關閉 / 打開

- 當選擇冷藏室，冷藏開啟狀態時，長按 冷藏冷凍 三秒鐘，直到聽到三聲蜂鳴聲，進入冷藏關閉狀態。螢幕顯示 “--” 。
- 當選擇冷藏室，冷藏關閉狀態時，長按 冷藏冷凍 三秒鐘，直到聽到三聲蜂鳴聲，退出冷藏關閉狀態。冷藏室開啟後預設設定溫度為 5℃，進入正常運作模式。

5) 模式設定

- 當間室選擇為冷藏室時，按 ⊖ 鍵使冷藏溫度減至 2℃ 級別，再下調一級則設定快凍冷凍模式。
  按下 ⊕ 修改冷藏設定溫度則退出快凍冷凍模式。
- 當間室選擇為冷凍室時，按 ⊖ 鍵使冷凍溫度減至 -24℃ 級別，再下調一級則設定急凍模式。
  按 ⊕ 鍵修改冷凍設定溫度則退出急凍模式。

6) 雪櫃開門提示和開門警報

- 當冷藏室打開時無開門提示音，可使用組合鍵開啟此開門提示功能。同時按住 ⊖ + ⊕ 3 秒鐘，可開啟開門瞬間的提示音。出廠預設關閉開門提示音。
- 若冷藏室開門時間持續 120 秒，則蜂鳴器報警連續報警「嗶」聲三下。再間隔一 分鐘未關 門，連續報警「嗶」聲四下，以此類推。每分鐘增加報警聲一下，直到連續報警「嗶」聲三十下後，保持直至冷藏室門關閉。
- 開門報警時，按任何按鍵可取消蜂鳴器報警。

7) 網絡設定

解鎖後，按住 變溫 空間 長按 按鈕 3 秒鐘以連接網絡。

Wi-Fi 圖示閃爍表示，進入網絡連接狀態。如果 10 秒鐘內未成功配置，Wi-Fi 圖標停止閃爍，則退出無線網絡連接。

連線圖示顯示狀態：

等待連接時，Wi-Fi 圖示會一直緩慢閃爍；

連接時，Wi-Fi 圖示會快速閃爍；

連接成功後，Wi-Fi 圖示將保持亮起。

8) 斷電記憶功能

雪櫃斷電後，重新接電仍按斷電前的設定狀態進行工作。

9) 故障提示


當顯示螢幕出現以下故障時則代表雪櫃出現故障。部分故障下狀態雪櫃仍能夠製冷，但應盡快聯絡維修人員以達致雪櫃優化運作。

故障代碼	故障描述	故障代碼	故障描述
E1	冷藏室溫度感應器故障	E5	冷凍和除霜感應器故障
E2	冷凍室溫度感應器故障	E6	通訊故障
E3	變溫室感應器故障	E7	環境溫度感應器故障

4. 雪櫃的維護和保養

4.1 產品整體清潔

- 請按時清理雪櫃背後及周圍的灰塵，以提高散熱效果，同時利於節能。
- 定期檢查門封條，確保沒有雜物。用蘸有肥皂水或稀釋後的清潔劑的軟布清潔門封條。
- 雪櫃內部應經常清潔以免產生異味。
- 清潔雪櫃內部前請先關掉電源，取出所有食物、飲品、擱架、抽屜等。

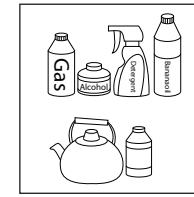

- 清潔雪櫃內膽請使用軟布或者海綿，可以用兩湯匙蘇打粉和一誇脫溫水溶液先清潔一遍。再用清水清洗並擦拭乾淨。清潔完畢後打開門自然風乾後再接通電源。
- 對於雪櫃內不易清潔區域（如窄小的夾層、縫隙或拐角），則建議用軟布、軟毛刷等和一些必要的輔助工具（如細棍等）進行定期清潔，確保有關位置無污染物或細菌聚集。
- 請勿使用肥皂、洗滌劑、擦洗粉、噴霧清潔劑等，因為這些可能會導致雪櫃內部產生異味或污染食物。
- 用蘸有肥皂水或稀釋後的清潔劑的軟布清洗瓶框、擱架和抽屜等。然後用軟布擦乾或自然晾乾。
- 用蘸有肥皂水，清潔劑等的軟布擦拭雪櫃外表面，然後用軟布擦乾。


- 清潔時請勿使用硬質毛刷、鋼絲球、鋼絲刷、研磨劑（如牙膏）、有機溶劑（如酒精、丙酮、香蕉水等）、開水、酸鹼性物品，因為有可能會損傷雪櫃表面及內膽。沸水和苯等有機溶劑可能會使塑膠部件變形或損壞。

- 清潔時不要用水或其他液體直接沖洗，以免浸泡後造成短路或影響電氣絕緣。

雪櫃進行除霜和清潔時，請先拔下電源插頭。


4.2 門上儲物格清潔

- 按下圖中箭頭所示方向,用雙手向內擠壓儲物格,然後再向上提起即可取出。
- 將取出的儲物格清洗完後,可根據需要調整儲物格安裝高度。

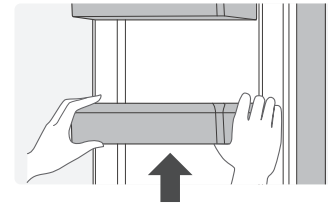

4.3 清潔玻璃架

- 稍微抬起玻璃架的後部,然後將其拉出。
- 將玻璃架向下微傾,然後取出。
- 取出玻璃架,根據需要進行清潔。
- 按照與拆卸相反的方法安裝玻璃架。

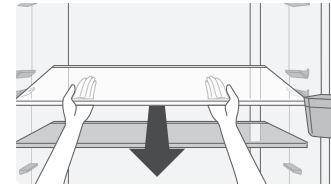

4.4 除霜

- 此雪櫃乃根據空氣冷卻原理製造，因此具有自動解凍功能。由於季節或溫度變化而形成的結霜，亦可以通過斷開本電器與電力供應的連接或用乾毛巾擦拭的方式手動清除。

4.5 停止運作

- 電源故障：如果發生電源故障，即使是在夏天，本電器內的食物亦可以保存幾個小時；在電源故障期間，應減少開門次數，並且不得再向本電器內放入新鮮食物。
- 長期不使用：應拔下本電器的電源插頭，然後進行清潔；然後打開櫃門，以防產生異味。
- 移動：移動雪櫃前，請將雪櫃內的所有物品取出，用膠帶固定玻璃隔板、蔬菜架、冷凍室抽屜等，並擰緊調平腳；關閉雪櫃門並用膠帶固定。移動過程中，本電器不得倒置或水平放置，亦不得振動；移動過程中的傾斜度不得超過 45° 。



本電器啟動後應持續運作。一般情況下，本電器的運作不應中斷，否則可能會影響使用壽命。

5. 故障排除

- 對於以下一些簡單的問題，你可以嘗試自己動手解決。若沒有改善，請致電售後服務部門。

出現情況	可能的原因 / 檢查項目
運作失敗	檢查本電器是否已連接到電源；或插頭是否接觸良好 檢查電壓是否過低 檢查是否有電源故障或部分電路跳掣
雪櫃有異味	有異味的食品應嚴密包裝 檢查是否有食物腐爛變質 雪櫃內部需要清潔
壓縮機長時間運作	夏季環境溫度高，雪櫃工作時間長屬正常現象 一次性放入食品不宜過多 食品冷卻後再放入雪櫃 開啟櫃門次數過於頻繁
雪櫃燈不亮	雪櫃是否通電，照明燈是否損壞 照明燈由專業人員更換
雪櫃門無法關緊	食物包裝卡住門使門無法關上放入的食品太多 雪櫃傾斜
噪音大	地面是否平坦，雪櫃放置是否平穩 雪櫃附件是否放在正常位置
櫃門密封不嚴	清除門封上異物 加熱門封使其冷卻後復原 （用電風筒或用熱毛巾）
接水盤溢水	箱內食品存放過多或水分過大，導致化霜水量大 門未關到位等原因導致空氣進入結霜，化霜產生的水增加
雪櫃外殼發熱	內置冷凝器通過外殼散熱，乃正常現象 內置冷凝器在內部通過外殼散熱，屬正常現象 環境溫度過高，存放食品過多或壓縮機停機時間段等都或導致外殼發熱注意通風散熱
外表凝露	環境濕度過高時，電櫃外表和門縫表面會有凝露現象屬正常現象。用乾淨毛巾拭擦即可。
雪櫃有異響	嗡崎聲：壓縮機工作時會產生嗡崎聲，啟動或停機時聲音較大，屬正常現象。此為正常現象。 吱吱聲：電器內部製冷劑流動時會產生吱吱聲，屬正常現象

6. 產品廢棄處理



正確處置本產品：
此標示表示本產品不得在歐盟國家與其他家庭廢物一起處置。為了防止未加管制的廢物處理對環境或人類健康造成危害，請以負責任的方式回收產品，以促進物質資源的可持續再利用。要退回使用過的產品，請使用交回及收集系統或聯絡出售該產品的零售商。他們可以將本產品送去環保回收地點。

環境溫度

本電器設計用於在額定貼紙標明類別所規定的環境溫度下運作。

氣候類型	環境溫度（ ... 至 ... ）
SN	+10°C 至 +32°C
N	+16°C 至 +32°C
ST	+16°C 至 +38°C
T	+16°C 至 +43°C

#DetailsMatter

服務熱線：2635 9222

規格有可能變更，恕不另行通知。
本說明書上的圖案均為示意圖，實際配件及結構以產品為準。

USER MANUAL

REFRIGERATOR FREEZER

For Home Use Only

GR-RM352WI-PMA(**)



TOSHIBA

CONTENTS

1. Safety warnings 1

2. Proper use of the freezer 8

3. Structure and functions 11

4. Maintenance and care of the refrigerator.....17

5. Trouble shooting 20

6. Disposal of your appliance 21

Dear user :

- **Thank you very much for purchasing this Toshiba product.**
- **Read this user manual and become completely familiar with the product before. use in order to use this product safely and correctly.**
- **Keep this user manual in a handy place for future reference.**
- **Make sure that you received your warranty.**

1. Safety warnings

READ SAFETY PRECAUTIONS BEFORE INSTALLATION

To prevent injury to the user or other people and property damage, the following instructions must be followed. Incorrect operation due to ignoring of instructions may cause harm or damage.

1.1 Warning

⚠ WARNING



- Warning: Risk of fire / Flammable materials

- WARNING: Risk of fire disaster and explosionThe refrigerant of the appliance is flammable, please be care not to damage the cooling pipes during installation and transportation. if gas leakage happens, please contact the distributor or local service agent, and the following precautions should be always taken:
  1. Open the windows for ensuring good ventilation.
  2. No fire around and please do not use other electric appliance.
- This appliance is intended to be used in household and similar applications such as:
  - staff kitchen areas in shops, offices and other working environments;
  - farm houses and by clients in hotels, motels and other residential type environments;
  - bed and breakfast type environments;
  - catering and similar non-retail applications.
- WARNING: Risk of fire disaster and electric shock
  If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Please unplug the power plug from socket when clean the appliance or leave the appliance nonuse for a long time.
- Do not use extension cord or ungrounded (two prong) adapters.
- WARNING: Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- WARNING: Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- WARNING: Do not damage the refrigerant circuit.
- WARNING: Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.

- WARNING: Please abandon the refrigerator according to local regulators for it use flammable cyclopentane foaming material and refrigerant.
- WARNING: When positioning the appliance, ensure the supply cord is not trapped or damaged.
- WARNING: Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.
- WARNING: Fill with potable water only. Please do not fill hot water or liquids other than potable water such as juices.
- WARNING: To avoid a hazard due to instability of the appliance, it must be fixed in accordance with the instructions.
- DANGER: Risk of child entrapment. Before you throw away your old refrigerator or freezer:
  - Take of the doors.
  - Leave the shelves in place so that children may not easily climb inside.
- The refrigerator must be disconnected from the source of electrical supply before attempting the Installation of accessory.
- Refrigerant and cyclopentane foaming material used for the refrigerator are flammable. Therefore, when the refrigerator is scraped, it shall be kept away from any fire source and be recovered by a special recovering company with corresponding qualification other than be disposed by combustion, so as to prevent damage to the environment or any other harm.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- This appliance can be used by children aged from 8 years and above and persons with reduce physical sensory or mental capabilities or lack of experience and knowledge If they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Please do not use the appliance on traffic means (such as ship and so on).
- If noise, odor and smoking happens, please unplug the power plug Immediately, and contact the distributor or local service agent.

- Please do not put your hands under or behind the appliance to prevent from being hurt.
- Please leave the packing materials and other parts out of the reach of children to prevent from risk of suffocation.
- To avoid contamination of food, please respect the following instructions:
  - Opening the door for long periods can cause a significant increase of the temperature in the compartments of the appliance.
  - Clean regularly surfaces that can come in contact with food and accessible drainage systems.
  - Clean water tanks if they have not been used for 48h, flush the water system connected to a water supply if water has not been drawn for 5days. (note 1)
  - Store raw meat and fish in suitable containers in the refrigerator, so that it is not in contact with or drip onto other food.
  - Two-star frozen-food compartments are suitable for storing pre-frozen food, storing or making ice-cream and making ice cubes. (note 2)
  - One-, two- and three star compartments are not suitable for the freezing of fresh food. (note 3)
  - For appliances without a 4-star compartment: this refrigerating appliance is not suitable for freezing foodstuffs. (note 4)
  - If the refrigerating appliance is left empty for long periods, switch off, defrost, clean, dry, and leave the door open to prevent mouldy developing within the appliance.
- Note 1,2,3,4: Please confirm whether it is applicable according to your product compartment type.
- For a freestanding appliance: this refrigerating appliance is not intended to be used as a built in appliance.
- Any replacement or maintenance of the LED lamps is intended to be made by the manufacturer, its service agent or similar qualified person.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.

1.2 Meaning of safety warning symbols



Prohibition symbol

This is a prohibition symbol.
Any incompliance with instructions marked with this symbol may result in damage to the product or endanger the personal safety of the user.



Mandatory symbol

This is a mandatory symbol.
It is required to operate in strict observance of instructions marked with this symbol; or otherwise damage to the product or personal injury may be caused.




Cautioning symbol


This is a cautioning symbol.
Instructions marked with this symbol require special caution. Insufficient caution may result in slight or moderate injury, or damage to the product.

This manual contains lots of important safety information which shall be observed by the users.

1.3 Electricity related warnings

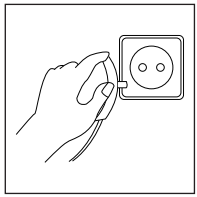


- Do not pull the power cord when pulling the power plug of the refrigerator. Please firmly grasp the plug and pull out it from the socket directly.
- To ensure safe use, do not damage the power cord or use the power cord when it is damaged or worn.

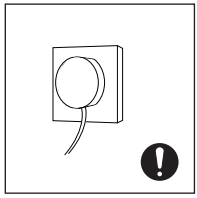

- Please do not touch the power plug with wet hand to prevent from electric shock.
- Please use a dedicated power socket and the power socket shall not be shared with other electrical appliances. The power plug should be firmly contacted with the socket or else fires might be caused.




- Please ensure that the grounding electrode of the power socket is equipped with a reliable grounding line.
- Please ask for help from persons with professional qualification to examine whether the socket is with reliable grounding line or not.
- It is the end-consumers' responsibility to change the ungrounded socket into grounded socket.

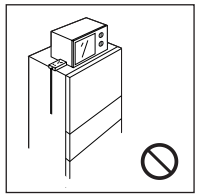


- Please turn off the valve of the leaking gas and then open the doors and windows in case of leakage of gas and other flammable gases. Do not unplug the refrigerator and other electrical appliances considering that spark may cause a fire.
- Do not use electrical appliances on the top of the appliance, unless they are of the type recommended by the manufacturer.

1.4 Warnings for using

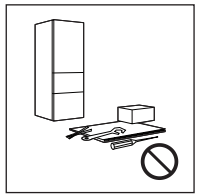


- Do not arbitrarily disassemble or reconstruct the refrigerator, nor damage the refrigerant circuit; maintenance of the appliance must be conducted by a specialist.
- Damaged power cord must be replaced by the manufacturer, its maintenance department or related professionals in order to avoid danger.

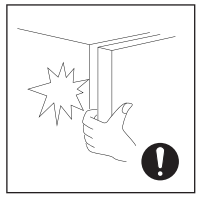


- The gaps between refrigerator doors and between doors and refrigerator body are small, be noted not to put your hand in these areas to prevent from squeezing the finger. Please be gentle when close the refrigerator door to avoid falling articles.



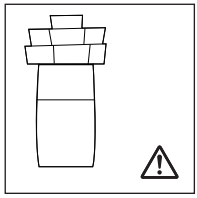


- Do not pick foods or containers with wet hands in the freezing chamber when the refrigerator is running, especially metal containers in order to avoid frostbite.
- Do not allow any child to get into or climb the refrigerator; otherwise suffocation or falling injury of the child may be caused.
- Please do not put heavy or dangerous objects on top of the appliance (bottles, tableware, or something containing liquid).

1.5 Warnings for placement

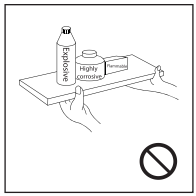



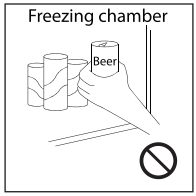

- Do not put flammable, explosive, volatile and highly corrosive items in the refrigerator to prevent damages to the product or fire accidents.
- Do not place flammable items near the refrigerator to avoid fires.
- The refrigerator is intended for household use, such as storage of foods; it shall not be used for other purposes, such as storage of blood, drugs or biological products, etc.
- Do not store beer, beverage or other fluid contained in bottles or enclosed containers in the freezing chamber of the refrigerator ; or otherwise the bottles or enclosed containers may crack due to freezing to cause damages.

1.6 Warnings for energy

- Refrigerating appliances might not operate consistently (possibility of defrosting of contents or temperature becoming too warm in the frozen food compartment) when sited for an extended period of time below the cold end of the range of temperatures for which the refrigerating appliance is designed.

- The fact that effervescent drinks should not be stored in food freezer compartments or cabinets or in low-temperature compartments or cabinets, and that some products such as water ices should not be consumed too cold.

- The need to not exceed the storage time(s) recommended by the food manufacturers for any kind of food and particularly for commercially quick-frozen food in food-freezer and frozen-food storage compartments or cabinets.

- The precautions necessary to prevent an undue rise in the temperature of the frozen food while defrosting the refrigerating appliance, such as wrapping the frozen food in several layers of newspaper.

- The fact that a rise in temperature of the frozen food during manual defrosting, maintenance or cleaning could shorten the storage life.

- The necessity that, for doors or lids fitted with locks and keys, the keys be kept out of the reach of children and not in the vicinity of the refrigerating appliance, in order to prevent children from being locked inside.

1.7 Warnings for disposal




- Refrigerant and cyclopentane foaming material used for the refrigerator are flammable. Therefore, when the refrigerator is scrapped, it shall be kept away from any fire source and be recovered by a special recovering company with corresponding qualification other than be disposed by combustion, so as to prevent damage to the environment or any other harm.





- When the refrigerator is scrapped, disassemble the doors, and remove gasket of door and shelves; put the doors and shelves in a proper place, so as to prevent trapping of any child.


2. Proper use of the freezer


2.1 Placement

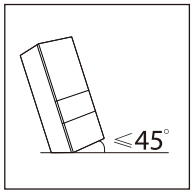

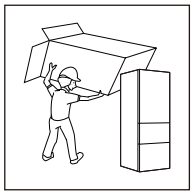

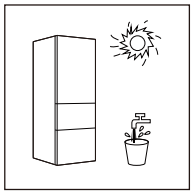

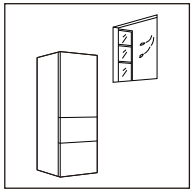

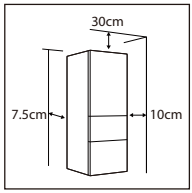

- Before the refrigerator is moved, take all objects inside out, fix the glass partitions, vegetable holder, freezing chamber drawers and etc. with tape, and tighten the leveling feet; close the doors and seal them with tape. During moving, the appliance shall not be laid upside down or horizontally, or be vibrated; the inclination during movement shall be no more than 45°.

- Before use, remove all packing materials, including button cushions, foam pads and tapes inside of the refrigerator; tear off the protective film on the doors and the refrigerator body. Keep away from heat and avoid direct sunlight. Do not place the freezer in moist or watery places to prevent rust or reduction of insulating effect.

- Do not spray or wash the refrigerator; do not put the refrigerator in moist places easy to be splashed with water so as not to affect the electrical insulation properties of the refrigerator.

- The refrigerator is placed in a well-ventilated indoor place; the ground shall be flat, and sturdy (rotate left or right to adjust the wheel for leveling if unstable).

- The top space of the refrigerator shall be greater than 30cm, the refrigerator should be placed against a wall with a free distance more than 10cm on the both side to facilitate heat dissipation, and the back of appliances is intended to be placed against a wall with a free distance not exceeding 7.5 cm, be careful not to damage the power cord when close to the wall.

Precautions before installation:
Before installation or adjusting of accessories, it shall be ensured that the refrigerator is disconnected from power. Precautions shall be taken to prevent fall of the handle from causing any personal injury.


2.2 Leveling feet

1. Precautions before operation:

Before operation of accessories, it shall be ensured that the refrigerator is disconnected from power.

2. Schematic diagram of the levelling feet:
Before adjusting the leveling feet, precautions shall be taken to prevent any personal injury.


3. Adjusting procedures:
a. Turn the feet clockwise to raise the refrigerator;
b. Turn the feet counterclockwise to lower the refrigerator;
c. Adjust the right and left feet based on the procedures above to a horizontal level.

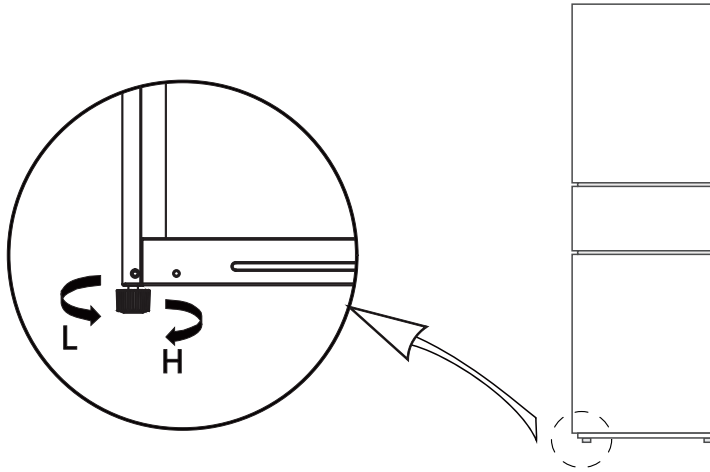


(The picture above is only for reference. The actual configuration will depend on the physical product or statement by the distributor)


2.3 Changing the Light

Any replacement or maintenance of the LED lamps is intended to be made by the manufacturer, its service agent or similar qualified person.



2.4 Starting

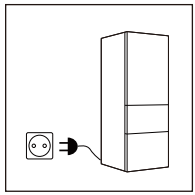

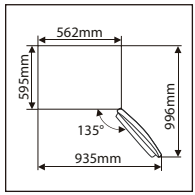


- Before initial start, keep the refrigerator still for two hours before connecting it to power supply.
- Before putting any fresh or frozen foods, the refrigerator shall have run for 2-3 hours, or for above 4 hours in summer when the ambient temperature is high.
- Spare enough space for convenient opening of the doors and drawers or statement by the distributor.

2.5 Energy saving tips

- The appliance should be located in the coolest area of the room, away from heat producing appliances or heating ducts, and out of the direct sunlight.
- Let hot foods cool to room temperature before placing in the appliance. Overloading the appliance forces the compressor to run longer. Foods that freeze too slowly may lose quality, or spoil.
- Be sure to wrap foods properly, and wipe containers dry before placing them in the appliance. This cuts down on frost build-up inside the appliance.
- Appliance storage bin should not be lined with aluminum foil, wax paper, or paper toweling. Liners interfere with cold air circulation, making the appliance less efficient.
- Organize and label food to reduce door openings and extended searches. Remove as many items as needed at one time, and close the door as soon as possible.

3. Structure and functions

3.1 Key components

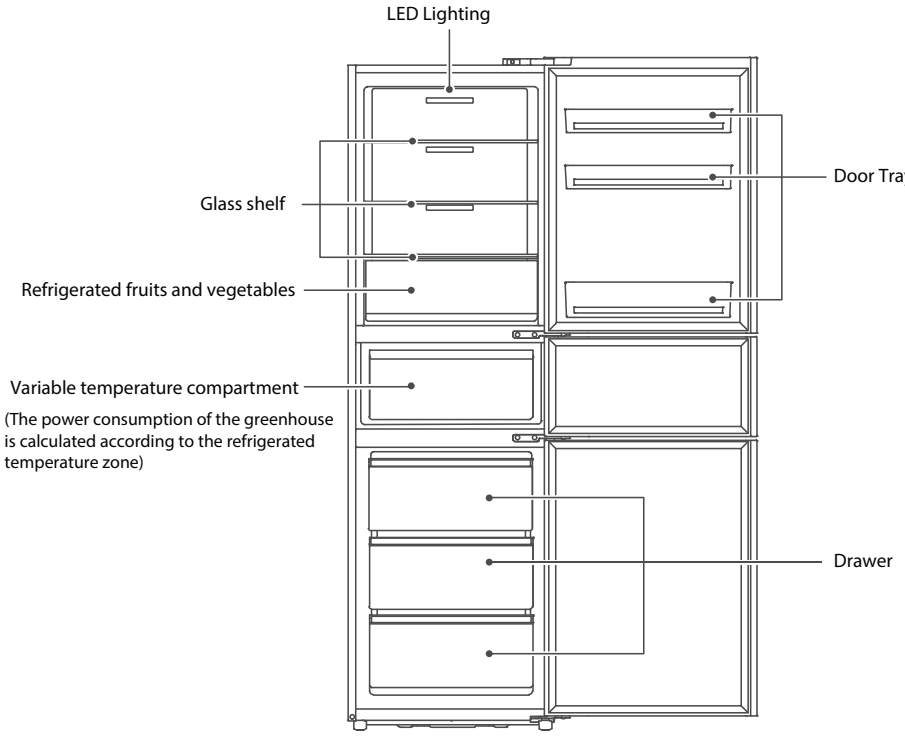

(The picture above is only for reference. The actual configuration will depend on the physical product or statement by the distributor)

Refrigerating chamber

- The Refrigerating chamber is suitable for storage of a variety of fruits, vegetables, beverages and other food consumed in the short term, suggested storage time 3days to 5 days.
- Cooking foods shall not be put in the refrigerating chamber until cooled to room temperature.
- Foods are recommended to be sealed up before putting into the refrigerator.
- The glass shelves can be adjusted up or down for a reasonable amount of storage space and easy use.

Freezing chamber

- The low temperature freezing chamber may keep food fresh for a long time and it is mainly used to store frozen foods and making ice.


- The freezing chamber is suitable for storage of meat, fish, rice balls and other foods not to be consumed in short term.

- Chunks of meat are preferably to be divided into small pieces for easy access. Please be noted food shall be consumed within the shelf time.

Drawers, food boxes, shelves, etc. placed according to the position in the picture above are the most energy efficient.

Note: Storage of too much food during operation after the initial refrigerator. Foods stored shall not block the air outlet; or otherwise the freez ing effect will also be adversely affected.

3.2 Functions

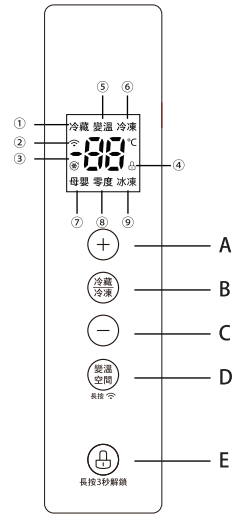

(The picture above is only for reference. The actual configuration will depend on the physical product or statement by the distributor)

1. Display screen

① Refrigeration icon ② Wireless network icon ③ Temperature display area

④ Lock/unlock icon ⑤ Temperature change icon

⑥ Freezing icon (freezing compartment) ⑦ Mother and baby icon ⑧ 0°C icon

⑨ Freezing icon (variable temperature compartment)

2. Button operation

A Temperature Up button B Temperature Selection button

C Temperature Down button D Quick Cool/Freeze button

E Lock/Unlock button

3. Operation ins tructions

1) Initial power-on

After the refrigerator is initially powered on, the display screen lights up. The default set temperature of the refrigerator is 5°C for the refrigeration compartment, -20°C for the freezing compartment, and mother and baby level for the variable temperature compartment.

2) Lock/unlock

In the locked state, press and hold 長按3秒解鎖 button for 3s to enter the unlocked state. At this time, the unlock buzzer will sound.



Press for 3s → to enter the unlocked state

In the unlocked state, press and hold 長按3秒解鎖 button for 3s to enter the locked state. At this time, the lock buzzer will sound.



Press for 3s → to enter the locked state

- Except that the alarm sound release operation can be carried out in the locked state, all of the following operations must be carried out in the unlocked state.

3) Refrigeration/freezing/variable temperature setting

Refrigeration compartment 2°C~8°C	After unlocking, press 冷藏冷凍 button to display the refrigeration icon, and press − or + touch button to adjust the temperature of the refrigeration compartment. The temperature range can be set as 2°C~8°C. The setting takes effect after locking.
Freezing compartment -24°C~-16°C	After unlocking, press 冷藏冷凍 button to display the freezing icon, and press − or + touch button to adjust the temperature of the freezing compartment. The temperature range can be set as -24°C~-16°C. The setting takes effect after locking.
Variable temperature compartment	After unlocking, press 變溫空間 長按 button. Each time it is pressed, the level changes by one level: mother and baby → 0°C → freezing → off → mother and baby... The setting takes effect after locking. If all three level icons are not displayed, it means that the variable temperature compartment is closed.

4) Refrigeration OFF/ON

- When the refrigeration compartment is selected and the refrigeration is on, press and hold 冷藏/冷凍 for 3s until three beeps are heard to enter the refrigeration off state. The display screen displays "- -".
- When the refrigeration compartment is selected and the refrigeration is off, press and hold 冷藏/冷凍 for 3s until three beeps are heard to exit the refrigeration off state. After the refrigeration compartment is on, the default set temperature is 5°C and it enters the normal operation mode.

5) Mode setting

- When the refrigeration compartment is selected, press − button to reduce the refrigeration temperature to 2°C and then lower it by one level to set the quick cool mode.
  Press + button to modify the refrigeration set temperature to exit the quick cool mode.
- When the freezing compartment is selected, press − button to reduce the freezing temperature to -24°C and then lower it by one level to set the quick freeze mode. Press + button to modify the freezing set temperature to exit the quick freeze mode.

6) Refrigerator door prompt and door alarm

- When the refrigerator door is opened without a door prompt, you can use the combination key to activate this door prompt function. Press − + + for 3 seconds to activate the prompt sound when the door is opened. The door prompt function is default closed
- If the door of the refrigeration compartment is opened for 120s, the buzzer will give a continuous "beep" sound three times.If the door is not closed at an interval of one minute, the buzzer will give a continuous "beep" sound four times, and so on. The alarm sound will increase once every minute until the door of the refrigeration compartment is closed after the continuous "beep" sound is given thirty times.
- In case of door opening alarm, press any button to cancel the buzzer alarm.

7) Networking setting

After unlocking, press and hold 变温 空间 长按 button for 3s to connect to the network.

icon flashes to enter the network connection state. If the configuration is not successful for 10s, icon stops flashing to exit the wireless network connection.

Networking icon display status:

When waiting for connection, icon flashes slowly all the time;

When connecting, icon flashes quickly;

When the connection is successful, icon stays on.

8) Power-off memory

After the refrigerator is powered off, it will still work based on the set state before power-off after being powered on again.

9) Fault prompt

When the following faults occur on the display screen, it indicates that there is a fault in the refrigerator. The refrigerator can still refrigerate under some fault conditions, but maintenance personnel shall be contacted as soon as possible for repairs to optimize the operation of the refrigerator.

Fault code	Fault description	Fault code	Fault description
E1	Refrigeration compartment temperature sensor fault	E5	Freezing and defrosting sensor fault
E2	Freezing compartment temperature sensor fault	E6	Communication fault
E3	Variable temperature compartment sensor fault	E7	Ambient temperature sensor fault

4. Maintenance and care of the refrigerator


4.1 Overall cleaning

- Dusts behind the refrigerator and on the ground shall be timely cleaned to improve the cooling effect and energy saving.

- Check the door gasket regularly to make sure there are no debris. Clean the door gasket with a soft cloth dampened with soapy water or diluted detergent.

- The interior of the refrigerator should be cleaned regularly to avoid odor.

- Please turn off the power before cleaning interior, remove all foods, drinks, shelves, drawers, etc.

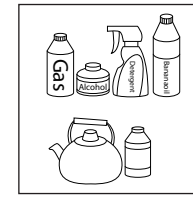

- Use a soft cloth or sponge to clean the inside of the refrigerator, with two tablespoons of baking soda and a quart of warm water. Then rinse with water and wipe clean. After cleaning, open the door and let it dry naturally before turning on the power.

- For areas that are difficult to clean in the refrigerator (such as narrow sandwiches, gaps or corners), it is recommended to wipe them regularly with a soft rag, soft brush, etc. and when necessary, combined with some auxiliary tools (such as thin sticks) to ensure no contaminants or bacterial accumulation in these areas.

- Do not use soap, detergent, scrub powder, spray cleaner, etc. as these may cause odors in the interior of the refrigerator or contaminated food.

- Clean the bottle frame, shelves and drawers with a soft cloth dampened with soapy water or diluted detergent. Dry with a soft cloth or dry naturally.


- Wipe the outer surface of the refrigerator with a soft cloth dampened with soapy water, detergent, etc., and then wipe dry.

- Do not use hard brushes, clean steel balls, wire brushes, abrasives (such as toothpastes), organic solvents (such as alcohol, acetone, Isoamyl acetate, etc.), boiling water, acid or alkaline items, which may damage the fridge surface and interior. Boiling water and organic solvents such as benzene may deform or damage plastic parts.

- Do not rinse directly with water or other liquids during cleaning to avoid short circuits or affect electrical Insulation after immersion.


Please unplug the refrigerator for defrost and cleaning.

4.2 Cleaning of door tray

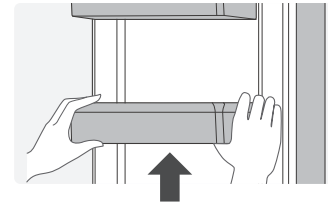

- According to the direction arrow in the figure below, use both hands to squeeze the tray, and push it upward, then you can take it out.
- After washing the tray having been taken out, you can adjust its installing height in accordance with your requirement.

4.3 Cleaning of Glass shelf

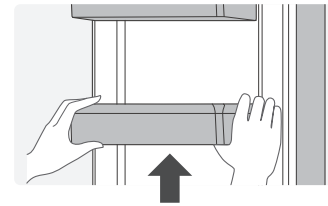

- Lift up the rear of the glass shelve slightly and pull it out.
- Slightly tilt the glass shelve down wards and take it out.
- Take out the glass shelve and clean it as needed.
- Install the glass shelve in the reverse method of the removal.

4.4 Defrosting

- This refrigerator is made according to the principle of air cooling, so it has an automatic defrosting function. Frost formed due to seasonal or temperature changes can also be removed manually by disconnecting the power from the device or wiping with a dry towel.

4.5 Out of operation

- Power failure: If there is a power failure, the food in the refrigerator can be kept for several hours even in summer; in the event of a power failure, the opening time should be reduced and fresh food should no longer be placed in the refrigerator.
- Long-term non-use: The electrical plug should be unplugged and then cleaned; open the refrigerator door to prevent odors.
- Movement: Before moving the refrigerator, remove all items from the inside to the outside, secure the glass shelf, fruit vegetable bin cover, freezer drawers, etc., and tighten the leveling feet; close the door and seal with tape. The equipment shall not be inverted or placed horizontally during the moving process; the inclination when moving shall not be greater than 45°.



The appliance shall run continuously once it is started. Generally, the operation of the appliance shall not be interrupted; otherwise the service life may be impaired.

5. Trouble shooting

- You may try to solve the following simple problems by yourself. If them cannot be solved, please contact the after-sales department.

Occurrence	Possible cause/inspection items
Failed operation	Check whether the appliance is connected to power or whether the plug is in well contact Check whether the voltage is too low Check whether there is a power failure or partial circuits have tripped
Odor	Odorous foods shall be tightly wrapped Check whether there is any rotten food Clean the inside of the refrigerator Replace the deodorizer block
Long-time operation of the compressor	Long operation of the refrigerator is normal in summer when the ambient temperature is high It is not suggestible having too much food in the appliance at the same time Food shall get cool before being put into the appliance The doors are opened too frequently
Light fails to get lit	Check whether the refrigerator is connected to power supply and whether the illuminating light is damaged Have the light replaced by a specialist
Doors cannot be properly closed	The door is stuck by food packages Too much food is placed The refrigerator is tilted
Loud noise	Check whether the floor is level and whether the refrigerator is placed stably Check whether accessories are placed at proper locations
Door seal fails to be tight	Remove foreign matters on the door seal Heat the door seal and then cool it for restoration (or blow it with an electrical drier or use a hot towel for heating)
Water pan overflows	There is too much food in the chamber or food stored contains too much water,resulting in heavy defrosting The doors are not closed properly, resulting in frosting due to entry of air and increased water due to defrosting
Hot housing	Heat dissipation of the built-in condenser via the housing, which is normal When housing becomes hot due to high ambient temperature, storage of too much food or shutdown of the compressor is shut down, provide sound ventilation to facilitate heat dissipation
Surface condensation	Condensation on the exterior surface and door seals of the refrigerator is normal when the ambient humidity is too high. Just wipe the condensate with a clean towel
Abnormal noise	Buzz: The compressor may produce buzzes during operation, and the buzzes are loud particularly upon start or stop. This is normal. Creak: Refrigerant flowing inside of the appliance may produce creak, which is normal

6. Disposal of your appliance



Correct Disposal of this product:
This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

AMBIENT TEMPERATURE

This appliance is designed to operate in ambient temperature specified by its category marked onthe rating plate.

Climate category	Ambient temperature (from...to...)
SN	+10°C to +32°C
N	+16°C to +32°C
ST	+16°C to +38°C
T	+16°C to +43°C

#DetailsMatter

Service hotline: 2635 9222

Specifications are subject to change without prior notice.
The patterns on this manual are all diagrams, and the parts and structures take the actual product as the standard.