




Tastenbelegung der Fernbedienung

Je nach Anwendung (Fernsehen/Video/Audio/Foto/Apps) und Funktion (beispielsweise, EPG, Teletext, HbbTV usw.) kann die Tastenbelegung von der hier beschriebenen Belegung abweichen.

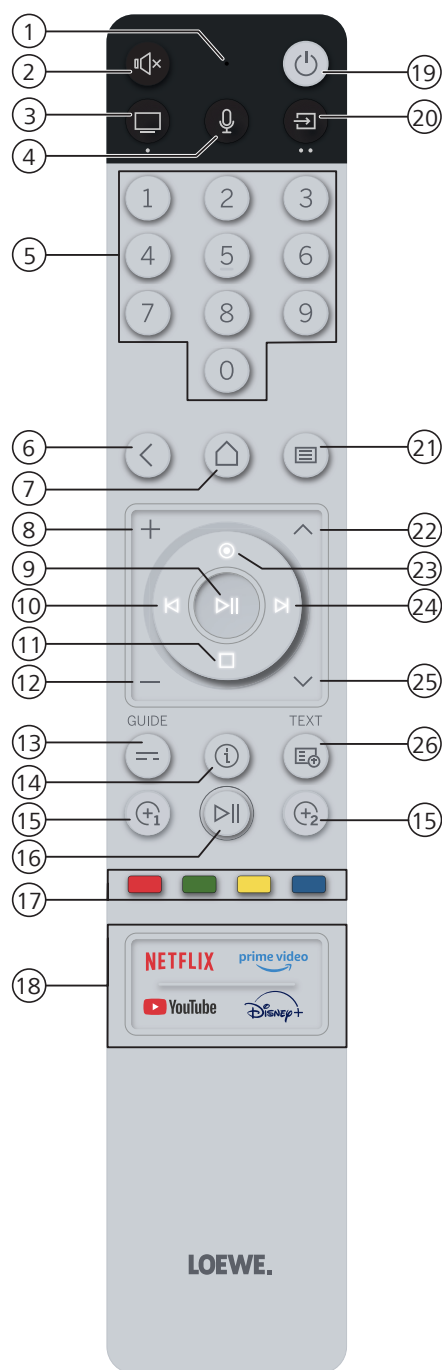

1. Mikrophon.
2. Ton stumm/aktivieren.
3. Den Fernsehmodus aufrufen.
4. Lange gedrückt halten, um mit dem Sprachassistenten zu sprechen.
5. Kanäle direkt mit den Zahlentasten auswählen.
6. Im Menü einen Schritt/eine Ebene zurück. Beim Fernsehen: zum zuvor gesehenen Kanal wechseln. Länger drücken: Angezeigtes Menü/Anwendung verlassen.
7. Das Startmenü aufrufen.
8. Lautstärke erhöhen.
9. Ohne Beleuchtung: Kanalliste aufrufen. Mit Beleuchtung: Medien wiedergeben/anhalten oder zeitversetztes Fernsehen starten/pausieren/fortsetzen. Im Menü: OK Taste (Auswahl bestätigen).
10. Ohne Beleuchtung: Bewegen Sie sich im Menü nach links oder öffnen Sie das Informationsfeld der aktuell gesehenen Sendung. Wenn Sie aufzeichnen, öffnen Sie das Aufnahmebedienfeld. Mit Beleuchtung: Rückwärts springen.
11. Ohne Beleuchtung: Bewegen Sie sich im Menü nach unten. Mit Beleuchtung: Zeitversetztes Fernsehen anhalten/beenden (zurück zum Live-Bild).
12. Lautstärke verringern.
13. Kurz Drücken: EPG (Elektronischer Programmführer) ein/aus. Länger drücken: Zeigt die Liste der Aufnahmen an.
14. Beim Fernsehen: drücken, um ausführliche Informationen zur Sendung aufzurufen.
15. Beim ersten Drücken: Der Programmierdialog öffnet sich. Wählen Sie die Aktion aus, die Sie der Taste zuweisen möchten (z. B. direkt zu einem Eingang, einer App oder einem Menü wechseln).
16. Kurz drücken: Medien wiedergeben/anhalten oder zeitversetztes Fernsehen starten/pausieren/fortsetzen. Länger drücken: beleuchtete Mediensteuertasten anzeigen.
17. Farbtasten – Ausführen der entsprechenden aktuellen Funktion.
18. Auf Medien und Video-on-Demand zugreifen.
19. Das Fernsehgerät einschalten oder in den Bereitschaftsmodus schalten. Kurz drücken, während das Fernsehgerät eingeschaltet ist: Fernsehgerät und alle CEC-fähigen Geräte, die mit den HDMI-Anschlüssen verbunden sind, werden auf Stand-by geschaltet (SystemStand-by).
20. Quellenmenü aufrufen. Länger drücken: Geräte-Taste. Diese Taste ermöglicht Ihnen, andere Geräte mit der Loewe Fernbedienung zu kontrollieren.
21. Kurz drücken: Systemeinstellungen aufrufen. Länger drücken: Koppelt die Fernbedienung über Bluetooth mit dem Fernseher.
22. Nächster Kanal.
23. Ohne Beleuchtung: Im Menü nach oben bewegen. Mit Beleuchtung: Aufnahmemenü öffnen.
24. Ohne Beleuchtung: Bewegen Sie sich im Menü nach rechts oder öffnen Sie das Informationsfeld der aktuell gesehenen Sendung. Wenn Sie aufzeichnen, öffnen Sie das Aufnahmebedienfeld. Mit Beleuchtung: Vorwärts springen.
25. Vorheriger Kanal.
26. Teletext/MediaText ein/aus.

Hinweis: Die Tastenbelegung kann sich in Abhängigkeit der Software oder der Geräteversion unterscheiden.

Einlegen oder Wechseln der Batterien

Öffnen Sie das Batteriefach auf der Rückseite der Fernbedienung. Schieben Sie die Abdeckung des Batteriefachs nach unten. Heben Sie dann die Abdeckung ab. Das Batteriefach liegt nun frei.

Verwenden Sie nur auslaufsichere Mikrozellen des Typs LR 03 (AAA) Alkali-Mangan. Verwenden Sie keine verschiedenen Batterietypen und benutzen Sie keine alten und neuen Batterien gleichzeitig.

Vergewissern Sie sich, dass die Batterien nicht in die Hände von Kindern gelangen können. Die Batterien dürfen keiner übermäßigen Hitze ausgesetzt werden – wie etwa direktem Sonnenlicht, Feuer oder Ähnlichem!

Hinweis: Die Position der Batterien ist im Batteriefach angegeben (sie werden in entgegengesetzter Richtung eingelegt). Achten Sie auf die richtige Polarität von + und -, wenn Sie die Batterien einlegen. Achten Sie beim Einlegen nicht auf die Batteriekontakte (Federn), sondern auf die Abbildung am Boden des Batteriefachs.




Entsorgen Sie die leeren Batterien umweltverträglich (lesen Sie dazu das Kapitel Umwelt/Rechtliche Hinweise).

Schieben Sie die Abdeckung nach dem Einlegen der Batterien wieder auf die Fernbedienung.

Remote control button mapping

Depending on the application (TV / video / audio / photo / apps) and function (for example, EPG, Teletext, HbbTV etc.), the key assignment can deviate from the assignment described here.

english

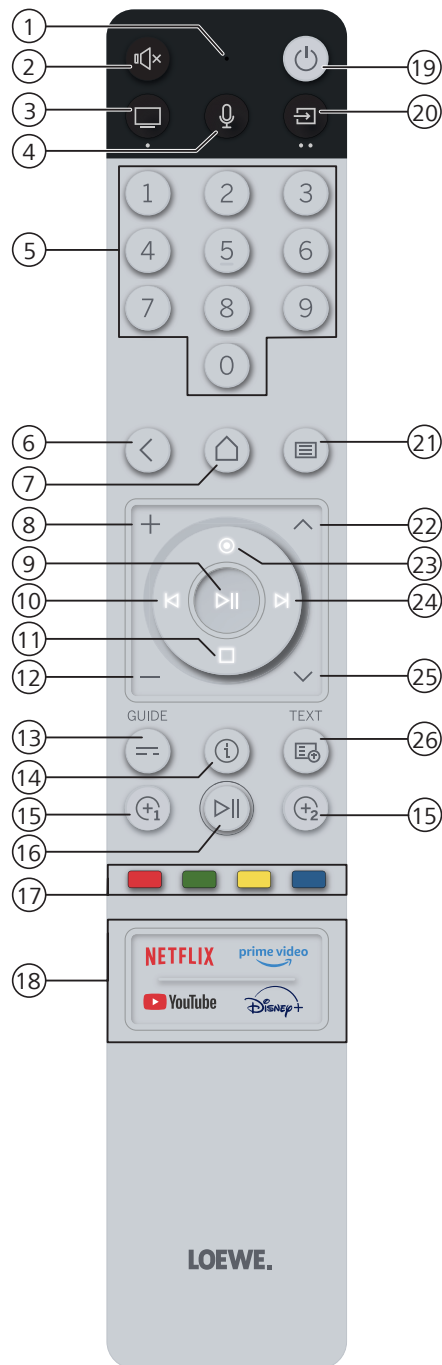

1. Microphone.
2. Sound mute / on.
3. Call the TV mode.
4. Press and hold to speak to voice assistant.
5. Select channels with numeric buttons directly.
6. Step / level back in the menu. While watching TV, switch to the previously watched channel. Pressing longer: Exit displayed menu / application.
7. Call up the Home menu.
8. Increase volume.
9. When not illuminated: Call channel list. When illuminated: Play / Pause media or Start / Pause / Continue the timeshift television. In the menu: OK button (confirm selection).
10. When not illuminated: Move left in the menu or open information panel of the currently watched programme. If recording, open the recording control panel. When illuminated: Skip backwards.
11. When not illuminated: Move down in the menu. When illuminated: Stop / End timeshift (return to live image).
12. Decrease volume.
13. Pressing briefly: EPG (Electronic Programme Guide) on / off. Pressing longer: Display the list of recordings.
14. While watching TV, press to call the detailed information on the broadcast.
15. When pressed for the first time: The programming dialogue opens. Select the action you wish to assign to the button (for example, switching directly to an input, app, or menu). Pressing briefly: Call up the programmed function. Pressing longer: Open the programming dialogue to assign a new function.
16. Pressing briefly: Play / Pause media or Start / Pause / Continue the timeshift television. Pressing longer: Display illuminated media control keys.
17. Colour buttons – Execute corresponding function at that time.
18. Access the media and video on demand.
19. Switches the TV set on or switches to standby mode. Press briefly while TV set is switched on: TV set and all CEC-enabled devices connected to the HDMI ports will be switched off to standby (System Standby).
20. Call the Sources menu. Pressing longer: Device key. This button allows you to control other devices with the Loewe remote control.
21. Pressing briefly: Call System settings. Pressing longer: Pairs the remote control with the TV via Bluetooth.
22. Next channel.
23. When not illuminated: Move up in the menu. When illuminated: Open the Record menu.
24. When not illuminated: Move right in the menu or open information panel of the currently watched programme. If recording, open the recording control panel. When illuminated: Skip forwards.
25. Previous channel.
26. Teletext / MediaText on / off.

Note: The key assignment may differ depending on the software or device version.

Inserting or replacing batteries

Open the battery compartment on the back of the remote control. Slide down the battery compartment cover, then lift it off. The battery compartment is now exposed.

Only use leak-proof micro-cells of the LR 03 (AAA) Alkali-Manganese type. Do not use different types of batteries and do not mix old and new batteries together.

Make sure that the batteries do not get into the hands of children. The batteries used must not be exposed to excessive heat such as sunlight, fire or similar!

Note: The position of the batteries is indicated in the battery compartment (in opposite directions). Pay attention to the correct polarity of + and – when inserting the batteries. Do not be guided by the battery contacts (springs), but by the illustration at the bottom of the battery compartment.



Dispose of used batteries in an environmentally friendly way (see chapter Environment/Legal information).

Push the cover back on after having inserted the batteries.

FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could

void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.