


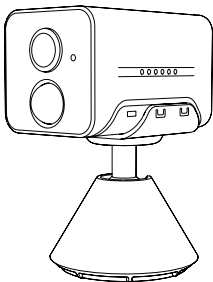

Wire-free
Indoor Camera

Quick Start Guide

ZS-GX7S



Sales Email: service@iegeek.com
Official website: <https://www.iegeek.com>

Technical Support

If you need help, please contact ieGeek before returning your product. Most questions can be answered through our online support center at : www.iegeek.com or our after-sale mailbox at: service@iegeek.com.

Technische Unterstützung

Wenn Sie Hilfe brauchen, kontaktieren Sie bitte ieGeek Support Team zuerst, bevor Sie Ihre Bestellung zurücksenden. Meiste Fragen Oder Probleme können von unserem Online Support Center beantwortet und gelöst werden: www.iegeek.com, Oder unserer Postfach nach dem Verkauf: service@iegeek.com.

Support Technique

Si vous avez besoin d'aide veuillez contacter ieGeek avant de retourner votre produit. La plupart des questions peuvent être répondues via notre centre de support en ligne à l'adresse : www.iegeek.com, ou la boîte aux lettres après-vente à l'adresse: service@iegeek.com.

Assistenza Tecnica

Se avete bisogno di aiuto, le chiediamo gentilmente di contattare ieGeek prima di restituire il prodotto. La maggior parte delle domande può essere risolta tramite il nostro centro di assistenza online all'indirizzo www.iegeek.com o la casella di posta post-vendita all'indirizzo service@iegeek.com.

Soporte Técnico

Si necesita ayuda, comuníquese con ieGeek antes de devolver su producto. La mayoría de las preguntas se pueden responder a través de nuestro centro de soporte en línea en www.iegeek.com o el buzón de postventa en service@iegeek.com.

Please read this manual thoroughly before using this wireless security camera. If you have any issues,

please email your order number and the problem TO our

mailbox: service@iegeek.com. Receiving your message, we will provide a fast solution in 24 hours.

Warning Tip:

- Before connecting this camera to the WiFi, please ensure the Wi-Fi signal strength is to be over than 75% to keep good Wi-Fi signal.
- This wireless camera supports events recording when Wi-Fi disconnected.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help. Responsible for compliance could void the user's authority to operate this equipment. (Example- use only shielded interface cables when connecting to computer or peripheral devices).
- Any Changes or modifications not expressly approved by the party responsible for compliance could void the

user's authority to operate the equipment.
This equipment complies with Part 15 of the FCC Rules.
Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference, and,
- 2) This device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement:

The equipment complies with FCC Radiation exposure limits set forth for uncontrolled environment This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

(FCC ID: 2AZL7-ZS-GXIS)


CONTENTS

English	01-12
Français	15-28
Deutsch	31-44
Español	47-59
Italiano	63-76


CONTENTS

01	Camera Introduction -----	1
02	APP Download and Account Registration -----	3
03	How to Add a Camera to APP -----	4
04	Charge the Battery -----	8
05	Installation Guides -----	9
06	Notes on PIR Motion Sensor -----	10
07	FAQS -----	11

01 / Camera Introduction

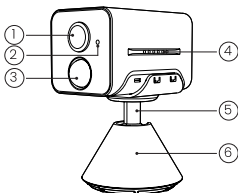

- | | |
|---------------|------------------|
| 1. Lens | 4. Speaker Holes |
| 2. Microphone | 5. Bracket |
| 3. PIR | 6. Base |

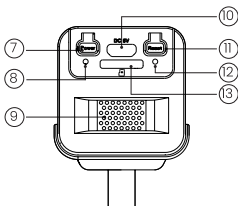

- | | |
|-----------------------|------------------------------|
| 7. Power Key | 10. USB Port |
| 8. Charging Indicator | 11. Reset |
| 9. Ventilation Holes | 12. Working Status Indicator |
| | 13. SD Card Slot |

Power Button	Press and hold for 5s for power on/off the camera
Reset	Press and hold for 5s until hearing 'Boogu' to reset or restore to factory setting
SD Card Slot	Support local SD card storage (up to 128G)
Charging Indicator	Red means charging, blue means fully charged
Working Status Light	Solid on red: Network is abnormal
	Slow flickering red: Awaiting Wi-Fi connection and start adding devices
	Wi-Fi fast flickering red: Wi-Fi connecting
	Solid on blue: Wi-Fi connected successfully, the camera running normally

02/ APP Download and Account Registration

Download 'ieGeek Cam' APP

Method 1: Download 'ieGeek Cam' or 'CloudEdge' APP from APP Store (iOS and Android);

Method 2: Scan 'ieGeek Cam' APP QR code to download it.



Tips: Please turn on 2 below permissions while using this APP for the first time.

- Allow 'ieGeek Cam' APP to access mobile cellular data and wireless LAN or it will fail to add IP camera.
- Allow 'ieGeek Cam' APP to receive pushed message or the phone will not receive alarm push when motion detection or audible alarm is triggered.

Register Account

New users need to register by email. The concrete steps are as following:

- 1) Click "Register";
- 2) Follow the steps to complete the registration of the account;
- 3) Log in.


Note: When registering a new account, please choose the region which you are actually in and correct country code. (Different registered regions can't share the camera.) Please choose to register by e-mail.

03/How to Add a Camera to APP


Before Using:

- 1) Please insert the Micro SD card before power on, otherwise, the SD card cannot be detected.
- 2) Put the camera and smart phone 1-3 ft (30-100 cm) away from the router to set Wi-Fi.
- 3) Make sure that the camera is using 2.4GHz Wi-Fi.


Wi-Fi Connection Steps

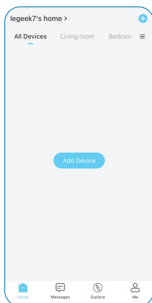


Tap '+' to Add Device

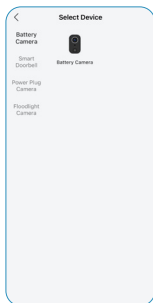


Select Battery Camera

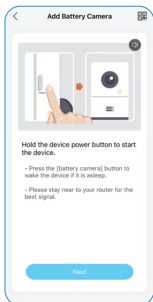


Power on Camera

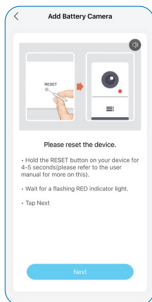


Reset Device

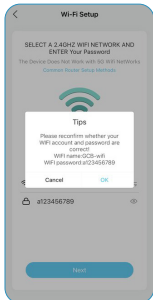


Input Wi-Fi Password

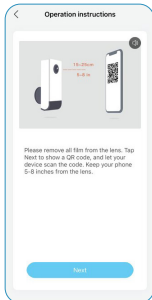

Scan QR Code

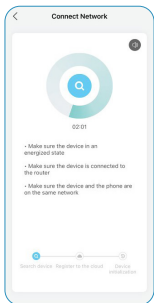

Wait for Connection

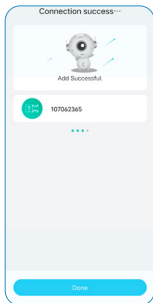

Device Added

(Note: If it can't be powered on, please plug in DC 5V 2A power adapter to charge the camera for 15min first)


My camera fails to connect Wi-Fi?

- 1) Please make sure the Wi-Fi the camera connected is 2.4GHz.
- 2) Make sure the password correction of the Wi-Fi. (Note: the password of the WiFi cannot include single quote, underline, space and virgule (/).
- 3) Once the devices that your router connected excess the its max limit numbers, other devices will cannot connect the router.
- 4) Make sure the QR code on the phone screen is normal and the distance between the phone and the camera lens is 10-15cm (3.9-5.9inch) during the scanning process.
- 5) If the camera cannot connect the Wi-Fi, please try to

re-download the APP, reset the camera and restart the router, and then add the camera again.

- 6) If you tried all steps, but still no luck, please message your order and problem to service@iegee.com.

04/Charge the Battery

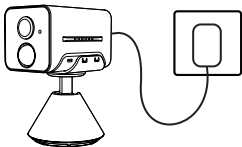

Charge the battery with a 5V 2A power adapter


- The battery is a built-in battery and cannot be removed.

Charging Indicator :

Red LED: Charging

Blue LED: Fully Charged

05/Installation Guides

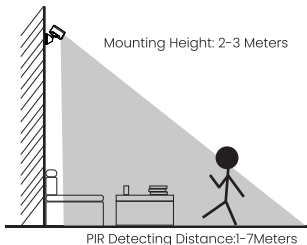

- GX7S is only for indoor use, please install it indoors according to the instructions and keep away from water sources.
- It's recommended to select the location before installation. Once the 3M glue is attached, it will not be easy to remove (to avoid damage to the wall).
- Install the camera 2-3 meters (7-10 ft) above ground. The detection range of the motion sensor would be maximized at such a height.
- For effective motion detection, please install the camera angularly.

NOTE: If a moving object approaches the PIR sensor vertically, the camera may fail to detect motion.

06/Notes on PIR Motion Sensor

PIR Sensor Detection Range

The PIR detection range can be customized to meet your specific needs. You may refer to the following table to set it up in Device Settings via ieGeek Cam App.

Sensitivity	Detection Distance (For moving and living objects)
Level 1-3 (Low)	Up to 1-3 meters
Level 4-7 (Med)	Up to 3-5 meters
Level 8-10 (High)	Up to 5-7 meters

PIR Sensor Detection Range

- Do not face the camera towards any objects with bright lights, including sunshine, bright lamp lights, etc.
- Do not place the camera near any outlets, including the air conditioner vents, humidifier outlets, the heat transfer vents of projectors, etc.
- Do not install the camera at places with strong wind.
- Do not face the camera towards a mirror.
- Keep the camera at least 1 meter away from any wireless devices, including WiFi routers and phones in order to avoid wireless interference.

07 / FAQs

For more detailed FAQs, please log in to the APP, search in "Me"->"FAQ"->"Help Document"->"Battery Camera"

The device prompts offline?

- 1) Check whether the equipment is in the power-on state, and observe whether the working light of the equipment is on normally;
- 2) Confirm that the current location has good wifi coverage and the network is stable, make sure that the wifi signal is above 75%;
- 3) You can try to use the third-party wifi analysis tool "wifi analyzer" to analyze the current wifi signal coverage and interference status. If the coverage is poor and the interference is large, it is recommended to replace the camera installation position or adjust the router position or use a second-stage router;
- 4) Avoid using wifi extenders.

Update router or Wi-Fi password?

Delete the camera from your CloudEdge account. After resetting the device, use the new Wi-Fi and password to add it again.

Fast power consumption?

- 1) In the case of poor wifi coverage (such as signal is below 75%), which will increase power consumption;
- 2) The PIR trigger frequency is high, and the power consumption will increase when infrared light/white light is on at night;
- 3) The mobile phone often accesses the camera remotely, which will increase the power consumption;
- 4) For the first use, it's recommended to use the power to 10%, and then charge it to 100%, which is helpful for the health of the lithium battery.

Camera not detecting movement?

- 1) In the case of unstable network, the message may not be pushed in time after the PIR is triggered. In this case, you can first confirm the network status and remove the camera to verify and confirm in an environment with good network coverage;
- 2) Inappropriate installation position will result in PIR not triggering and not detecting. If the position is too high, the object is too far away, or the object is too small, the camera will not trigger, try to adjust the installation position according to the trigger requirements for many times.


SD card not recognized?

- 1) Support capacity is 16~128GB micro SD card;
- 2) Before use, make sure to format the micro SD card as FAT32 or exFAT file system on the computer, then insert it into the camera, and finally perform the format memory card operation on the camera again;
- 3) If the micro SD card is not recognized during use, it is generally a quality problem of the micro SD card, and it is necessary to replace the memory card with more stable reading and writing.


CONTENIDO

01	Introduccion del Producto -----	43
02	Anadir la Camara a la Aplicacion	45
03	Cómo Sgregar una Cámara a la Aplicación-----	47
04	Cargue la Batería-----	51
05	Notas sobre Instalación de Cámara -----	52
06	Notas sobre el Sensor de Movimiento PIR -----	53
07	FAQS-----	55

01 / Introducción del Producto

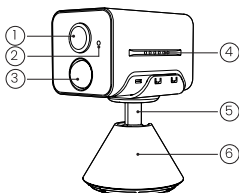

- | | |
|--------------|-----------------------------|
| 1. Lente | 4. Orificios para altavoces |
| 2. Micrófono | 5. Soporte |
| 3. PIR | 6. Base |

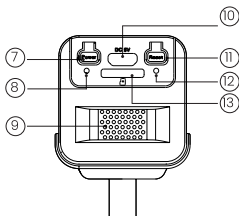

- | | |
|----------------------------|---|
| 7. Tecla de encendido | 10. Puerto USB |
| 8. Indicador de carga | 11. Restablecer |
| 9. Agujeros de ventilación | 12. Indicador de estado de funcionamiento |
| | 13. Ranura para tarjeta SD |

Botón de encendido	Mantenga presionado durante 5 segundos para encender/apagar la cámara
Reiniciar	Mantenga presionado durante 5 segundos hasta que escuche "Boogu" para restablecer o restaurar la configuración de fábrica
Ranura de tarjeta SD	Soporta almacenamiento en tarjeta SD local (hasta 128G)
Indicador de carga	Rojo significa cargando, azul significa completamente cargado
Indicador de estado de trabajo	Sólido en rojo: la red es anormal
	Parpadeo lento en rojo: en espera de conexión Wi-Fi y comenzar a agregar dispositivos
	Parpadeo rápido en rojo Wi-Fi: Conexión Wi-Fi eando rápido: conexión Wi-Fi en progreso
	Sólido en azul: Wi-Fi conectado correctamente, la cámara funciona normalmente

02/ Anadir la Camara a la Aplicacion

Descargar "ieGeek Cam" APP

Método 1: Descargue la APLICACIÓN "CloudEdge" y "ieGeek Cam" de la App Store (iOS) o Google Play (Android);

Método 2: Escanee el código QR de la APLICACIÓN "ieGeek Cam" para descargarlo.



Precaución: Al usar la aplicación por primera vez, por favor encienda los siguientes 2 permisos.

- Permita que "ieGeek Cam" acceda a datos celulares móviles y a la LAN inalámbrica, de lo contrario no podrá añadir dispositivos.
- Permita que "ieGeek Cam" reciba mensajes empujados, de lo contrario el teléfono no recibirá empujes de alerta cuando se dispare una detección de movimiento o una alerta audible.

Registre una Cuenta

Los nuevos usuarios deben registrarse por correo electrónico.

- 1) Haga clic en "Registro";
- 2) Siga los pasos para completar el registro de su cuenta;
- 3) Inicie sesión.

Consejos:


- Por favor, utilice el correo electrónico correcto;
- Por favor, seleccione el código de país correcto;
- Cuando registre una nueva cuenta, por favor, seleccione la región en la que se encuentra realmente. (Las cámaras no pueden ser compartidas entre diferentes regiones de registro).

03/Cómo Sgregar una Cámara a la Aplicación

Antes de usar:

- 1) Inserte la tarjeta Micro SD antes de encender, de lo contrario, no se podrá detectar la tarjeta SD.
- 2) Coloque la cámara y el teléfono inteligente a una distancia de 1-3 pies (30-100 cm) del enrutador para configurar el Wi-Fi.
- 3) Asegúrese de que la cámara este usando Wi-Fi de 2.4GHz.

Pasos para la conexión Wi-Fi

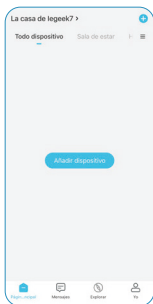

Toca "+" para agregar un dispositivo




Seleccione la cámara de batería



Enciende la cámara



Reiniciar el dispositivo

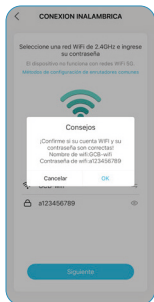


Ingrese la contraseña de Wi-Fi



Escanea el código QR



Espera la conexión

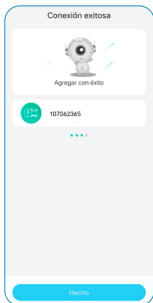

Dispositivo agregado

(**Nota:** si no se puede encender, primero conecte el adaptador de corriente DC 5V 2A para cargar la cámara durante 15 minutos)


¿Mi cámara no se conecta a Wi-Fi?

- 1) Asegúrese de que el Wi-Fi conectado a la cámara sea de 2,4 GHz. En nuestra experiencia, la conexión de red falla en la mayoría de los casos, lo que se debe a que los usuarios usaron WIFI de 5GHz.
- 2) Asegúrese de corregir la contraseña del Wi-Fi. (Nota: la contraseña del WiFi no puede incluir comillas simples, subrayado, espacio y virgula (/)).
- 3) Verifique el número de dispositivos que conectó su enrutador. En general, el enrutador tiene límites de conexión. Una vez que los dispositivos que conectó su enrutador superan su límite máximo, otros dispositivos no

podrán conectar el enrutador.

- 4) Asegúrese de que el código QR en la pantalla del teléfono sea normal y que la distancia entre el teléfono y la lente de la cámara sea de 10 a 15 cm (3,9 a 5,9 pulgadas) durante el proceso de escaneo

04/Cargue la Batería

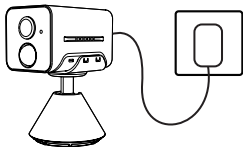

Cargue la batería con un adaptador de corriente de 5V 2A


- La batería es una batería incorporada y no se puede quitar.

Indicador de Cargo:

LED Rojo: Cargando

LED Azul: Totalmente cargada

05/Notas sobre Instalación de Cámara

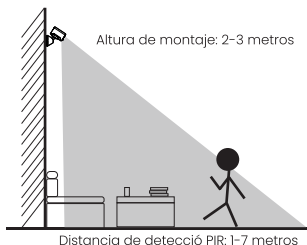

- Use la cubierta protectora de la cámara para un mejor rendimiento resistente al agua cuando instala la cámara en exteriores.
- Instale la cámara a 2-3 metros (7-10 pies) sobre el suelo. El range de detección del sensor PIR se maximizará a tal altura.
- Para una detección de movimiento efectiva, instale la cámara angularmente.

AVISO: Si un objeto en movimiento se acerca al sensor PIR verticalmente, es posible que la cámara no pueda detectar el movimiento.

06/Notas sobre el Sensor de Movimiento PIR

Rango de Detección de Sensor

El rango de detección PIR se puede personalizar para satisfacer sus necesidades específicas.

Puede consultar la siguiente tabla para configurarlo en Configuración de Dispositivo en ieGeek Cam APP.

Sensibilidad	Distancia de Detección (Para objetos vivos o en movimiento)
Nivel 1-3 (Alta)	Hasta 1-3 metros
Nivel 4-7 (Media)	Hasta 3-5 metros
Nivel 8-10 (Baja)	Hasta 5-7 metros

Notas Importantes para Reducir Falsas Alarmas

- No enfrente la cámara hacia los objetos con luces brillantes, incluyendo el sol, luces brillantes de la lámpara, etc.
- No coloque la cámara muy cerca de lugares con tráfico intenso. Basado en nuestras numerosas pruebas, la distancia recomendada entre la cámara y el vehículo es de 16 metros (52 pies).
- Manténgase alejado de las salidas, incluyendo ventilaciones del aire acondicionado, salidas de humidificador, ventilaciones de transferencia de calor de

proyectores, etc.

- No instale la cámara en lugares con viento fuerte.
- No enfrente la cámara hacia el espejo.
- Mantenga la cámara al menos 1 metro lejos de cualquier dispositivo inalámbrico, incluyendo enrutadores WiFi y los teléfonos para evitar interferencias inalámbricas.

07 / FAQs

Para obtener más información sobre FAQs, visita la aplicación "Yo" - "Preguntas más frecuentes" - "Battery Camera".

¿El dispositivo se ha desconectado?

- 1) Compruebe que la unidad está en estado de alimentación y observe que la luz de trabajo de la unidad está bien encendida.
- 2) Compruebe que la red WIFI es buena y reinicia el router.
- 3) Si el dispositivo sigue un lugar alejado del router, lo que hace imposible obtener una buena señal WIFI, se recomienda acercarse al router o asegúrese de que la intensidad de la señal para mejorar el rendimiento WIFI de su casa.
- 4) Quita la cámara de tu cuenta de CloudEdge, reinicia el dispositivo y vuelve a añadirlo.
- 5) Compruebe que el firmware del dispositivo y las aplicaciones están actualizadas.

¿Actualizar el router o la contraseña WIFI?

Quita la cámara de tu cuenta de CloudEdge, reinicia el dispositivo y luego vuelve a añadirlo usando el nuevo WIFI o contraseña.

¿La alarma se activa con frecuencia?

- 1) Dentro de la aplicación, baje la sensibilidad de la alarma de detección de movimiento.
- 2) Compruebe si hay objetos dentro del campo de visión del dispositivo que interfieran y activen el sensor PIR, como unidades de aire acondicionado exteriores, coches en movimiento, peatones que pasan, etc. Ajuste el ángulo del dispositivo para evitar que estos objetos que interfieren fácilmente.
- 3) Activar "Alarma solo cuando aparecen personas" para filtrar las alarmas inútiles usando algoritmos humanoides.

¿Consumo rápido de energía?

- 1) En el caso de una cobertura wifi deficiente (como una señal inferior al 75 %), lo que aumentará el consumo de energía;
- 2) La frecuencia de disparo PIR es alta y el consumo de energía aumentará cuando la luz infrarroja/luz blanca esté encendida por la noche;
- 3) El teléfono móvil a menudo accede a la cámara de forma remota, lo que aumentará el consumo de energía;
- 4) Para el primer uso, se recomienda usar la energía al 10 % y luego cargarla al 100 %, lo cual es útil para la salud de la batería de litio.

¿La cámara no detecta movimiento?

- 1) En el caso de una red inestable, es posible que el mensaje no se envíe a tiempo después de que se active el PIR. En este caso, primero puede confirmar el estado de la red y quitar la cámara para verificar y confirmar en un entorno con buena cobertura de red;
- 2) La posición de instalación inadecuada dará como resultado que el PIR no se active ni detecte. Si la posición es demasiado alta, el objeto está demasiado lejos o el objeto es demasiado pequeño, la cámara no se activará, intente ajustar la posición de instalación de acuerdo con los requisitos de activación varias veces.

¿Tarjeta SD no reconocida?

- 1) La capacidad de soporte es de 16 ~ 128 GB de tarjeta TF;
- 2) Antes de usar, asegúrese de formatear la tarjeta TF como sistema de archivos FAT32 o exFAT en la computadora, luego insértela en la cámara y finalmente realice la operación de formateo de la tarjeta de memoria en la cámara nuevamente;
- 3) Si la tarjeta TF no se reconoce durante el uso, generalmente es un problema de calidad de la tarjeta TF y es necesario reemplazar la tarjeta de memoria con una lectura y escritura más estables

Manufacturer: Shenzhen CTV Int Cloud Technology Co., Ltd.
601, B Building, No.10, East District, Shangxue Industrial City, Xinxue Community, Bantian Street, Longgang District, Shenzhen, Guangdong Province, China

Brand: SHENZHEN GLOBALEBUY CO., LTD.
Room 102, Building D, Donghaiwang Industrial Zone, No.369 Bulong Road, Ma'antang Community, Bantian Street, Longgang District, Shenzhen, Guangdong, China

Made in China
FCC ID: 2AZL7-ZS-GXIS
合同会社デジットスリー



Prolinx GmbH Brehmstr.
56, 40239 Duesseldorf
Germany



Prolinx Global LTD27
Old Gloucester Street
London, WC1N 3AX, UK



ieGeek



www.iegeek.com

ieGeek and ieGeek logo are trademarks of Shenzhen Globalebuy Co., Ltd, registered in the United States and other countries. All right reserved.