
BOOX Palma 3 Series

Quick Start Guide

Model:
Palma 3, BOOX Palma 3 Lite ,BOOX Palma 3 Plus, BOOX Palma 3 C,
BOOX Palma 3 Com ,BOOX Palma 3 Pro (For FCC)
Palma 3, BOOX Palma 3 Pro(For IC)

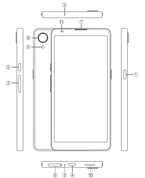



① Power Button ② Volume / Page-turn Buttons ③ Dual Mics
④ USB-C Port ⑤ Customizable Function Button ⑥ Card Slot
⑦ Receiver ⑧ Rear Camera ⑨ LED Flash ⑩ Speaker ⑪ Light Sensor
a. BOOX Device b. Quick Start Guide & Warranty Card c. USB-C Cable

QUICK START GUIDE

Turn on the device: Hold down the power button for 2+3 seconds.

Charging: When the battery is low or the device can not be turned on, please connect your BOOX with a PC or an Adaptor to charge it.

Firmware update: OTA update on the device.
To force shutdown, please hold the power button for about 15 seconds.
For more details, read the full version of the User Manual in the Settings menu of the device.

Remark:5G WiFi indoor use only.
For environmental reasons this package does not include a charger. This device can be powered with most USB power adapters and a cable with USB Type-C plug.

Warm reminder:
Please note that Palma 3 Series is only water-repellent.Liquid may damage it. Liquid damage is not covered under warranty.
To avoid liquid damage, please do not perform the following actions:
Do not go swimming or take a bath with your Palma 3 Series.
Do not expose Palma 3 Series to high-pressure or high-velocity water, such as showering, wakeboarding, surfing, jet skiing,etc.
Do not use Palma 3 Series in saunas or steam rooms.
Do not wash Palma 3 Series in the sea.
Do not use Palma 3 Series outside the recommended temperature range or under extremely humid conditions**.** Avoid dropping or subjecting Palma 3 Series to other impacts that may cause gaps or cracks**.**
Do not disassemble your Palma 3 Series, such as unscrewing screws and disassembling the rear case**.**
Do not expose your Palma 3 Series to soap, detergent, acid, or acidic food liquids, such as perfume, insecticides, lotion, sunscreen, oil, glue remover, hair dye, and cosmetics.

Battery Tips
Do not store the device battery in a fully discharged state for long periods.
Recharge promptly when the device battery level drops below 10–20%.
For long-term storage, keep the device battery at 40-60% charge and recharge periodically to avoid device battery protection locking**.**

BOOX
Customer support center:
Tel: +86 400-1000-520
Email: help@boox.com

© Onyx International Inc. All rights reserved.