
EWORK®

CORDLESS LEAF BLOWER

USER MANUAL

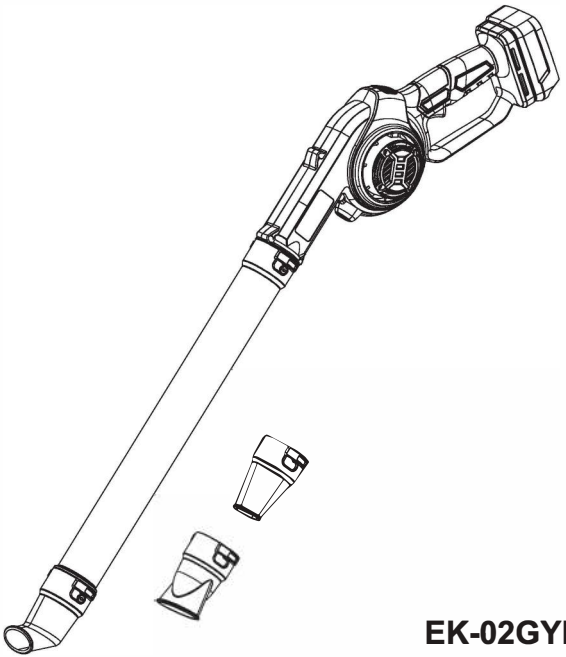

EK-02GYB1
EK-02GYB2

THANK YOU FOR YOUR PREFERENCE FOR EWORK

If you have any peoblems with our product, please feel free to contact us.

CONTENTS

PRODUCT SPECIFICATIONS ---------- 01

PRODUCT OPERATION ---------- 02

SAFETY INSTRUCTIONS FOR THE PRODUCT -------- 04

MOUNTING ---------- 05

CLEANING ---------- 08


MAINTENANCE ---------- 08

TROUBLESHOOTING ---------- 09


ABOUT WARRANTY ---------- 10

PRODUCT SPECIFICATIONS


When using an electrical appliance, basic precautions should always be followed, including the following:

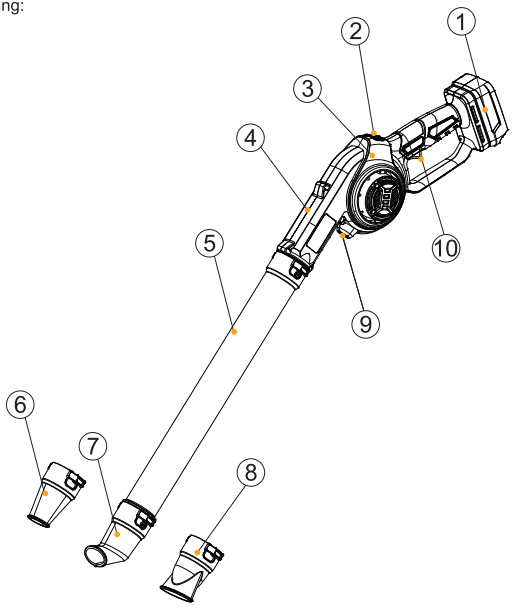

① Battery support	⑥ Concentrating nozzle
② Speed adjustment button	⑦ Bent nozzle
③ Right/Left side cover	⑧ Flat nozzle
④ Housing	⑨ LED Light
⑤ Extension Tube	⑩ Trigger

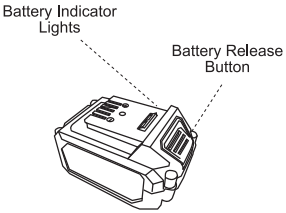

Battery Pack

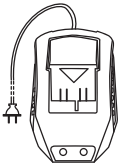


Charger

PRODUCT OPERATION


HOW TO CHARGE

NOTE


- Fully charge the appliance before first use.
- Please use the original battery pack and charger.
- This charger cannot be used to charge other batteries.

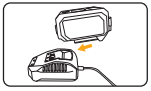

Step1: Slot the battery pack onto the charger tightly.

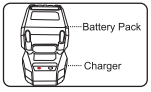

Step2: Plug the charger into the socket. During charging, the charger lights up solid red without flashing.

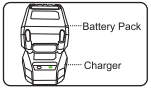

Step3: When fully charged, the charger lights solid green without flashing.

FOR THE CHARGER

1. Use only the voltage specified on the charger.
2. Before charging, read the instructions carefully.

3. Before charging the battery, first connect the power cable to the mains and then connect the battery pack to the charger. After the battery has been fully charged, disconnect the power supply after removing the battery pack from the charger.
4. This device is for indoor use only. Water, rain, or moisture should be avoided.

Check the charge status of the battery

The charge status indicator shows the charge status of the battery when the device starts.

LED LIGHT DISPLAY STATUS		CHARGING STATUS
green	stable without flickering	vorbereitet
red	stable without flickering	0 ~ 99% charged
green	stable without flickering	99-100% charged

General safety instructions for power tools



WARNING! Read all safety warnings and instructions!

Before starting up the device, it is important to have read and understood these instructions and to follow them carefully. The instructions are for your own safety and that of others. They allow you to have a long and trouble-free use of your device.

Children, persons with limited physical, sensory or mental abilities or insufficient experience and knowledge or persons who are not familiar with the instructions must never be allowed to use the machine. Children are not allowed to play with the device. Cleaning and user maintenance must not be carried out by children.

Instruction

1.Read the instructions carefully. Be familiar with the controls and proper use of the machine.
2. Never allow children or persons unfamiliar with these instructions to use the machine. Local regulations can limit the age of the operator.

Preparation

1. Use ear protection and protective goggles. Wear this during the entire time the machine is in use.
2. Do not wear loose clothing or jewelry that could be drawn into the suction opening. Keep long hair away from the vents.
3. Always perform a visual inspection before use to ensure that bolts and other fasteners are secure, the housing is undamaged, and guards are in place.



Safety instructions for the product

1. Use only chargers from the manufacturer. The use of chargers other than those designed by the manufacturer can result in a fire hazard.
2. Do not charge any other batteries with the included charger. The charger is only suitable for charging lithium-ion batteries with a certain nominal voltage. Charging batteries that are not suitable for the device can create a risk of fire and explosion.
3. The charger is not intended for any purpose other than charging rechargeable batteries. Any other use could result in fire, electric shock, or death from electric shock.
4. Please check the data given on the rating plate of the battery charger. Connect the battery charger to a power supply that corresponds to the voltage specified on the rating plate. Never connect the charger to a power supply with a different voltage.
5. Check the charger, cable and plug each time you use the device. Never use the charger with defective parts.
6. Protect the charger from rain and moisture. The penetration of water into the device increases the risk of electric shock.
7. Keep the charger clean. Unplug the charger from the outlet before cleaning.
8. To avoid damaging the plug or the cable, disconnect the power connection by pulling the plug and not the cable.
9. Do not examine the charger connector with conductive objects. There is a risk of electric shock or death from electric shock.
10. Do not touch the charger or power cord with wet hands.
11. Do not disassemble or repair the appliance, the battery, and the charger yourself.
12. Before cleaning and maintenance, always switch off the appliance and remove the battery pack.
13. Store the appliance, the battery pack, and the charger in a cool and dry place, away from direct sunlight and moisture.
14. The battery must be charged before using the tool for the first time.
15. Prompt charging of the battery contributes to a long service life. You need to charge the battery if you notice that the performance of the cordless tool is decreasing.
16. When not in use, it is recommended to charge regularly, such as every four to six months.
17. Do not open the battery. There is a risk of short circuits.
18. Protect the battery against fire, water and moisture. There is a risk of explosion.
19. Do not wear loose clothing when operating. Keep the long hair away from the vents.
20. Do not aim the blower tube at people or pets when operating the appliance.
21. Turn off the appliance and detach the battery pack immediately when there is an unusual sound or vibration. Check if any parts inside the appliance are loose or broken.
22. If the appliance breaks down, tum off it at once and detach the battery pack.
23. Do not use the appliance in severe weather conditions, especially when there is lightnin.
24. Please use EWORK 20V Series battery pack and fast charger.

MOUNTING

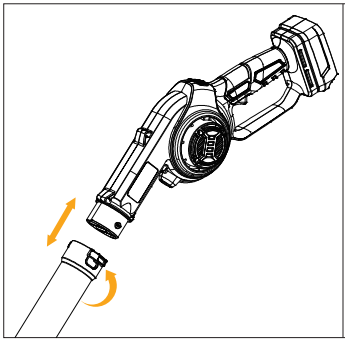


Abb.1

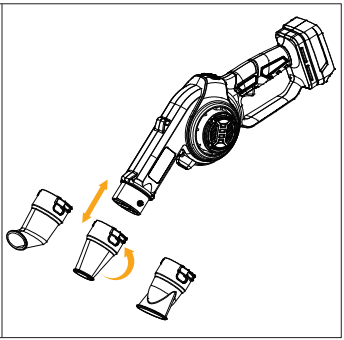


Abb.1-1

Assemble the blowpipe (Abb.1)

NOTE: Before assembling the tube, make sure that the battery is not inserted the product.
Extension tube installation: Insert the extension tube into the housing and rotate it to the slot to lock. (Abb.1)
Nozzle installation: insert the nozzle into the housing or extension tube, and rotate it to the slot to lock. (Abb.1-1)

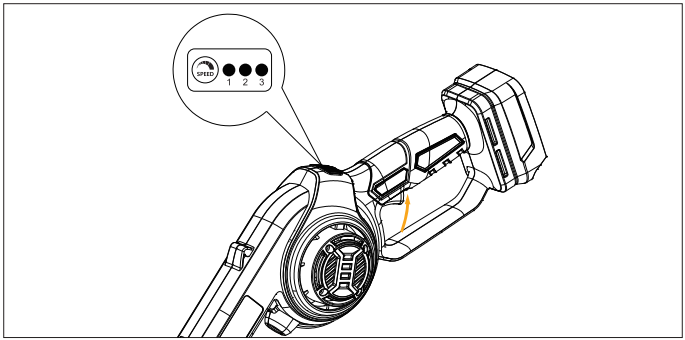


Abb.2

Speed adjustment (Abb.2)

The user can adjust the wind speed according to the need through the wind speed adjustment button. Each pressing button for one gear, with cycle speed adjustment.

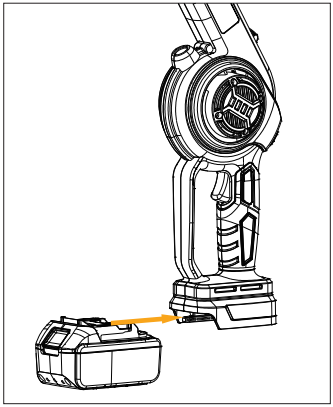


Abb.3

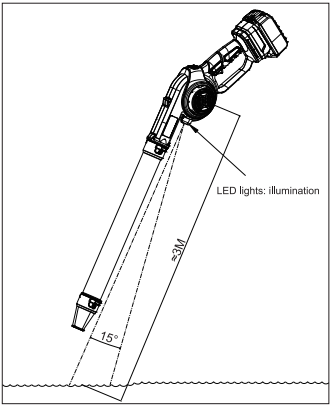


Abb.4

Insert battery (Abb.3)

Insert battery into battery bracket, note to insert it right on the place.

LED light (Abb.4)

LED lights: illumination

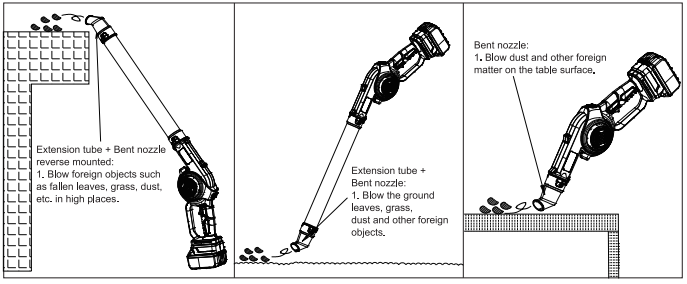


Abb.5

Instructions for use of bent nozzle (Abb5)

1. Extension tube + bent nozzle in reverse direction: To blow leaves / debris / dust etc. from high places.
2. Extension tube + bent nozzle: To blow leaves / debris / dust etc. from the ground.
3. Only bent nozzle: To blow the dust and foreign objects on the working table.

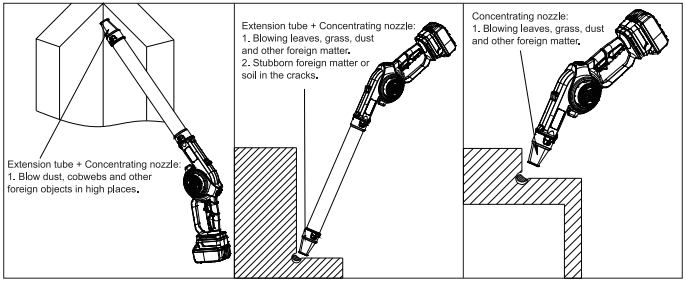


Abb.6

Instructions for use of concentrating nozzle (Abb6)

Extension tube + Concentrating nozzle: 1. To blow foreign objects such as dust / spider web etc. from high places. 2. To blow leaves / debris / dust etc. from the ground. 3. To blow foreign objects from the gap which is hard to reach.

Only concentrating nozzle: 1. To blow foreign objects from working table. 2. To blow foreign objects from the gap or corner of working table.

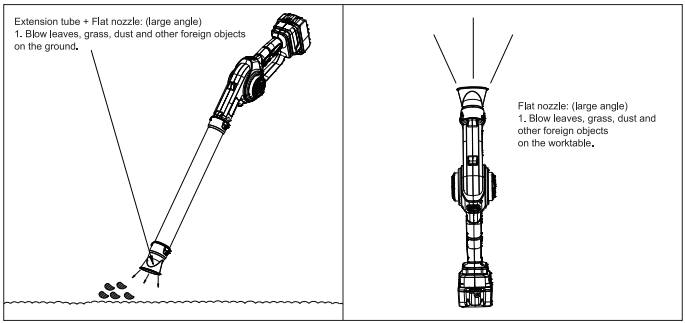


Abb.7

Instructions for use of flat nozzle (Abb7)

1. Extension tube + flat nozzle: To blow leaves / debris / dust from the ground. (More efficiency with wide flat nozzle)
2. Only flat nozzle: To blow foreign objects from working table. (More efficiency with wide flat nozzle)

CLEANING

WARNING!

To avoid serious injuries, always switch off and remove the blower dust the battery before cleaning or maintenance.

The device must neither be sprayed with water nor placed in water. There is a risk of electric shock. Keep the ventilation slots, motor housing and handles of the device clean. Use a damp cloth or brush to do this. Do not use cleaning agents or solvents. This could cause irreparable damage to the device.

A. Keep the ventilation slots free of dust and debris to prevent the cordless leaf blower from overheating.

B. Clean the blower regularly with a soft cloth, preferably every time you use it. If the dirt doesn't come out, use a soft cloth dampened with soapy water.

C. Never use solvents such as gasoline, alcohol, and ammonia water to clean the blower. These solvents can damage the plastic parts.

MAINTENANCE

NOTE

- Before cleaning and maintenance, always switch off the appliance and remove the battery pack.
- Store the appliance, the battery pack, and the charger in a cool and dry place, awary from direct sunlight and moisture.
- Fully charge the battery pack before storing the product when not used for a long time. It's recommended to charge the battery pack every 4-6 months.

TROUBLESHOOTING

PROBLEMS	POSSIBLE CAUSES	SOLUTIONS
Not Working	The battery is low.	Fully charge the battery pack.
	The battery pack is not connected securely to the appliance body.	Securely connect the battery pack.
	The appliance is damaged.	Please contact the customer service team.
Poor Airflow	The battery is low.	Fully charge the battery pack.
	The air inlet is blocked.	Clean the air inlet with a brush or a vacuum cleaner.
Charging Fault	The battery pack is not connected securely to the charger.	Securely connect the battery pack with the charger.
	Defective charger or battery pack.	Please contact the customer service team.


EWORK®