MOBAPAD

责任设计师：

手机号码：

1、附件文件名： 魔派双子星3-包材-02 说明书

2、材质： 80g书写纸

3、工艺： 单色印刷

4、成品尺寸： (折叠后：70mm*100mm)

5、包装说明：

6、包装内放： 手柄下方卡槽里，如例1所示

70 mm

100 mm

MOBAPAD 魔派

魔派双子星3
M12-HD
用户手册

1

产品布局

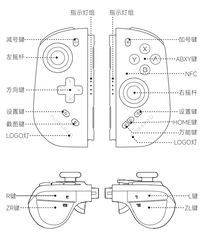

2

产品布局

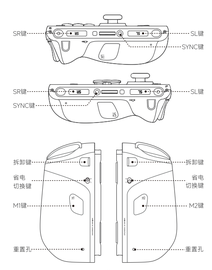

3

基础功能介绍

基础操作

关机：	手柄在「 」模式下，长按「 」3秒关机。
休眠：	手柄在「 」模式下，无操作5分钟自动休眠。
	手柄在「 」模式下，手柄跟随主机自动休眠。
充电：	手柄在「 」模式下，需在 NS2 主机亮屏时充电，或使用专用充电支架充电。

4

省电模式

档位状态	档位说明
	手柄将从NS2主机中取电， 手柄连接NS2将以USB有线连接。
	手柄处于此模式，不能使用NFC功能，需切换省电模式。
	手柄将消耗本身自带电量，提高主机续航，手柄连接NS2将以蓝牙连接。

5

SWITCH设备连接

有线连接：
1.手柄在「 」模式下。
2.打开"Switch Pro手柄的有线连接"。
3.将手柄插入Switch 之前，即可连接。

无线连接：
1.点击Switch 2 主机界面下的「 」图标，点击"更改握法/顺序"。
2.长按手柄SYNC键，手柄模式灯组跑马灯律动，进入配对模式。
3.手柄模式灯 LED 1 常亮，此时按「 」返回主界面即可。

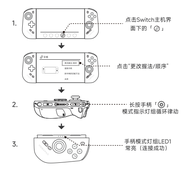

6

NFC功能

1.手柄内置NFC，支持感应Amiibo配件。
2.摇动至「 」档位。
3.当Switch主机与手柄连接成功后，如游戏支持Amiibo功能，可使用Amiibo手办，在右手柄NFC处激活游戏中对应道具。

震动档位设置

震动档位切换	+	降档	按照当前强度震动提示
	+	升档	

7

连击功能

●**可以设置连击功能的按键：** A/B/X/Y/L/R/ZL/ZR/↑/→/↓/←/L3/R3/方向键上下左右/截图键/M1(映射状态)/M2(映射状态)/万能键(映射状态)

手动连击状态： 手柄LOGO灯按下按键闪烁提示

自动连击状态： 手柄LOGO灯自动持续闪烁

手动连击	+ 功能按键	第一次设置后，按下该功能按键后开启连击，松开停止。
自动连击	+ 功能按键	第二次设置后，该功能按键按下后，自动连击，再次按下该功能按键，暂停连击。
取消单键连击	+ 功能按键	第三次设置后，取消连按键连击功能。
连击档位切换	+ 降档	低档 中档（默认） 高档
	+ 升档	
档位灯光提示		调至低档时：LOGO灯闪1下 调至中档时：LOGO灯闪2下 调至高档时：LOGO灯闪3下

8

宏编程

●可设置宏编程功能的按键： A/B/X/Y/L/R/ZL/ZR/L3/R3/↑/→/↓/←/截图键/HOME键/方向键上下左右/摇杆（摇杆只支持八个方向，不支持模拟量）

手动触发	按住「 」键 3 秒，LOGO 灯变成紫色常亮。此时录制操作的按键，录制完毕后，按下 M1/M2/「 」按键结束录制（用户按下 M1 键结束，宏记录的操作将会存储在 M1 键上，按下 M2 键，则存储到 M2 键上），设置成功后 LOGO 灯恢复。
取消单个宏编程按键	按下「 」键3秒，手柄LOGO灯变成紫色常亮，按下需要取消宏定义的按键(M1/M2/「 」)按键，即可单独清除对应按键的自定义设置。
宏循环	按下「 」+M1/M2/「 」，开启宏循环，再次设置按下「 」+M1/M2/「 」，关闭宏循环。
注意事项	仅M1/M2/「 」可开启宏自动循环。 宏循环会被按键操作中断，再次开启组合键宏循环。 M1/M2出厂默认为A/B，宏设置后将变为宏功能，如需改为映射按键请前往APP修改。

9

注意事项

- 内含细小零件，请务必放在3岁以下儿童触及不到的地方。
  若不慎吞食或吸入，请立即就医。
- 请勿靠近火源使用产品。
- 请勿将产品暴露于阳光直射或高湿的环境中。
- 请勿将产品置于潮湿或多尘的环境中。
- 请勿擅自产品或使其跌落。
- 请勿直接接触USB端口，否则可能会导致故障。
- 请勿用力弯曲或拉扯线缆。
- 请使用柔软的干布清洗。
- 请勿使用汽油或稀释剂等化学品。
- 请勿自行拆卸、修理、或改装。
- 请勿将产品用于原本设计用途以外的用途。
  对用于非原本用途而造成的事故或损坏，我们概不负责。
- 请勿直视光束，它可能会伤害您的眼睛。
- 如果您有任何有关产品质量的问题或建议，
  请联系我们或您当地的经销商。

10

售后服务

扫码获取视频教程、移动端APP下载

我们将为您提供魔派产品的支持与服务：
视频教程、升级工具、电子说明书、FAQ

扫码获取更多教程　　**扫码下载移动端App**

1.若商品有质量问题，请优先联系我们的客服进行登记。
　联系方式：service@mobapad.com
2.如需退、换商品,请确保商品完好无损(包括商品外包装，附赠品，说明书，售后卡，标签等)，不影响二次销售。
3.如重保修商品，请务必完整填写用户姓名，联系电话，联系地址，正确选择售后要求与详细说明售后原因，商售后卡随货寄回。

●**保修说明：**
尊敬的用户，您好！
感谢您对"魔派（MOBAPAD）"品牌的信任与支持，我们竭诚为您服务，在质保期内因产品原因造成不能使用的质量问题，经本公司认定，均可享受质保服务。

●**售后信息填写**

产品型号：_____　　产品识别码：_____

购买日期：_____　　订单编号：_____

用户姓名：_____　　联系电话：_____

回邮地址：_____

_____

故障描述：_____

_____

70 mm

100 mm

MOBAPAD

Mobapad M12-HD Manual

1

LAYOUT OVERVIEW

2

LAYOUT OVERVIEW

3

BASIC FUNCTIONS GUIDE

Basic Operations

Power Off	With the controller set to the "Grip", press and hold the "Home" for 3 seconds to power off.
Sleep Mode	With the controller set to the "Grip", it will automatically enter sleep mode after 15 minutes of inactivity.
Charging	With the controller set to the "Grip", it will only charge when the NS2 screen is on. Alternatively, use the charging grip.

4

POWER-SAVING MODE

Position	Mode Settings
	The controller draws power directly from the Switch 2 console via a USB wired connection.
	The controller's NFC functionality is disabled. To use NFC, you must turn on Power-Saving Mode.
	The controller uses its own built-in battery and connects to the Switch 2 via Bluetooth, helping to extend the console's battery life.

5

CONNECTION TO SWITCH 2

Wired Connection

1. Toggle to the "Grip" position.
2. Enable "Pro Controller Wired Communication" in your Switch 2 system settings.
3. Plug the controller directly into the Switch 2 console to complete the connection.

Wireless Connection

1. On your Switch 2 home screen, select the "Controllers", then choose Change Grip/Order.
2. Long-press the SYNC Button on the controller until the LED indicators cycle (marquee effect), entering pairing mode.
3. When LED 1 stays lit solid, tap the "Home" to return to the home screen.
   The connection is complete.

6

NFC FUNCTION

1. The controller has built-in NFC and supports Amiibo accessories.
2. Toggle to the "Grip" position.
3. After the controller successfully connects to your Switch console, if the game supports Amiibo functionality, hold your Amiibo figure near the NFC area on the right controller to activate the corresponding in-game items.

VIBRATION INTENSITY SETTINGS

Vibration Level Toggle	+	Down	The controller will vibrate to confirm the selected intensity level.
	+	Up	

7

TURBO FUNCTION

●Supported Buttons for Turbo: A/B/X/Y/L/R/ZL/ZR/+/-/ D-pad Up, Down, Left, Right/ RS/ LS/Screenshot / M1 (Mapping Mode) / M2 (Mapping Mode) / Custom (Mapping Mode)

Manual-turbo: Logo Light: Flashes for button press confirmation.

Auto-turbo: Logo Light: Flashes continuously.

Manual turbo	+	Function button (1st time)	Press to start; release to stop.
Auto Turbo	+	Function button (2nd time)	Hold to auto-turbo; press again to pause.
Cancel Turbo	+	Function button (3rd time)	Disable turbo for the button.
Turbo Levels	+	Increase Speed	Low Medium (Default) High
	+	Decrease Speed	
LED Indicators			Low Speed: 1 flash of LED 1 Medium Speed: 2 flashes of LED 1 High Speed: 3 flashes of LED 1

8

MACRO PROGRAMMING

●Supported buttons for macro: A/B/X/Y/L/R/ZL/ZR/L3/R3/↑/→/↓/←/Home/ Screenshot/D-pad: Up, Down, Left, and Lloysticks: 8 directions only, no analog input)

Manual Trigger	1. Enter macro recording: Hold "Grip" for 3 seconds until the RGB light turns purple. 2. Perform actions to record. 3. Save & Exit Press back M1 → save to M1. Press back M2 → save to M2. RGB light returns to normal. 4. Trigger macro: Short-press M1/M2/"Grip"
Clear single macro	Hold "Grip" 3s → purple light → press M1/M2/"Grip" to erase its macro.
Macro Auto Loop	Start: Press the "Grip" + M1/M2/"Grip" Stop: Press the "Grip" + M1/M2/"Grip" again
Notes	● Only M1/M2/"Grip" supports macro auto-loop. ● Any button press stops the macro loop. Reuse the shortcut to restart it. ● Defaults: M1/M2 = A/B. Once macros are set, they become dedicated macro buttons. Use the app to revert them to mapped buttons.

9

SAFETY PRECAUTIONS

- Contains small parts. Keep out of reach of children under 3 years old.
  If accidentally swallowed or inhaled, seek immediate medical attention.
- Do not use the product near fire or heat sources.
- Do not expose the product to direct sunlight or high-temperature environments.
- Do not place the product in humid or dusty environments.
- Do not impact or drop the product.
- Do not directly touch the USB port, as it may cause a malfunction.
- Do not forcefully bend or pull the cables.
- Clean with a soft, dry cloth.
- Do not use chemicals such as gasoline or thinner for cleaning.
- Do not disassemble, repair, or modify the product yourself.
- Do not use the product for purposes other than its intended design.
  We are not responsible for accidents or damages caused by improper use.
- Do not look directly at the light beam, as it may harm your eyes.
- If you have any questions or suggestions regarding product quality,
  please contact Mobapad or your local distributor.

AFTER-SALE SERVICE

Download Mobapad APP

Mobapad Facebook

Mobapad Subreddit

Mobapad Discord

Feel free to reach out to us if you encounter any concerns or issues with the Mobapad controllers.
1-Year Limited Warranty.
Got a problem? We're here to help – just reach out anytime.

Email: service@mobapad.com
Address: C02, 6th Floor, No. 536 Huangpu Avenue Middle, Tianhe District, Guangzhou

MOBAPAD

10

FCC Caution.
(1)§ 15.19 Labelling requirements.
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
§ 15.21 Changes or modification warning
Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
§ 15.105 Information to the user.
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the
instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of
the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.

RF warning for Portable device:
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable
exposure condition without restriction.
According to §15.247(e)(i) and §1.1307(b)(1), systems operating under the provisions of this section shall be operated in a manner that ensures that the public is not exposed to radio frequency energy level in excess of the Commission’s guidelines.