GET IN TOUCH?

support@meowanthome.com

MANUFACTURER
Shenzhen Guiyang Network Technology Co., Ltd

ADDRESS
1404K3, East Block, Shengtang Commercial Building,
Futian District, Shenzhen, China

Made in China

Rev_1.1_EN

Meowant

SELF-CLEANING CAT LITTER BOX

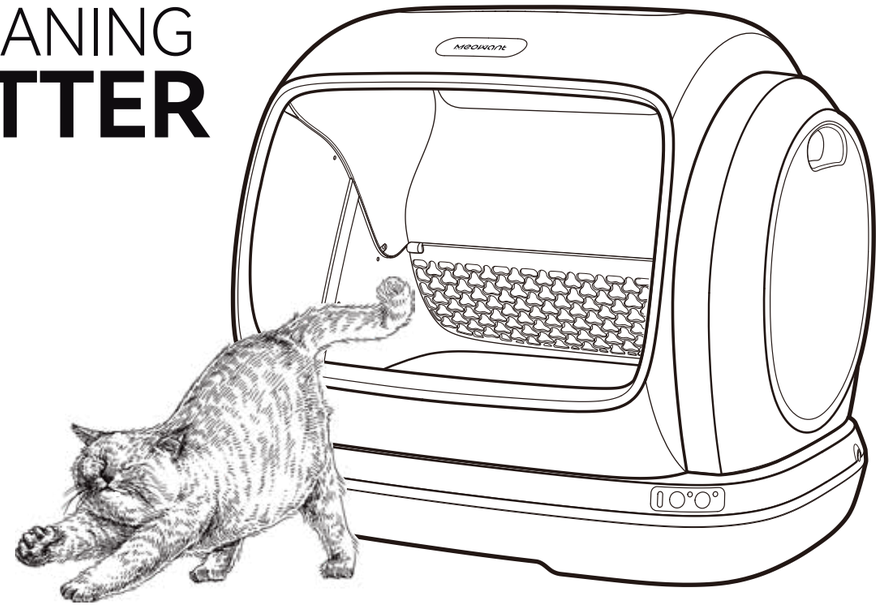

User Manual

Model: MW-SC09



Correct Disposal of This Product (Waste Electrical & Electronic Equipment)
(Applicable in countries with separate collection systems)

This marking on the product, accessories or literature indicates that the product and its electronic accessories should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources. Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.

CONTENT

01 01–03 **IMPORTANT SAFETY INSTRUCTIONS**

Safety Instructions 01
Specifications 03

02 04–06 **EXPLORING CAT LITTER BOX**

In the Box 04
Control Functions 05
Status Indicators 06

03 07–12 **USING CAT LITTER BOX**

Setting Up 07
Getting Started 08
Wi-Fi Setup 10

04 13–16 **CARE AND CLEANING**

Replacing Litter Box Liner 13
Emptying and Cleaning 14

05 17–19 **TROUBLE-SHOOTING GUIDE**

IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USE AND SAVE FOR FUTURE REFERENCE

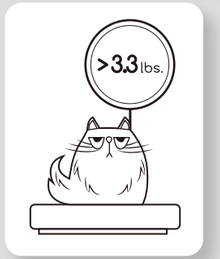

Cat or kitten must weigh at least 3.3lbs but less than 30lbs, and age 4 months or older to safely use the litter box.

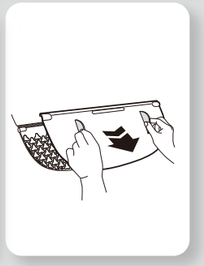

Remove the litter emptying board before first use. Attach and use only when the litter is to be emptied.

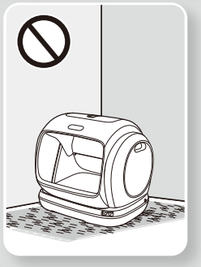

DO NOT place on carpet. Place on a firm, level surface with a little space around.



DO NOT drag when moving the litter box. Move by lifting the base with both hands.



DO NOT rinse or immerse the base in water or other liquids.

When using an electrical appliance, especially when children are present, basic safety precautions should always be followed, including the following:

INTENDED USE

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by person responsible for their safety.
- To reduce the risk of injury, close attention is necessary when used by or near children. Children should be supervised to ensure that they do not play with, in or around the appliance. Keep the appliance and all accessories out of reach of children.
- Not intended for use by handicapped, incapacitated or very old cats that might experience difficulty in entering or leaving the litter box.
- DO NOT attempt to use the appliance for any other purposes. It is designed for use with cats only and is intended solely for the safe elimination of cat waste.

ELECTRICITY SAFETY

- DO NOT operate the appliance if it has a damaged power cord or plug, or if it is malfunctioning or has been damaged in any manner.
- DO NOT use an external power supply other than the one provided with the appliance. Use only the provided power adapter.
- DO NOT immerse the power adapter or the base in water or other liquid or allow moisture to come into contact with these parts.
- DO NOT submerge or expose the electrical components to water or cleaning solutions.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Always unplug when not in use, before putting on or taking off parts and before cleaning, maintenance or servicing. To unplug, grasp the plug, not the power cord.

RELATED TO USE

- Always place the litter box on a firm, level surface. Avoid soft, uneven, or unstable flooring, which may affect the weighing of your cats. If using litter mats or rugs, place in front of the unit. Do not place mats partially or completely under the unit.
- Keep indoors in a cool, dry location. Reduce exposure to high temperature and humidity.
- Avoid contacting with the moving parts.
- DO NOT sit on or place anything on top of the litter box.
- DO NOT put anything in the unit other than clumping litter or litter beads and crystals that are small enough to pass through the screen
- DO NOT allow pets to chew on or swallow any parts. Cover or hide the power cord with care to prevent pets from biting.

- DO NOT allow anything to rest on the power cord. Do not plug in power adapter in an area where people or animals may walk or trip on cord.
- DO NOT attempt to disassemble, repair, modify or replace any part of the appliance. No user serviceable parts inside. All servicing should be performed by qualified personnel only.
- DO NOT use accessories or attachments that are not recommended by the manufacturer.
- Dispose of all packaging materials properly. Keep away from children and pets. Keep plastic bags away from babies and small children. Do not use in cribs, beds, carriages or play pens.
- Always wash hands thoroughly after removing the waste. Pregnant women and those with suppressed immune systems should note that a parasite sometimes found in cat feces could cause toxoplasmosis. Exercise caution and consult with a physician before handling the litter box.
- Keep the deodorizers out of reach of children and pets to avoid accidental ingestion.
- How often you will need to replace the litter box liner depends on the number and size of your cats. We recommend to replace every 3 to 5 days to avoid bacteria growth.
- The litter box liner is not a toy. Keep it out of the reach of babies and small children. Do not use in cribs, children's beds, prams, pushchairs or anywhere in the vicinity of children.

FOR HOUSEHOLD USE ONLY
SAVE THESE INSTRUCTIONS

Specifications

Input	DC 12V ⎓ 1A
Rated Power	12W
Wi-Fi	2.4GHz
For Cat	3.3lbs < Weight < 30lbs, Age > 4 months
Max Load	44 lbs / 20 kg
Applicable Litter	All clumping cat litter (bentonite mineral, mixed and tofu cat litter (length < 0.59in / 15mm))

EXPLORING CAT LITTER BOX

In the Box

Check if all parts and accessories are included.
Contact us via email: **support@meowanthome.com** if there is any part missing or damaged.

Other Accessories

- Cat Litter Mat
- Litter Box Liners
- Power Adapter
- Deodorizer
- User Manual
- Quick Start Guide

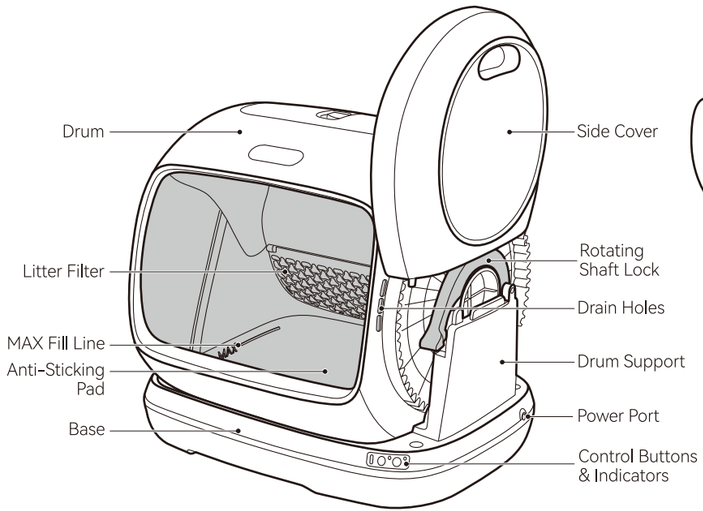

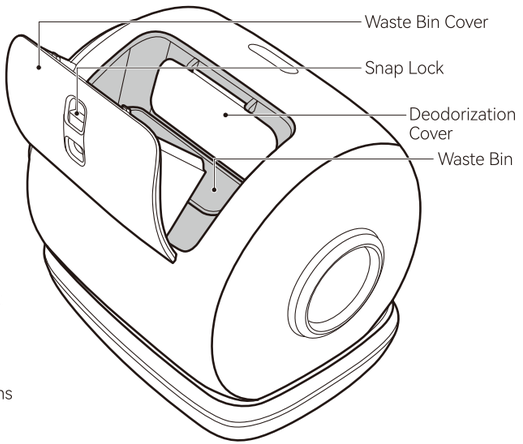

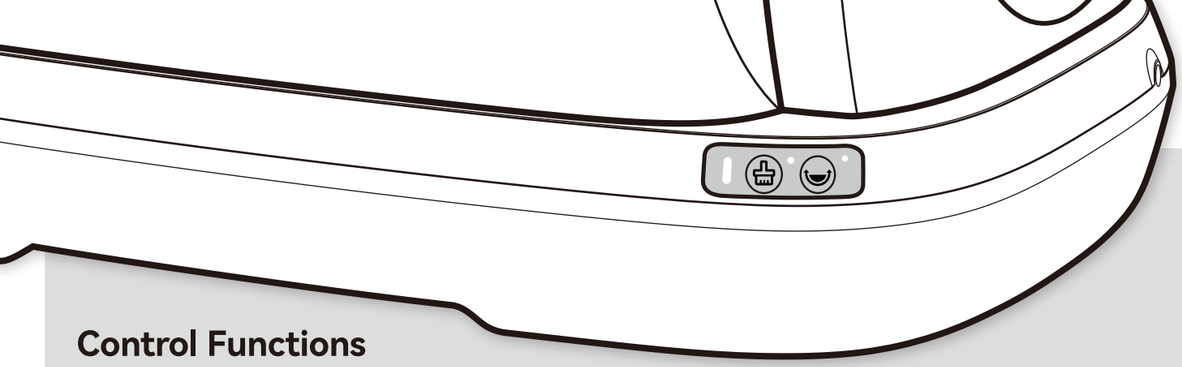

Control Functions

Clean Waste Litter
Press once to start cleaning the waste litter. If already started, press it once again to pause.
Empty All Litter
Attach the litter emptying board to the litter filter, then press the button once to start emptying all litter. If already started, press it once again to pause. Once emptied, remove the litter emptying board.
Wi-Fi Setup
Hold for 3s to bring the litter box into paring mode (status indicator flashes blue).

Spread Litter Flat
Press once to start spreading the litter flat. If already started, press it once again to pause.
Child Lock
Hold for 3s to turn on or cancel child lock (status indicator flashes green twice).

Restore to Factory Settings
Hold and simultaneously for 5s to restore to factory settings.
If reset successfully, you will need to pair the litter box with your mobile again.

Status Indicators

Solid Blue
Ready & connected

Flashing Blue
Setting up WiFi

Solid Blue & Button Indicators ON
Firmware upgrading

Solid Blue & Button Indicators Flashing
Restoring to factory settings

Solid Green
Cat / weight detected when stationary

Flashing Green
Drum returning to Home position

Flashing Green Twice
Child Lock on/off

Solid Red
Side cover not in place

Solid Red & Button Indicators Flashing
- Drum not in place
- Motor stall

Solid Red & One Button Indicator Flashing
Cleaning / emptying / spreading paused

Solid Red & One Button Indicator ON
Cat / weight detected during cleaning / emptying / spreading

USING CAT LITTER BOX

Setting Up

- Remove all protective tapes and foam pads before use.
- Make sure that the drum is properly installed and locked onto the base before plugging into an outlet.
- Make sure that the side cover properly situates on the base support before use.

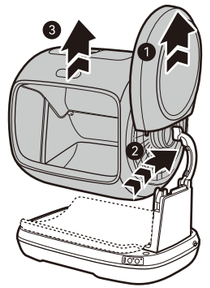

Remove all packing materials. Unlock the rotating shaft lock then hold to take out the drum.

1

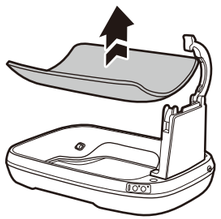

Remove the protective foam pad.

2

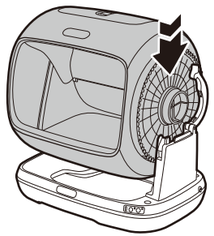

Place the drum on the base by inserting the rotating shaft into the slot of the base support. Make sure that the drum properly sits on without shaking.

3

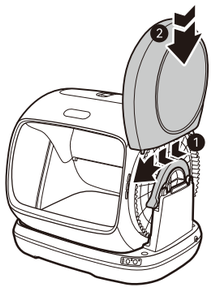

Lock the rotating shaft lock to secure the drum. Align and insert the side cover back into the base support.

4

Getting Started

Remove the litter emptying board before first use. Attach and use only when the litter is to be emptied.



Locate the litter box indoors on a firm, level surface with a minimum of 3 inches of clearance from the wall. Place the mat in front.

1

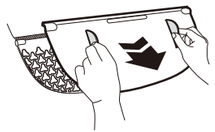

Remove the litter emptying board. Attach and use only when the litter is to be emptied.

2

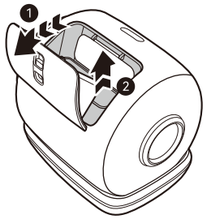

Pinch the snap lock to open the waste bin cover. Then take out the waste bin.

3

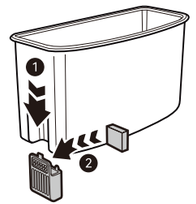

Slide out the deodorizer holder and place the deodorizer in.

4

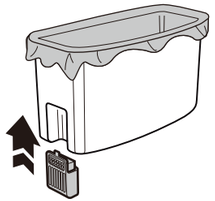

Slide the deodorizer holder back. Spread a litter box liner evenly inside and smooth out all edges.

5

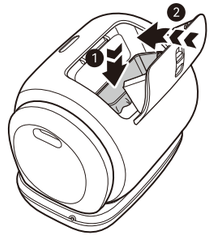

Place the waste bin back in place. Pinch the snap lock to lock the cover.

6

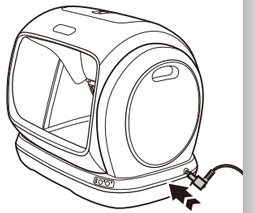

Plug in the litter box. The drum will rotate a full circle automatically. Wait for it to return to Home position.

7



Add clumping litter (length < 0.59in / 15mm) below the edge of the inner pad when spread flat. Do not overfill.

8

Introducing New Litter Box to Your Cat

To help your cat transition to the new litter box:

- **Location is Key.** Place the litter box in the same location as the old one, or leave the old one nearby for a short period of time (at least during transition).
- **Keep the Old Box.** Do not throw out the old box. Put the new one in its designated spot and stop cleaning out the old one.
- **Use Recognizable Scents.** Add a scoop of litter from the old litter box to provide a familiar scent for your cat.

Wi-Fi Setup

2.4GHz

- Make sure that your mobile is connected to a secure 2.4GHz network and Bluetooth is enabled. Allow access to your Location during connection.
- Make sure that the drum is at the Home position before connecting.
- You can use the litter box with control buttons only or download APP for more customizable options.
- The litter box can only be linked to one account. You can hold for 3s and follow the below steps to pair it with another mobile. You can also share with your family members on app.

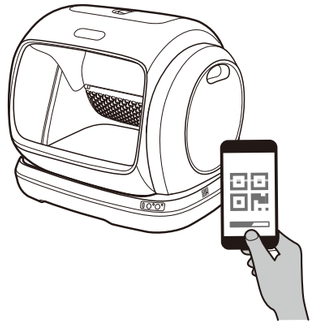

Search or scan QR code on the right side of the base to download AIRPET app, then sign up as instructed.

1



Open app, tap + then select the model to add your litter box.

2

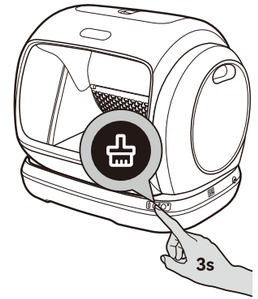

Hold for 3s to bring the litter box into pairing mode (indicator flashes blue). Tap Next to continue.

3

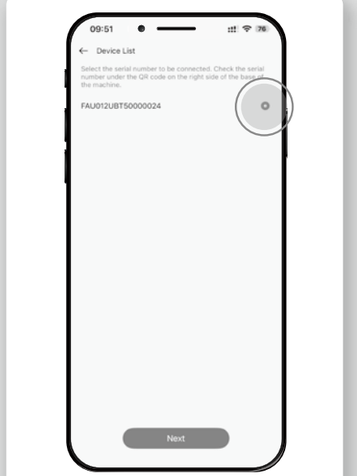

Select device SN to add your litter box. Check the SN below the QR code.

4

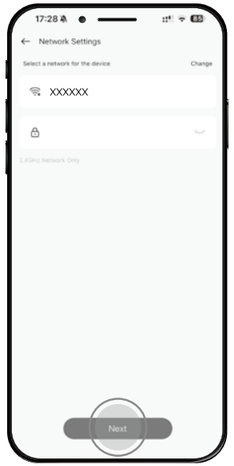

Select a 2.4GHz Wi-Fi and enter password. Tap Next to continue.

5



Wait until it connects and the indicator turns solid blue. Tap Use Now to complete setup.

6

Using with APP

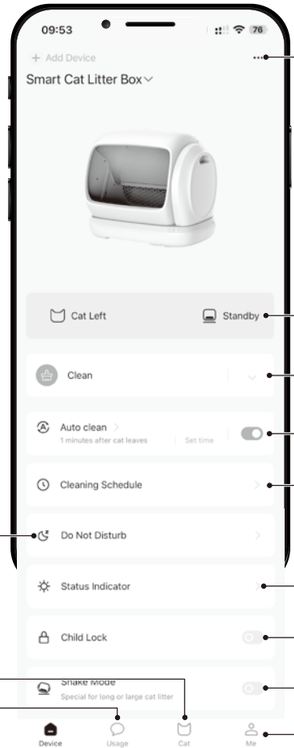

About Device / Settings

Real-Time Status

Manual Clean

Auto Clean
(Auto clean at the scheduled delay time after cat leaves)

Cleaning Schedule
(Clean at scheduled time)

Do Not Disturb
(Auto clean disabled at the scheduled time)

Status Indicator Auto Off

Child Lock On / Off

Cat Profile
Toileting Data

Shake Mode
(Shake during cleaning / emptying)

Account Settings

CARE AND CLEANING

Replacing Litter Box Liner

- How often you will need to replace the litter box liner depends on the number and size of your cats. We recommend to replace every 3 to 5 days to avoid bacteria growth.
- This bag is not a toy. Keep it out of the reach of babies and small children. Do not use the bag in cribs, children's beds, prams, pushchairs or anywhere in the vicinity of children.



Pinch the snap lock to open the waste bin cover. Gather the edges of the liner and dispose. Take out the waste bin.

1

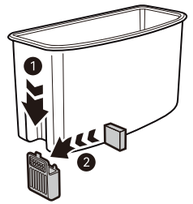

Slide out the deodorizer holder and place a new deodorizer in. It is recommended to replace the deodorizer every 15 days.

2

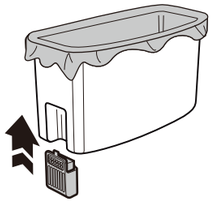

Slide the deodorizer holder back. Spread a new litter box liner evenly inside and smooth out all edges.

3

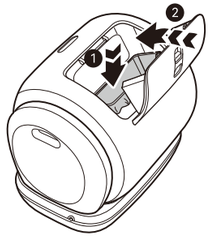

Place the waste bin back in place. Pinch the snap lock to lock the cover.

4

Emptying and Cleaning

- To prevent litter spillage, empty the waste bin before emptying all litter.
- Avoid using soaps, cleaners or chemicals that have strong odor or contain scents that are cat repellent, like citrus, lavender, peppermint, etc.
- DO NOT rinse or immerse the base in water or other liquids.
- Always dry all parts thoroughly before reassembling for next use. Ensure all parts are properly assembled in place.

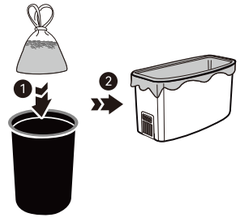

Take out the waste bin and dispose of the litter. Replace with a new liner and place the waste bin back. Make sure that the deodorization cover is not stuck.

1

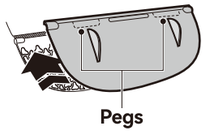

Align and insert the pegs of the litter emptying board into the gap above the litter filter.

2

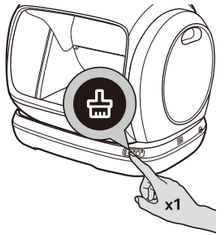

Press once to start emptying all litter. Wait until the empty cycle is done (drum stops rotating).

3



Remove the litter emptying board.

4

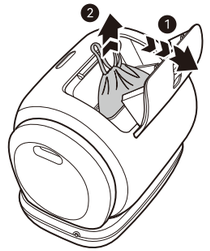

Take out the waste bin and dispose of the litter.

5

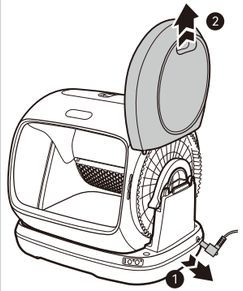

Unplug the litter box. Remove the side cover.

6

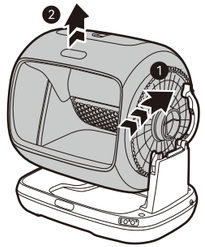

Unlock the rotating shaft lock then hold to take out the drum.

7

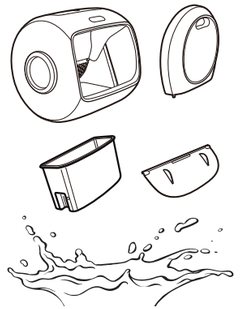

Rinse clean all parts except the base. Air dry thoroughly before reassembling.

8

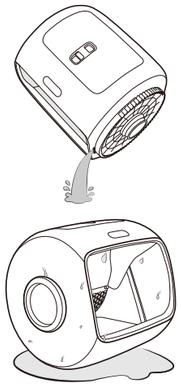

Drain remaining water through the drain holes. Set the drum upright in a well-ventilated place to drain any residual water.

9

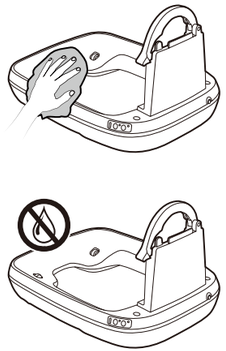

Wipe clean the base with a soft, slightly damp cloth. Do not rinse or immerse in water.

10

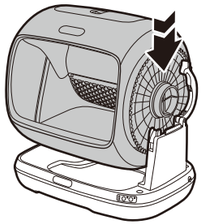

Place the drum on the base by inserting the rotating shaft into the slot of the base support.

11

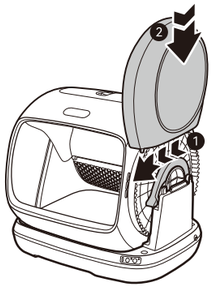

Lock the rotating shaft lock to secure the drum. Align and insert the side cover back into the base support.

12

TROUBLESHOOTING GUIDE

The troubleshooting guide addresses the most common problems. If problems persist, feel free to contact the Customer Support via email: **support@meowanthome.com**

Problem	Solution
Fail to connect the litter box.	• Make sure that your mobile is connected to a secure 2.4GHz Wi-Fi network and Bluetooth is enabled. • Make sure that your mobile and litter box are connected to the same Wi-Fi network. • Make sure that you have entered a correct Wi-Fi password and the litter box is under strong Wi-Fi signal. • Check if the litter box is linked to another mobile. Press and hold for 3s to pair again or have the mobile unbound on app. • Check if a 5GHz frequency is used. Try a Personal Hotspot, or change 5GHz to 2.4GHz to connect your mobile. Consult the router supplier for detailed instruction on router configuration.
Drum does not rotate or stops during cleaning, emptying or spreading flat.	• Disconnect from the power supply and remove the drum to check if there is any foreign object stuck at the rotating shaft of the drum. • Make sure the drum is installed properly on the base. Reconnect it to the power supply and try again. • The drum stops rotating automatically when cat / weight is detected. It will resume rotating after the cat leaves, or the weight is removed.
The waste cannot be cleaned.	Check if the deodorization cover is blocked by the litter box liner, cat litter or waste. Open the waste bin cover and remove any foreign objects.
I cannot weigh my cat accurately.	• Make sure that the litter box is placed on a firm, level surface with space around. Do not place the mat partially or completely under the litter box. • Disconnect from the power supply, reconnect and try again. • Cat movement can cause weight errors of 10-20%, so the weight on app might not reflect its actual weight.
Buttons are not responsive.	Check if child lock is turned on. Press and hold button for 3s to cancel or turn on child lock.
How to prevent litter sticking?	• Choose a highly absorbent, fast-clumping litter for the litter box. • Always keep enough litter between the MAX and MIN fill line. • Regularly spread the litter to keep the surface even and prevent thin spots. • Set a longer time for forming solid clumps. • Check if any part of the anti-sticking pad is damaged. • For soft or loose stools, try adjusting your cat's diet or portion size. If the condition persists beyond a day or two, seek advice from your veterinarian.

How to reduce unpleasant odors from litter box?	To minimize unpleasant odors from the cat litter box, • Scoop daily or more frequently to keep the odor at a minimum. • Regularly clean the litter box and waste bin. • Regularly replace the litter. Fresh litter absorbs odors better. • Choose odor-absorbing litter. • Ensure proper ventilation. Place the litter box in a dry, well-ventilated area where humidity is at a minimum. • Try the included deodorizer. • Introduce a second litter box. For multiple cats (3 cats or more), we recommend using at least two litter box.
Can the litter box be used by all cats?	Cat or kitten must age 4 months or more and weigh at least 3.3lbs to safely use the litter box. For kittens under 6 months old or less than 3.3lbs, leave the litter box unplugged or set to manual clean mode.
Can my family members and I connect to the litter box at the same time?	Yes, you can. But to protect your privacy, the litter box can only be linked to one account. You can share with your family members on app.
Can I use the litter box without APP?	Yes, you can use the litter box with control button only or download APP for more customizable options.
How to get the new litter box liners or deodorizer?	For the new litter box liners or deodorizer, search for MeoWant litter box liners or deodorizer on Amazon or contact our Customer Support via email: **support@meowanthome.com**

FCC Compliance

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1)this device may not cause harmful interference, and
(2)this device must accept any interference received, including interference that may cause undesired operation.
Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

IC Compliance

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:
(1)This device may not cause interference.
(2)This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :
(1) L' appareil ne doit pas produire de brouillage;
(2) L' appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d' en compromettre le fonctionnement.

Radio Frequency Exposure Statement for IC
The device has been evaluated to meet general RF exposure requirements. The device can be used in mobile exposure conditions. The min separation distance is 20cm.
Déclaration d'exposition aux radiofréquences pour IC
L'appareil a été utilisé pour répondre aux exigences générales en matière d'exposition aux radiofréquences.