cosori

CAF-DB601S-KUSR

Air Fryer Upgraded Model 6.0-Quart Smart Air Fryer

User Manual

veSync

Download on the App Store

GET IT ON Google Play

Thank you for your purchase!

TIMELESS QUALITY, GUARANTEED

Download and connect your smart air fryer to the VeSync app to enjoy smart features, recipe inspiration, and more.

ELEVATE your menu with our recipe gallery at **COSORI.COM**

ENJOY weekly, featured recipes handcrafted by our chefs in the Cosori kitchen.

QUESTIONS? CONTACT US

For a little extra help in the kitchen, reach out to us:

Email: recipes@cosori.com
Phone: 1-888-402-1684
Mon–Fri, 9:00 am–5:00 pm PST/PDT

Exceptional results for everyday meals.

Table of Contents

xx xx
xx xx
xx xx
xx xx
xx xx
xx xx
xx xx
xx xx
xx xx
xx xx
xx xx
xx xx
xx xx

Package Contents

1 × Air Fryer Upgraded Model
6.0-Quart Smart Air Fryer
1 × Crisper Plate
1 × User Manual
1 × Quick Start Guide

Specifications

Model(s)	CAF-DB601S-KUSR
Power Supply	AC 120V, 60Hz
Rated Power	1,780W
Capacity	6.0 qt / 5.7 L (serves 3–5 people)
Temperature Range	170°–450°F / 75°–230°C
Time Range	1 min–60 min
Dimensions (including handle)	14.3 × 11.4 × 11.7 in / 36.3 × 29 × 27.2 cm
Dimensions (not including handle)	11.8 × 11.8 × 11.9 in / 30.0 × 30.0 × 30.1 cm
Weight	11.02 lb / 5 kg

Note: *To access additional smart air fryer functions, download the VeSync app* *(see page __)*.

READ AND SAVE THESE INSTRUCTAIONS

IMPORTANT SAFEGUARDS & WARNINGS

FOLLOW BASIC SAFETY PRECAUTIONS WHEN USING YOUR AIR FRYER. READ ALL INSTRUCTIONS.

KEY SAFETY POINTS

- **Do not** touch hot surfaces. Use handle.
- Use caution when turning the basket over after cooking, as the hot crisper plate may fall out and create a safety hazard.
- Firmly insert the crisper plate into the basket to reduce the chance of it falling out.
- **Do not** block any ventilation openings. Hot steam is released through openings. Keep your hands and face clear of openings.
- **Always** use tongs to carefully remove hot food.

GENERAL SAFETY

- To protect against electric shock, **do not immerse the air fryer** housing, cord, or plug in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children. Unplug when not in use, and before cleaning. Allow to cool before putting on or taking off parts.
- **Do not** operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment. Contact **Customer Support** (page __).
- **Do not** use your air fryer if it is damaged, not working, or if the cord or plug is damaged. Contact **Customer Support** (page __).
- The use of accessory attachments is not recommended by Cosori and may cause injuries.
- **Do not** use outdoors.
- **Do not** place the air fryer or any of its parts on a stove, near gas or electric burners, or in a heated oven.
- Use extreme caution when removing the basket and crisper plate or disposing of hot grease.
- **Always** place the crisper plate and basket on a heat-resistant surface after removing it from the air fryer.
- **Do not** clean with metal scouring pads. Metal fragments can break off the pad and touch electrical parts, creating a risk of electric shock.
- **Do not** place anything on top of your air fryer. Do not store anything inside your air fryer.
- This air fryer is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the air fryer by a person responsible for their safety.
- Cleaning and user maintenance shall not be done by children without supervision.
- Children should be supervised to ensure that they **do not** play with the air fryer.
- This air fryer is not intended to be operated by means of an external timer or separate remote-control system.
- To disconnect, turn any control to "off", then remove plug from wall outlet.
- **Do not** use the air fryer for anything other than intended use.
- Any servicing should be performed by an authorized service representative, contact **Customer Support** (page __).
- For instructions on cleaning the accessories, see **Care & Maintenance** (page__).
- Use a soft sponge or cloth with a neutral detergent to gently wipe the glass.
- **Never** use abrasive tools like steel wool, as this can scratch the glass or cause invisible cracks.
- After cleaning the basket, wipe it dry and pay special attention to the corners of the viewing window to prevent water vapor condensation from obscuring your view during the next use.
- It is normal for fog to form on the viewing window during cooking due to the temperature difference between the inside and outside.
- **Not for commercial use. Household use only.**

WHILE AIR FRYING

- An air fryer works with hot air **only. Never** fill the basket with oil or fat.
- **Never** use your air fryer without the basket in place.
- **Do not** place oversized foods or metal utensils into your air fryer as they may create a fire or risk of electric shock.
- **Do not** overfill the basket. Heaping amounts of food may touch the heating coils and cause a fire hazard.
- **Do not** touch accessories (including the crisper plate) during or immediately after air frying.
- **Do not** place paper, cardboard, non-heat-resistant plastic, or similar materials into your air fryer.
- **Never** put baking or parchment paper into the air fryer without food on top. Air circulation can cause paper to lift and touch heating coils.
- If lining the basket with foil, make sure it does not contact the heating elements, which can cause overheating and risk of fire.
- **Always** use heat-safe containers. Be extremely cautious if using containers that aren't metal or glass.
- To reduce the risk of fire, keep your air fryer away from flammable materials (curtains, tablecloths, etc.). Use on a flat, stable, heat-resistant surface away from heat sources or liquids.

- Immediately turn off and unplug your air fryer if you see dark smoke coming out. White smoke is normal, caused by heating fat or food splashing, but dark smoke means that food is burning or there is a circuit problem. Wait for the smoke to clear before pulling the basket out. If the cause was not burnt food, contact **Customer Support** (page __).
- To turn the air fryer off, press ⏻ once. The air fryer will beep, and all buttons will shut off except the ⏻ button, which will turn orange.
- **Do not** leave your air fryer unattended while in use.
- **Do not** touch the viewing window glass with your hands during the cooking process to avoid burns.
- The viewing window becomes extremely hot during cooking; **do not** touch it with your hands at any time to avoid burns.

POWER & CORD

- Turn off the air fryer before removing the plug from the outlet.
- To unplug, grab the plug and pull fromthe outlet. **Never** pull from the power cord.
- **Do not** let the power cord (or any extension cord) hang over the edge of a table or counter or touch hot surfaces.
- Remove and discard the protective cover fitted over the power plug of the air fryer to prevent a choking hazard.
- **Never** use an outlet below the counter when plugging in your air fryer.
- This air fryer has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. **Do not** attempt to modify the plug in any way.
- Your air fryer should only be used with **120V, 60Hz** electrical systems. **Do not** plug into another type of outlet.
- Keep the air fryer and its cord out of reach of children.
- A short power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
- If the power-supply cord is damaged, it must be replaced by Vesync (US) Corporation or similarly qualified persons in order to avoid an electric or fire hazard. Please contact **Customer Support** (page __).

EXTENSION CORDS

- Longer extension cords are available and may be used if care is exercised in their use. If a longer extension cord is used:
  - The marked electrical rating of the extension cord should be at least as great as the electrical rating of the air fryer.
  - The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.
  - This air fryer has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet **only** one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. **Do not** attempt to modify the plug in any way.

CAUTION: Hot surface.

WARNING: Any other servicing should be performed by an authorized service representative.

WARNING: Items marked with the following symbol may reach high temperatures and should be handled carefully.

SAVE THESE INSTRUCTIONS

Getting to Know Your Smart Air Fryer

Your Cosori smart air fryer features top and bottom heating elements so your food cooks more efficiently and evenly. With user-friendly one-touch controls, a ceramic-coated basket and crisper plate, specialized thermal cleaning power, and an intuitive design, the Cosori Air Fryer Upgraded Model Smart Air Fryer is the star of your kitchen.

Note:
- ***Do not*** *try to open the top of the air fryer. This is not a lid.*
- *The basket and crisper plate are made of aluminum with ceramic coating.*

A. Control Panel
B. Basket
C. Viewing Window
D. Basket Handle
E. Crisper Plate
F. Air Outlet
G. Heating Elements
H. Silicone Stoppers

CONTROL PANEL

a. On/Off
b. ThermaClean™
c. Increase/Decrease Temperature
d. Increase/Decrease Time
e. Light
f. Start/Pause
g. Cooking Functions

Note: *During operation, it is normal for the exhaust to release warm air.*

DISPLAY

h. Temperature
i. Time
j. Wi-Fi® Indicator

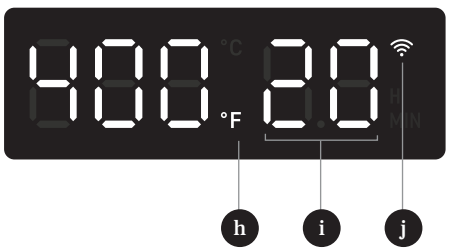

DISPLAY MESSAGES

FPO

FPO

Before First Use

SETTING UP

1. Remove and discard all packaging from the air fryer, including any temporary stickers and the protective cover fitted over the power plug.
2. Place the air fryer on a stable, level, heat-resistant surface. Keep away from areas that can be damaged by steam (such as walls or cupboards).

Note: *Leave at least 5 in / 13 cm of space behind and above the air fryer. Leave enough room in front of the air fryer to remove the basket.*

3. Wash both the basket and crisper plate thoroughly using either a dishwasher or a non-abrasive sponge.

   CAUTION: *The basket and crisper plate have a ceramic coating.*

   Note:
   - *Gentle handwashing is recommended to prolong the life of the coating.*
   - *Avoid using abrasive cleaning materials on the basket and crisper plate. These will scratch or damage their surfaces.*
   - *If you notice any cracking or peeling in the coating of the crisper plate or basket, we recommend replacing them to maintain cooking performance.*
4. Wipe the interior and exterior of the air fryer with a slightly moist cloth. Dry with a towel.
5. Place the crisper plate back into the basket. Tilt the crisper plate to insert one side first, then press down on the other side.
6. Place the basket inside the air fryer.

TEST RUN

A test run will help you become familiar with your air fryer, make sure it's working correctly, and clean it of possible residues.

1. Make sure the air fryer basket is empty, then plug in the air fryer.
2. Press **AIR FRY**. The display will show "**385°F**" and "**10 MIN**".
3. Press ▶II to begin. When finished, the air fryer will beep and the display will show "**End**".
4. Remove the basket and let it cool completely for 10–30 minutes.

Note:
- *Use caution when turning the basket over after cooking, as the hot crisper plate may fall out and create a safety hazard.*
- ***Do not** unscrew the basket handle from the basket.*

Silicone Stoppers
- The crisper plate contains 4 silicone stoppers made of food-safe material. These stoppers keep the plate fitted to the bottom of the basket.
- When placing the crisper plate into the basket, tilt the crisper plate to insert one side first, then press down on the other side.
- Make sure children **do not** play with the silicone stoppers or swallow them.

Note: *Forcing the crisper plate into the basket incorrectly may cause damage.*

VeSync App Setup

Note:
- *The VeSync app is continually being improved and may change over time. If there are any differences, follow the in-app instructions.*
- *Requires device to run app, Wi-Fi® or mobile data, and iOS version 15 or Android version 8 (or above). Standard data and messaging rates may apply. Registration is required.*

1. To download the VeSync app, scan the QR code or search "VeSync" in the Apple App Store® or Google Play Store.

Note: *For Android™ users, choose "Allow" to use VeSync.*

Download on the App Store

GET IT ON Google Play

2. Open the VeSync app. If you already have an account, tap **Log In**. To create a new account, tap **Sign Up**.

Note: *You must create your own VeSync account to use third-party services and products. These will not work with a guest account. With a VeSync account, you can also allow your family and friends to control your smart air fryer.*

3. Plug in your smart air fryer to enter pairing mode.
4. Tap **+** and select your smart air fryer.
5. Follow the in-app instructions to set up your smart air fryer.

Note:
- *You can change the name and icon at any time by going to the smart air fryer screen and tapping [settings icon].*
- *You can use the VeSync app to connect your smart air fryer to **Amazon Alexa** or **Google Assistant™**.*

Disconnecting From Wi-Fi®
- To disconnect Wi-Fi, press and hold the ⏻ for 15 seconds until the Wi-Fi indicator turns off. This will restore the smart air fryer's default settings and disconnect it from the VeSync app.
- To reconnect, please follow the instructions in the VeSync app for adding a device.

Using Your Smart Air Fryer

Note:
- ***Do not** place anything on top of your air fryer to avoid damaging the glass control panel.*

- *An air fryer is not a deep fryer. **Do not** fill the basket with oil, frying fat, or any liquid.*
- *When taking the basket out of the air fryer, be careful of hot steam.*
- *We recommend using the crisper plate when cooking to take full advantage of the 360° airflow for optimal results.*
- ***Do not** use steel wool or other hard objects to scratch the viewing window.*

COOKING FUNCTIONS

Using a cooking function is the easiest way to cook. Functions are programmed with an ideal time, temperature, and fan speed for cooking certain foods. See **Cooking Chart** (page__).

Time and temperature for all cooking functions can be adjusted.

Note: *Cooking functions are programmed with an ideal time, temperature, and fan speed for cooking certain foods. The air fryer will default to the Air Fry function if no other function is selected.*

To customize a cooking function:

1. Select the function's button you want to customize
2. Press ⌃ or ⌄ to change the function's time or temperature.
3. To save, press and hold the function's button for 3 seconds until you hear a beep.

Note:
- *Press and hold ⌃ or ⌄ to rapidly increase or decrease the time or temperature.*

To reset all cooking functions, press and hold ⏻ for 15 seconds.

AIR FRYING

1. Place the crisper plate into the basket. The crisper plate allows excess oil to drip down to the bottom of the basket.

Note: *The crisper plate may not be used for certain recipes, such as muffins and breads.*

2. Select a cooking function.
3. Optionally, adjust the temperature and/or time by pressing ⌃ or ⌄. You can do this anytime during cooking.
4. Press ▶II to begin cooking.
5. During cooking, press **Light** to turn on the cooking light and monitor the progress. The light will automatically turn off after 3 minutes.
6. The air fryer will beep when finished. The display will show "**End**".
7. If needed, press **WARM** then press ⌃ or ⌄ to adjust the time (1–60 min).
8. Take the basket out of the air fryer, being careful of hot steam. Use tongs or heat-safe utensils to remove the food from the basket.
9. Allow to cool before cleaning.

COOKING CHART

Function	Default Temperature	Default Time	Temperature Range	Time Range
AIR FRY	385°F / 195°C	10 min	300°–450°F / 150°–230°C	1–60 min
ROAST	425°F / 220°C	12 min	350°–450°F / 175°–230°C	1–60 min
BROIL	450°F / 230°C	5 min	425°–450°F / 220°–230°C	1–30 min
REHEAT	390°F / 200°C	5 min	300°–425°F / 150°–220°C	1–60 min
BAKE	330°F / 165°C	20 min	260°–400°F / 125°–205°C	1–60 min
Keep Warm ("WARM")	170°F / 75°C	30 min	-	1–60 min
ThermaClean	450°F / 230°C	60 min	-	30 min / 60 min

Note: *Results may vary. Time and temperature for all cooking functions (**except for ThermaClean**) can be adjusted. To go back to default settings, press and hold the cooking function's button on the display.*

THERMACLEAN™ TECHNOLOGY

The air fryer uses a specialized PFAS-free coating to help reduce grease and oil buildup on the cooking chamber ceiling during cooking.

The cleaning process works in 3 phases:

Heating

The top heating element heats the cavity ceiling to a high temperature.

Decomposition

High heat and oxygen break down grease on the cavity ceiling into water, carbon dioxide (CO_2), and a small amount of ash.

Cooling

When the cleaning cycle ends, the heating element turns off and the cavity cools naturally with the basket closed. Once the cavity has cooled completely, wipe away any remaining residue with a damp cloth.

Note: *ThermaClean **only** cleans the cavity ceiling. The heating elements, basket,and crisper plate are not included in the self-cleaning cycle and need to be cleaned with warm water and mild detergent.*

USING THERMACLEAN

Use ThermaClean immediately after cooking greasy foods or whenever grease buildup is visible on the cavity ceiling. Regularly using ThermaClean helps maintain the air fryer's cooking performance and cleanliness.

1. Make sure the basket and crisper plate are clean and free of any food debris or residue to help prevent excessive smoke or odors.
2. Press **ThermaClean**.
3. Depending on the level of buildup, adjust the time by pressing ∧ or ∨ for 30 min (Quick Clean) or 60 min (Deep Clean). The display will show "**CLE 30 MIN**" or "**CLE 60 MIN**".
4. Press ▶II to begin.
5. The display will show "**END**" once cleaning is complete.

Note: *For heavy grease buildup or after cooking fatty foods, use the 60-minute Deep Clean cycle to maintain the coating's effectiveness.*

CLEANING REMINDER

The cleaning reminder helps you remember when it's time to run a ThermaClean cycle. When turned on, the air fryer tracks cumulative cooking time and recommends a cleaning cycle after **100 minutes** of cooking. The reminder is turned off by default.

To turn the cleaning reminder on:

1. Press and hold **ThermaClean** for 3 seconds.
2. The display will show "**ON**".
3. After 100 minutes of cumulative cooking time, **ThermaClean** will flash after cooking is complete to recommend running a cleaning cycle.
4. Once a cleaning cycle is complete, the cumulative time will reset to 0 and begin tracking again during the next cooking session.

Note: *To turn off the cleaning reminder, press and hold* **ThermaClean** *for 3 seconds.*

TIPS FOR EXTENDING COATING LIFE

Run a Heat Cycle Periodically

If you frequently cook foods with low oil content and high moisture, such as toast, run a heat cycle (with no food in the basket) at a temperature of at least 356°F / 180°C to help maintain the coating's effectiveness.

Avoid Sugar Buildup

Prevent sugary marinades, sauces, or glazes from spilling onto the coated walls. Burnt sugar can form stubborn residue that may reduce the coating's performance.

Clean After Cooking Fatty Foods

After cooking foods with a high fat or oil content, use ThermaClean or clean the air fryer as needed to help prevent residue buildup.

CAUTION:

Avoid using harsh chemical cleaners.

- **Do not** spray or soak the surface with, strong alkaline degreasers, solvent-based cleaners, or chlorine-based bleaches. These chemicals can severely damage the catalyst's active sites and render the coating ineffective.
- For routine cleaning, simply use a soft cloth dampened with mild detergent and warm water.

Allow to cool naturally before cleaning.

The temperature inside the cooking chamber is extremely high immediately after cooking. It is recommended to let the air fryer cool down naturally before wiping it, to prevent the coating from cracking or peeling due to thermal expansion and contraction.

Cooking Tips

OVERFILLING

If the basket is overfilled, food will cook unevenly.

USING OIL

- Adding a small amount of oil to your food will make it crispier. Use no more than 2 US tbsp / 30 mL of oil.
- Oil sprays are excellent for applying small amounts of oil evenly to all food items.

FOOD TIPS

- You can air fry any frozen foods or goods that can be baked in an oven.
- To make cakes, hand pies, or any food with filling or batter, place food in a heat-safe container before placing in the basket.
- Air frying high-fat foods will cause fat to collect underneath the crisper plate. To avoid excess smoke while cooking, pour out fat drippings after cooking.
- Liquid-marinated foods create splatter and excess smoke. Pat these foods dry before air frying.
- Refer to the **Cooking Chart** to select the ideal cooking function for your recipe (page__).

FRENCH FRIES

- Add ½–1 US tbsp / 8–15 mL oil for crispiness.
- When making fries from raw potatoes, soak uncooked fries in water for 15 minutes to remove starch prior to frying. Pat dry with a towel before adding oil.
- Cut uncooked fries smaller for crispier results. Try cutting fries into ¼ x 3-in / 0.6 x 7.6-cm strips.

Note: *For more tips and recipes, check out the VeSync app and Cosori website.*

More Functions

SWITCHING TEMPERATURE UNITS

- Press and hold **TEMP** ∧ and ∨ for 3 seconds.
- The temperature unit will change from Fahrenheit to Celsius.
- Repeat to switch back to Fahrenheit.

PAUSING

- Press ▶II to pause cooking. The air fryer will stop heating, and ▶II will blink until you press ▶II again to resume cooking.
- After 30 minutes of inactivity, the air fryer will go into standby.
- This function allows you to pause cooking without removing the basket from the air fryer.

AUTOMATICALLY RESUME COOKING

- If you pull out the basket, the air fryer will pause cooking automatically. The display will turn off temporarily as a safety feature.
- When you return the basket, the air fryer will automatically resume cooking based on your previous settings.

AUTOMATIC STANDBY

If the air fryer has no active cooking functions, it will clear all settings and turn to standby after 30 minutes of inactivity.

VeSync App Features

The VeSync app allows you to access additional smart air fryer functions, including those listed below.

REMOTE CONTROL

- All smart air fryer functions can be controlled remotely, except for starting the cooking process (to comply with UL safety regulations).
- Cooking progress can be monitored from a distance.

IN-APP RECIPES

- Recipes made by Cosori's in-house chefs are available on the app. These recipes automatically set the recommended time and temperature on your air fryer.
- Create and save custom recipes.

THIRD-PARTY VOICE CONTROL

Compatible with Amazon Alexa and Google Assistant™ for voice commands.

Note: *The VeSync app is continually updated and app features will expand.*

Care & Maintenance

Note:
- ***Always*** *clean the air fryer basket and crisper plate after every use.*
- *Lining the basket with foil (except the crisper plate) may make cleanup easier.*

1. Turn off and unplug the air fryer. Allow it to cool completely before cleaning. Pull out the basket for faster cooling.
2. Wipe the outside of the air fryer with a moist cloth, if necessary.
3. The basket and crisper plate are dishwasher-safe. You can also wash the basket and crisper plate with hot, soapy water and a non-abrasive sponge. Soak if necessary.

CAUTION: *The basket and crisper plate have a ceramic coating.*

Note:
- *Gentle handwashing is recommended to prolong the life of the coating.*
- *Avoid using metal utensils and abrasive cleaning materials on the basket and crisper plate. These will scratch or damage their surfaces.*
- *Avoid dropping the basket and crisper plate, as well as hitting or bumping them with other hard objects. This may cause damage to the coating.*
- *If you notice any cracking or peeling in the nonstick coating of the crisper plate or basket, we recommend replacing them to maintain cooking performance.*

4. For stubborn grease:
   a. In a small bowl, mix 2 US tbsp /30 g of baking soda and 1 US tbsp / 15 mL of water to form a spreadable paste.
   b. Use a sponge to spread the paste on the basket and crisper plate, then scrub. Let the basket and crisper plate sit for 15 minutes before rinsing.
   c. Wash basket and crisper plate with soap and water before using.
5. Clean the cavity of the air fryer with a slightly moist, non-abrasive sponge or cloth. **Do not** immerse in water. If needed, clean the heating coil to remove food debris.

6. Dry before using.

Note: *Make sure the heating coil is completely dry before turning on the air fryer.*

Accessories

Additional and replacement accessories are available for your air fryer. For more information, contact **Customer Support** (page ___).

Troubleshooting

Problem	Possible Solution
The air fryer will not turn on.	Make sure the air fryer is plugged in.
	Push the basket securely into the air fryer.
Food is not completely cooked.	Place smaller batches of food items into the basket. If the basket is overstuffed, then food will be undercooked.
	Increase cooking temperature or time.
Food is not crispy after air frying.	Spraying or brushing a small amount of oil on food can increase crispiness. See **Cooking Tips** (page __).
French fries are not cooked correctly.	See **French Fries** (page __).
Basket will not slide into the air fryer securely.	Make sure the basket is not overfilled with food.
White smoke or steam is coming out of the air fryer.	The air fryer may produce some white smoke or steam when you use it for the first time or during cooking. This is normal.
	Make sure the basket and the inside of the air fryer are cleaned properly and not greasy.
	Cooking greasy foods will cause oil to collect beneath the crisper plate. This oil will produce white smoke, and the basket may be hotter than usual. This is normal and should not affect cooking. Handle the basket with care.
Dark smoke is coming out of the air fryer.	Immediately unplug your air fryer. Dark smoke means that food is burning or there is a circuit problem. Wait for smoke to clear before pulling the basket out. If the cause was not burnt food, contact **Customer Support** (page __).
The air fryer has a plastic smell.	Any air fryer may have a plastic smell from the manufacturing process. This is normal. Follow the instructions for a Test Run (page__) to get rid of the plastic smell. If a plastic smell is still present, please contact **Customer Support** (see page__)
Display shows Error Code "E01/E21".	There is an open circuit in the temperature monitor. Contact **Customer Support** (page __).
Display shows Error Code "E02/E22".	There is a short circuit in the temperature monitor. Contact **Customer Support** (page __).
Display shows Error Code "E04".	The air fryer has been plugged into a 220–240V outlet. Turn off and unplug the air fryer. **Only** use the air fryer with 120V, 60Hz outlets.

If your problem is not listed, please contact **Customer Support** (see page__).

Federal Communication Commission Interference Statement – Part 15

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance. To maintain compliance with FCC RF exposure compliance requirements, please follow operation instructions as documented in this manual. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. This equipment should be installed and operated with a minimum distance of 20 cm between the radiator and your body. The availability of some specific channels and/or operational frequency bands are country dependent and are firmware programmed at the factory to match the intended destination. The firmware setting is not accessible by the end user.

FCC SDOC SUPPLIER'S DECLARATION OF CONFORMITY

Vesync (US) Corporation hereby declares that this equipment is in compliance with FCC requirements. The declaration of conformity can be found at www.vesync.com/legal/compliance/fcc

Limited Warranty Information

Product Name	*Air Fryer Upgraded Model 6.0-Quart Smart Air Fryer*
Model	*CAF-DB601S-KUSR*
For your own reference, we strongly recommend that you record your order ID and date of purchase.	
Order ID	
Date of Purchase	

Cosori Limited Product Warranty

Register your products at https://warranty.cosori.com/warranty to stay up to date with important product information, such as product updates, limited warranties, usage and maintenance recommendations, and notifications concerning safety warnings or product recalls. Registration is not required to claim your limited warranty.

Two (2) Year Limited Consumer Product Warranty

Vesync (US) Corporation ("Vesync") warrants that the product shall be free from defects in material and workmanship for a period of 2 years from the date of original purchase ("Limited Warranty Period"), provided the product was used in accordance with its use and care instructions (e.g. in the intended environment and under normal circumstances).

California Residents Only

The Warranty Period begins on the original date of delivery or pick-up.

Your Limited Warranty Benefits

During the Limited Warranty Period and subject to this limited Warranty Policy, Vesync will, in its sole and exclusive discretion, either (i) refund the purchase price if the purchase was made directly from the online Cosori store, (ii) repair any defects in material or workmanship, (iii) replace the product with another product of equal or greater value, or (iv) provide store credit in the amount of the purchase price.

Who Is Covered?

This limited warranty extends only to the original consumer purchaser of the product and is not transferable to any subsequent owner of the product, regardless of whether the product transferred ownership during the specified term of the limited warranty. The original consumer purchaser must provide verification of the defect or malfunction and proof of the date of purchase to claim the Limited Warranty Benefits.

Be Aware of Unauthorized Dealers or Sellers

This limited warranty does not extend to products purchased from unauthorized dealers or sellers. Vesync's limited warranty only extends to products purchased from authorized dealers or sellers that are subject to Vesync's quality controls and have agreed to follow its quality controls. Please be aware, products purchased from an unauthorized website or dealer may be counterfeit, used, defective, or may not be designed for use in your country. You can protect yourself and your products by making sure you only purchase from Vesync or its authorized dealers.

If you have any questions about a specific seller, or if you think you may have purchased your product from an unauthorized seller, please contact our Customer Support via support.cosori.com.

What's Not Covered

- Normal wear and tear, including parts that might wear out over time (e.g. batteries, filters, cleaning brush, essential oil pads, etc.).
- If the proof-of-purchase has been altered in any way or is made illegible.
- If the model number, serial number or production date code on the product has been altered, removed, or made illegible.
- If the product has been modified from its original condition.
- If the product has not been used in accordance with directions and instructions in the user manual.
- Damages caused by connecting peripherals, additional equipment or accessories other than those recommended in the user manual.
- Damages or defects caused by accident, abuse, misuse, or improper or inadequate maintenance.
- Damages or defects caused by service or repair of the product performed by an unauthorized service provider or by anyone other than Vesync.
- Damages or defects occurring during commercial use, rental use, or any use for which the product is not intended.
- If the unit has been damaged, including but not limited to damage by animals, lightning, abnormal voltage, fire, natural disaster, transportation, dishwasher, or water (unless the user manual expressly states that the product is dishwasher-safe).
- Incidental and consequential damages.
- Damages or defects exceeding the cost of the product.

Claiming Your Limited Warranty Service in 5 Simple Steps:

1. Make sure your product is within the specified limited warranty period.
2. Make sure you have a copy of the invoice and order ID or proof-of-purchase.
3. Make sure you have your product. **DO NOT** dispose of your product before contacting us.
4. Contact our Customer Support team via support.cosori.com
5. Once our Customer Support team has approved your request, please return the product with a copy of the invoice and order ID.

Sole and Exclusive Remedy

THE FOREGOING LIMITED WARRANTY CONSTITUTES VESYNC (US) CORPORATION'S EXCLUSIVE LIABILITY, AND YOUR SOLE AND EXCLUSIVE REMEDY, FOR ANY BREACH OF ANY WARRANTY OR OTHER NONCONFORMITY OF THE PRODUCT COVERED BY THIS LIMITED PRODUCT WARRANTY STATEMENT. THIS LIMITED WARRANTY IS EXCLUSIVE, AND IN LIEU OF ALL OTHER WARRANTIES. NO EMPLOYEE OF VESYNC (US) CORPORATION OR ANY OTHER PARTY IS AUTHORIZED TO MAKE ANY WARRANTY IN ADDITION TO THE LIMITED WARRANTY IN THIS LIMITED PRODUCT WARRANTY STATEMENT.

Disclaimer of Limited Warranties

TO THE FULLEST EXTENT PROVIDED BY APPLICABLE LAW, EXCEPT AS WARRANTED IN THIS LIMITED PRODUCT WARRANTY POLICY, VESYNC (US) CORPORATION PROVIDES THE PRODUCTS YOU PURCHASE FROM VESYNC (US) CORPORATION "AS IS" AND VESYNC (US) CORPORATION HEREBY DISCLAIMS ALL WARRANTIES OF ANY KIND, WHETHER EXPRESS OR IMPLIED, STATUTORY, OR OTHERWISE, INCLUDING BUT NOT LIMITED TO ANY WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT, AND FITNESS FOR PARTICULAR PURPOSE.

Limitations of Liability

TO THE FULLEST EXTENT PROVIDED BY APPLICABLE LAW, IN NO EVENT WILL VESYNC (US) CORPORATION, ITS AFFILIATES, OR THEIR LICENSORS, SERVICE PROVIDERS, EMPLOYEES, AGENTS, OFFICERS, OR DIRECTORS BE LIABLE FOR:

(a) DAMAGES OF ANY KIND ARISING OUT OF OR IN CONNECTION WITH PRODUCTS PURCHASED FROM VESYNC (US) CORPORATION IN EXCESS OF THE PURCHASE PRICE PAID BY THE PURCHASER FOR SUCH PRODUCTS, OR

(b) INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, OR PUNITIVE DAMAGES EVEN IF VESYNC (US) CORPORATION OR ONE OF ITS SUPPLIERS HAS BEEN ADVISED OF THE POSSIBILITY OR LIKELIHOOD OF SUCH DAMAGES.

AND REGARDLESS OF WHETHER CAUSED BY TORT (INCLUDING NEGLIGENCE), BREACH OF CONTRACT, OR OTHERWISE. OUR LIABILITY SHALL UNDER NO CIRCUMSTANCES EXCEED THE ACTUAL AMOUNT PAID BY YOU FOR THE DEFECTIVE PRODUCT, NOR SHALL WE UNDER ANY CIRCUMSTANCES BE LIABLE FOR ANY CONSEQUENTIAL, INCIDENTAL, SPECIAL OR PUNITIVE DAMAGES OR LOSSES, WHETHER DIRECT OR INDIRECT.

EXCEPT AS COVERED BY THIS LIMITED PRODUCT WARRANTY STATEMENT, VESYNC (US) CORPORATION SHALL NOT BE LIABLE FOR COSTS ASSOCIATED WITH THE REPLACEMENT OR REPAIR OF PRODUCTS PURCHASED FROM IT, INCLUDING, BUT NOT LIMITED TO, LABOR, INSTALLATION, OR OTHER COSTS INCURRED BY THE USER AND, IN PARTICULAR, ANY COSTS RELATING TO THE REMOVAL OR REPLACEMENT OF ANY PRODUCT.

Other Rights You May Have

SOME JURISDICTIONS DO NOT ALLOW FOR: (1) EXCLUSION OF IMPLIED WARRANTIES; (2) LIMITATION ON THE DURATION OF IMPLIED WARRANTIES; AND/OR (3) EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES; SO THE DISCLAIMERS IN THIS POLICY MAY NOT APPLY TO YOU. IN THESE JURISDICTIONS YOU HAVE ONLY THE IMPLIED WARRANTIES THAT ARE EXPRESSLY REQUIRED TO BE PROVIDED IN ACCORDANCE WITH APPLICABLE LAW. THE LIMITATIONS OF WARRANTIES, LIABILITY, AND REMEDIES APPLY TO THE MAXIMUM EXTENT PERMITTED BY LAW.

ALTHOUGH THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, YOU MAY HAVE OTHER RIGHTS IN YOUR JURISDICTION. THIS STATEMENT OF LIMITED WARRANTY IS SUBJECT TO APPLICABLE LAWS THAT APPLY TO YOU AND THE PRODUCT. PLEASE REVIEW THE LAWS IN YOUR JURISDICTION TO UNDERSTAND YOUR RIGHTS FULLY.

Changes to This Policy

We may change the terms and availability of this limited warranty at our discretion, but any changes will not be retroactive.

This warranty is made by:

Vesync (US) Corporation
1775 Flight Way, Suite 150
Tustin, CA 92782
USA

Customer Support

If you have any questions or concerns about your new product, please contact our Customer Support Team.

Vesync (US) Corporation
1775 Flight Way, Suite 150
Tustin, CA 92782
USA

Website: support.cosori.com
Phone: 1-888-402-1684

SUPPORT HOURS

Mon–Fri, 9:00 am–5:00 pm PST/PDT

**Please have your order invoice PDF or screenshot(s) ready before contacting Customer Support.*

Attributions

Amazon, Alexa, and all related logos are trademarks of Amazon.com, Inc. or its affiliates.

Google, Android, and Google Play are trademarks of Google LLC.

App Store® is a trademark of Apple Inc.

Wi-Fi® is a registered trademark of Wi-Fi Alliance®.

iOS is a registered trademark of Cisco Systems, Inc. and/or its affiliates in the United States and certain other countries.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by VESYNC (SINGAPORE) PTE. LTD. is under license. Other trademarks and trade names are those of their respective owners.

Notes

Notes

cosori

by VeSync