84*60MM 105克铜板纸 风琴折 双面印刷 黑白印刷

inno3C®
innoTag
Wireless Charging Dual-System Smart Finder

USER MANUAL

Works with Apple Find My

Works with Android Find Hub

Model: i-FR8

SPECIFICATIONS

Model No.: i-FR8
Battery: 90mAh 3.7V
Wireless Input: 2.5W
Size : approx. 43mm x 68mm x 6.2mm

PACKAGE CONTENT

- i-FR8	X1
- User Manual	X1

FEATURES

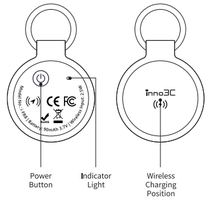

INSTRUCTION TO USE

*Operation and interface may vary, please refer to official website for the latest instructions.

For IOS Devices

Settings

Compatibility

The Tagfinder is only compatible with iPhone 8 series or later phones running iOS 14.5 or later with Two-Factor Authentication turned on.

1. Turn on Two-Factor Authentica-tion for your Apple ID
   On your iPhone: Go to "Settings" > your name > "Sign-In & Security". Tap "Turn On Two-Factor Authentication" > tap Continue and follow the onscreen instructions.
   On your Mac: choose Apple menu > "System Settings (or System Preferences)", then click on your name (or Apple ID). Click "Password & Security". Next to "Two-factor Authentication", click Turn On and follow the onscreen instructions.
   On the web: Go to appleid.apple.com and sign in using your Apple ID. Answer your security questions, then tap Continue, Tap Continue when you see a prompt to update account security. Then tap "Update Account Security" and follow the onscreen instructions.
2. Turn on Find My > Go to Settings > Tap your name, then tap "Find My" > Tap "Find My iPhone" and turn on "Find My iPhone".
3. Turn on Bluetooth
4. Connect to a stable Wi-Fi or cellular network
5. Turn on Location Services Go to Settings > "Privacy & Security" > "Location Services" > turn on Location Services.

Getting Started

- Power on
Short press the Tagfinder's power button once, and a beep will sound to indicate that it is turned on.

- Power off
To turn off the power, press the power button 3 times in a row (2 short presses and the last long press); after hearing two "beeps", the "tagfinder" is turned off. If the tagfinder has not been paired within 10 minutes, a beep will be heard and the power will automatically turn off. Turn on the power to continue pairing.

- Factory reset
To reset, press the power button 5 times in a row (4 short presses and the last long press); after hearing a beep, the "tagfinder" returns to factory setting.

Pairing Your Tagfinder

1. Ensure your iPhone is set up (see "Setting Up Your IPhone" above) and your Tagfinder is powered on.
2. Open the Find My app.
3. In the Items tab, tap Add Other Item.
4. Tap Other Supported Item (your iPhone will search for your Tagfinder).
5. Once your Tagfinder is detected, tap Connect.
6. Follow the onscreen steps to name it and register it to your Apple ID.
7. Ensure your Tagfinder appears in Items. If not, forget the device, perform a factory reset on the Tagfinder (see "Getting Started > Factory reset" above), then reconnect.

* Do not leave Find My app while pairing Tagfinder.

Locating Your Tagfinder

- Locate your Tagfinder via the map
1. Open the Find My app.
2. Tap the Items tab.
3. Select your Tagfinder in the Items list.
4. Tap Directions to open the location of your Tagfinder and get directions in the Maps app.

- Play sound alert
1. Open the Find My app.
2. Tap the Items tab.
3. Select your Tagfinder in the Items list and tap Play Sound*.

* The sound alert will only play if your iPhone is connected to a network. and your Tagfinder is in Bluetooth range of your iPhone (approx. 160f/50m).

- Set up Notify When Left Behind
If your Tagfinder is not in Bluetooth range of your iPhone for a period of time, you will receive a notification that your Tagfinder has been lost (if you set up a name, the name will be displayed, otherwise it will show Tagfinder).
1. Open the Find My app.
2. Tap the Items tab.
3. Select your Tagfinder in the Items list and scroll down.
4. Under Notifications, tap Notify When Left Behind and turn on.

- Mark your Tagfinder as lost
1. Open the Find My app.
2. Tap the Items tab.
3. Select your Tagfinder in the Items list and scroll down.
4. Ensure Notify When Left Behind is turned on.
5. Under Lost Mode, tap Enable, then tap Continue.
6. Enter your phone number/email address so that the finder of your Tagfinder can contact you, then tap Activate.

Changing the Name of Your Tagfinder

1. Open the Find My app and tap the Items tab.
2. Select your Tagfinder in the Items list.
3. Scroll down and tap Rename Item.
4. Select a name from the list or select Custom Name.
5. For Custom Name, input a name and select an emoji.
6. Tap Done.

Removing Your Tagfinder

Removing your Tagfinder from your Apple ID will allow it to be activated and used by another person.
1. Ensure that your Tagfinder is connected to your iPhone*.
2. Open the Find My app.
3. In the Items tab, tap the Tagfinder.
4. Tap Remove Item, tap Remove and confirm to remove.

* If not connected when removing your Tagfinder from your Apple ID, it will no longer be discoverable and you will need to perform a factory reset before creating a new connection (see "Getting Started > Factory reset" above).

Unwanted Tracking Notification

If your Tagfinder is separated from your iPhone and is detected moving with another person with an Apple device over time, that person will receive a tracking alert message.

For Android ™ Devices

Setup with Google's Find Hub App

1. Unlock your phone, turn on Bluetooth and the screen.
2. Power on the new device, place it close (<20cm) to your Android phone, and your phone will go to the pairing mode automatically.
3. You will receive a notification on your phone prompting you to set up the new device.
4. Tap the notification and follow the on-screen instructions to complete the setup.

Find Your Tagfinder

1. In "Find Hub" app, tap "Items".
2. Check your tagfinder's last known time and place.

Troubleshooting

- Power on
Short press the tagfinder's power button once, and a beep will sound to indicate that it is turned on.

- Identification mode
When you find an unknown tagfinder device, hold it to your phone and quickly press the device's tracker button twice and listen for a "beep". The tagfinder device's identification information will display on your phone.

- Factory reset
To reset, press the power button 5 times in a row (4 short presses and the last long press); after hearing a beep, the "tagfinder" returns to factory setting.

- Power off
To turn off the power, press the power button 3 times in a row (2 short presses and the last long press); after hearing two "beeps", the "tagfinder" is turned off. If the tagfinder has not been paired within 10 minutes, a beep will be heard and the power will automatically turn off. Turn on the power to continue pairing.

- Re-Pairing Mode
Please "Remove from Find Hub" firstly, power off the tagfinder then power on to re-pair if you want to switch to another device.

CHARGING YOUR TAGFINDER

Charge the tagfinder with a wireless charger. (Note: wireless charger not included).
During charging, the status light willbe orange. When fully charged, the status light will turn green.
It is recommended to fully charge your Tagfinder once every 3 months.

PRECAUTIONS

- Do not expose the device to temperatures below -10°C (14°F) or above 35°C (95°F).
- Do not expose the device to an open flame, submerge it in water, or expose it to rain as this will damage the device.
- Always check for damage to the device, cables, or other accessories before using the device. If damaged, do not use the device.
- Do not attempt to disassemble, modify, or use sharp objects to damage the device in any way, as it may cause serious damage.
- Do not expose the device to corrosive liquids, or high humidity as they will seriously damage the device.
- If any abnormality or damage is found, please stop using it immediately, and contact the inno3C customer service team.

The Apple Find My network provides an easy, secure way to locate compatible personal items using the Find My app on your iPhone, iPad, Mac, or the Find Items app on Apple Watch.

To use the Apple Find My app to locate this item, the latest version of iOS, iPadOS, or macOS is recommended. The Find Items app on Apple Watch requires the latest version of watchOS.

Use of the Works with Apple badge means that a product has been designed to work specifically with the technology identified in the badge and has been certified by the product manufacturer to meet Apple Find My network product specifications and requirements. Apple is not responsible for the operation of this device or use of this product or its compliance with safety and regulatory standards.

Apple, Apple Find My, Apple Watch, Find My, iPhone, iPad, iPadOS, Mac, macOS and watchOS are trademarks of Apple Inc. IOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.

This device can works with either the Apple Find My network or Find Hub, but these two services cannot operate simultaneously. Activating one will automatically disable the other.

Find Hub helps you find and connect to what

matters in a single, secure place. Find your belongings quickly and safely even if your devices are offline. Plus, seamlessly and securely share your location with friends & family for peace of mind.

Find Hub network requires location services and Bluetooth to be turned on. Requires cell service or internet connection. Works on Android 9+ and in certain countries for age-eligible users.

Google, Android, Google Maps and Find Hub are trademarks of Google LLC.

Certified by Google to meet Find Hub specifications. Google is not responsible for product operation or safety standards compliance.

Inno3C
Flat 02-03, Floor 19, Elite Centre, 22 Hung To Road, Kwun Tong, Kowloon, Hong Kong
sales@inno3C.com
www.inno3C.com.hk

Website Whatsapp Wechat

inno3C®
innoTag
無線充電雙系統 智能定位器

使用說明書

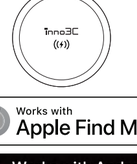

Works with Apple Find My

Works with Android Find Hub

型號: i-FR8

產品規格

型號: i-FR8
電池容量: 90mAh 3.7V
無線充輸入: 2.5W
尺寸: 約43mm x 68mm x 6.2mm

包裝內容

- i-FR8	X1
- 使用說明書	X1

產品功能

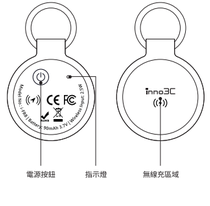

使用說明

*操作及介面可能有所不同，最新操作方法請參閱官方網站。

適用于 iOS 設備

設定

兼容性

追蹤器僅相容於運行 iOS 14.5 或更高版本且已開啟雙重認證的 iPhone 8 系列或更新機型。

1. 為您的 Apple ID 啟用雙重認證
   在您的 iPhone 上：前往「設定」>「您的姓名」>「登入與保安」>「開啟雙重認證」>「繼續」，並按照螢幕上的說明操作。
   在 Mac 上：選取蘋果選單 >「系統設定（或系統偏好設定）」>點選您的姓名（或 Apple ID）>「密碼與安全性」>在「雙重認證」旁邊，點擊「開啟」，然後按照螢幕上的指示操作。
   在網頁上：前往 apple.com 並使用您的 Apple ID 登入，回答您的安全問題，然後輕按「繼續」。當出現更新帳戶安全性的提示時，請點「繼續」，然後輕按「更新帳戶安全性」，並按照螢幕上的指示進行。
2. 開啟「尋找我的iPhone」>前往「設定」>點擊你的名字，然後點擊「尋找我的iPhone」>點擊「尋找我的iPhone」並開啟「尋找我的iPhone」。
3. 打開藍牙
4. 連接到穩定的 Wi-Fi 或蜂窩網絡
5. 開啟定位服務 進入設定 >「私隱與保安」>「定位服務」> 開啟定位服務。

開始使用

- 開機
短按一次定位器的電源按鈕，就會發出「嗶」聲，表示它已開啟。

- 關閉電源
若要關閉電源，請連續按三次電源按鈕（兩次短按，最後一次長按）；聽到兩聲「嗶」聲後，定位器即關閉。如果定位器在 10 分鐘內未配對，則會發出「嗶」聲並自動關機。重新開機即可繼續配對。

- 恢復出廠設置
若要重置，請連續按電源按鈕 5 次（4 次短按和最後一次長按）；聽到「嗶」聲後，定位器將恢復出廠設定。

配對您的定位器

1. 確保您的 iPhone 已設定好（請參閱上面的「設定您的 iPhone」），並且您的定位器已開機。
2. 開啟「尋找」應用程式。
3. 在「項目」按鈕中，點選「新增其他項目」。
4. 點擊其他支援的項目（您的 iPhone 將搜尋您的定位器）。
5. 依照設定位置後，點選「連線」。
6. 依照螢幕上的步驟為其命名並將其註冊到您的 Apple ID。
7. 確保您的定位器出現在「項目」中。如果沒有，請忘記該裝置，對定位器執行恢復原廠設定（請參閱上文「開始使用 > 恢復出廠設定」），然後重新連線。

* 在配對定位器時，請勿退出「尋找」應用程式。

定位您的定位器

- 透過地圖定位您的定位器
1. 開啟「尋找」應用程式。
2. 點擊「物品」按鈕。
3. 在物品清單中選取您的定位器。
4. 點擊「路線」以開啟您的定位器位置，並在 Maps 應用程式中取得路線指示。

- 播放聲音警報
1. 開啟「尋找」應用程式。
2. 點擊「物品」按鈕。
3. 在物品清單中選取您的定位器，然後點擊「播放聲音」。*

* 只有當您的 iPhone 已連線至網絡，且您的定位器處於 iPhone 的藍牙範圍內 (約 160 英尺 / 50 米) 時，聲音警報才會播放。

- 設定離開時通知
如果您的定位器長時間不在 iPhone 的藍牙範圍內，您將會收到通知。告知您的定位器已遺失 (如果您已設定名稱，則會顯示該名稱，否則會顯示 Tagfinder)。
1. 開啟「尋找」應用程式。
2. 點擊「物品」按鈕。
3. 在物品清單中選取您的定位器，然後向下捲動。
4. 在「通知」下方，點擊「離開時通知」並開啟。

- 將您的定位器標記為遺失
1. 開啟「尋找」應用程式。
2. 點擊「物品」按鈕。
3. 在物品清單中選取您的定位器，然後向下捲動。
4. 確保「離開時通知」已開啟。
5. 在「遺失模式」下方，點擊「啟用」，然後點擊「繼續」。
6. 輸入您的電話號碼/電子郵件地址，以便找到您的定位器的人可以聯絡您，然後點擊「啟動」。

更改您的定位器名稱

1. 開啟「尋找」應用程式並點擊「其他物品」按鈕。
2. 在物品清單中選取您的定位器。
3. 向下捲動並點擊「重新命名項目」。
4. 從清單中選取一個名稱，或選取「自訂名稱」。
5. 若為「自訂名稱」，請輸入名稱並選取一個表情符號。
6. 點擊「完成」。

移除您的定位器

從您的 Apple ID 移除定位器後，即可讓其他人啟用並使用它。
1. 確保您的定位器已連線至您的 iPhone*。
2. 開啟「尋找」應用程式。
3. 在「物品」標籤中，點擊您的定位器。
4. 點擊「移除項目」，然後點擊「移除」並確認以移除。

* 如果移除定位器時未連線至 iPhone，它將無法再被發現，您需要先執行原廠重置才能建立新連線 (請參閱上方「開始使用 > 原廠重置」)。

防追蹤提醒

如果您的定位器與您的 iPhone 分離，並在一段時間內被偵測到與另一位持有 Apple 裝置的人一起移動，該人將會收到追蹤警報訊息。

適用於 Android™ 裝置

使用 Google 的「尋找中心」應用程式設定

1. 解鎖您的手機，開啟藍牙和螢幕。
2. 開啟定位器，將其靠近 (<20 公分) 您的Android手機，您的手機將自動進入配對模式。
3. 您的手機將收到通知，提示您設定新裝置。
4. 點擊通知並按照螢幕上的指示完成設定。

尋找您的定位器

1. 在「尋找中心」應用程式中，點擊「裝置」。
2. 檢查您的定位器最後已知時間和位置。

疑難排解

- 開機
短按定位器的電源按鈕一次，會聽到「嗶」聲表示已開機。

- 識別模式
當您發現未知的定位器裝置時，將其靠近您的手機，並快速按兩次裝置的定位器按鈕，聽取「嗶」聲，定位器裝置的識別資訊將顯示在您的手機上。

- 原廠重置
如需重置，請連續按電源按鈕 5 次 (4 次短按，最後一次長按)；聽到「嗶」聲後，定位器會恢復原廠設定。

- 關機
要關閉電源，請連續按電源按鈕 3 次 (2 次短按，最後一次長按)；聽到兩聲「嗶」後，定位器已關機。若定位器在 10 分鐘內未完成配對，會聽到一聲「嗶」聲並自動關機。開啟電源以繼續配對。

- 重新配對模式
若要切換至另一部裝置，請先在「尋找中心」中「移除」，然後將定位器關機再開機以重新配對。

為您的定位器充電

使用無線充電器為定位器充電。(注意：無線充電器未隨附)。
充電期間，狀態燈會顯示橙色。完全充滿電時，狀態燈會變成綠色。
建議每 3 個月為您的定位器完全充電一次。

注意事項

- 請勿將裝置暴露在低於 -10°C (14°F) 或高於 35°C (95°F) 的溫度下。
- 請勿將裝置靠近明火中、浸入水中或暴露在雨中，否則會損壞裝置。
- 使用裝置前，請務必檢查產品或其他配件是否有損壞。若有損壞，請勿使用產品。
- 請勿嘗試拆解、改裝裝置，或以任何方式使用尖銳物體損壞裝置，否則可能造成嚴重損壞。
- 請勿將裝置暴露在腐蝕性液體或高濃度環境中，否則會嚴重損壞裝置。
- 若發現任何異常或損壞，請立即停止使用，並聯絡 Inno3C 客戶服務團隊。

Apple Find My 提供一種簡單且安全的方式，讓您能透過 iPhone、iPad 或 Mac 上的「尋找」應用程式，或 Apple Watch 上的「尋找項目」應用程式來定位相容的個人物品。

若要使用「尋找」應用程式來定位此物品，請確使用最新版本的 iOS、iPadOS 或 macOS、Apple Watch 上的「尋找」應用程式需要最新版本的 watchOS。

使用「Works with Apple」標誌，即表示該產品經設計專門與標章中所指的技術相關配備，並已由產品製造商認證符合 Apple Find My 的產品規格與要求。Apple 不對此裝置的操作或此產品的使用負責，亦不對其是否符合安全與法規標準負責。

Apple、Apple Find My、Apple Watch、Find My、iPhone、iPad、iPadOS、Mac、macOS 與 watchOS 為 Apple Inc. 之商標。IOS 為 Cisco 在美國及其他國家之商標或註冊商標，並經授權使用。

本裝置可與 Apple Find My 或 Find Hub 其中之一搭配使用，但這兩項服務無法同時運作。啟用其中一項服務將會自動停用另一項。

Find Hub 能協助您在單一安全的地方尋找並連接對您重要的人事物。即使裝置離線，也能快速安全地找到您的物品。此外，還能與親友無縫且安全地共享位置，讓您倍感安心。

Find Hub 網路需要開啟定位服務與藍牙，需要行動網路或網際網路連線。適用於 Android 9 以上版本，並於特定國家/地區提供給符合年齡資格的使用者。

Google、Android、Google Maps 與 Find Hub 為 Google LLC 之商標。

經 Google 認證符合 Find Hub 規格。Google 不對產品操作或安全標準合規性負責。

inno3C
香港觀塘鴻圖道22號
俊匯中心19樓02-03室
sales@inno3C.com
www.inno3C.com.hk

Website Whatsapp Wechat

FCC Caution:
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.