RYOBI RAPID REPAIR MOWER PACKAGING INSTRUCTIONS

*Remove batteries before beginning

HOW TO PREPARE MOWER

1. Lower mower to the lowest cut height setting

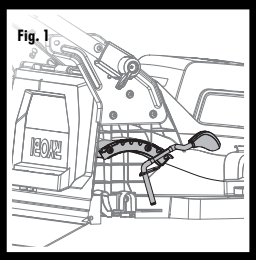

(RY401017, RY401018)

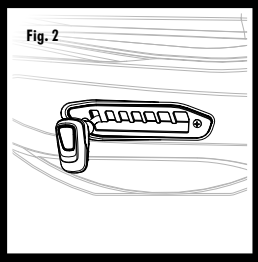

(RY401012, RY401011)

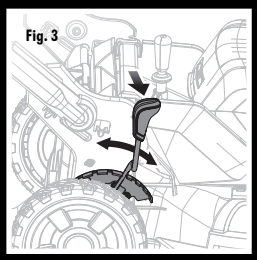

(RY401021)

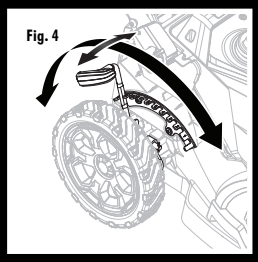

(RY40HPLM01)

2. Fold handles down

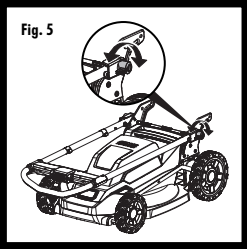

(RY401017, RY401018)

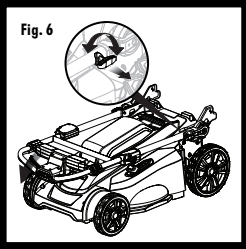

(RY401012, RY401011)



(RY401021)

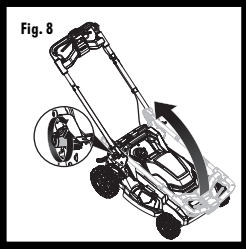

(RY40HPLM01)

HOW TO PACKAGE MOWER

1. Set the mower into the box shipper provided to you. Keep the mower level and centered in the box so the sides, wheels, and handle area are protected.
2. Before sealing the box, gently shift the box side to side. If the mower moves, add packing material until the mower is held firmly in place.

HOW TO SHIP

Once the mower is prepared and securely packaged, complete the following steps to ship it back for service.

SHIPPING CHECKLIST

- ☐ Confirm all batteries have been removed from the mower.
- ☐ Confirm the mower is packed securely in the box provided to you.
- ☐ Confirm the mower is secure within the box.
- ☐ Seal the box using strong packing tape.
- ☐ Ensure all shipping information is accurate.

DROP-OFF | Take the sealed package to your nearest FedEx drop-off location.