Sundy

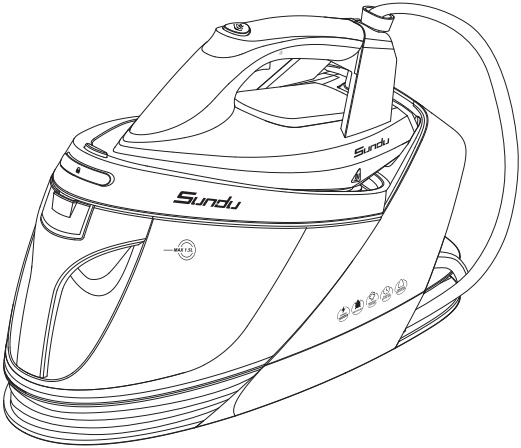

User Manual

1800W Steam Station

Thank you for purchasing the Sundu **1800W Steam Station**. Please read this user manual carefully and keep it for future reference. If you need any assistance, please contact our support team **support@sunduhome.com** with your product model number and Amazon order number.

PACKAGE CONTENTS

Sundu 1800W Steam Station
User Manual

SPECIFICATIONS

Model	LE-IR002
Voltage	120V 60Hz
Power	1800W
Watertank Capacity	1.5L
Weight	3.1kg
Power Cord Length	2.45m
Anti-Drip System	Yes
Anti-Scale System	Yes

Please read all of the instructions carefully and retain foe future reference.

PRODUCT CARE & USE

1. Do not immerse the product in water or any liquid.
2. This product is only for indoor use and commercial use is prohibited.
3. When the product is connected to the power supply, please make sure the circuit voltage is consistent with the rated voltage of the product， And confirm that the circuit is well grounded.
4. Electric irons must use distilled or purified water, not tap water or other liquids.
5. When adding water to the electric iron water tank, the water level shall not exceed the maximum water level.
6. When an electric iron is added or poured, the cord plug must be removed from the socket； Or remove the tank from the product before adding or pouring water.
7. The product must be used and placed on a stable surface.
8. Electric irons with falling or damaged power cords shall not be used, and electric irons with leakage in water tanks or products shall not be used again.
9. The electric iron must be taken care of during the operation or operation, and the user must not leave midway.
10. Persons or children with disabilities must be under the guardianship of their guardians. Children are children aged 8 years and older and under 14 years of age.
11. Do not let the power cord touch the hot surface of the electric iron, to wait for the electric iron to cool completely before collecting the electric iron, when collecting the electric iron gently coil the power cord on the iron.
12. Electric iron should be placed in the collection of children should not be touched, and children should not be allowed to play as toys, children refers to children over 8 years old under 14 years old.
13. Do not repair or replace the power cord by yourself. If the power cord is damaged, it shall be sent to the dealer's post-sale service center or a person with professional qualification for repair or replacement。 To avoid electric shock caused by incorrect assembly.
14. The first use will have a small amount of smoke, which is a normal phenomenon and will not be used again.
15. After removing the packing, make sure that the appliance is not damaged. If in doubt, do not use the appliance and consult an expert.
16. When the iron releases steam, do not aim the steam at people or animals to avoid burns.
17. The base of the appliance shall be provided randomly. The base shall not be replaced arbitrarily to avoid danger.
18. When using electric irons, you should not touch the hot surface with your hand, The hot surface includes the soleplate and the "⚠" surface.
19. It is possible that some condensation might remain in the water tank, which is NORMAL for the process of pre-testing the product for compliance. Therefore, the product you received is brand new and not used.

PRODUCT DIAGRAM

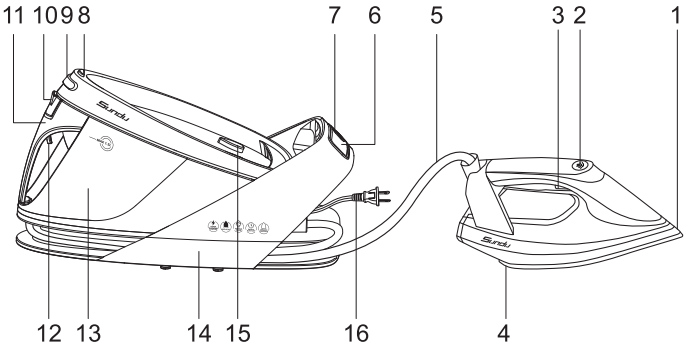

1. Skirt
2. Control Button (Light)
3. Steam Button (Can be Locked)
4. Soleplate
5. Steam Pipeline
6. LED Display
7. Base Control Button
8. Unlocking Button
9. Locking Button
10. Water Inlet Cover
11. Water Tank Handle
12. Separetion Button
13. Water Tank
14. Wire Tunnle
15. Mat*3
16. Power Cable

DISPLAY SCREEN DISPLAY CONTENT

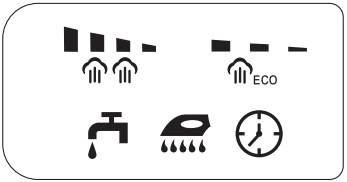

TEMPERATURE SETTING

This product is capable of sensing the temperature of the bottom plate through NTC and cooperating with the electronic plate for temperature control.
After energizing the product, it will enter into standby state. Long press (2s) the control button on the iron or long press (2s) the control button on the base to enter the heating state.
This product is set for constant temperature, only one gear temperature, plate temperature range 135°C~165°C.
The flatiron control button indicator light flashes to indicate that the iron is heating, and the flatiron control button indicator light is long to indicate that the product has been heated.

NOTE:
The heating time of this product is relatively long. It is recommended to fully heat the product (2min) before steam operation.

FILL THE WATER TANK

The plug must be removed from the power socket to cut off the electric iron；Or remove the tank from the product before adding water.
The water in the electric iron water tank shall not exceed the maximum water level.
After grasping the handle of the water tank and pressing the separation button, the water tank can be extracted from the base.
Will be filled with water into the base and force it to lock, the water tank is locked when there is a clear lock sound.

NOTE:
Electric iron should use pure water or distilled water, do not put water or other liquids into the electric iron.

①

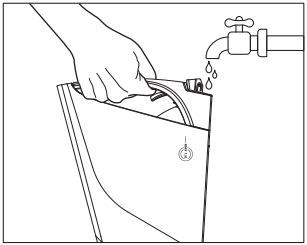

②

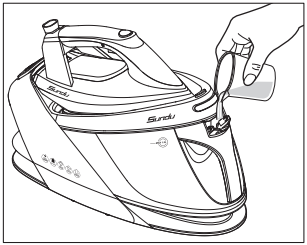

Two Ways to Add Water

DRY IRONING MODE

1. Connect the rated power supply, long press the iron control button or long press the base control button to enter the working state.
2. After heating the product, ironing can be performed.
3. Do not press the steam switch button when it is dry.

HOW TO USE THE STEAM IRONING?

1. Fill the tank with water.
2. Long press the pressing button of the iron or the base control button, and the product will be heated. When the indicator light on the control button of the heating iron is long lit, the product will be heated.
3. After starting the product, the default is small steam. It is recommended to release small steam for 2min before entering large steam.
4. Select the appropriate steam size for each fabric, press the steam switch (20S) and steam will release from the bottom plate.

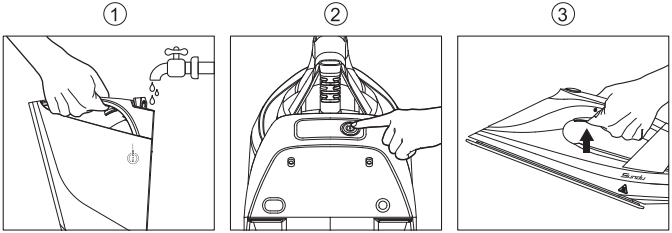

NOTE:
Please lock the steam button when steam ironing is needed for a long time.
Manual control is recommended when steam ironing is needed for a short time.

CAUTION:
When the iron releases steam, do not aim the steam at people or pets to avoid burns.

SELF-CLEAN

The First Method:

1. Make sure there is enough water in the tank when using the cleaning function.
2. Long press the (3s) iron control button and the iron steam switch to automatically enter the cleaning state, the cleaning indicator lights up.
3. Press the steam button and the pump will work at full frequency. Clean the bottom plate of the iron. Release the steam switch and the pump will stop working.
4. Once again long press the (3s) iron control button and the iron steam switch to switch back to low steam.

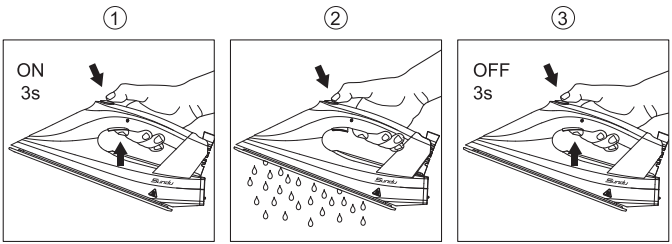

The Second Method:

1. Make sure there is enough water in the tank when using the cleaning function.
2. Long press the (3s) iron control button and the iron steam switch to automatically enter the cleaning state, the cleaning indicator lights up.
3. Place the iron on the base.
4. Press the steam button and the pump will work at full frequency. Clean the bottom plate of the iron. Release the steam switch and the pump will stop working.
5. Once again long press the (3s) iron control button and the iron steam switch to switch back to low steam.

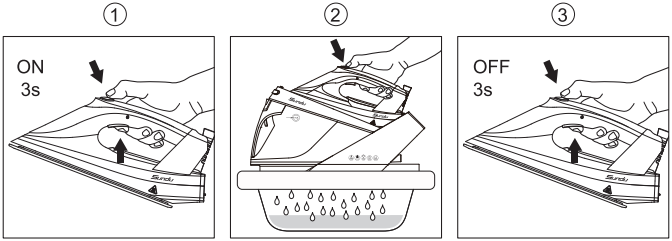

AUTO SHUT OFF

The product automatically enters the power off state after working for 10 minutes When the product enters the state of power failure, the buzzer will give six short sounds and the automatic power failure indicator will flash
Press any one of the control buttons on the iron or the steam switch of the iron, or the control buttons on the base to return to working condition.

TIP WATER SHORTAGE

Under the working condition of steam, when no steam is released from the bottom plate for about 1min, the product will automatically enter the state of water shortage.
After the product enters the state of water shortage, the water shortage indicator is long bright and the water pump stops working.
Add the water in the water tank to the maximum position according to the water requirements, and lock the water tank, release the steam switch of the iron and press the steam switch to restore the working state.

CLEANING AND COLLECTION

Do not start cleaning the iron until it has cooled completely.
Clean the bottom and surface of the electric iron with wet cotton cloth. Do not use rough or hard things to clean the electric iron to avoid scratching the solepalte.
The appearance of electric iron is dirtier, when wet cotton cloth cannot be cleaned, can use wet cotton cloth dip neuter detergent to clean, cannot use strong acid or strong alkali to clean.
When there are impurities in the steam of the electric iron solepateplate, please use a bamboo stick to remove them.
When electric iron is collected, must wait for the bottom plate to cool completely before proceeding.
Place the electric iron on the base and push the lock button to lock the iron on the base. Place the power line and the steam pipe into the two grooves of the base. Hold the iron with one hand to place the appliance in the desired position.

TROUBLE SHOOTING

Problem	Causes,Solution
No heating	Make sure the power plug is plugged intoa household outlet.
No steam	Fill the water tank with tap water up to "MAX" dot.
Poor steaming power	After starting the product, the default is small steam. It is recommended to release small steam for 2min before entering large steam.
Clothes are marked	Empty the water tank and fill it with clean water. There may be contaminants in the iron.Drain water from the water tank after use.

CAUTION: To avoid circuit overload, do not operate another high wattage appliance on the same circuit.

WARRANTY & CUSTOMER SUPPORT

For questions, support, or warranty claims, please contact our Amazon support team with your product model number and Amazon order number.

Amazon US Orders: support@sunduhome.com

Please note, can only provide after-sales service for products purchased directly. If you have purchased from a different seller, please contact them directly for service or warranty issues.

Model: LE-IR002

Shenzhen Lepower Electronic Co., Ltd.
3rd Floor, Building C, Shenli Industrial Park, Huaqing Avenue, Qinghua Community, Longhua Street, Longhua District, Shenzhen, China

Intertek
5023693

Made in China