1.文件名： T50 说明书

2.材质： 普通印刷纸

3.工艺： 双面印刷；风琴折;单色印刷。

4.成品尺寸： 110 x 75 mm

5.备注说明：做大货对齐边条；留出血值；按要求尺寸。

75mm

110mm

正面

游戏控制器

型号：T50

产品说明书

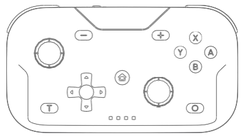

产品简介

本产品是一款无线游戏手柄，N-S按键布局，适配N-S/N-S Oled/N-S Lite主机和PC的X-input模式，手柄管N-S和X-INPUT模式切换开关，通过开关切换模式。内置六轴陀螺仪，快速准确锁定目标；配置高精度摇杆和双组扣振动马达；有唤醒主机、连发和连发速度调节功能。

按键图示

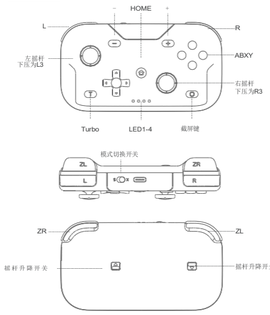

产品参数

输入电压：DC 5.0V	充电时间：约 2 小时
工作电流：≤ 25 mA	振动电流：≤ 100 mA
休眠电流：< 20 uA	充电电流：约 230 mA
电池容量：400 mAh	数据线：Type-C
使用时间：约 8 小时	无线连接距离：< 10 米
重量：96 ± 2 g	尺寸：121 x 67 x 32 毫米

N-S模式

将手柄顶部的模式切换开关推至“S”位置进入N-S模式。

***有线连接**

将手柄通过USB数据线连接到N-S主机底座，按任意键有线连接到N-S主机，主机分配手柄通道灯，灯光保持长亮。

***蓝牙连接**

手柄初次使用，需对手柄充电确保电量满足正常使用，长按手柄HOME键约3秒，手柄开机，LED1-4 跑马灯来回闪烁（2HZ），松开HOME键，打开HN-S主机页配对界面，进行蓝牙配对，配对成功后，主机分配手柄通道灯亮起；若未配对成功，60 秒后手柄会自动休眠。

***NeS模式有线连接PC**

将手柄通过USB数据线连接到PC，连接成功后LED1亮起。

***NeS模式蓝牙连接PC**

长按游戏手柄HOME键约3秒，手柄开机，LED1-4 跑马灯来回快闪（2HZ），松开HOME键，打开PC蓝牙配对界面，进行蓝牙配对，配对成功后手柄LED1长亮；若未配对成功，60 秒后手柄会自动休眠。

注： 支持有线引导蓝牙对接功能，手柄通过USB数据线连接N-S主机后，拔去数据线，手柄自动蓝牙连接N-S主机。

X-input模式

将手柄顶部的模式切换开关推至“X”位置进入X-input模式。

***有线连接**

将手柄通过USB线连接到PC设备USB端口，连接后手柄 LED1-2亮起。

***蓝牙连接**

手柄初次使用，需对手柄充电确保电量满足正常使用。长按手柄HOME键约3秒，手柄开机，LED1-4 跑马灯来回闪烁（2HZ），松开HOME键，打开PC蓝牙配对界面，进行蓝牙配对，配对成功后手柄LED1-2长亮；若未配对成功，60秒后手柄会自动休眠。

注： PC平台时N-S模式设备名：Pro Controller，X-input模式设备名：Xbox 360 Controller，VID PID均按原装手柄。

注： ①在有线连接中拨动开关切换模式，手柄切换模式连接现有设备。
②在蓝牙连接中拨动开关切换模式，手柄切换模式并以该模式 设备，跑马灯来回闪（1HZ）。

连发功能

按住“TURBO”键时按一下某个功能键，松开后再按该功能键，将会连发功能；第二次按住“TURBO”键及按一下该功能键，该键将自动连发功能。取消该键连发功能需再一次按上述步骤操作一遍。手柄关机重启不保存上述Turbo设置，手柄默认按键无Turbo功能。

可设置连发功能的按键包括：A、B、X、Y、L、R、ZL、ZR。
按住Turbo+右摇杆上下推可以调节Turbo速度，5Hz-->12Hz-->20Hz可调，开机默认12Hz。

A/B X/Y键值互换

在手柄X-input模式下，按住Turbo+截屏键3秒，手柄震动提示1秒，将互换手柄A/B X/Y键值。
A/B X/Y键值互换后，关机重启不保存设置，手柄默认为N-S布局键值。

六轴陀螺仪校准

在手柄关机状态下，长按B+【-】+HOME键2秒进入校准，通道灯亮起并由跑马灯（1HZ）变为左右摆动闪烁（1HZ），平放手柄后按【+】键开始校准，1秒后校正成功，LED1-4全亮1秒退出校准模式手柄关机休眠。

HOME键操作

①在手柄休眠状态下，短按“HOME”键，手柄开机LED1-4 跑马灯来 闪（1HZ），连上次蓝牙设备。
②在手柄休眠状态下，长按“HOME”键约3秒，手柄开机至LED1-4 跑马灯来 快闪（2HZ），手柄进行蓝牙配对。
③在手柄开机状态下，长按“HOME”键约5秒，手柄关机进入休眠。
④手柄在N-S模式时，连接N-S主机后，当主机进入休眠状态，按下手柄的“HOME”键可以唤醒主机。
⑤当手柄出现异常时，可通过长按“HOME”键10秒进行复位。

摇杆升降操作

将游戏手柄背部的摇杆升降开关向三角箭头所指方向拨动，同时按下相应位置的摇杆，即可降下摇杆；
若需开起摇杆，再次操作摇杆升降开关即可。

关机/充电/低电量报警

状态	说明
关机	手柄连机状态下，5分钟内不使用将会进入休眠状态。（手柄会自动TURBO功能对不休眠）当主机屏幕关闭时,手柄即自动关机休眠； 手柄处于长时间闲置状态时，若20秒未能 成功，将自动关机休眠；手柄开机状态时，长按HOME键约5秒，手柄关机进入休眠。
充电	手柄在休眠状态下插入电源适配器充电，通道灯闪烁，充满电后通道灯熄灭。 手柄在连机状态时充电，相应通道灯慢闪，充满后长亮。
低电量报警	手柄电池电压低于3.3V 时，相应通道的灯闪烁提示，表示手柄电池低电，需要进行充电。

GameMacro APP

1. GameMacro安装：国内安卓用户需扫描二维码下载，国外用户可在谷歌商店直接搜索下载安装，苹果系统可在苹果商店搜索下载安装。将GameMacro安装到手机后，开启手柄，并让手柄进入蓝牙配对状态，打开手机的蓝牙开关。

2. 在手机蓝牙列表找到手柄蓝牙设备，将手柄与手机蓝牙配对连接，连接成功后，再次查看手机蓝牙列表，列表中会出现“GameMacro”的APP蓝牙名，选择“GameMacro”进行连接配对。
3. 进入app后，点击左上角“加号图标”选择刚刚在系统蓝牙连接的手柄，连接成功。
4. GameMacro的各项功能应用，按APP界面内容指引进行操作设置。
5. 可通过GameMacr app更新手柄的固件，手柄下载新固件版本后，还可 到旧版本使用。
注意：手机需连接上手柄蓝牙设备后，才可以检索到APP的“GameMacro”蓝牙名 。

安全说明

1. 使用前请仔细阅读本手册，熟悉操作和调整。
2. 产品不得私自拆卸。
3. 严禁将产品置于火中、水中，以免发生爆炸。
4. 充电器为 5V/2A 充电线，非标充电设备不适用于本产品。

Game Controller

Model No. T50

Product Manuals

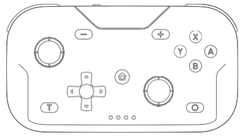

Product Description

This product is a wireless game controller, N-S button layout, adapted to N-S/N-S Oled/N-S Lite console and PC's X-input mode, the controller with N-S and X-INPUT mode switch switch, through the switch to switch modes. Built-in six-axis gyroscope, fast and accurate target locking; equipped with high-precision joystick and dual button vibration motors; with wake-up console, continuous firing and continuous firing speed adjustment.

Key Icons

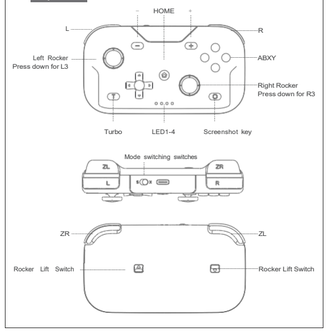

Product Parameters

Input voltage: DC 5.0V	Charging time: About 2 hours
Operating current: ≤ 25 mA	Vibration current: ≤ 100 mA
Sleep current: < 20 uA	Charging current: About 230 mA
Battery capacity: 400 mAh	Data cable: Type-C
Operating time: About 8 hours	Wireless connection distance: < 10 m
Weight: 96 ± 2 g	Dimensions: 121 x 67 x 32 mm

N-S mode

Push the mode switch on the top of the controller to the “S” position to enter the N-S mode.

***Wired Connection**

Connect the controller to the base of N-S console via USB cable, press any key to connect to N-S console by wired connection, the console will assign the channel light to the controller, and the light will remain on for a long time.

***Bluetooth connection**

When using the controller for the first time, you need to charge the controller to ensure that the power meets the normal use. Long press the controller's HOME button for about 3 seconds, the controller will turn on, and the LED1-4 runner light will flash back and forth (2HZ), release the HOME button, turn on the N-S console to the pairing interface, carry out Bluetooth pairing, after pairing successfully, the host will assign the controller's channel light to light up; if the pairing is not successfully completed, the controller will automatically hibernate after 60 seconds.

***N-S mode wired connection to PC**

Connect the controller to PC via USB cable, LED1 will light up after successful connection.

***N-S mode Bluetooth connection to PC**

Long press the controller's HOME button for about 3 seconds, the controller will power on, LED1-4 runner light will flash back and forth (2HZ), release the HOME button, open the PC Bluetooth pairing interface, Bluetooth pairing, after successful pairing, the controller LED1 will light up; if it is not paired successfully, the controller will automatically hibernate after 60 seconds.

Note: Support wired guide bluetooth docking function, after the controller is connected to the N-S console via USB cable, unplug the cable, the controller will automatically connect to the N-S console via bluetooth.

X-input mode

Push the mode switch on the top of the controller to the “X” position to enter X-input mode.

***Wired Connection**

Connect the controller to the USB port of the PC device via USB cable, the controller LED1-2 will light up after connection.

***Bluetooth connection**

When using the controller for the first time, you need to charge the controller to ensure that the power meets the normal use. Long press the controller's HOME button for about 3 seconds, the controller will turn on, and the LED1-4 will flash back and forth (2Hz), release the HOME button, open the PC Bluetooth pairing interface, and then perform Bluetooth pairing, and the controller's LED1-2 will light up long time after the pairing is successful; if the pairing is unsuccessful, the controller will be automatically hibernated after 60 seconds.

Note: PC platform N-S mode device name: Pro Controller, X-input mode device name: Xbox 360 Controller, VID PID are according to the original controller.

Note: ① In the wired connection pull the switch to switch mode, the controller switch mode to connect to the existing device.
② In Bluetooth connection pull the switch to switch mode, the controller switches mode and connects back to the device in that mode, the running light flashes back and forth slowly (1HZ).

Turbo Function

Press a function key while holding down the “TURBO” key, release it and then press it again, it will send out the function; hold down the “TURBO” key for the second time and press the function key, the key will automatically send out the function. To cancel the function of this key, you need to follow the above steps once again. The above Turbo settings will not be saved when the controller is shut down and restarted, and the default buttons of the controller do not have Turbo function.

The buttons that can be set for Turbo function include: A, B, X, Y, L, R, ZL, ZR.

Hold down Turbo + push right stick up and down to adjust Turbo speed, 5Hz-12Hz -20Hz adjustable, power on default 12Hz.

A/B X/Y key value interchange

In X-input mode, press and hold Turbo+Shotshot key for 3 seconds, controller vibration prompt for 1 second, it will swap controller A/B X/Y key value.
After swapping A/B X/Y key values, shutdown and reboot without saving the settings, the controller defaults to N-S layout key values.

Six-axis gyro calibration

In the controller off state, long press B + [-] + HOME key for 2 seconds to enter the calibration, the channel light is on and change from running light (1HZ) to left and right swing flashing (1HZ), flat the controller and then press the [+] key to start the calibration, after 1 second the calibration is successful, the LED1-4 are all lit up for 1 second to exit the calibration mode the controller is off to hibernate.

HOME button operation

① In the controller hibernation state, short press the “HOME” key, the controller power on LED1-4 running lights flash back and forth slowly (1HZ), back to connect the last Bluetooth device.
② In the controller hibernation state, long press the “HOME” key for about 3 seconds, the controller power on to LED1-4 Happy Train light blinking back and forth quickly (2HZ), the controller for Bluetooth pairing.
③ Under the power on state of the controller, press and hold the “HOME” button for about 5 seconds, the controller will shut down and enter into hibernation.
④When the controller is in N-S mode, after connecting to the N-S host, when the console goes into hibernation, press the “HOME” button of the controller to wake up the console.
⑤ When the controller is abnormal, it can be reset by long pressing the “HOME” button for 10 seconds.

Rocker lift operation

Lower the joystick by flicking the rocker lift switch on the back of the controller in the direction of the triangular arrow and pressing the corresponding position of the joystick at the same time;
To raise the joystick, operate the rocker lift switch again.

Power off/charging/low battery alarm

Statuses	Instruction
Power off	The controller will be put to sleep if it is not used within 5 minutes when it is connected to the computer. (The controller will not sleep when it is in full auto-turbo mode.) When the screen of the console is turned off, the controller will automatically turn off the computer and sleep. The controller will automatically shut down and hibernate when the console screen is turned off; When the controller is reconnected, if it fails to reconnect successfully in 20 seconds, it will automatically shut down and sleep; When the controller is turned on, press and hold the HOME button for about 5 seconds, the controller will turn off and enter into hibernation.
Recharge	When the controller is charging with the power adapter plugged in, the channel light blinks and turns off when fully charged. When the controller is charging in the connected state, the corresponding channel light blinks slowly and lights up when fully charged.
Low Battery Alarm	When the controller battery voltage is lower than 3.3V, the corresponding channel light flashes to indicate that the controller battery is low and needs to be recharged.

GameMacro APP

1.GameMacro Installation: Users can search and download and install directly in Google Play Store, and Apple system can search and download and install in Apple Store. After installing GameMacro to your cell phone, turn on the joystick and let the joystick enter the Bluetooth pairing state, turn on the Bluetooth switch of your cell phone.

2. Find the bluetooth device of the gamepad in the bluetooth list of your cell phone, pair the gamepad with the bluetooth of your cell phone and connect it successfully, check the bluetooth list of your cell phone again, and the bluetooth name of “GameMacro” will appear in the list, select “GameMacro” to connect and pair the gamepad. Select “GameMacro” to connect and pair.
3. After entering the app, click on the “plus icon” in the upper left corner to select the handle that has just been connected to the system Bluetooth, and the connection is successful.
4. GameMacro's various functions and applications, according to the APP interface content guidelines for operation and setup.

5.You can update the firmware of the joystick through the GameMacr app, and after downloading the new firmware version of the joystick, you can also go back to the old version to use it.
Note: Your cell phone must be connected to the Bluetooth device of the joystick to retrieve the Bluetooth name of “GameMacro” in the app.

Security instructions

1. Please read this manual carefully before use to familiarize yourself with operation and adjustment.
2. The product must not be disassembled privately.
3. It is strictly prohibited to put the product in fire or water to avoid explosion.
4. The charging source is 5V/2A charging cable, non-standard charging equipment is not applicable to this product.

FCC Warning Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
· · Reorient or relocate the receiving antenna.
· · Increase the separation between the equipment and receiver.
· · Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
· · Consult the dealer or an experienced radio/TV technician for help.ct.
*RF warning for Portable device:
The device has been evaluated to meet general RF exposure requirement.
The device can be used in portable exposure condition without restriction.

反面

游戏控制器

商品番号 T50

取扱説明書

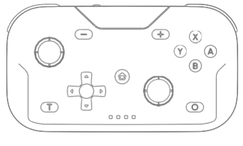

製品概要

本製品はワイヤレスゲームパッドで、N-Sボタン配置、N-S/N-S Oled/N-S Liteホストおよび PC の X-INPUT モードに適応し、N-S と X-INPUT モード切替スイッチ付きコントローラーを通じて。6 軸ジャイロスコープ内蔵、高速で正確なターゲットロック、高精度ジョイスティックとデュアルボタン振動モーター搭載、ウェイクアップホスト、バースト、バーストスピード調整機能付き。

キーアイコン

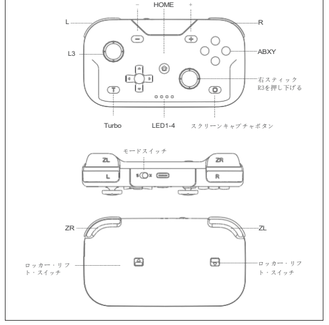

製品パラメーター

入力電圧 DC 5.0V	充電時間：約 2 時間
動作電流：≤ 25 mA	振動電流：≤ 100 mA
スリープ電流 < 20 uA	充電電流：約230ミリアンペア
バッテリー容量： 400 mAh	データケーブル タイプC
動作時間： 約 8 時間	ワイヤレス接続距離 < 10 m
重量： 96 ± 2 g	外形寸法 121 x 67 x 32 mm

N-Sモード

ジョイスティック上部のモードスイッチを 「S 」の位置に押すと、N-Sモードになります。

***有線接続**

ジョイスティックをUSBケーブルでN-Sホストと接続し、任意のキーを押してN-Sホストと有線接続します。

***ブルートゥース接続**

ハンドルが最初に使用されるときは、電源が通常の使用を満たすようにハンドルを充電する必要があります。ハンドルのHOMEボタンを長押し約3秒、ハンドルの電源オン、LED1-4 ランニングライトが前後に点滅（2HZ）、HOME ボタンを離し、ペアリングインターフェイスにN-Sホストを開き、Bluetoothのペアリング、ペアリング成功、ハンドルのチャンネルライトに割り当てられているホスト、正常にペアリングされていない場合は、ハンドルが自動的にスリープ状態になります60秒後。

PCへの* N - Sモード有線接続

USBケーブルでジョイスティックをPCに接続し、接続が成功するとLED1が点灯します。

***PCとのBluetooth接続**

ゲームパッドのHOME ボタンを約3秒間長押しします。ゲームパッドの電源がオンになり、LED1-4 ランナーライトが前後に点滅します（2HZ）、HOME ボタンを離し、PC のBluetooth ペアリングインターフェイスを開き、Bluetoothのペアリングを行い、LED1がペアリング成功後に点灯します;正常にペアリングされていない場合、ゲームパッドは60秒後に自動的に休止状態になります。

注： サポート有線ガイドブルートゥースドッキング機能、ハンドルがUSBケーブルを介してN-Sホストに接続した後、ケーブルを抜いて、ハンドルは自動的にブルートゥースがN-Sホストに接続します。

X-inputモード

ジョイスティック上部のモードスイッチを 「X 」の位置に押すと、X入力モードになります。

***有線接続**

ジョイスティックをUSBケーブルでPCのUSBポートに接続すると、ジョイスティックのLED1-2が点灯します。

***ブルートゥース接続**

初めてハンドルを使用する場合は、電源が通常の使用を満たすようにハンドルを充電する必要があります。ハンドルのHOMEボタンを約3秒間長押しすると、ハンドルがオンになり、LED1-4ランニングライトが前後に点滅し（2HZ）、HOMEボタンを離し、PCのブルートゥースペアリングインターフェースを開き、ブルートゥースペアリング、ペアリング成功後、ハンドルのLED1-2が長時間点灯し、それが正常にペアリングされていない場合、ハンドルは60秒後に自動的に休止状態になります。

注：N-Sモードデバイス名：Proコントローラ、X-入力モードデバイス名：Xbox 360 Controller、VID PIDは元のハンドルによると、PCプラットフォーム。

注：①有線接続の場合、スイッチを引っ張ってモードを切り替え、ハンドルスイッチモードは既存のデバイスに接続する。Bluetooth接続では、スイッチを引っ張ってモードを切り替えるには、ジョイスティックのスイッチモードとそのモードでデバイスに接続し直すと、ランニングランプが前後にゆっくりと点滅します（1HZ）。

Turbo機能

TURBO *キーを押しながらファンクションキーを押し、離した後、再度ファンクションキーを押すと、ファンクションが送信されます。このキーの機能をキャンセルするには、もう一度上記の手順を踏む必要があります。また、ジョイスティックのデフォルトボタンにはターボ機能はありません。

ターボ機能を設定できるボタンは、A、B、X、Y、L、R、ZL、ZRです。
ターボを押しながら右スティックを上下に押すと、ターボスピードを調整できる。

A/B X/Y キー値の交換

ジョイスティックX入力モードで、Turbo+スクリーンショットボタンを3秒間長押しすると、ジョイスティックが1秒間振動、ジョイスティックのA/B X/Yキー値が入れ替わります。
A/BのX/Yキー値を入れ替えた後、設定を保存せずに電源を切って再起動すると、ジョイスティックはN-Sレイアウトのキー値に初期設定される。

Bmaシャイプ夜比

ハンドルオフの状態で、キャリブレーションに入るために2秒間長押しB +[-] + HOMEキー、チャンネルランプが点灯し、ランニングライト（1HZ）から左右スイングが点滅（1HZ）、フラットハンドルに変更し、[+]キーを押してキャリブレーションを開始するには、キャリブレーションが成功した1秒後、LED1-4は、すべてのキャリブレーションモードを終了する1秒間点灯ハンドルシャットダウン休止状態。

HOMEボタン操作

①ハンドルのスリープ状態で、「HOME 」キーを短く押すと、ハンドルの電源オンLED1-4ランニングライトが前後にゆっくりと点滅（1HZ）、最後のBluetoothデバイスを接続するために戻る。
②ハンドルのスリープ状態で、「HOME 」キーを長押し約3秒、ハンドルの電源オンLED1-4ハッピートレインライトが前後に点滅（2HZ）、Bluetoothペアリングのためのハンドル。
③ハンドルの電源オン状態で、「HOME 」ボタンを約5秒間長押しすると、ハンドルがシャットダウンし、休止状態に入ります。
④ジョイスティックがN-Sモードの場合、N-Sホストと接続後、ホストがハイバネーションになったら、ジョイスティックのHOMEキーを押してホストを起動してください。
⑤ジョイスティックに異常が発生した場合、「HOME 」キーを10秒間長押しするとリセットされます。

ロッカーリフト操作

ジョイスティックを下げるには、ゲームパッド背面のロッカーリフトスイッチを三角矢印の方向にフリックし、同時にジョイスティックの対応する位置を押します；ジョイスティックを上げるには、もう一度ロッカーリフトスイッチを操作します。

電源オフ/充電中/バッテリー残量低下アラーム

状況	インストラクション
電源OFF	ハンドルがコンピューターに接続されている場合、5分以内に使用されないと休止状態に入ります。(全自動TURBO動作中はスリープしません)
ホスト画面を閉じると、ハンドルは自動的にシャットダウンしてスリープします。
ハンドルが状態に接続されるとき、もし20秒以内に状態に接続されない場合、ハンドルは自動的にシャットダウンし、スリープします。
ハンドルがオンになった時、HOMEボタンを約5秒間長押しすると、ハンドルはオフになり、休止状態に入ります。
充電	ハンドルがスリープ中に電源アダプターを接続して充電している場合、チャンネルライトは点滅し、充電を開始します。
ハンドルが接続された状態で充電されている場合、対応するチャンネルライトはゆっくりと点滅し、満充電になってから長時間点滅します点灯します。
ローバッテリー警報	ハンドルバッテリーの電圧が3.3V より低くなると、対応するチャンネルライトが点滅し、ハンドルバッテリーの残量が少なく充電が必要であることを示します。

GameMacro APP

1.GameMacroインストール： ユーザーはGoogle Play Storeで直接検索し、ダウンロードしてインストールすることができ、AppleシステムはApple Storeで検索し、ダウンロードしてインストールすることができます。携帯電話にGameMacroをインストールした後、ジョイスティックの電源を入れ、ジョイスティックがBluetoothのペアリング状態に入るようにし、携帯電話のBluetoothスイッチをオンにします。

2. 携帯電話のブルートゥースリストでゲームパッドのブルートゥースデバイスを探し、ゲームパッドと携帯電話のブルートゥースをペアリングし、接続に成功したら、もう一度携帯電話のブルートゥースリストを確認し、“GameMacro “でゲームパッドのブルートゥースがリストに表示されるので、“GameMacro “を選択してゲームパッドを接続し、ペアリングする。GameMacro」を選択し、接続とペアリングを行う。
3. アプリに入った後、左上の「プラスアイコン」をクリックして、今システムBluetoothに接続したハンドルを選択し、接続が成功します。
4.GameMacroの様々な機能とアプリケーションは、APPのインターフェイスの内容のガイドラインに従って、操作と設定を行います。

5.GameMacrアプリからジョイスティックのファームウェアをアップデートすることができ、ジョイスティックの新しいファームウェアバージョンをダウンロードした後、古いバージョンに戻って使用することもできます。
GameMacro *でBluetoothをアプリで取得するには、携帯電話がジョイスティックのBluetoothデバイスに接続されている必要があります。

セキュリティ・ノート

1. ご使用の前にこの取扱説明書をよくお読みになり、操作や調整に慣れてください。
2. 本製品は個人で分解しないでください。
3. 爆発を避けるため、製品を火中や水中に入れることは厳禁です。
4. 充電器は5V/2Aの充電ケーブルで、非標準の充電設備は本製品に適用できません。

5.GameMacrアプリからジョイスティックのファームウェアをアップデートすることができ、ジョイスティックの新しいファームウェアバージョンをダウンロードした後、古いバージョンに戻って使用することもできます。
GameMacro *でBluetoothをアプリで取得するには、携帯電話がジョイスティックのBluetoothデバイスに接続されている必要があります。