Westinghouse

Quick Start Guide

WD24HX1201 | WD32HX1201 | WD40FX1201

For customer support, scan the QR code.
Para atención al cliente, escanee el código QR.
Pour le support client, scannez le code QR.

Tools you will need:

ASSEMBLY / MONTAJE / ASSEMBLAGE

What's included:

A - TV Stand
B - Screws
C - Remote Control
D - Batteries

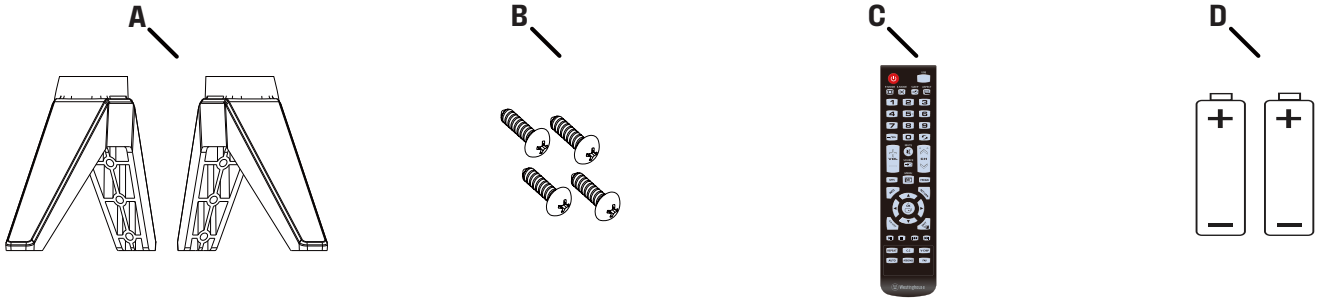

1. **Installation of TV Stand**
   Place the legs into the bottom slots of the TV, insert and tighten the screws (found in the accessories bag) in the circled areas with the screwdriver (not provided).

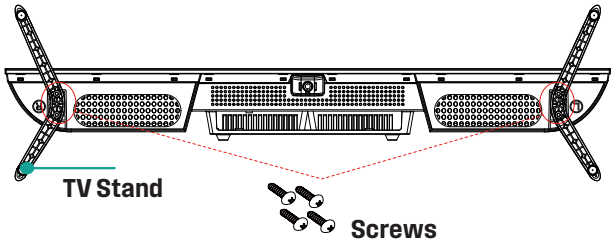

After securing the stand, place the TV on a stable surface The TV is ready for use now.

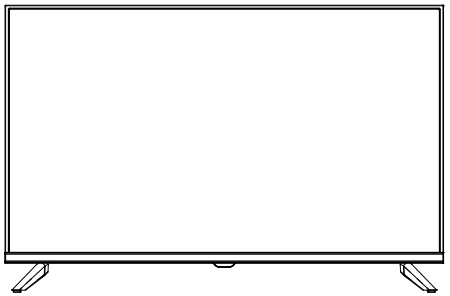

Westinghouse

ASSEMBLY / MONTAJE / ASSEMBLAGE

2.If conecting to cable or satellite.

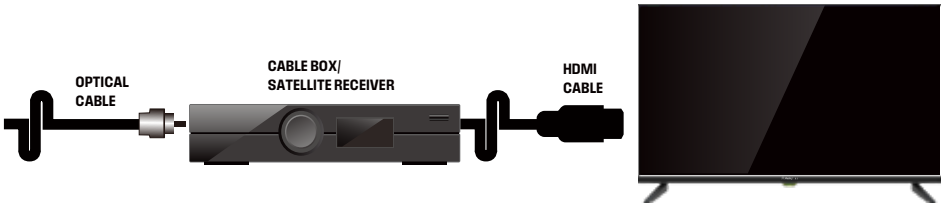

3.If connecting to DVD/BLURAY

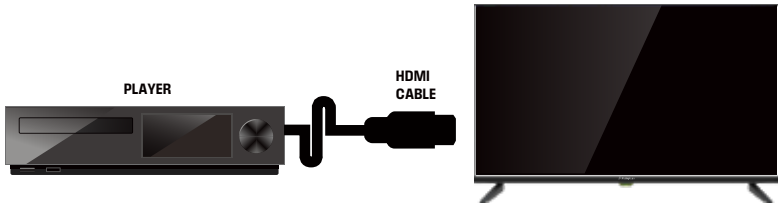

No need to do Channel Scan. Press SOURCE and select the input source that you want(such as HDMI).

4.If conecting to an antenna.

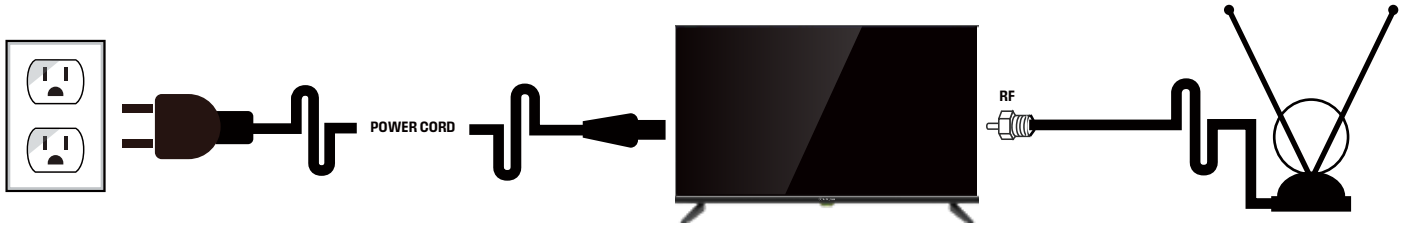

For channel scan refer to User Manual
Pour de canal se rapportent au manuel d'utilisation.
Para del canal refiere al manual del usuario.

Questions? Call (800) 701-0680 or visit westinghouse.com/support

¿Tiene preguntas? Llame al (800) 701-0680 o visite westinghouse.com/support
Des questions? Téléphoner au (800) 701-0680 ou visitez westinghouse.com/support

HDMI®
HIGH-DEFINITION MULTIMEDIA INTERFACE
The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.