INSTRUCTION MANUAL

20V Cordless Blower

Model: ML8A523-DE
ID: SF8A523

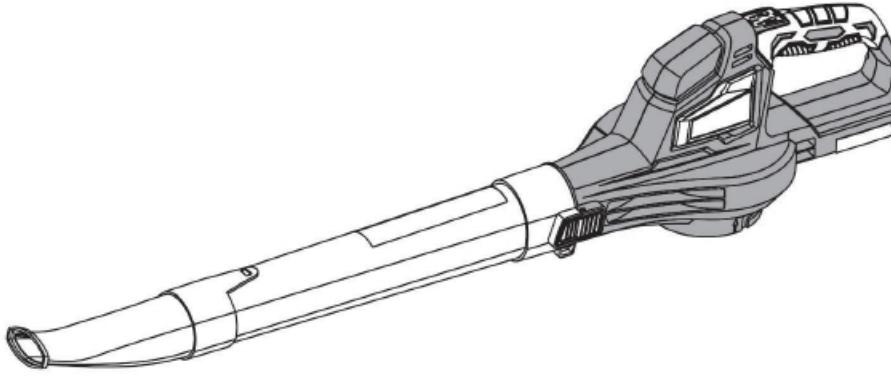

If you have any questions about Maxlander's product, please contact us by email.

Email:topsales@maxlandertool.com

CONTENTS

English ..... 03~15
Deutsch ..... 16~27

TECHNICAL DATA

20V Cordless Blower	Model#ML8A523-DE
Power input:	20V
Max Air Speed:	150 MPH
Max Wind Capacity:	135CFM

EN

INTRODUCTION

Thank You for Purchasing a MAXLANDER Product. This manual provides information regarding the safe operation and maintenance of this product. Every effort has been made to ensure the accuracy of the information in this manual. MAXLANDER reserves the right to change this product and specifications at any time without prior notice.

Please keep this manual available to all users during the entire life of the power tool.



This manual contains special messages to bring attention to potential safety concerns, power tool damage as well as helpful operating and servicing information. Please read all the information carefully to avoid injury and machine damage.

SAFETY INFORMATION

Before operating this power tool, read and observe all warnings, cautions, and instructions on the power tool and in this Owner's Manual.

NOTE: The following safety information is not meant to cover all possible conditions and situations that may occur. Read the entire Owner's Manual for safety and operating instructions. Failure to follow instructions and safety information could result in serious injury or death.

This safety alert symbol is used to identify safety information about hazards that can result in personal injury.



A signal word (DANGER, WARNING, or CAUTION) is used with the alert symbol to indicate the likelihood and the potential severity of injury. In addition, a hazard symbol may be used to represent the type of hazard.

DANGER Indicates a hazard, which, if not avoided, will result in death or serious injury.

WARNING Indicates a hazard, which, if not avoided, could result in death or serious injury.

CAUTION Indicates a hazard, which, if not avoided, might result in minor or moderate injury.

CAUTION Without the alert symbol, indicates a situation that could result in damage.

GENERAL SAFETY RULES

Safety is a combination of common sense, staying alert, and knowing how your blower works.
SAVE THESE SAFETY INSTRUCTIONS.

WARNING: Do not operate this unit until you read this instruction manual for safety, operation and maintenance instructions. Failure to follow all instructions listed below may result in electric shock, fire, and/or serious personal injury.

- Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases, or dust. Power tools create sparks which may ignite the dust or fumes.
- Do not allow children or untrained individuals to use this unit.
- Don't expose battery tools to rain or wet conditions. Water entering a battery tool will increase the risk of electric shock.
- Do not handle plug or tool with wet hands.
- Never allow children to operate the equipment. Never allow adults to operate the equipment without proper instruction.
- Always wear safety glasses with side shields that comply with ANSI Z87.1. Everyday glasses have only impact resistant lenses. They are NOT safety glasses. Following this rule will reduce the risk of eye injury. Use face mask if operation is dusty.
- Wear eye protection when operating this product. Secure long hair above shoulder level to prevent entanglement in moving parts.
- Use extra care when cleaning on stairs.
- Do not expose to rain, store indoors.
- Do not operate in poor lighting.
- Keep all parts of your body away from any moving part.
- Keep hair, loose clothing, fingers and all body parts away from openings and moving parts.
- Wear heavy long pants, boots, and gloves. Avoid loose garments and jewelry that could get caught in moving parts of the machine or its motor.
- Do not force tool. Use the correct tool for your application. The correct tool will do the job better and safer at the rate for which it is designed.
- Do not operate the equipment while barefoot or when wearing sandals or similar lightweight footwear. Wear protective footwear that will protect your feet and improve your footing on slippery surfaces.
- Secure long hair so it is above shoulder level to prevent entanglement in any moving parts.
- Keep firm footing and balance. Do not overreach. Overreaching can result in loss of balance.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Do not use tool if switch does not turn it on or off. Any tool that cannot be controlled with the switch is dangerous and must be repaired.
- Keep all bystanders, children, and pets at least 50 ft. away.

- Do not operate this unit when you are tired, ill, or under the influence of alcohol, drugs, or medication.
- Keep all parts of your body away from any moving parts and all hot surfaces of the unit.
- Do not put any object into openings. Do not use with any opening blocked; keep openings free of dust, lint, hair, and anything that may reduce air flow.
- Check the work area before each use. Remove all objects such as rocks, broken glass, nails, wire, or string which can be thrown or become entangled in the machine.
- Use only identical manufacturer's replacement parts and accessories. Use of any other parts may create a hazard or cause product damage.
- Do not charge battery tool in rain, or damp or wet location. Follow this rule will reduce the risk of electric shock.
- For household use only.
- Battery tools do not have to be plugged into an electrical outlet; therefore, they are always in operating condition. Be aware of possible hazards when not using your battery tool or when changing accessories. Following this rule will reduce the risk of electric shock, fire, or serious personal injury.
- Remove or disconnect battery before servicing, cleaning or removing material from the gardening appliance.
- Use only MAXLANDER battery (Model# ML-DCPB2-5F)
- Store idle appliances - When not in use, blower should be stored indoors in a dry, locked place out of the reach of children.
- Do not dispose of the batteries in a fire. The cell may explode. Check with local codes for possible special disposal instructions.
- Do not open or mutilate the batteries. Released electrolyte is corrosive and may cause damage to the eyes or skin. It may be toxic if swallowed.
- Do not place battery tools or their batteries near fire or heat. This will reduce the risk of explosion and possibly injury.
- Batteries can explode in the presence of a source of ignition, such as a pilot light. To reduce the risk of serious personal injury, never use any cordless product in the presence of open flame. An exploded battery can propel debris and chemicals. If exposed, flush with water immediately.
- Do not crush, drop or damage battery pack. Do not use a battery pack or charger that has been dropped or received a sharp blow. A damaged battery is subject to explosion. Properly dispose of a dropped or damaged battery immediately.
- Exercise care in handling batteries in order not to short the battery with conducting materials such as rings, bracelets, and keys. The battery or conductor may overheat and cause burns. Do not open or mutilate the batteries. Released electrolyte is corrosive and may cause damage to the eyes or skin. It may be toxic if swallowed.
- For best results, your battery tool should be charged in a location where the temperature is more than 45°F but less than 104°F. To reduce the risk of serious personal injury, do not store outside or in vehicles.
- Under extreme usage or temperature conditions, battery leakage may occur. If liquid comes in contact with your skin, wash immediately with soap and water, then neutralize with lemon juice or

vinegar. If liquid gets into your eyes, flush them with clean water for at least 10 minutes, then seek immediate medical attention. Following this rule will reduce the risk of serious personal injury.

- If the power supply cord is damaged, it must be replaced only by the manufacturer or by an authorized service center to avoid risk.
- Do not point the blower nozzle in the direction of people or pets.
- Never run the unit without the proper equipment attached. Always ensure the sweeper tubes are installed.
- Maintain tool with care. Keep fan area clean for best and safest performance. Follow instructions for proper maintenance. Do not attempt to clear clogs from tool without first removing the battery.
- To reduce the risk of electrical shock, do not expose to rain, do not use on wet surfaces. Store indoors.
- Save these instructions. Refer to them frequently and use them to instruct others who may use this battery tool. If you loan someone this battery tool, loan them these instructions also.

CHILD SAFETY

Tragic accidents can occur if the operator is not aware of the presence of children.

- Keep children out of the working area and under the watchful care of a responsible adult.
- Do not allow children under the age of 14 to operate this blower. Children who are 14 years of age and older must read and understand the operating instructions and safety rules in this manual, and must be trained and supervised by a parent.
- Stay alert, and turn the blower off if a child or any other person enters the mowing area.
- Use extreme care when approaching blind corners, doorways, shrubs, trees, or other objects that may obscure your view of a child who may run into the path of the blower.



WARNING:
Some dust created by power sanding, sawing, grinding, drilling and other construction activities contains chemicals known to cause cancer, birth defects or other reproductive harm. Some examples of these chemicals are:

- Lead from lead-based paints,
- Crystalline silica from bricks and cement and other masonry products,
- Arsenic and chromium from chemically-treated lumber.

Your risk from these exposures varies, depending on how often you do this type of work. To reduce your exposure to these chemical: work in a well-ventilated area, and work with approved safety equipment, such as those dust masks that are specially designed to filter out microscopic particles.

ENVIRONMENTAL PROTECTION



Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice.

The battery contains material which is hazardous to you and the environment. It must be removed and disposed of separately at a facility that accepts lithium-ion batteries.

SERVICE

Servicing requires extreme care and knowledge and should be performed only by a qualified service technician. For service we suggest you return the product to your nearest **AUTHORIZED SERVICE CENTER** for repair. When servicing, use only identical replacement parts.



WARNING: To avoid serious personal injury, do not attempt to use this product until you have read this Owner's Manual thoroughly and understand it completely.



WARNING:

The operation of any power tool can result in foreign objects being thrown into your eyes, which can result in severe eye damage. Before beginning power tool operation, always wear safety goggles or safety glasses with side shields and, when needed, a full face shield. We recommend Wide Vision Safety Mask for use over eyeglasses or standard safety glasses with side shields. Always use eye protection which is marked to comply with ANSI Z87.1.

SYMBOLS

Some of the following symbols may be used on this product. Please study them and learn their meaning. Proper interpretation of these symbols will allow you to operate the product better and safer.

SYMBOL	NAME	DESIGNATION/EXPLANATION
V	Volts	Voltage
A	Amperes	Current
Hz	Hertz	Frequency (cycles per second)
W	Watts	Power
min	Minutes	Time
	Safety Alert	Precautions that involve your safety.
	Read the user's manual	To reduce the risk of injury, user must read and understand user's manual before using this product.
	Eye protection	Wear eye protection that is marked to comply with ANSI Z87.1 when operating this equipment.
	Wet conditions alert	Do not expose to rain or use in damp locations.
	Long hair	Failure to keep long hair away from the air inlet could result in personal injury.
	Loose clothing	Failure to keep loose clothing from being drawn into air intake could result in personal injury.
	Keep Bystanders away	Keep all bystanders at least 50 ft. away.
	Blower tubes	Do not operate without tubes in place.
	Electric shock alert	Beware of electric shock hazard.

SAVE THESE INSTRUCTIONS

KNOWING YOUR BLOWER

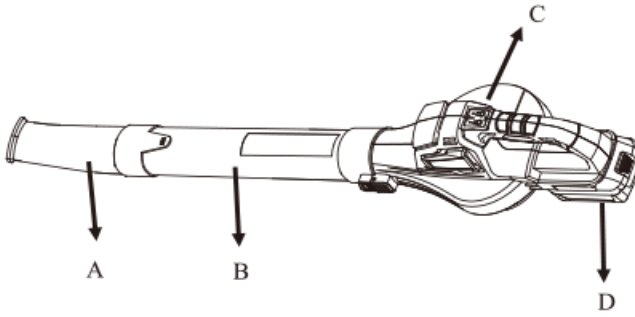

A Blower small tube
B Blower big tube
C Control panel
D Battery pack

Including:

- Blower
- 20V Battery and Charger
- User manual
- Blower tube

ASSEMBLY INSTRUCTIONS

INSTALLING THE BLOWER TUBE / BLOW PIPE/ SUCTION PIPE

CAUTION: Always ensure that the tool is switched off and the battery is removed before making any adjustments or maintenance procedures.

- Slide the small tube (C) over the big tube (B) until the latch on the big tube is inserted into the end of the opening on the small tube and locks into position (see fig.1)
- Align the widest end of the big tube (B) with the front opening on the blower (A). (see fig 2)

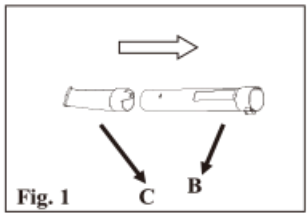

Fig. 1

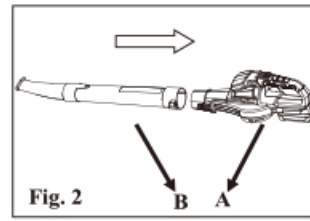

Fig. 2

CONNECTING AND REMOVING BATTERY

IMPORTANT!

The battery pack is not charged when it is purchased. Before using the blower for the first time, place the battery pack in the battery charger and charge. Make sure to read all safety precautions, and follow the instructions in the battery charger section.

To remove the battery pack

- Press the button (1) on the battery pack down and hold (see fig.3)
- Grasp the blower (2) firmly, and pull the battery pack out of the handle. (see fig 4)

Fig. 3

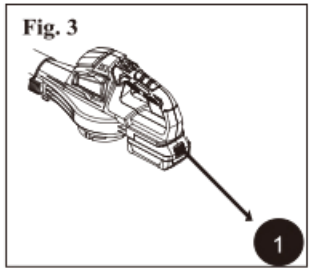

Fig. 4

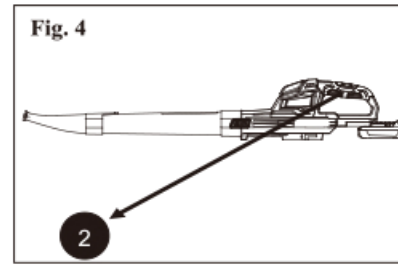

To install the battery pack

To install the battery pack into the tool, align the rails of the battery pack with the rails in the tool and push the battery into the handle. To connect the battery, slide the battery pack fully forward. Until the latch locks into place.

WARNING:
Follow these instructions in order to avoid injury and to reduce the risk of electric shock or fire:

- Replace the battery pack or the charger immediately if the battery case or charger cord is damaged.
- Verify that the battery pack is removed before inspecting, adjusting, or performing maintenance on any part of the blower.
- Read, understand, and follow the instructions.

OPERATING INSTRUCTIONS

WARNING: Read and thoroughly understand all instructions and safety information before operating this blower. Failure to do so may cause serious injury or death. Do not allow anyone to operate this blower who has not read this manual.

STARTING/STOPPING THE BLOWER (see fig.5)

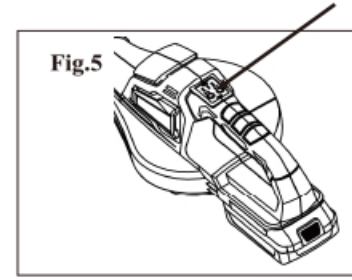
Fig.5

- Install the battery pack. (Refer to Installing the battery pack)
- **To Switch on/off, press the button**
- **To Adjust the speed, press the button**

Use the blower to (see fig.6)

- Blow debris or grass clippings off of driveways, sidewalks, patios, parks, parking lots, etc.
- Gather grass clippings, straw, or leaves into piles.
- Remove debris from corners, around joints, and between bricks.

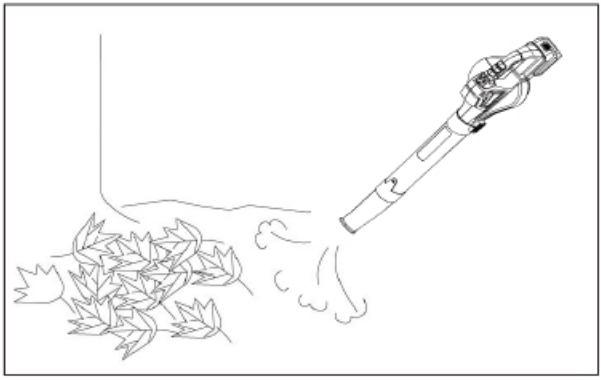
Fig.6

MAINTENANCE



WARNING:
In order to avoid personal injury and the risk of fire and electric shock, remove the battery pack before adjusting, inspecting, or cleaning the blower.

CLEANING

Remove the battery pack.

- Brush or blow dust and debris out of the air vents using compressed air or a vacuum. Keep the air vents free of obstructions, sawdust, and wood chips. Do not spray, wash, or immerse the air vents in water.
- Wipe off the housing and the plastic components using a moist, soft cloth. Do not use strong solvents or detergents on the plastic housing or plastic components. Certain household cleaners may cause damage, and may cause a shock hazard.

BATTERY PACK

- Store the battery pack fully charged.
- Once the charging light turns green, remove the battery from the charger and disconnect the charger from the outlet.
- Do not store the battery pack on the tool.
- After charging, the battery pack may be stored in the charger, as long as the charger is not plugged in.

CHARGER MAINTENANCE

- Keep the charger clean and clear of debris. Do not allow foreign material to get into the recessed cavity or onto the contacts. Wipe the charger clean with a dry cloth. Do not use solvents or water, and do not place the charger in wet conditions.
- Unplug the charger when there is no battery pack in it.
- Fully charge the batteries before placing them in storage.
- Store the charger at normal room temperature. Do not store it in excessive heat. Do not use the charger in direct sunlight. Recharge at room temperature between 45˚F and 104˚F. If the battery pack is hot, allow it to cool down before recharging.

CHARGER AND BATTERY

CONNECTING CHARGER TO POWER SUPPLY



Power supply(mains) voltage and operating voltage must be the same.

- Insert the plug in the wall outlet.
- A self test is performed after the charger is connected to the power supply. During this process, the green light(1) on the charger lights up.

CHARGING THE BATTERY

A factory-new battery is not fully charged.

Recommendation: Fully charge the battery before using it for the first time.

- Insert Connect the charger to the power supply - mains voltage and operation voltage of the charger must be the same - see “Connecting Charger to Power Supply”.

Operate the charger only in enclosed and dry rooms at ambient temperatures between +5℃ to +40℃ (+40℉ to 104℉)

Only charge dry batteries. Allow a damp battery to dry before charging.

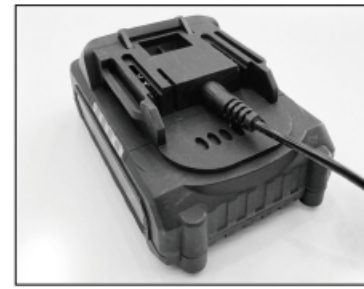

- Push the battery into the charger until noticeable resistance is felt - then push it as far as stop.
- Charging begins as soon as the red light on the charger turns up.

The charge time dependent on a number of factors, including battery condition, ambient temperature, etc., and may therefore vary from the times specified.

The battery heats up during operation in the power tool. If a hot battery is inserted in the charger, it may be necessary to cool it down before charging. The charging process begins only after the battery has cooled down. The time required for cooling may prolong the charge time.

The battery and charger heat up during the charging process.

END OF CHARGE

- The green light turns up when the charger is fully charged.
- Remove the fully charged battery from the charger.

ENVIRONMENTALLY SAFE BATTERY DISPOSAL

The batteries used in this blower's battery pack contain the following toxic and corrosive material: LITHIUM-ION.

WARNING:
Toxic materials must be disposed of in a specified manner in order to prevent contamination of the environment. Before disposing of damaged or worn out Lithium-Ion battery packs, contact your local waste disposal agency for information and specific instructions. Take the batteries to a local recycling and/or disposal center that is certified for disposal.
If the battery pack cracks or breaks, whether it leaks or not, do not recharge it and do not use it. Dispose of it and replace it with a new battery pack. **DO NOT ATTEMPT TO REPAIR IT!**

Follow these instructions in order to avoid injury and the risk of fire, explosion, or electric shock, and to avoid damage to the environment:

- Cover the battery's terminals with heavy-duty adhesive tape.
- Do not attempt to remove or destroy any of the components of the battery pack.
- Do not attempt to open the battery pack.
- If a leak develops, the electrolytes that are released are corrosive and toxic. Do not get the solution in the eyes or on the skin, and do not swallow it.
- Do not place batteries in regular household trash.
- DO NOT incinerate batteries.
- DO NOT place batteries where they will become part of any waste landfill or municipal solid waste stream.
- Dispose of batteries at a certified recycling or disposal center.

TROUBLE SHOOTING

The following form lists the common operating system with problem and solutions. Please read the form carefully and follow it.

PROBLEMS	POSSIBLE CAUSES	SOLUTION
Motor fails to start when Switch trigger is depressed.	Battery is not secure.	To secure the battery pack, make sure the latches on the top of the battery pack snap into place.
	Battery is not charged.	Charge the battery pack according to the Instruction included with your model.
Unit will not start	Defective power switch.	Return to place of purchase or return the unit to a repair center.
Unit will not blow	Blocked tube	Clear the blockage.

DE

Einleitung

Vielen Dank für den Kauf von MAXLANDER Produkten. Dieses Handbuch enthält Informationen zur sicheren Bedienung und Wartung dieses Produkts. Wir haben alle Anstrengungen unternommen, um die Richtigkeit der Informationen in diesem Handbuch zu gewährleisten. MAXLANDER behält sich das Recht vor, dieses Produkt und die Spezifikationen jederzeit und ohne vorherige Ankündigung zu ändern.

Bitte stellen Sie dieses Handbuch allen Benutzern während der gesamten Lebensdauer des Elektrowerkzeugs zur Verfügung.



Dieses Handbuch enthält besondere Hinweise, die auf mögliche Sicherheitsprobleme, Beschädigungen an Elektrowerkzeugen und hilfreiche Bedienungs- und Wartungsinformationen aufmerksam machen. Bitte lesen Sie alle Informationen sorgfältig durch, um Verletzungen und Schäden an der Maschine zu vermeiden.

Sicherheitsinformationen

Bitte lesen und beachten Sie alle Warnhinweise, Vorsichtsmaßnahmen und Anweisungen im Elektrowerkzeug und in dieser Bedienungsanleitung, bevor Sie dieses Elektrowerkzeug bedienen.

Hinweis: Die folgenden Sicherheitsinformationen sollen nicht alle möglichen Bedingungen und Situationen abdecken. Bitte lesen Sie das gesamte Benutzerhandbuch für Sicherheits- und Bedienungsanweisungen. Die Nichtbefolgung der Anweisungen und Sicherheitsinformationen kann zu schweren Verletzungen oder Tod führen.

Dieses Sicherheitswarnsymbol dient zur Identifizierung von Sicherheitsinformationen über Gefahren, die zu Personenverletzungen führen können.



Signalwörter (Gefahr, Warnung oder Vorsicht) werden zusammen mit Alarmsymbolen verwendet, um die Wahrscheinlichkeit und potenzielle Schwere einer Verletzung anzuzeigen. Darüber hinaus kann ein Gefahrensymbol verwendet werden, um die Art der Gefahr anzugeben.

Gefahr bezeichnet eine Gefahr, die, wenn nicht vermieden wird, zu Tod oder schwerer Verletzung führen wird.

Die **Warnung** weist auf eine Gefahr hin, die, wenn sie nicht vermieden wird, zum Tod oder zu schweren Verletzungen führen kann.

Hinweis weist auf eine Gefahr hin, die, wenn nicht vermieden wird, zu leichten oder mittelschweren Verletzungen führen kann.

CAUTION ohne Alarmsymbol, das eine Situation anzeigt, die zu Schäden führen kann.

Allgemeine Sicherheitsregeln

Sicherheit ist eine Kombination aus gesundem Menschenverstand, Wachsamkeit und dem Verständnis, wie ein Gebläse funktioniert.

Bewahren Sie diese Sicherheitshinweise auf.



WARNUNG: Bedienen Sie dieses Gerät nicht, bevor Sie diese Sicherheits-, Betriebs- und Wartungsanleitung gelesen haben. Wenn Sie alle unten aufgeführten Anweisungen nicht befolgen, kann es zu Elektroschocks, Feuer und/oder schweren Körperverletzungen kommen.

Bedienen Sie das Elektrowerkzeug nicht in einer explosionsgefährdeten Atmosphäre, z. B. in Gegenwart von entzü ndbaren Flüssigkeiten, Gasen oder Staub. Elektrowerkzeuge erzeugen Funken, die Staub oder Rauch entzünden können.

Lassen Sie das Gerät nicht von Kindern oder ungeschulten Personen benutzen.

Setzen Sie die Batteriewerkzeuge nicht Regen oder Feuchtigkeit aus. Wasser, das in die Batteriewerkzeuge eindringt, erhöht das Risiko eines Stromschlags.

Stecker oder Werkzeuge nicht mit nassen Händen bedienen

Lassen Sie das Gerät niemals von Kindern bedienen. Lassen Sie niemals einen Erwachsenen das Gerät ohne entsprechende Anleitung bedienen.

Tragen Sie immer eine Schutzbrille mit Seitenschutz nach ANSI Z87.1. Alltagsbrille ist nur mit stoß festen Gläsern verfügbar. Das sind keine Schutzbrillen. Die Befolgung dieser Regel verringert das Risiko von Augenverletzungen. Verwenden Sie eine Gesichtsmaske, wenn der Betrieb staubig ist.

Tragen Sie eine Schutzbrille, wenn Sie dieses Produkt bedienen. Halten Sie das lange Haar oberhalb der Schulter, um zu verhindern, dass es sich um die beweglichen Teile verwickelt.

Besondere Vorsicht bei der Reinigung der Treppen

Nicht dem Regen aussetzen und drinnen lagern.

Nicht bei schlechtem Licht arbeiten.

Halten Sie alle Teile Ihres Körpers von allen Bereichen der Bewegung fern.

Halten Sie Haare, lockere Kleidung, Finger und alle Körperteile von Öffnungen und beweglichen Teilen fern.

Tragen Sie schwere Hosen, Stiefel und Handschuhe. Vermeiden Sie lockere Kleidung und Schmuck, die nicht in den beweglichen Teilen der Maschine oder des Motors verklemmen.

Verwenden Sie keine Werkzeuge mit Gewalt. Verwenden Sie die richtigen Tools für Ihre Anwendung. Das richtige Werkzeug erledigt die Arbeit besser und sicherer in der Geschwindigkeit, für die es konzipiert wurde.

Do not operate the equipment while barefoot or when wearing sandals or similar lightweight footwear.Wear protective footwear that will protect your feet and improve your footing on slippery surfaces.

Fixieren Sie lange Haare oberhalb der Schulterhöhe, um Verwirrungen in jedem Bewegungsbereich zu verhindern.

Bleiben Sie fest und im Gleichgewicht. Übertreiben Sie nicht. Übertreiben können zu einem Verlust des Gleichgewichts führen.

Die Verwendung als Spielzeug ist nicht erlaubt. Bei der Anwendung durch oder in der Nähe von Kindern ist besondere Vorsicht erforderlich.

Benutzen Sie das Werkzeug nicht, wenn der Schalter nicht eingeschaltet oder ausgeschaltet wird. Jedes Werkzeug, das nicht mit einem Schalter gesteuert werden kann, ist gefährlich und muss repariert werden.

Halten Sie alle Umstehenden, Kinder und Haustiere mindestens 50 Fuß weg.

Bedienen Sie das Gerät nicht, wenn Sie müde, krank sind oder unter dem Einfluss von Alkohol, Drogen oder Medikamenten stehen.

Halten Sie alle Teile Ihres Körpers von allen beweglichen Teilen und allen heißen Oberflächen Ihres Geräts fern.

Setzen Sie nichts in die Öffnung. Verwenden Sie es nicht mit verstopften Öffnungen; Halten Sie die Öffnung frei von Staub, Flusen, Haaren und alles andere, was den Luftstrom verringern könnte.

Prüfen Sie den Arbeitsbereich vor jedem Gebrauch. Entfernen Sie alle Gegenstände, die in die Maschine geworfen oder um sie gewickelt werden können, wie Steine, Glasscherben, Nägel, Drähte oder Seile.

Verwenden Sie nur Ersatzteile und Zubehör desselben Herstellers. Die Verwendung anderer Teile kann eine Gefahr darstellen oder Produktschäden verursachen.

Laden Sie das Batteriewerkzeug nicht im Regen, in Feuchtigkeit oder an einem nassen Ort auf. Die Befolgung dieser Regel verringert das Risiko eines Stromschlags.

Nur für den häuslichen Gebrauch.

Batteriewerkzeuge müssen nicht an eine Steckdose angeschlossen werden; Sie sind daher immer im Betriebszustand. Achten Sie bitte auf mögliche Gefahren, wenn Sie Batteriewerkzeuge nicht verwenden oder Zubehör wechseln. Die Befolgung dieser Regel verringert das Risiko eines Stromschlags, eines Feuers oder einer schweren Körperverletzung.

Entfernen oder trennen Sie die Batterie, bevor Sie sie reparieren, reinigen oder Material von der Gartenausrüstung entfernen.

Verwenden Sie nur MAXLANDER Akkus (Modell ML-DCPB2-5F)

Store idle appliances-When not in use,blower should be stored indoors in a dry,locked place out of the reach of children.

Entsorgen Sie die Batterie nicht im Feuer. Die Zelle könnte explodieren. Bitte konsultieren Sie die ö rtlichen Vorschriften für mögliche besondere Anweisungen zur Entsorgung.

Öffnen oder beschädigen Sie die Batterie nicht. Die freigesetzten Elektrolyte sind korrosiv und können Schäden an den Augen oder der Haut verursachen. Es kann giftig sein, wenn es verschluckt wird.

Stellen Sie ein Batteriegerät oder seine Batterie nicht in der Nähe von Feuer oder Hitze. Dadurch wird das Risiko von Explosionen und möglichen Verletzungen verringert.

Die Batterie kann in Gegenwart einer Zündquelle (z. B. einer Kontrollleuchte) explodieren. Um das Risiko schwerer Körperverletzungen zu verringern, verwenden Sie niemals Akkuprodukte in Gegenwart einer offenen Flamme. Explodierende Batterien treiben Trümmer und Chemikalien. Bei Exposition sofort mit Wasser abspülen.

Den Batteriepack nicht quetschen, fallen lassen oder beschädigen. Verwenden Sie keine Batteriepacks oder Ladegeräte, die heruntergefallen sind oder heftig aufgetroffen wurden. Beschädigte Batterien können leicht explodieren. Entsorgen Sie heruntergefallene oder beschädigte Batterien sofort und ordnungsgemäß.

Seien Sie vorsichtig, wenn Sie die Batterie handhaben, damit sie nicht durch leitfähige Materialien wie Ringe, Armbänder und Schlüssel kurzgeschlossen wird. Batterien oder Leiter können sich überhitzen und Verbrennungen verursachen. Öffnen oder beschädigen Sie die Batterie nicht. Die freigesetzten Elektrolyte sind korrosiv und kö nnen Schäden an den Augen oder der Haut verursachen. Verschluckt kann giftig sein.

Für beste Ergebnisse sollten Sie Ihr Batteriewerkzeug an einer Temperatur über 45 °F, aber unter 104 °F aufladen. Um die Gefahr schwerer Körperverletzungen zu verringern, nicht außerhalb oder im Fahrzeug lagern.

Unter extremen Gebrauchs- oder Temperaturbedingungen kann es zu Leckagen der Batterie kommen, wenn Flüssigkeit eindringt

Kontakt mit der Haut, sofort mit Seife und Wasser waschen, anschließend mit Zitronensaft oder

Essig. Wenn die Flüssigkeit in die Augen gelangt, spülen Sie sie mindestens 10 Minuten lang mit klarem Wasser ab und suchen Sie dann sofort einen Arzt auf. Die Befolgung dieser Regel verringert das Risiko schwerer Körperverletzungen.

Wenn das Netzkabel beschädigt ist, darf es nur vom Hersteller oder autorisierten Servicezentrum ausgetauscht werden, um Risiken zu vermeiden

Richten Sie die Gebläsedüse nicht in Richtung einer Person oder eines Haustiers.

Betreiben Sie das Gerät niemals ohne die entsprechende Ausrüstung installiert. Stellen Sie immer sicher, dass ein Kehrrohr installiert ist.

Warten Sie das Werkzeug sorgfältig. Halten Sie den Lüfterbereich sauber für eine optimale und sicherste Leistung. Befolgen Sie die Anweisungen für eine korrekte Wartung. Versuchen Sie nicht, eine Verstopfung am Werkzeug zu entfernen, ohne die Batterie zu entfernen.

Um das Risiko eines Stromschlags zu verringern, nicht regen aussetzen und nicht auf feuchten Oberflä chen verwenden. Innenräume aufbewahren.

Speichern Sie diese Anweisungen. Beziehen Sie sich häufig auf sie und verwenden Sie sie, um andere Leute anzuleiten, die dieses Batteriewerkzeug verwenden könnten. Wenn Sie jemandem dieses Batterie-Werkzeug leihen, leihen Sie ihm diese Anweisungen auch.

Kindersicherheit

Wenn der Betreiber nicht von der Anwesenheit des Kindes wusste, könnte es zu tragischen Unfällen kommen.

Halten Sie Kinder vom Arbeitsbereich fern und unter der Aufsicht eines verantwortlichen Erwachsenen. Lassen Sie dieses Gebläse nicht von Kindern unter 14 Jahren bedienen. Kinder ab 14 Jahren müssen die Bedienungsanleitungen und Sicherheitsregeln in diesem Handbuch lesen und verstehen und mü ssen von ihren Eltern geschult und beaufsichtigt werden.

Bleiben Sie wachsam und schalten Sie das Gebläse aus, wenn Kinder oder andere Personen den Mähbereich betreten. Seien Sie äußerst vorsichtig, wenn Sie sich toten Winkeln, Türen, Sträuchern, Bäumen oder anderen Gegenst änden nähern, die Ihre Sicht auf Kinder blockieren können, die in den Weg des Gebläses laufen können.



Warnung:

Einige Staube, die durch Bautätigkeiten wie Kraftschleifen, Sägen, Schleifen und Bohren entstehen Enthält Chemikalien, von denen bekannt ist, dass sie KrebsGeburtsfehler oder andere Fortpflanzungsschäden verursachen. Einige Beispiele für diese Chemikalien sind:

- Blei in Farben auf Bleibasis,
- Kristalline Kieselsäure aus Ziegeln und Zement und anderen Mauerwerkerzeugnissen,
- Chemische Behandlung von Arsen und Chrom in Holz.

Die Risiken dieser Expositionen sind unterschiedlich, je nachdem, wie oft Sie diese Art von Arbeit ausüben. Reduzieren Sie die Exposition gegenüber diesen Chemikalien: Arbeiten Sie an gut belüfteten Orten und verwenden Sie zugelassene Sicherheitsausrüstung, wie beispielsweise Staubmasken, die speziell dazu entwickelt sind, winzige Partikel zu filtern.

Umweltschutz



Elektroaltgeräte sollten nicht zusammen mit Hausmüll entsorgt werden. Bitte recyceln Sie dort, wo Einrichtungen vorhanden sind. Fragen Sie die lokale Regierung oder den Einzelhändler nach Recycling-Empfehlungen.

Batterien enthalten Stoffe, die für Sie und die Umwelt schädlich sind. Es muss Individuelle Entfernung und Entsorgung in einer Anlage, die Lithium-Ionen-Batterien aufnimmt

Dienstleistungen

Reparaturen erfordern äußerste Sorgfalt und Kenntnis und dürfen nur von qualifizierten Servicetechnikern durchgeführt werden. Für Reparaturen empfehlen wir Ihnen, das Produkt zur Reparatur an das nächstgelegene autorisierte Servicezentrum zurückzugeben. Bei der Reparatur werden nur die gleichen Ersatzteile verwendet.



Warnung: Um schwere Körperverletzungen zu vermeiden, versuchen Sie nicht, dieses Produkt zu verwenden, bis Sie diese Bedienungsanleitung gründlich gelesen und vollständig verstanden haben.





Warnung:
Die Bedienung eines Elektrowerkzeugs kann dazu führen, dass Fremdkörper in Ihre Augen gelangen, was zu ernsthaften Augenschäden führen kann. Tragen Sie immer eine Schutzbrille oder eine Schutzbrille mit Seitenschutz und, falls erforderlich, einen vollen Gesichtsschutz, bevor Sie mit dem Betrieb des Elektrowerkzeugs beginnen. Wir empfehlen die Verwendung einer Sicherheitsmaske mit breitem Sichtfeld auf einer Brille oder einer Standard-Sicherheitsbrille mit Seitenabdeckung. Verwenden Sie immer Schutzbrillen, die mit ANSI Z87.1 konform gekennzeichnet sind.

Symbolen

Einige der folgenden Symbole können auf diesem Produkt verwendet werden. Bitte studieren Sie sie und lernen Sie ihre Bedeutung. Eine korrekte Interpretation dieser Symbole ermöglicht Ihnen, das Produkt besser und sicherer zu bedienen.

SYMBOL	NAME	BEZEICHNUNG/ERLÄUTERUNG
V	Volt	Spannung
A	Ampere	Aktuell
Hz	Hertz	Frequenz (Zyklen pro Sekunde)
W	Watt	Leistung
Min	Protokoll	Zeit
	Sicherheitshinweis	Vorsichtsmaßnahmen, die Ihre Sicherheit betreffen.
	Lesen Sie die Bedienungsanleitung	Um das Verletzungsrisiko zu verringern, muss der Benutzer das Benutzerhandbuch lesen und verstehen, bevor er dieses Produkt verwendet.
	Augenschutz	Bei der Bedienung dieses Gerätes tragen Sie eine Schutzbrille mit der Kennzeichnung nach ANSI Z87.1.
	Alarm für nasse Bedingungen	Nicht dem Regen aussetzen oder an feuchten Orten verwenden.
	Langes Haar	Das Versäumnis, lange Haare von den Lufteinlässen fernzuhalten, kann zu Verletzungen führen.
	Lockere Kleidung	Das Versäumnis zu verhindern, dass lockere Kleidung in den Lufteinlass gesaugt wird, kann zu Personenverletzungen führen.
	Halten Sie die Zuschauer fern	Halten Sie alle Umstehenden mindestens 50 Fuß entfernt.
	Gebläserohr	Nicht ohne Schlauch bedienen.
	Alarm für elektrischen Schlag	Achten Sie auf die Gefahr eines Stromschlags.

Speichern Sie diese Anweisungen

Lernen Sie Ihr Gebläse kennen

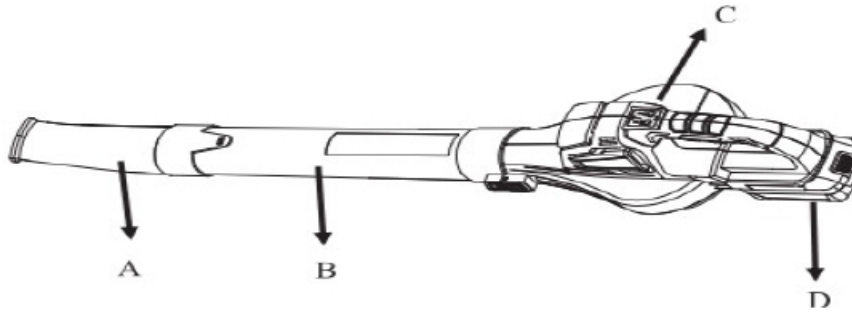

A Kleiner Blasrohr
B Großes Blasrohr
C Bedienfeld
D Akku

Im Lieferumfang enthalten:
1.Blasrohr
2.20-V-Akku und Ladegerät
3.Bedienungsanleitung
4.Blasrohr

ASSEMBLY INSTRUCTIONS

INSTALLING THE BLOWER TUBE/BLOW PIPE/SUCTION PIPE

CAUTION: Always ensure that the tool is switched off and the battery is removed before making any adjustments or maintenance procedures.

Slide the small tube(C)over the big tube(B)until the latch on the big tube is inserted into the end of the opening on the small tube and locks into position(see fig.1)
Align the widest end of the big tube(B)with the front opening on the blower(A).(see fig 2)

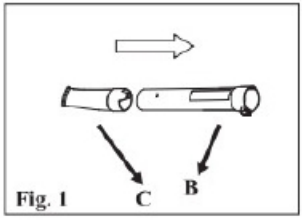

Fig. 1

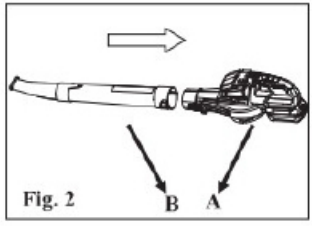

Fig. 2

CONNECTING AND REMOVING BATTERY

IMPORTANT!
The battery pack is not charged when it is purchased.Before using the blower for the first time,place the battery pack in the battery charger and charge.Make sure to read all safety precautions,and follow the instructions in the battery charger section.

To remove the battery pack

Press the button(1)on the battery pack down and hold (see fig.3)
Halten Sie das Gebläse (2) fest und ziehen Sie den Akku aus dem Griff. (Siehe Abbildung 4)

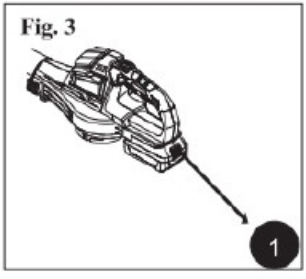

Fig. 3

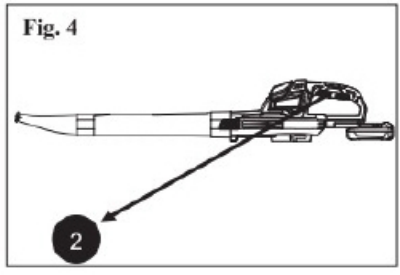

Fig. 4

Batteriepack installieren

Um den Batteriepack in das Werkzeug zu montieren, richten Sie die Schienen des Batteriepacks mit den Schienen im Werkzeug aus und schieben Sie die Batterie in den Griff. Um den Akku anzuschließen, schieben Sie den Akku vollständig nach vorne. Bis der Riegel in seinem Platz verriegelt ist.

Warnung:
Befolgen Sie die folgenden Anweisungen, um Verletzungen zu vermeiden und das Risiko eines Stromschlags oder eines Brandes zu verringern:

Wenn das Batteriefach oder das Ladekabel beschädigt ist, ersetzen Sie den Akku oder das Ladegerät sofort Beschädigt.
Vergewissern Sie sich, dass der Akku entfernt ist, bevor Sie irgendwelche Teile des Gebläses überprü fen, justieren oder warten.
Lesen, verstehen und befolgen Sie die Anweisungen.

Bedienungsanleitung

WARNUNG: Bitte lesen und verstehen Sie alle Anweisungen und Sicherheitsinformationen gründlich, bevor Sie dieses Gebläse bedienen. Andernfalls kann es zu schweren Verletzungen oder Tod kommen. Lassen Sie dieses Gebläse nicht von jemandem bedienen, der dieses Handbuch nicht gelesen hat.

Starten/Stoppen des Gebläses (siehe Abbildung 5)

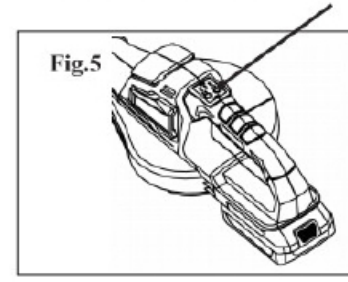
Fig.5

Batteriepack installieren.(siehe Batteriepack installieren)

Zum Ein-/Ausschalten drücken Sie die Taste .

Zum Einstellen der Geschwindigkeit drücken Sie die Taste .

Verwenden Sie das Gebläse (siehe Abb. 6).

Blasen Sie Trümmer oder Grasschnitte von Einfahrten, Gehwegen, Terrassen, Parks, Parkplä tzen usw. weg. Sammeln Sie Grasschnitte, Stroh oder Blätter in Haufen.
Remove debris from corners,around joints,and between bricks.

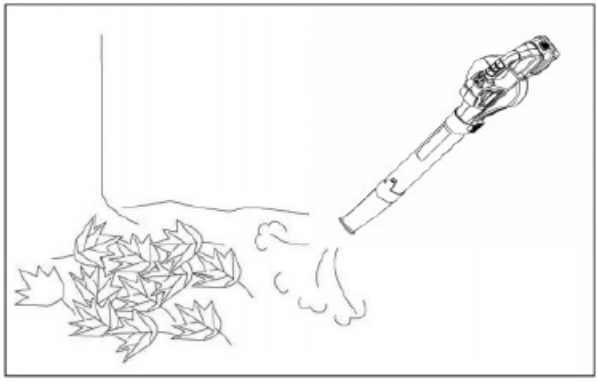
Fig.6

Instandhaltung



Warnung:
Um Personenverletzungen und die Gefahr von Feuer und Stromschlag zu vermeiden, entfernen Sie den Akku, bevor Sie das Gebläse einstellen, überprüfen oder reinigen.

Reinigung

Entfernen Sie den Batteriepack.

Verwenden Sie Druckluft oder Vakuum, um Staub und Späne aus den Belüftungsöffnungen zu bürsten oder zu blasen. Halten Sie die Belüftungsöffnungen frei von Hindernissen, Sägemehl und Holzspäne. Sprühen, waschen oder die Lüftungsöffnungen nicht in Wasser eintauchen.

Wipe off the housing and the plastic components using a moist,soft cloth.Do not use strong solvents or detergents on the plastic housing or plastic components.Certain household cleaners may cause damage, and may cause a shock hazard.

BATTERY PACK

Store the battery pack fully charged.
Once the charging light turns green,remove the battery from the charger and disconnect the charger from the outlet.
Do not store the battery pack on the tool.
After charging,the battery pack may be stored in the charger,as long as the charger is not plugged in.

Wartung des Ladegeräts

Halten Sie das Ladegerät sauber und frei von Kleinigkeiten. Lassen Sie keinen Fremdkörper in die Hohlrä ume oder Kontakte eindringen. Wischen Sie das Ladegerät mit einem trockenen Tuch sauber ab. Verwenden Sie kein Lösungsmittel oder Wasser und stellen Sie das Ladegerät nicht in einer feuchten Umgebung.
Trennen Sie das Ladegerät, wenn kein Akku im Ladegerät vorhanden ist.
Bitte laden Sie die Batterie vollständig auf, bevor Sie sie in das Lager stellen.
Lagern Sie das Ladegerät bei normaler Raumtemperatur auf. Nicht an überhitzten Orten aufbewahren. Verwenden Sie das Ladegerät nicht unter direkter Sonneneinstrahlung. Laden Sie es bei Raumtemperatur zwischen 45 °F und 104 °F auf. Wenn der Akku sehr heiß ist, lassen Sie ihn vor dem Aufladen abkühlen.

Ladegerät und Batterie

Ladegerät an die Stromversorgung anschließen



Netzspannung und Betriebsspannung müssen identisch sein.

Stecken Sie den Stecker in die Wandsteckdose.
Führen Sie einen Selbsttest durch, nachdem das Ladegerät an die Stromversorgung angeschlossen ist. Dabei leuchtet die gr üne Lampe (1) am Ladegerät auf.

Batterien aufladen

Werksneuer Akku ist nicht vollständig geladen.

Empfehlung: Laden Sie den Akku vor dem ersten Gebrauch vollständig auf.

Stecken Schließen Sie das Ladegerät an die Stromversorgung an – die Netzspannung und die Betriebsspannung des Ladegeräts müssen gleich sein – siehe „Ladegerät an die Stromversorgung anschließen “.

Betreiben Sie das Ladegerät nur in einem geschlossenen, trockenen Raum mit einer Umgebungstemperatur von +5°C bis +40°C (+40°F bis 104°F)

Laden Sie nur die Trockenbatterie auf. Lassen Sie den feuchten Akku vor dem Laden trocknen.



Drücken Sie die Batterie in das Ladegerät, bis Sie einen deutlichen Widerstand spüren, und drücken Sie sie dann zum Stillstand.
Das Laden beginnt, sobald das rote Licht am Ladegerät aufleuchtet.

Die Ladezeit hängt von vielen Faktoren ab, einschließlich Batteriezustand, Umgebungstemperatur usw. und kann daher von der angegebenen Zeit abweichen.

Während des Betriebs in einem Elektrowerkzeug erwärmt sich die Batterie. Wenn ein heißer Akku in das Ladegerät eingesetzt ist, muss er möglicherweise vor dem Laden abgekühlt werden. Erst nachdem die Batterie abgekühlt ist, beginnt der Ladevorgang. Die zum Abkühlen benötigte Zeit kann die Ladezeit verlängern.

Batterien und Ladegeräte erhitzen sich während des Ladevorgangs.

Ende der Ladung

Sobald das Ladegerät vollständig aufgeladen ist, leuchtet die grüne Leuchte auf.
Entfernen Sie den vollständig geladenen Akku aus dem Ladegerät.

Umweltsichere Entsorgung von Batterien

Die in diesem Gebläsebatteriepack verwendeten Batterien enthalten folgende giftige und korrosive Substanzen: Lithium-Ionen



Warnung:
Giftstoffe sind in der vorgeschriebenen Weise zu behandeln, um eine Verschmutzung zu verhindern Umwelt. Bevor Sie einen beschädigten oder abgenutzten Lithium-Ionen-Akku entsorgen, wenden Sie sich bitte an Ihre örtliche Abfallbehörde, um Informationen und spezifische Anweisungen zu erhalten. Bringen Sie die Batterien zur Entsorgung in ein örtlich zertifiziertes Recycling- und/oder Entsorgungszentrum.
Wenn der Akku zerbrochen oder zerbrochen ist, unabhängig davon, ob es undicht ist oder nicht, laden Sie ihn nicht auf und benutzen Sie ihn nicht. Entsorgen Sie ihn und ersetzen Sie ihn durch einen neuen Akku.**Bitte versuchen Sie nicht zu reparieren!**

Bitte befolgen Sie die folgenden Anweisungen, um Verletzungen und Brand-, Explosions- oder Elektroschockgefahr zu vermeiden und Umweltschäden zu vermeiden:

Abdecken Sie die Anschlüsse der Batterie mit einem schweren Klebeband.

Versuchen Sie nicht, irgendwelche Komponenten des Batteriepacks zu zerlegen oder zu zerstören.

Versuchen Sie nicht, den Batteriepack einzuschalten.

Bei Leckagen ist der freigesetzte Elektrolyt korrosiv und giftig. Lassen Sie die Lösung nicht in Ihre Augen oder Haut gelangen und schlucken Sie sie nicht.

Lassen Sie die Batterien nicht in gewöhnlichen Hausmüll.

Batterien nicht verbrennen.

Platzieren Sie die Batterien nicht an Orten, an denen sie Teil einer Deponie oder eines Siedlungsabfallstroms werden könnten.

Entsorgen Sie die Batterien in einem zertifizierten Recycling- oder Entsorgungszentrum.

Fehlersuche

Die folgende Tabelle listet häufige Betriebssysteme mit ihren Problemen und Lösungen auf. Bitte lesen Sie das Formular sorgfältig durch und beachten Sie es.

Problematik	Wahrscheinlich Ursachen	Lösungen
Der Motor kann nicht gestartet werden, wenn der Schalterauslöser gedrückt wird.	Die Batterie ist nicht sicher.	Um den Batteriepack zu fixieren, stellen Sie sicher, dass die Verriegelung an der Oberseite des Batteriepacks eingeschnappt ist.
	Der Akku ist nicht aufgeladen.	Laden Sie den Akku gemäß den Anweisungen, die mit dem Modell geliefert werden.
Gerät kann nicht gestartet werden	Der Netzschalter ist defekt.	Rückkehr an den Kaufort oder schicken Sie das Gerät zurück zum Reparaturzentrum.
Die Einheit wird nicht blasen	Rohrverstopfung	Entfernen Sie die Verstopfung.

Made in China

