
EWORK®

CORDLESS LEAF BLOWER

USER MANUAL

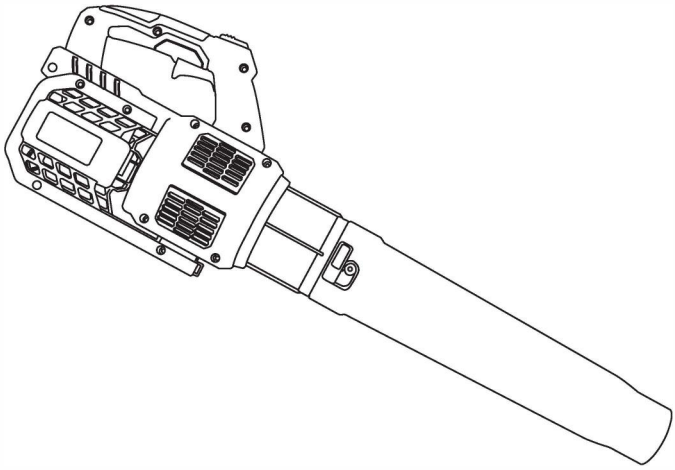

EK-01GYH

THANK YOU FOR YOUR PREFERENCE FOR EWORK

If you have any peoblems with our product, please feel free to contact us.

CONTENTS

IMPORTANT SAFETY INSTRUCTION ---------- 1

PRODUCT DESCRIPTION ---------- 2

PRODUCT OPERATION ---------- 3

- HOW TO CHARGE
- HOW TO USE

MAINTENANCE ---------- 4

TROUBLESHOOTING ---------- 5

ABOUT WARRANTY ---------- 6

IMPORTANT SAFETY INSTRUCTION

When using an electrical appliance, basic precautions should always be followed, including the following:
READ ALL INSTRUCTIONS CAREFULLY BAFORE USING THIS APPLIANCE
WARNING - To reduce the risk of fire, electric shock, or injury:


- Children, persons with limited physical, sensory or mental abilities or insufficient experience and knowledge, or persons who are not familiar with the instructions must never be allowed to use the machine. Children are not allowed to play with the appliance. Cleaning and user maintenance must not be carried out by children.
- Keep alien objects away from the air inlet and outlet when operating.
- Make sure the appliance is well-assembled bafore starting.
- Do not wear loose clothing when operating. Keep the long hair away from the vents.
- Do not aim the blower tube at people or pets when operating the appliance.
- Turn off the appliance and detach the battery pack immediately when there is an unusual sound or vibration. Check if any parts inside the appliance are loose or broken.
- If the appliance breaks down, turn off it at once and detach the battery pack.
- Do not use the appliance in severe weather conditions, especially when there is lightning.
- Fully charge the battery pack before the first use. Do not charge the battery pack briefly in succession.
- Please use EWORK 20V Series battery pack (2.0Ah / 4.0Ah) and fast charger (EK-2.2A).
- Do not touch the charger or power cord with wet hands.
- Do not disassemble or repair the appliance, the battery, and the charger yourself.
- Before cleaning and maintenance, always switch off the appliance and remove the battery pack.
- Store the appliance, the battery pack, and the charger in a cool and dry place, away from direct sunlight and moisture.
- Regularly check the battery pack or the charger is damaged or not, especially the power cord, plug, and housing. If the battery charger is damaged, stop using it.
- Fully charge the battery pack before storing the product when not used for a long time. It's recommended to charge the battery pack every 4-6 months.


DISPOSAL INFORMATION

- EWORK products are made from premium recyclable materials. Recycle where possible.
- The battery pack should be removed from the product before disposal.
- Dispose or recycle the battery pack, and charger in accordance with local ordinances or regulations.
- Dispose of the appliance body, blower tube, and accessories in accordance with local ordinances or regulations.


SAVE THESE INSTRUCTIONS

PRODUCT DESCRIPTION

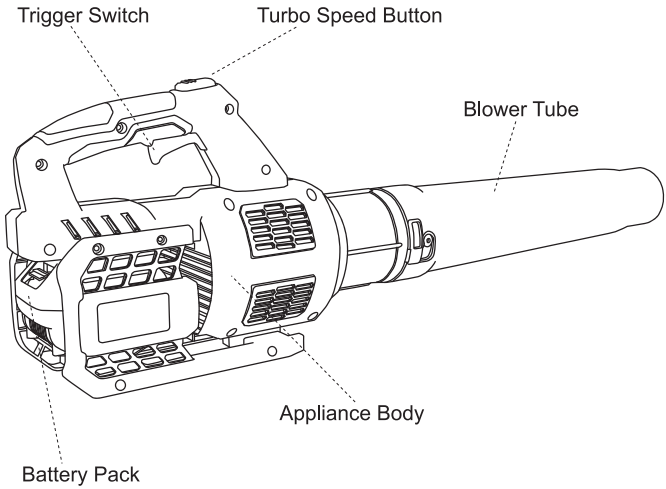

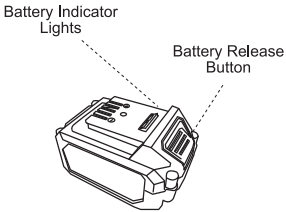

Battery Pack

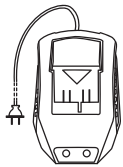


Charger

PRODUCT OPERATION


HOW TO CHARGE

NOTE


- Fully charge the appliance before first use.
- Please use the original battery pack and charger.
- This charger cannot be used to charge other batteries.

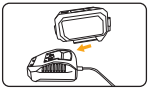

Step1: Slot the battery pack onto the charger tightly.

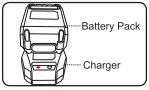

Step2: Plug the charger into the socket. During charging, the charger lights up solid red without flashing.

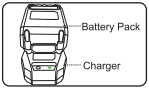


Step3: When fully charged, the charger lights solid green without flashing.


HOW TO USE

NOTE

- Make sure the appliance is well-assembled before starting.
- Do not aim the blower tube at the human body when opearting, especially the eyes and ears.

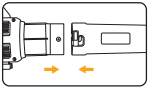


Step1: Align the slots on the blower tube with the buttons on both sides of the appliance body.

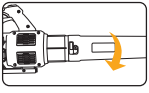

Step2: Contrarotate the blower tube to make it snap together with the appliance body.

PRODUCT OPERATION

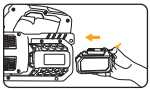

Step3: Press the battery release button and slot the battery pack into the appliance body.



Step4: Aim the blower to the area to be used, long press the trigger switch to start blowing, and release the switch to pause.




Step5: Press the turbo speed button to switch between the high-speed mode and the turbo-speed mode.


MAINTENANCE

NOTE


- Before cleaning and maintenance, always switch off the appliance and remove the battery pack.
- Store the appliance, the battery pack, and the charger in a cool and dry place, awary from direct sunlight and moisture.
- Fully charge the battery pack before storing the product when not used for a long time. It's recommended to charge the battery pack every 4-6 months.

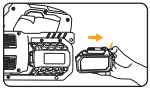

Step1: Press the battery release button to detach the battery pack from the aooliance.

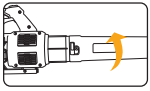

Step2: Rotate the blower tube clockwise to detach it from the appliance.

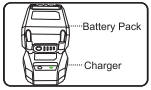

Step3: Fully charge the battery pack before storage.

TROUBLESHOOTING

PROBLEMS	POSSIBLE CAUSES	SOLUTIONS
Not Working	The battery is low.	Fully charge the battery pack.
	The battery pack is not connected securely to the appliance body.	Securely connect the battery pack.
	The appliance is damaged.	Please contact the customer service team.
Poor Airflow	The battery is low.	Fully charge the battery pack.
	The air inlet is blocked.	Clean the air inlet with a brush or a vacuum cleaner.
Charging Fault	The battery pack is not connected securely to the charger.	Securely connect the battery pack with the charger.
	Defective charger or battery pack.	Please contact the customer service team.

If you have any other peoblems, please feel free to contact our customer service team.


EWORK®