DREO | BaristaMaker Milk Frother Nano

USER MANUAL



Thanks for Choosing DREO!

Your support means the world to us.
We hope you enjoy our product as much as we did creating it.



CONTENTS

01 KNOWING YOUR APPLIANCE 1

02 USING YOUR APPLIANCE 2-5

03 CLEANING AND MAINTENANCE 6-8

KNOWING YOUR APPLIANCE

01

Package Contents

BaristaMaker Milk Frother Nano

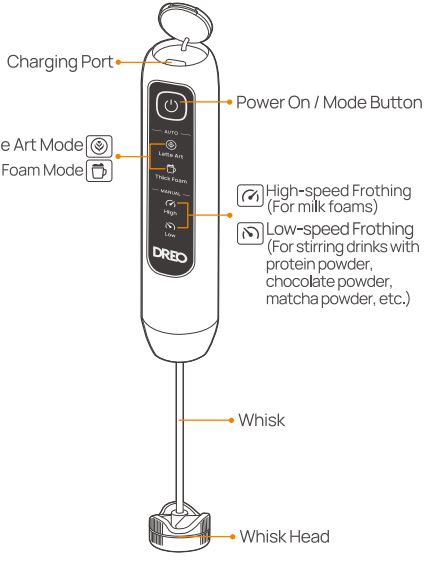

User Guide

Important Safety Instructions



1x Latte Art Foam Whisk



1x Thick Foam Whisk



1x Charging Cable

USING YOUR APPLIANCE

02

Before Using



When using the appliance for the first time,
- Clean it before use.
- Make sure to fully charge it **(takes 5 hours)** to ensure a smooth frothing experience.

Charging

Follow the steps below to charge the appliance:

❶



Open the protection cap at the top of the appliance.

❷



Connect the included charging cable to the appliance.
Note: The power indicator will flash in red.

❸



Plug the cable into a USB charging socket or a 5V power adapter (not included).

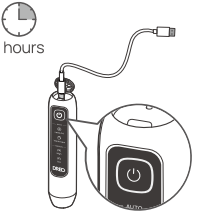

Charge until the power indicator turns white.

Power Indicator

Light Color	Operating	Charging
White	Battery ≥20%	Battery Fully Charged
Flashing Red	N/A	Battery Charging
Red	Battery <20%	N/A

Selecting An Operation Mode

1. Press ⏻ to turn on the appliance.
2. Press ⏻ repeatedly to cycle through the 4 modes.
3. Stop at the mode you want. Then, the appliance will start operating in the selected mode.
4. During operation, long press ⏻ for 1 second to pause. Press ⏻ again to resume operation.



Note:

- After cycling through the 4 modes, pressing ⏻ will return the appliance to standby mode.
- If no action is taken after entering standby mode for 10 seconds, the appliance will automatically turn off.

Installing & Removing the Whisk

❶



Firmly hold the appliance upside down.

❷

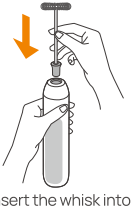

Insert the whisk into the appliance.

❸

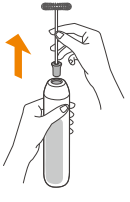

To remove the whisk, simply pull it out of the appliance.

Frothing with BaristaMaker Milk Frother Nano

Latte Art

1. Prepare Milk



Pour 8oz/235ml of milk into your frother jug, then heat it up to 149°F/65°C. Microwave on high for 60-80 seconds.

2. Insert Whisk



Use the Latte Art whisk.

3. Select Mode



Press ⏻ repeatedly to choose the Latte Art mode.
*During operation, long press ⏻ for 1 second to pause. Press ⏻ again to resume operation.

4. Voila!



Pour & enjoy!
***Pour the foam asap after frothing to ensure the best quality.**

Thick Foam

1. Prepare Milk



Pour 4oz/120ml of milk into your frother jug.

2. Insert Whisk



Use the Thick Foam whisk.

3. Select Mode

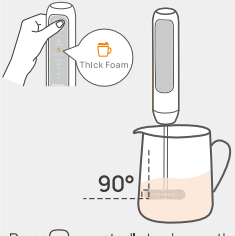

Press ⏻ repeatedly to choose the Thick Foam mode.
*During operation, long press ⏻ for 1 second to pause. Press ⏻ again to resume operation.

4. Voila!

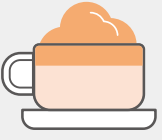

Pour & enjoy!
***Pour the foam asap after frothing to ensure the best quality.**

CLEANING AND MAINTENANCE 03

Cleaning the Wand Body: Do's and Don'ts

Do's



Wipe the wand body clean with a soft, damp cloth.



After cleaning, wipe the wand body dry.

Don'ts





- **DO NOT** clean the wand body with abrasive cleaning materials.
- **DO NOT** immerse the wand body into water.





DO NOT put the wand body in the dishwasher or microwave oven.

Cleaning the Whisk: Do's and Don'ts

Do's

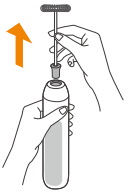

Detach the **whisk** before cleaning it.

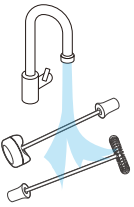

Clean the whisk with hot soapy water, then rinse it under running water.

Don'ts

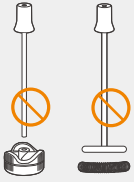

Do not disassemble the **Whisk Head** in any form.

Note:

After use, carefully fill the frother cup with tap water, wait till it completely cools off, and rinse off any milk in warm water.



Do not immerse the wand body in water, or put it in the dishwasher / microwave oven.

Model No.: DR-KMF004
Rev_EN_1.0

We're Here to Help!

(888) 290-1688 (Mon - Fri, 9:00 am-5:00 pm PST/PDT)
www.dreo.com
support@dreo.com
DREO PTE. LTD.
112 ROBINSON ROAD, #03-01, ROBINSON 112, SINGAPORE 068902

www.dreo.com

Looking for help?

Contact us to get expert support.

(888) 290-1688
Mon - Fri, 9:00 am-5:00 pm PST/PDT
support@dreo.com www.dreo.com