
DREO | Pedestal Air Circulator Fan
PolyFan 306

USER MANUAL

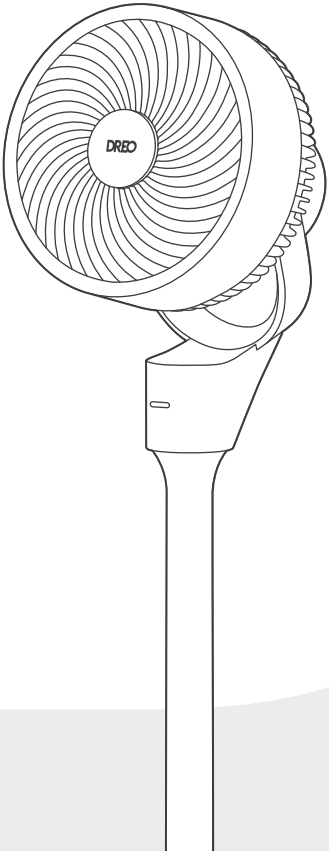

Thanks for Choosing DREO!

Your support means the world to us. We hope you enjoy our product as much as we did creating it.

CONTENTS

01
IMPORTANT SAFETY INSTRUCTIONS
1-2

02
ASSEMBLING YOUR PEDESTAL AIR CIRCULATOR
3-5

03
KNOWING YOUR PEDESTAL AIR CIRCULATOR
6

04
USING YOUR PEDESTAL AIR CIRCULATOR
7-12

05
CLEANING AND MAINTENANCE
13-16


06
TROUBLESHOOTING
17

07
DREO CUSTOMER CARE
18-20

IMPORTANT SAFETY INSTRUCTIONS

01

READ ALL CAUTIONARY MARKINGS ON THE APPLIANCE AND SAFETY INSTRUCTIONS IN THE USER MANUAL BEFORE USE.



Do not cover the air inlet and outlet while in operation.



Do not use the air circulator near flammables and combustibles.

General Safety

1. Children shall not play with the appliance. Cleaning and maintenance shall not be performed by children without supervision.
2. Use the appliance as described in the user manual only. Any other use not recommended in the user manual may cause fire, electrical shock, or personal injury.
3. This appliance can be used by children aged above 8 years and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of this appliance in a safe way and understand the hazards involved.

Operation Safety

1. Place the appliance on a flat, dry surface before use.
2. Do not immerse in water and any other liquids.
3. Do not use the appliance until the base is installed.
4. Do not insert your fingers, pencil and any other objects into the grilles under any circumstances.
5. Do not dismantle, repair, or modify. All servicing should be performed by qualified personnel.

Electricity Safety

1. Make sure that the voltage of your electricity supply is the same as that indicated on the appliance.
2. Always unplug before cleaning or leaving the appliance unused for a long period of time. Keep your hands dry when plugging/unplugging.
3. Do not operate any air circulator with a damaged cord or plug. Discard air circulator or return to an authorized service facility for examination and/or repair.

4. Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
5. **WARNING:** To Reduce The Risk Of Fire, Electric Shock Or Injury To Persons, Do Not Use Replacement Parts That Have Not Been Recommended By The Manufacturer (e.g. Parts Made At Home Using a 3D Printer).
6. **WARNING:** To Reduce The Risk Of Fire Or Electric Shock, Do Not Use This Air Circulator With Any Solid-State Speed Control Device.
7. Turn off the appliance before plugging.
8. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.
9. This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded or returned to an authorized service facility for examination and/or repair.
10. Risk of fire. Do not replace attachment plug. Contains a safety device (fuse, AFCI, LCDI) that should not be removed. Discard product if the attachment plug is damaged.

FOR HOUSEHOLD USE ONLY
READ AND SAVE THESE INSTRUCTIONS

Gentle Reminder:



Check the appliance regularly and refer to TROUBLESHOOTING or contact our customer support if it shows any of the following signs:

- Power cord or plug is damaged.
- Loud noise, unusual smell or excessive heat.

Specifications

Model No.	DR-HPF006
Input	AC 120V ~60Hz
Rated Power	52W
Battery Type	CR2025 3V


ASSEMBLING YOUR PEDESTAL AIR CIRCULATOR

02

Assembly Instructions


When using the appliance for the first time, remove the wraps and attach the parts by following the steps below.

❶

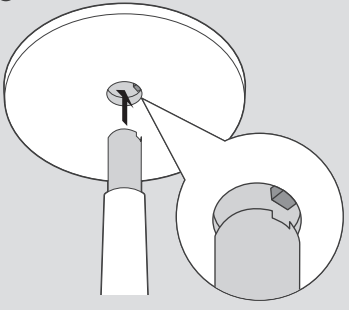


Turn the column upside down. Align the column's bottom cutout onto the center jutting point of the base, then push it in.

❷

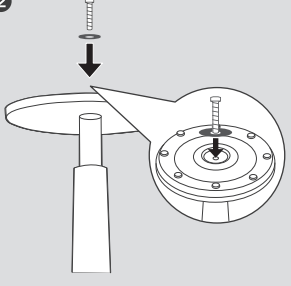


Place the flat washer first, insert the screw, then tighten clockwise with the included screwdriver to secure the column to the base.

❸

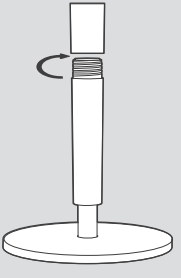


Turn them right side up. Insert the fan body to the column, and rotate clockwise until tightened.

❹

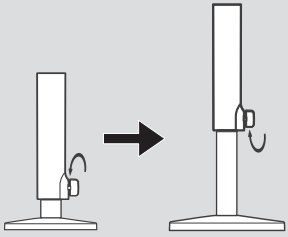


Hold the main body while rotating the adjustment collar to adjust the fan height.

❺

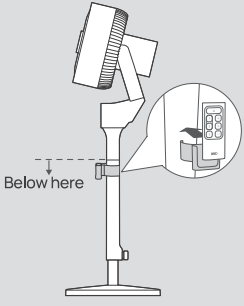


Attach the remote control holder below the fan head and pedestal joint.

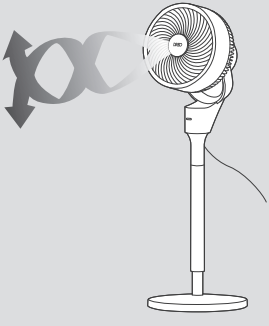


CAUTION

Do not operate the air circulator if the base has not been installed.
Please exercise caution and handle the base with care during installation.

Package Contents

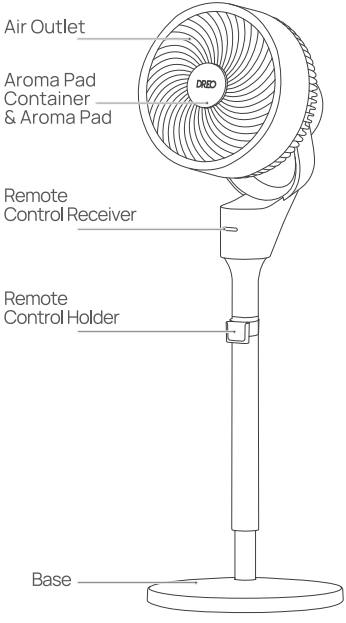

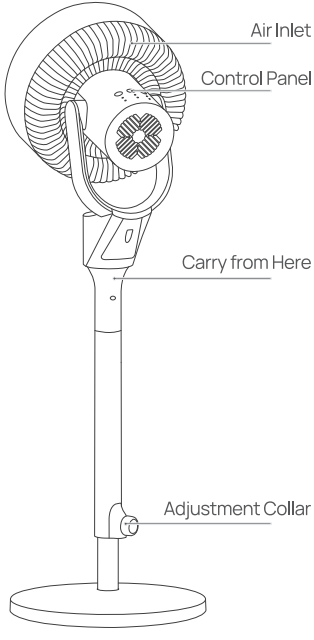

User Manual

Quick Start Guide



Remote Control (Battery Included)



Remote Control Holder



Screw for Base



Screwdriver for Base



Flat Washer

KNOWING YOUR PEDESTAL AIR CIRCULATOR

03


Control Panel

Power Button
- Turn power on/standby.
- Long press for 10 seconds to reset to factory settings.

Fan Speed Button
- Adjust airflow speed (1-3 levels).
- Long press for 3s to enter/exit Auto Mode.

Oscillation Button
- Press to sweep airflow horizontally.


Note: The fan will automatically shut down after 168 hours of inactivity.

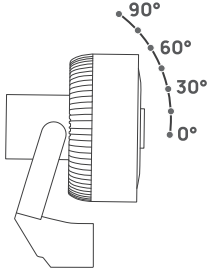

Tip: You can adjust the airflow vertical direction manually. (0°/15°/30°/45°/60°/75°/90°)

USING YOUR PEDESTAL AIR CIRCULATOR 04


Getting the Most out of Your Air Circulator

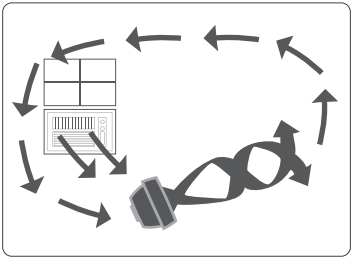

Summer:

Use with Air Conditioner


Position the air circulator in front of your AC to circulate cold air and provide better cooling.

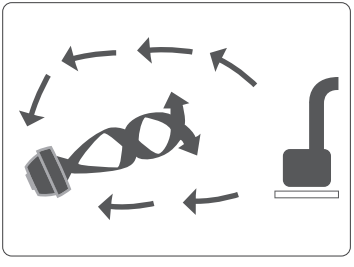

Winter:

Use with Heater

Send the heat to corner of the room and circulate warm air faster.

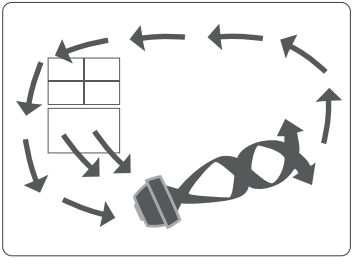

Spring & Fall:

Circulation


Make the indoors as fresh and pleasant as the outdoors.

Working Modes

	Normal Mode Fan runs at the fixed speed.
	Auto Mode Fan automatically increases speed when room temp is higher and decreases speed when temp is lower.


Adding Essential Oil

❶

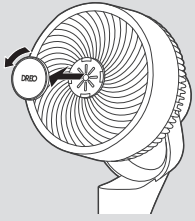


Rotate the aroma pad container counterclockwise to take it off.

❷

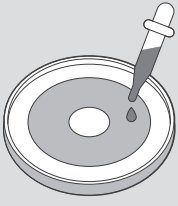

Add the essential oil to the aroma pad on the aroma pad container.

❸

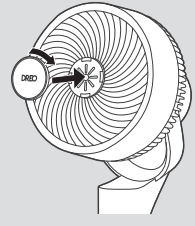

Put the aroma pad container back in place by rotating it clockwise.
(You will hear a “click”.)

Additional Features

Timer

When the fan is ON/STANDBY, press the timer button on the remote control repeatedly to set a timer from 1H/2H/3H/4H/5H/6H, and cancel. When the timer ends, the fan will stop/start running automatically.

How to Check Timer Durations

When setting a timer, the control panel lights will flash in special patterns to indicate the timer duration:



1H



2H



3H



4H



5H



6H

When the timer is set or cancelled, the control panel lights will return to normal display patterns.



Mute

When the fan is ON, press the mute button on the remote control to turn on/off the button sound.



Memory


If the fan is on standby or disconnected from power, it will operate under the previous settings (except the Timer setting) when it is turned ON again.




LED Light Auto Off

LED light turns off after 1 minute.
Except for the fan and remote control power buttons, all other buttons can be activated.

Remote Control

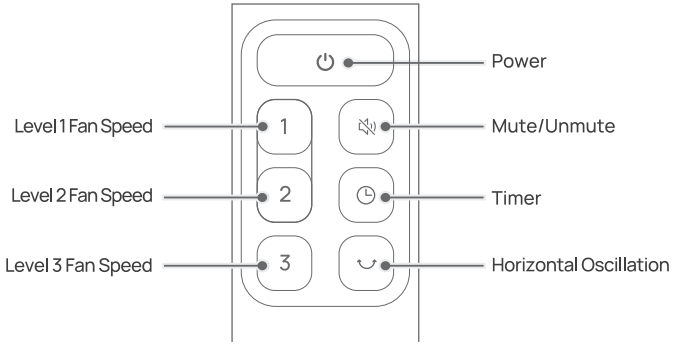

Battery Replacement

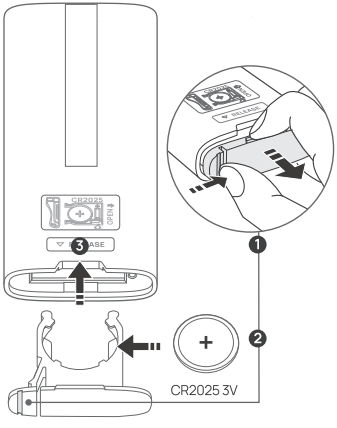

1. Keep the locking tab pressed while pulling out the battery holder from the slot at the back.
2. Replace with the same battery type with the (+) side facing up.
3. Push in the holder until securely locked in place.

Note: If the appliance doesn't respond when using the remote control in close range, please consider replacing the battery.

⚠ WARNING


- **INGESTION HAZARD:** This product contains a button cell or coin battery
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours.**
- **KEEP** new and used batteries **OUT OF REACH of CHILDREN**
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



a) Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
b) Even used batteries may cause severe injury or death.
c) Call a local poison control center for treatment information.
d) Compatible battery type: CR2025.
e) Battery nominal voltage:3.0 Vdc
f) Non-rechargeable batteries are not to be recharged.
g) Do not force discharge, recharge, disassemble, heat above (rated temperature: 140 °F) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
h) Ensure the batteries are installed correctly according to polarity (+ and -).
i) Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
j) Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
k) Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

CLEANING AND MAINTENANCE

05

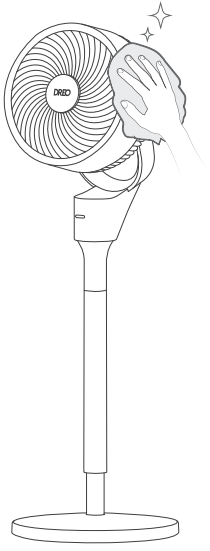

Outer Surface

Gently wipe off the dust with a soft, dry cloth.

Base

The base can be disassembled in the reverse order of assembly.

Aroma Pad Container & Aroma Pad



Aroma Pad Container



Aroma Pad

Remove the aroma pad container. Take out the aroma pad, clean it with water and dry it up. Put the dried aroma pad back into the aroma pad container, and install back in place.


CAUTION

1. Always unplug the fan before any cleaning or maintenance to avoid the risk of fire, electric shock, or injury to persons.
2. Do not immerse in water or get water inside the motor housing.
3. Do not use any chemical agents when cleaning the fan.
4. Store in a cool, dry place and cover it to protect from dust.
5. It is recommended to disassemble and clean under professional guidance.
6. Clean the aroma pad container and aroma pad before adding new essential oil if it hasn't been used for a long time.
7. Keep the essential oil away from parts other than the aroma pad container (such as the grille or main unit) to avoid damage. If contact occurs, clean immediately or wipe with a dry cloth.

WARNING


To reduce the risk of electrical shock and injury to persons, turn off and unplug the appliance before any cleaning and maintenance.

1

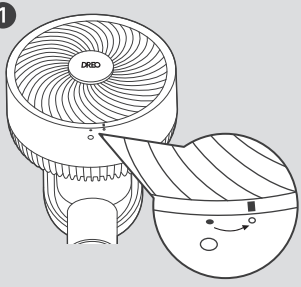


Remove the screw on the front and rotate counterclockwise to remove the grille.

2

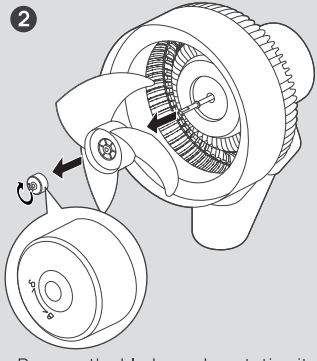


Remove the blade cap by rotating it as shown and take the blade assembly out of the shaft.

3

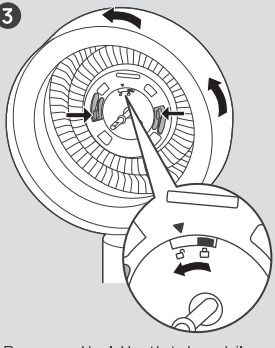


Press and hold both tabs while rotating counterclockwise to remove the rear grille.

4

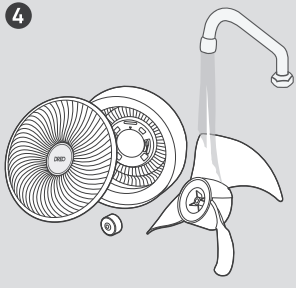


Rinse cap, blades, and grilles under running water or with a clean, damp cloth.

5

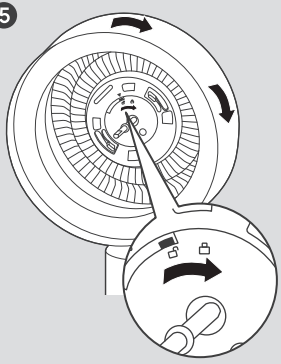


Dry up all parts, and replace the rear grille by aligning the arrow marking with the open lock, then rotate clockwise until it clicks into place.

6

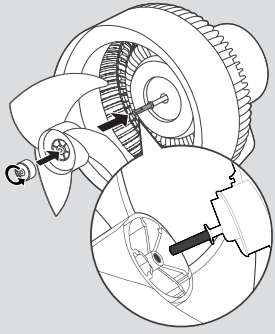

Insert the blade assembly back into the shaft by aligning the D-shaped points on the center.


7

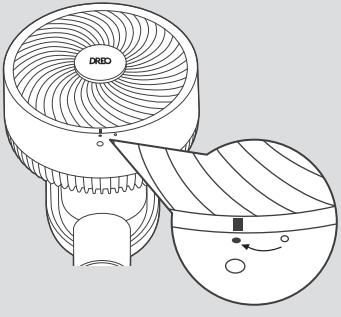

Align the point on the front grille with the right point on the casing, then rotate the grille clockwise and install the screw back in place.

User Servicing Instructions (Fuse)

This appliance features a fused safety plug that protects against overload or short-circuit situations. If the fuse blows, please cut off power and follow the below instructions or consult a qualified electrician.

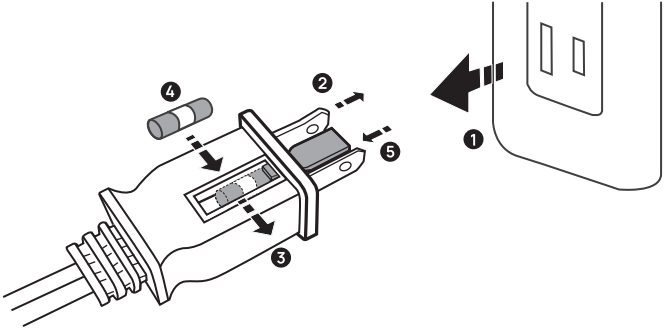

1. Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord.
2. Open fuse cover. Slide open fuse access cover on top of attachment plug towards blades.
3. Remove fuse carefully. Push the fuse from the other side to remove the fuse.
4. Risk of fire. Replace fuse only with 2.5 Amp.125 Volt fuse.
5. Close fuse cover. Slide closed the fuse access cover on top of attachment plug.

WARNING

Risk of fire. Do not replace attachment plug.
Contains a safety device (fuse) that should not be removed.
Discard product if the attachment plug is damaged.

TROUBLESHOOTING 06

My air circulator won't turn on!

Make sure that the cord is connected to a powered outlet and the mains voltage corresponds with the voltage indicated on the air circulator.

My air circulator is shaky and wobbling!

1. Place the air circulator on a flat, level surface.
2. Incorrect installation might also cause shakiness. Please refer to the assembly instructions in page 3.

My air circulator is making vibration and noise!

1. Place the air circulator on a flat, level surface.
2. Be sure not to insert anything into the air inlet and outlet.
3. It is normal for the fan to make a little noise when adjusting the fan head manually.

If your problem is not listed or still persists, please contact our Customer Support (see page 20)
View, download, or print the most current version of these instructions at https://support.dreo.com/en/support/product.

DREO CUSTOMER CARE 07

12-MONTH LIMITED WARRANTY

What is Covered

DREO warrants to you that your product will be free from original defects in materials and workmanship for a period of twelve (12) months from the date of your purchase, when you use your product for intended purposes in accordance with this User Manual.

Please retain your proof of purchase. If you do not retain your proof of purchase, your warranty will start two (2) months from the date of manufacture printed on your product label.

What is Not Covered

This limited warranty only applies to the original purchaser of your product and is non-transferable. This warranty is only valid if your product is used in the country in which you originally purchased it. In addition, this warranty will not apply, and DREO will not be liable for any costs, damages, or repairs, in connection with any of the following:

- Accidents or use of your product with inappropriate force;
- Damage or destruction caused by wrong voltage or unstable electric current;
- Normal wear and tear;
- Careless operation or handling, misuse, abuse, neglect, and/or failure to maintain or use your product in accordance with this User Manual;
- Any partially or completely altered, modified and/or dismantled products;
- Reduction in battery discharge time due to battery age or use (as applicable);
- Products with altered or removed serial numbers;
- Clearing any blockages from the product;
- Purchases from retailers and distributors not authorized by DREO to sell this product;
- Defects caused by or resulting from damages from shipping or handling by any third party not authorized by DREO to ship or handle your product; or
- Defects caused by or resulting from repairs, service, improper maintenance, or alteration to your product or any of its components by anyone other than a repair person authorized by DREO.

Any service and customer support that DREO provides to you under this limited warranty will not extend the duration of this limited warranty.

Warranty Limitations and Exclusions

ANY IMPLIED WARRANTIES RELATING TO YOUR PRODUCT, INCLUDING BUT NOT LIMITED TO THE WARRANTY OF MERCHANTABILITY AND THE WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE DURATION OF THE LIMITED WARRANTY SET FORTH ABOVE AND ARE OTHERWISE DISCLAIMED.

THIS LIMITED WARRANTY SHALL BE THE SOLE REMEDY OF THE PURCHASER OR USER OF THE PRODUCT, AND DREO SHALL NOT BE LIABLE FOR AN ALLEGEDLY DEFECTIVE OR DAMAGED PRODUCT EXCEPT TO REPAIR OR REPLACE IT IN ACCORDANCE WITH THIS LIMITED WARRANTY. DREO WILL NOT BE LIABLE FOR SPECIAL, INCIDENTAL, INDIRECT, CONTINGENT, OR CONSEQUENTIAL DAMAGES OR LOSSES OF ANY NATURE THAT YOU MAY INCUR IN CONNECTION WITH YOUR PURCHASE OR USE OF YOUR PRODUCT.

Some jurisdictions do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This limited warranty gives you specific legal rights, and you also may have other rights which vary from jurisdiction to jurisdiction.

Limited Remedies

If your product fails because of an original defect in material and/or workmanship during the warranty period, DREO will repair or replace (in DREO's sole discretion) your product.

To obtain warranty service on your product, contact us at support@dreo.com or at (888) 290-1688 (available from Monday-Friday, 9:00 AM-5:00 PM PST/PDT) for further instructions.

IN THE EVENT OF AN ORIGINAL DEFECT IN MATERIAL AND/OR WORKMANSHIP, TO THE EXTENT PERMITTED BY LAW, THE REMEDIES SET FORTH IMMEDIATELY ABOVE ARE YOUR SOLE AND EXCLUSIVE REMEDIES.

FCC Statment

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Please note that changes or modifications of this product is not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.

-Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

Model No.: DR-HPF006
Rev_1.2_EN

We're Here to Help!

(888) 290-1688 (Mon - Fri, 9:00 am-5:00 pm PST/PDT)

support@dreo.com

www.dreo.com

www.dreo.com

Looking for help?

Contact us to get expert support.

support@dreo.com (888) 290-1688 www.dreo.com

Mon - Fri, 9:00 am-5:00 pm PST/PDT