
Homtone

INSTRUCTION MANUAL

Ice Cream Maker

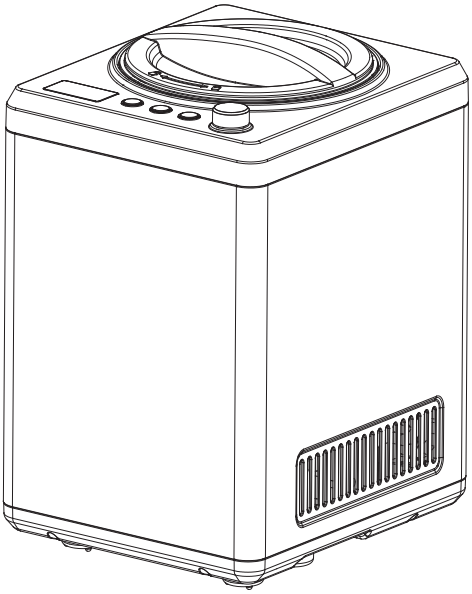

Model: ICE-2581 (DS-1133)

IMPORTANT SAFETY INSTRUCTIONS
READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

IMPORTANT NOTICES

When using an electrical appliance, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury, including the following:

1. Read all instructions before using.
2. Ensure the voltage is compliant with the voltage range stated on the rating label, and ensure the earthing of the socket is in good condition.
3. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

   This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
5. This appliance is intended to be used in household and similar applications such as

   –staff kitchen areas in shops, offices and other working environments;

   –farm houses and by clients in hotels, motels and other residential type environments;

   –bed and breakfast type environments;

   –catering and similar non-retail applications

–Warning: Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer

–WARNING: When positioning the appliance, ensure the supply cord is not trapped or damaged.

–WARNING: Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.

6. The plug must be removed before cleaning, maintaining or filling the appliance
7. Do not upend this product or incline it over a 45℃ angle.
8. To protect against risk of electric shock, do not pour water on cord, plug and ventilation, immerse the appliance in water or any other liquid.
9. Unplug the appliance after using or before cleaning.
10. Keep the appliance 8cm from other objects to ensure the good heat releasing.
11. Do not use the accessories which are not recommended by Manufacturer.
12. Do not use the appliance close by flames, hot plates or stoves.
13. Do not switch on the power button frequently (ensure 5min. interval at least) to avoid the damage of compressor.
14. Metal sheet or other electric objects are not allowed to be inserted into the appliance to avoid fire and short circuit.
15. When take out the ice cream, do not knock the barrel or edge of barrel to protect the barrel from damage.
16. Do not switch on the power before install well the barrel or blender blade.
17. The initial temperature of the ingredients is **20±3**℃. Do not put the ingredients into freezer for pre-freeze, as it will easily make the blender blade blocked before the ice cream is in good condition.
18. Do not remove the blender blade when the appliance is on working.

19. Do not use outdoors.
20. Never clean with scouring powders or hard implements.
21. Please keep the instruction manual.

SPECIFICATIONS


Model Number	ICE2581
Capacity	2.5L
Voltage	AC 110-120V/60Hz
Power Consumption	250W
Unit Dimensions	216（L）*273（W）*397（H）mm
Packing Dimensions	390（L）*333（W）*472（H）mm

PRODUCT FEATURE

1. Microcomputer automatic control, simple and reliable operation and won't cost you much trouble.
2. The LCD display screen shows the working status, and it is more convenient to monitor the working status.
3. Vertical stainless steel metal housing, which is elegant and fashionable.
4. Lower mixing, enough power, well-mixed, more delicious.
5. 2.5L large capacity.
6. The parts are detachable, easy to clean, sanitary and safe.


PRODUCT INSTRUCTION

1) Structure

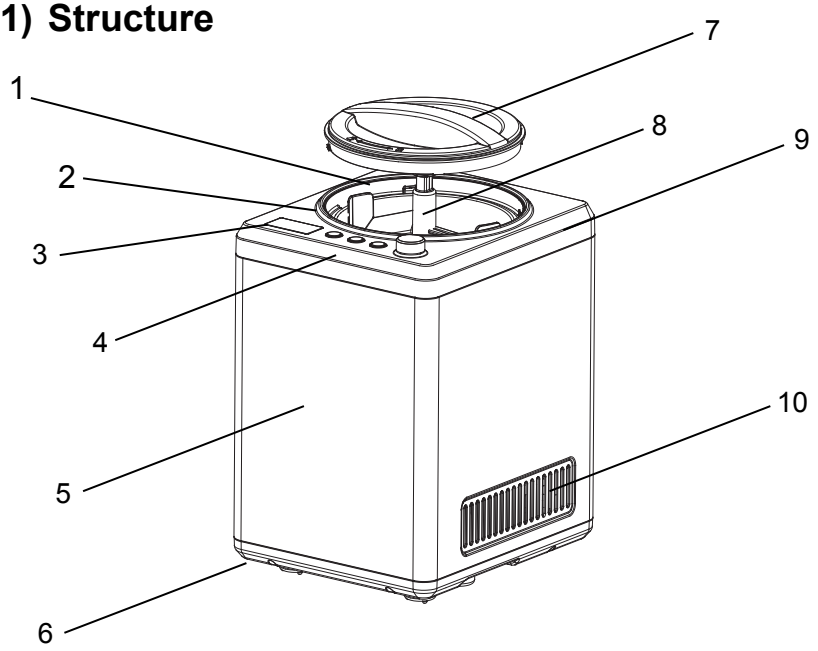

1. Handle
2. Removable bowl
3. Display cover
4. Buttons
5. Housing
6. Base board
7. Transparent lid
8. Mixing blade
9. Metal panel
10. Vent-hole

2) Control button and silk printing

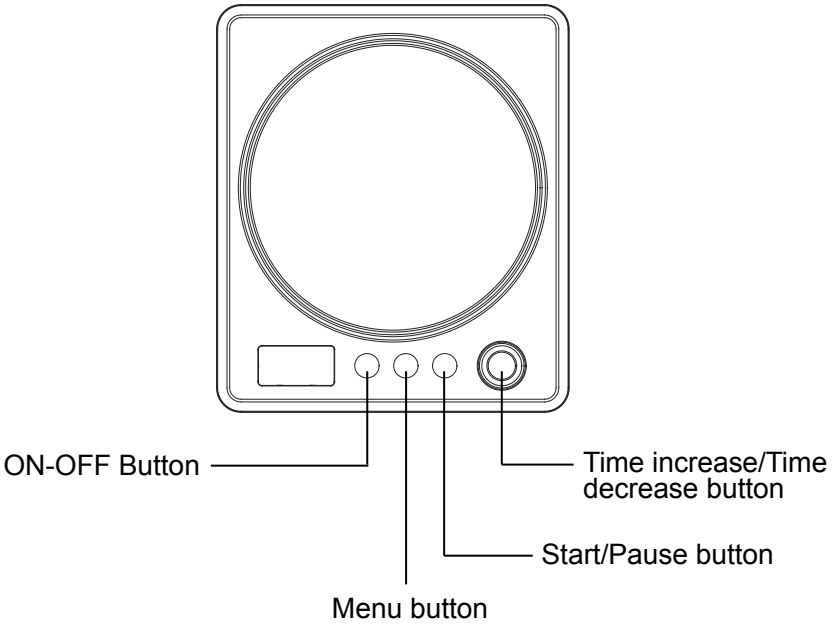

HOW TO MAKE ICE CREAM


NOTE: Please thoroughly clean all parts that will contact with ice cream before use, including: cooling bowl, mixing blade, transparent cover, ice cream shovel, etc.

Before cleaning, you must ensure that the power cord plug is disconnected from the outlet. When making ice cream, keep the machine flat on a level surface to ensure that the compressor of the machine is working properly.

Here are the steps to make an ice cream:


Step 1.

Pour the well prepared recipe ingredients in proportion into the removable bowl, then have a uniform mixing (see below picture).

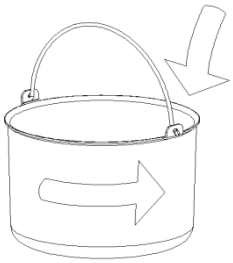


Step 2.

Then put the loading bowl into the ice cream machine and press it tightly (See below picture).

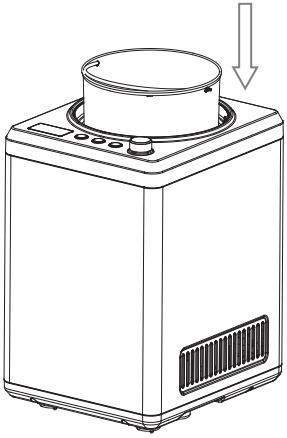


Step 3.

Place the mixing blade into the removable bowl and keep the mixing blade bottom hole fitted well with the motor axis. The put the transparent lid onto the machine and lock it anticlockwise (see below picture).

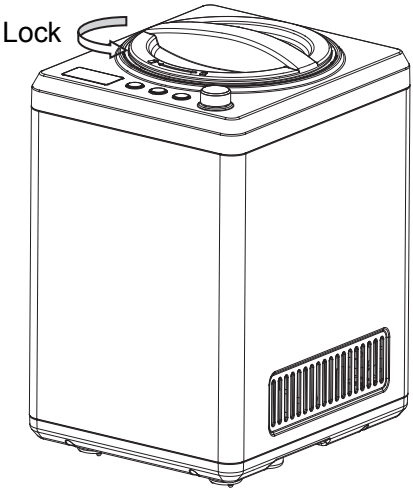


Step 4, Step 5, Step 6 and Step 7.

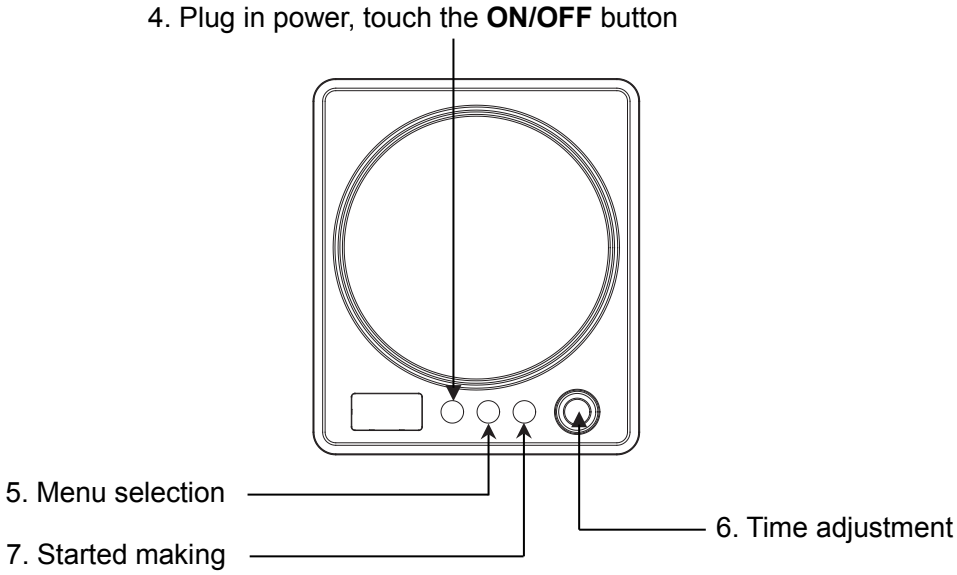

Step 8. You can add the favorite ingredients by opening the refill cover (See below picture).


You can add the favorite ingredients by opening the refill cover

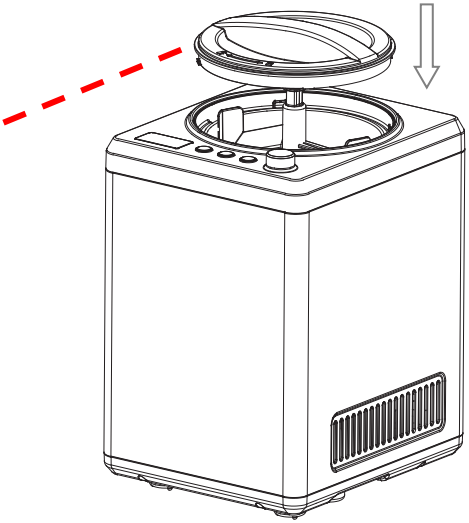

Step 9.

After the operation is over, first press the **ON/OFF** button to turn off the machine, and then pull out the removable bowl.

Pull out the removable bowl

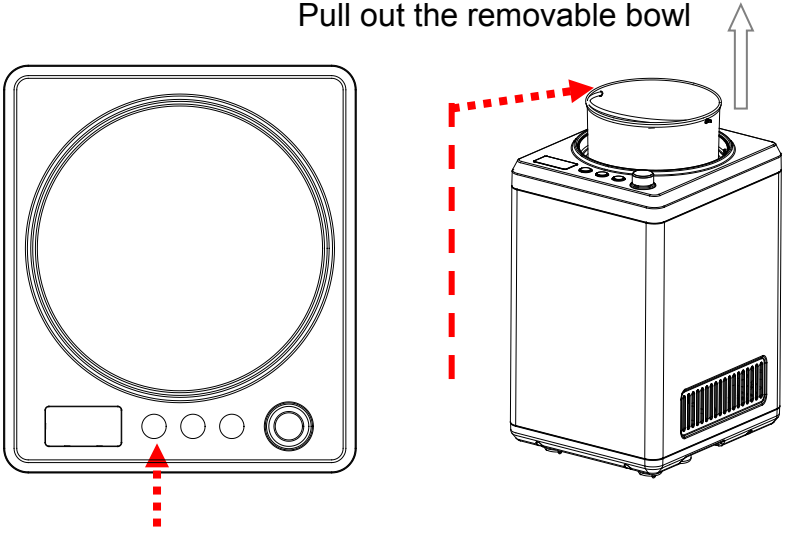

Press the **ON/OFF** button to turn off the machine

OPERATION

1. Connect the power supply and plug the power cord into a suitable socket. The shape and voltage of the socket shall be the same as those indicated. Connect the AC127V power supply.

2. Select control buttons.

2.1 Push-button function description (the silk screen printing is next to the button).

2.1.1 **POWER**: ON-OFF switch.

2.1.2 **MENU**: Menu button

2.1.3 **START/PAUSE**: START/PAUSE button

2.1.4 **KNOB**: Production time adjustment

2.2 PROCEDURE

2.2.1 Plug in power, press the **POWER** button, the LCD display will display "60:00", and the backlight of the LCD display will be on. When there is no other operation, the backlight will be off in 15 seconds, and "60:00" will still be displayed and flicker. Then, press the **POWER** button to return to the power on state.

2.2.2 Press the **MENU** button will cycle through the three modes of [**ICE CREAM**], [**COOLING ONLY**] and [**MIXING ONLY**] in order. The "■" icon in front of the selected mode flashes (the block icons of other modes that are not selected will not be displayed), and the default time of the current selected mode will be displayed and flickered. If no other operation is carried out, the back light source will be off in 15 seconds, and when the mode is working, the back light source will be off in 15 seconds, long press the **MENU** button for 3 seconds to open the machine mode selection interface.

2.2.3 After the mode is selected, the user can start to adjust the production time. The default time of ice cream production mode is "60:00", the default time of cooling only mode is "30:00", and the default time of mixing only mode is "10:00". Turn the electronic knob, turn the knob to the right once to increase 1 minute, continuous rotation can increase quickly,

up to 60 minutes. After 60 minutes, press the right rotation to still display 60:00, the time cannot be increased. If the knob is rotated to the left once, it can be reduced by 1 minute. If the knob is rotated continuously, it can be reduced quickly, and the minimum can be changed to 5 minutes. After 5 minutes, when the knob is rotated to the left again, it still displays 05:00, and the time cannot be reduced any more.

2.2.4 After selecting the time, press the **START/PAUSE** button to start the production. In the production process, the backlight of LCD screen is always on, and the countdown starts from the selected time. In this process, if you press the **START/PAUSE** button, the mixing motor will stop working, and the LCD will display the stop time. If you press the **START/PAUSE** button again, you will continue to press the current setting mode and the remaining time to work. After pressing the **START/PAUSE** button to stop the mixing motor, if there is no other operation, the compressor will stop working after 3 minutes, and return to the power on state after 10 minutes and with a short sound.

3. KEEP COOL FUNCTION

Ice cream keep cool function: In order to prevent you from leaving in the ice cream production process, and after the production is completed, you cannot eat or save the ice cream in time, which leads to melting of the ice cream. We have added the following humanized design: when the ice cream is finished and no one is operating. Next, the holding time is 120 minutes. After 120 minutes, the machine will enter the standby state.


4. MOTOR SELF-PROTECTION FUNCTION

When the ice cream becomes harder, the mixing motor might be blocked. Then the motor protection device makes the mixing motor stop working by detecting its temperature to ensure the life of the motor.

5. CONTROLLING THE VOLUME OF THE INGREDIENTS

To avoid overflow and waste, please make sure that the ingredients do not exceed 60% of capacity of the removable bowl (Ice cream expands when being formed).

ELECTRICAL DIAGRAM

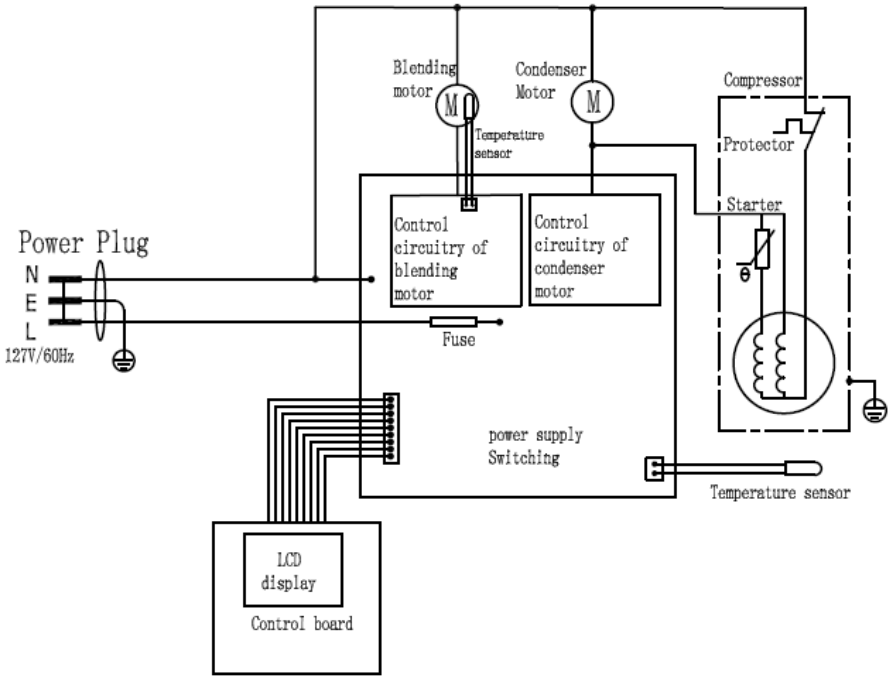

MAINTENANCE

Caution: The plug must be removed before cleaning to avoid electric shock.

1. Take out the mixing blade, wipe it with a dampened cloth
2. Take out the removable bowl, clean it with a dampened soft cloth
3. Wipe the transparent lid and refill lid with a dampened cloth
4. Remove the dirty on the body or other places with a dampened cloth, and do not pour water on cord, plug and ventilation, immerse the appliance in water or any other liquid
5. Allow drying thoroughly with a dry cloth, then return the component to the home position.

COMMON PROBLEM

No.	Existing problem	Reason analysis	Resolutions
1	Not easy to take out loading bowl after the ice cream is finished	There are water drops between the refrigeration barrel and the loading bowl that are not wiped clean, resulting in freezing	Wait 1-2 minutes before taking out the ice cream bucket.
2	The production time of ice cream maker is not finished, but the mixing has stopped	Normal phenomenon: as the ice cream hardens, the mixing fan may be stuck. When the motor temperature rises, it will automatically protect and cut off the power supply of the motor	Take out the loading bowl and restart it after shutdown to return to normal
3	The transparent lid is lifted to the mixing fan blade, and it cannot be stuck in place	The mixing fan blades not in place, and pay attention to the alignment of the hexagon	Put the mixing fan in place and rotate the transparent cover in place

4	The charging bucket cannot be placed in the cold bucket	Deformation caused by improper use of loading barrel	Buy a new loading bowl
5	When making ice cream at the beginning, the mixing fan is severely scratched or stuck	Deformation caused by improper use of loading bowl	Buy a new loading bowl

AFTER SALES SERVICE

One year warranty service is available from the date of purchase. The date of purchase of the invoice or after-sales service warranty card is subject to the warranty service. The problems you encounter when using our company's home automatic ice cream machine can be helped and resolved through the service hotline. We provide technical advice free of charge.

●One of the following conditions is not covered by the warranty;

1) Components are damaged due to improper use, maintenance and storage;

2) Damage caused by Maintenance personnel or designated personnel to disassemble the product by themselves.

3) No purchase invoice or purchase invoice does not match the product;

4) Damage caused by force majeure;

5) Exceeding the warranty period.

★ If you find any quality problems, please contact the service center or special maintenance service point for repair. Do not disassemble it yourself. The company will not bear any responsibility for quality

problems or accidents caused by self-disassembly.

★ If the product is not under warranty, the maintenance fee will be waived and only the parts fee will be charged. Manufacturer reserves the right of final interpretation of the above commitments.

PARTS

Mixing blade	1	User's guide	1
User manual	1		

Correct Disposal of this product	
	This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.